
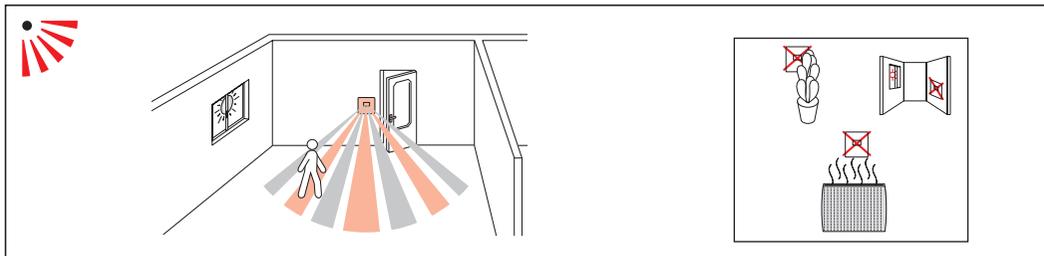







	100 - 240 V~		PIR
	50 / 60 Hz		Max. mode test
	2 x 2,5 mm ²		10 secondes
	-5° C / +45° C		8 m - 120°

230 V~	Max.	250 W	250 VA	250 W	250 W	100 W	100 W
	Min.	3 W	3 VA	3 W	3 W	3 W	3 W
110 V~	Max.	125 W	125 VA	125 W	125 W	50 W	50 W
	Min.	3 W	3 VA	3 W	3 W	3 W	3 W
		1 A	1 A	1 A	1 A	0,4 A	0,4 A



(*) - En cas de charge très faible, il peut être nécessaire d'utiliser le compensateur 0 401 39. / (*) - In case of a very low load, a compensator (Cat. No 0 401 39) might be needed.

   - A la mise sous tension (réglage usine) si la charge reste allumée plus de 2', utiliser le compensateur Réf. 0 401 39.
 • On powering up (factory settings), if the load remains lit for more than 2 mins, use compensator Cat. No 0 401 39.

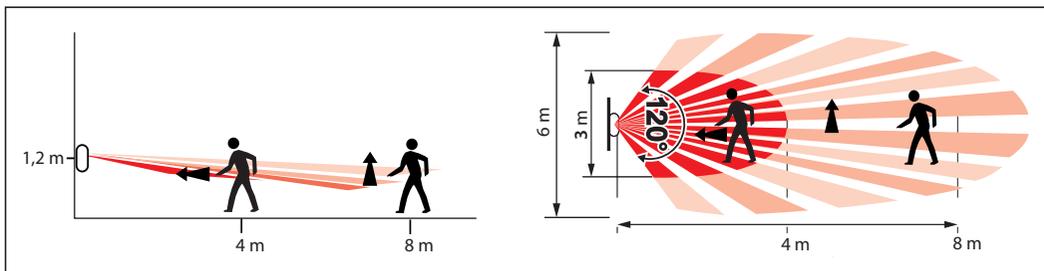

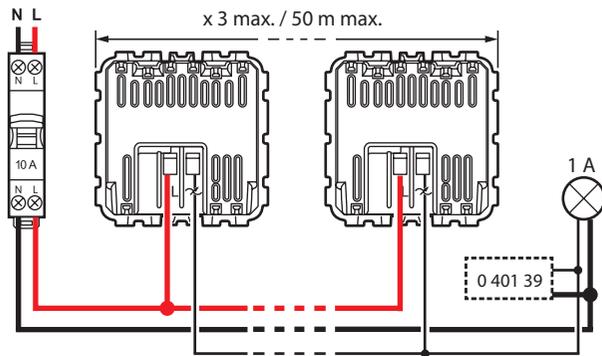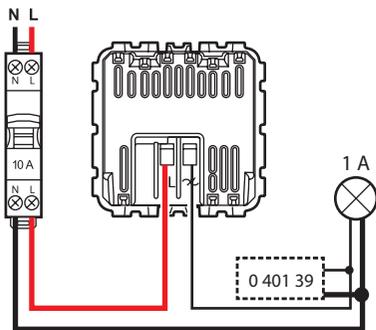

Auto ON/OFF

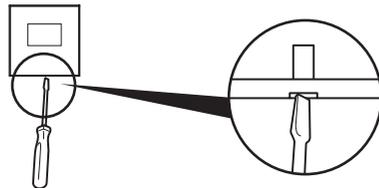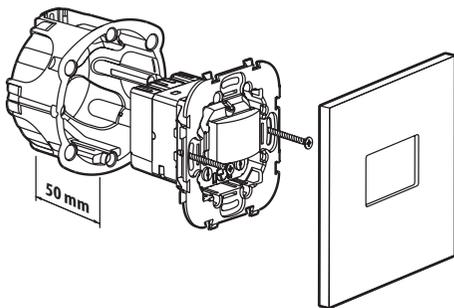

⚠️ Consignes de sécurité

FR BE CA LU CH

Ce produit doit être installé conformément aux règles d'installation et de préférence par un électricien qualifié. Une installation incorrecte et/ou une utilisation incorrecte peuvent entraîner des risques de choc électrique ou d'incendie. Avant d'effectuer l'installation, lire la notice, tenir compte du lieu de montage spécifique au produit.

Ne pas ouvrir, démonter, altérer ou modifier l'appareil sauf mention particulière indiquée dans la notice. Tous les produits Legrand doivent exclusivement être ouverts et réparés par du personnel formé et habilité par Legrand. Toute ouverture ou réparation non autorisée annule l'intégralité des responsabilités, droits à remplacement et garanties. Utiliser exclusivement les accessoires de la marque Legrand.

⚠️ Safety instructions

GB CA IN IE US SG

This product should be installed in compliance with installation rules, preferably by a qualified electrician. Incorrect installation and/or incorrect use can lead to risk of electric shock or fire.

Before carrying out the installation, read the instructions and take account of the product's specific mounting location.


Do not open up, dismantle, alter or modify the device except where specifically required to do so by the instructions. All Legrand products must be opened and repaired exclusively by personnel trained and approved by Legrand. Any unauthorised opening or repair completely cancels all liabilities and the rights to replacement and guarantees. Use only Legrand brand accessories.

- Capteur PIR
- PIR sensor
- Cellule de luminosité
- Brightness sensor

10 s 10 min.

5 lux 1275 lux

- Potentiomètre de temporisation
- Time delay control

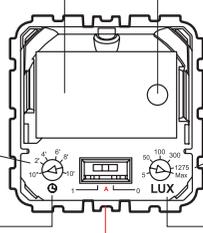

- Potentiomètre de luminosité
- Brightness potentiometer

1 : Allumage forcé ON
A : Auto ON/OFF
0 : Exinction forcée

1 : Lighting forced ON
A : Auto ON/OFF
0 : Forced OFF