

**FXSQ-A**

Calibre de l'unité	Temp. d'air extérieur		Température de l'air intérieur : °CBS					
			16.0	18.0	20.0	21.0	22.0	24.0
	°CBS	°CBH	kW	kW	kW	kW	kW	kW
15	7.0	6.0	2.0	2.0	1.9	1.8	1.8	1.7
20	7.0	6.0	2.6	2.6	2.5	2.4	2.3	2.2
25	7.0	6.0	3.4	3.4	3.2	3.1	3.0	2.8
32	7.0	6.0	4.2	4.2	4.0	3.9	3.7	3.5
40	7.0	6.0	5.2	5.2	5.0	4.8	4.7	4.4
50	7.0	6.0	6.6	6.6	6.3	6.1	5.9	5.5
63	7.0	6.0	8.4	8.4	8.0	7.7	7.5	7.0
80	7.0	6.0	10.5	10.5	10.0	9.7	9.4	8.7
100	7.0	6.0	13.1	13.1	12.5	12.1	11.7	10.9
125	7.0	6.0	16.8	16.8	16.0	15.5	15.0	13.9
140	7.0	6.0	18.9	18.9	18.0	17.4	16.8	15.7