


## Mini-Com TX5e and TX6 PLUS UTP Jack Modules


Part Numbers: CJ5E88T\*\*, CJD5E88T\*\*, CJ688TP\*\*, CJD688TP\*\*, KJ688TP\*\*


© Panduit Corp. 2015 INSTALLATION INSTRUCTIONS PN307K


{Not to scale}


## 1" (25.4mm)

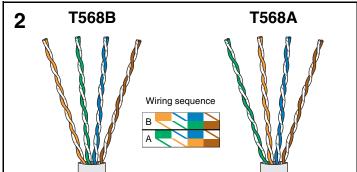


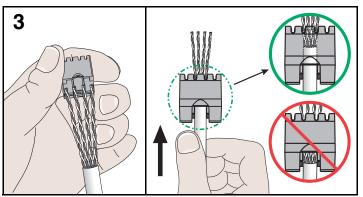


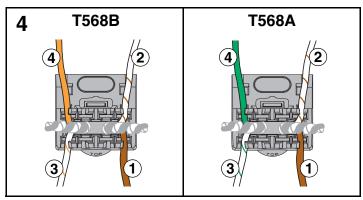

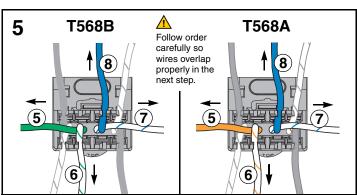

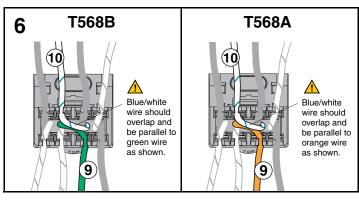


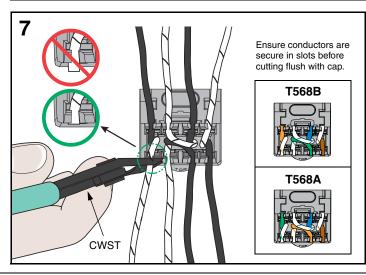


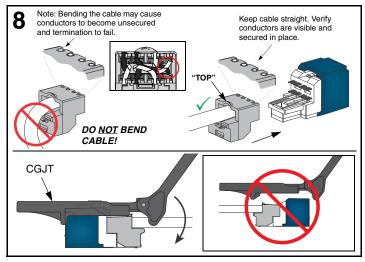



For Technical Support: www.panduit.com/resources/install\_maintain.asp


## **TERMINATION CAP REMOVAL**

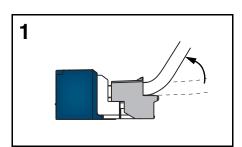

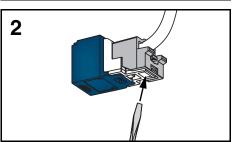

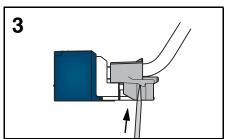


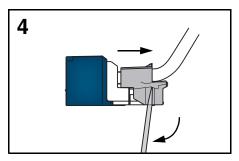

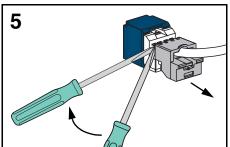

## **JACK MODULE INSTALLATION / REMOVAL**

# Mini-Com style jack modules INSTALL REMOVE

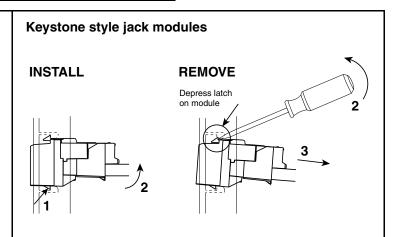


### Notes:

- For specified performance, follow ANSI/NECA/BICSI-568-2006 installation guidelines.
- Jack modules can terminate PVC or Plenum rated 22-24 AWG solid or stranded IWC cable with insulated conductor outside diameter ranging between 0.035 inch (0.88mm) and 0.048 inch (1.2mm).
- 3. Jack modules may be re-terminated a minimum of 10 times.
- For technical and performance information, consult Panduit Technical Support.

## As with all Wiring Accessories, the following statements apply:

- 1. Never install communications wiring during a lightning storm.
- Never install communications wiring in wet locations unless the jack is specifically designed for use in wet locations.
- 3. Never touch uninsulated communications wiring or terminals unless the communication line has been disconnected at the network interface.
- 4. Use caution when installing or modifying communication wiring.

## **Wiring Sequences**

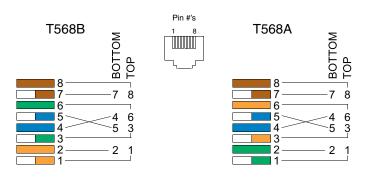

For Instructions in Local Languages and Technical Support: www.panduit.com/resources/install\_maintain.asp

PANDUT www.panduit.com E-mail: techsupport@panduit.com Phone: 866-405-6654



## **Termination for Right Hand Lay Cable**

© Panduit Corp. 2015 INSTALLATION INSTRUCTIONS PN580A

