PANDUIT

TX6A UTP Jack Modules


Part Numbers: CJ6X88TG**, CJH6X88TG**, CJK6X88TG**, CJQ6X88TGBL

INSTALLATION INSTRUCTIONS PN511G © Panduit Corp. 2018 **NOTE**: Use setting 9 of CJAST tool. Turn <u>2 times</u> to cut through the outer jacket and MaTriX tape only. 2 1 MaTriX Strain relief collar tape Jack CJAST 1.5" (38.1mm) Wire cap 3 4 5 CWST (8 6 9 7 R ← 0.5" → (12.7mm) 10 11 EGJT-1 Do not pre-arrange conductors. (OR)

For Technical Support: www.panduit.com/resources/install_maintain.asp

INSTALLATION INSTRUCTIONS

PN511G

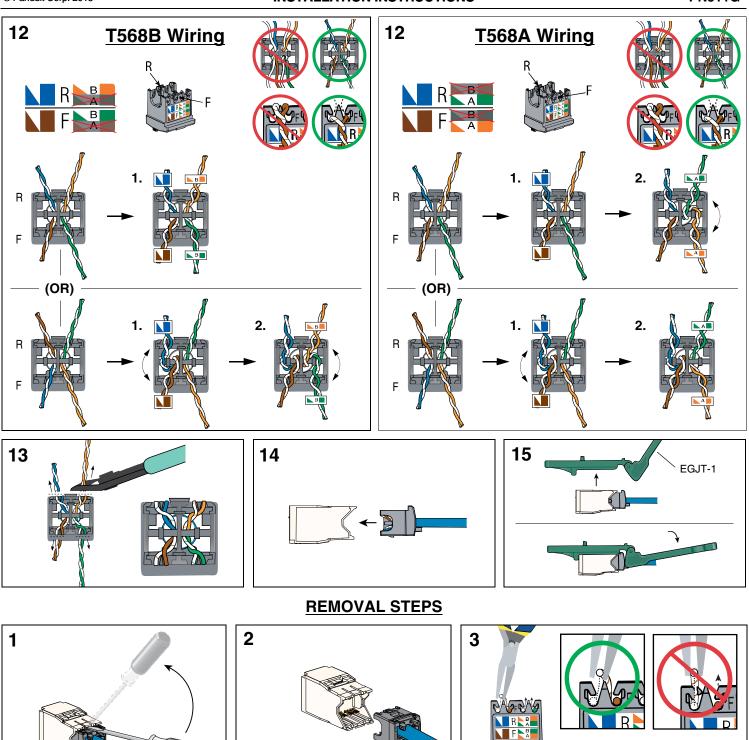

Notes:

- 1. For specified performance, follow TIA/EIA 568-C installation guidelines.
- 2. Jack modules can terminate 22-26 AWG solid or stranded IWC data cable with 0.062" (1.57mm) maximum insulated conductor outside diameter.
- 3. Jack modules may be re-terminated a minimum of 20 times.
- 4. For technical and performance information, consult Panduit technical support.
- As with all Wiring Accessories, the following statements apply:
- 1.
- 2.
- Never install communications wiring during a lightning storm. Never install communications wiring in wet locations unless the jack is specifically designed for use in wet locations. Never touch uninsulated communications wiring or terminals unless the communication line has been disconnected at the network interface. 3.
- 4. Use caution when installing or modifying communication wiring.

1 Image: Construction of the steps and the steps are started as a started as

Cable Prep for non-MaTriX Category 6A Cable

For Instructions in Local Languages and Technical Support: www.panduit.com/resources/install_maintain.asp



E-mail: techsupport@panduit.com

Phone: 866-405-6654

Page 3 of 3