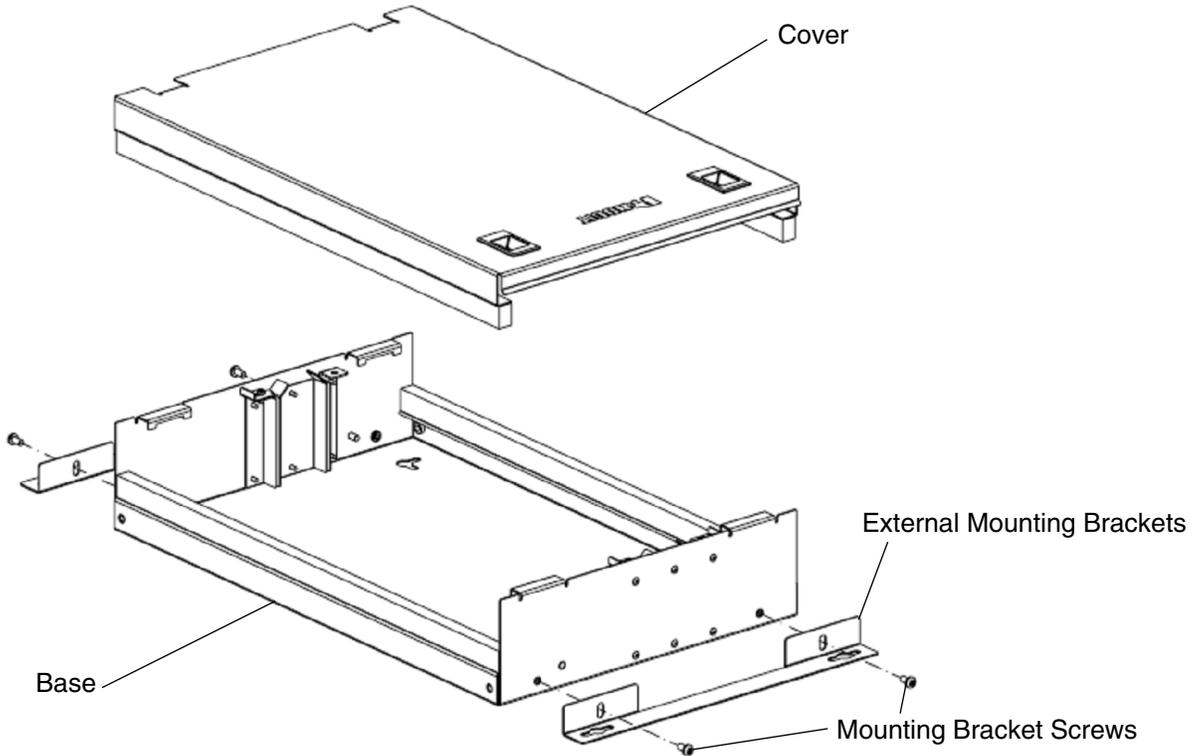
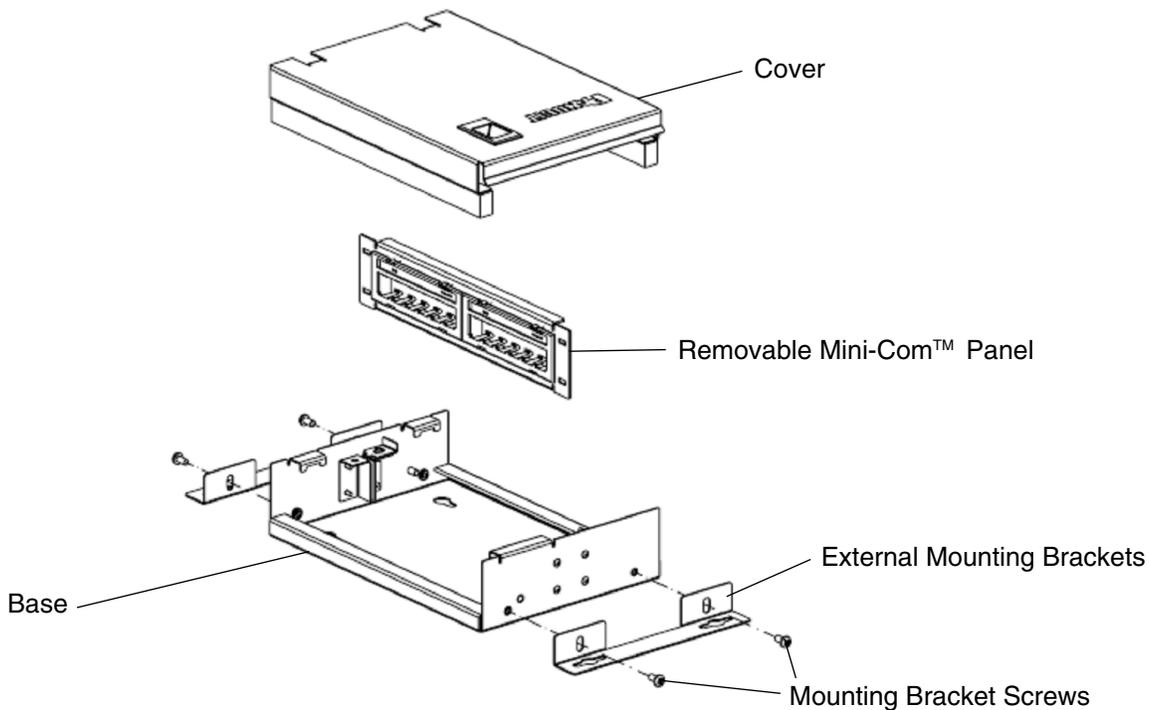
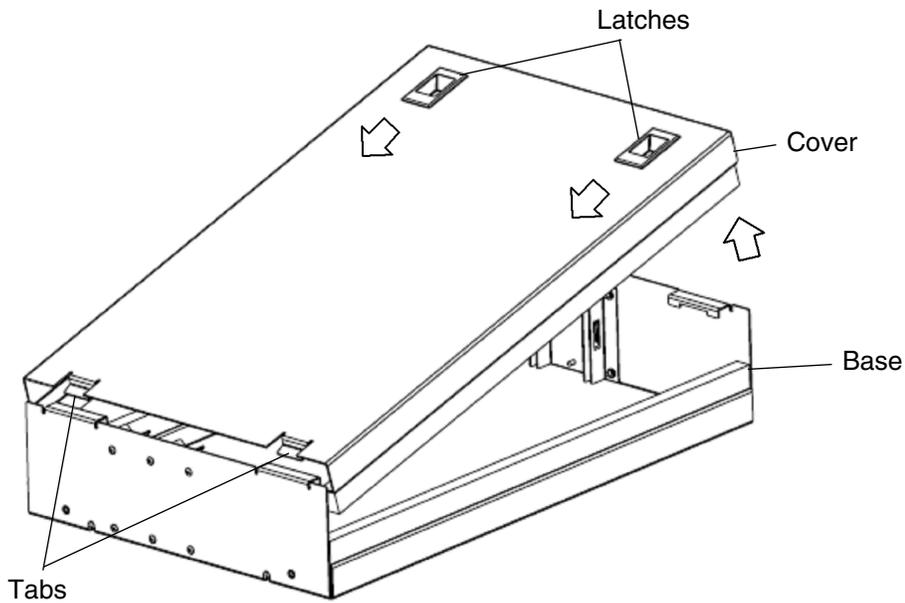


Component Identification CPB24BL and CPB48BL:

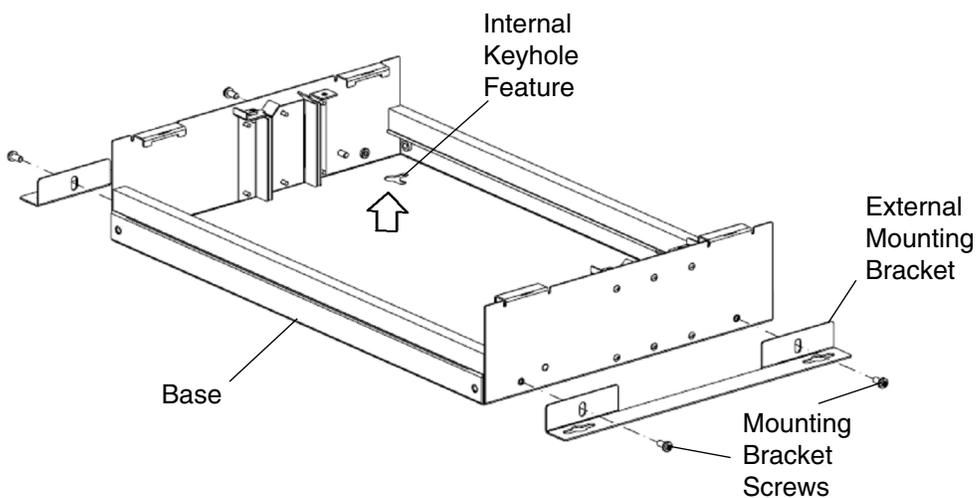


Component Identification CPB6BL and CPB12BL:

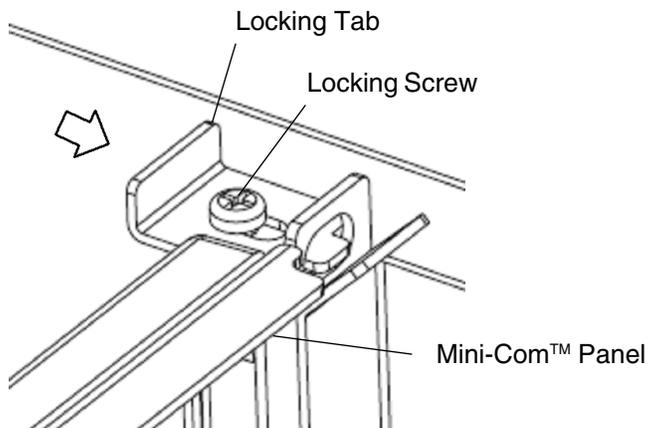
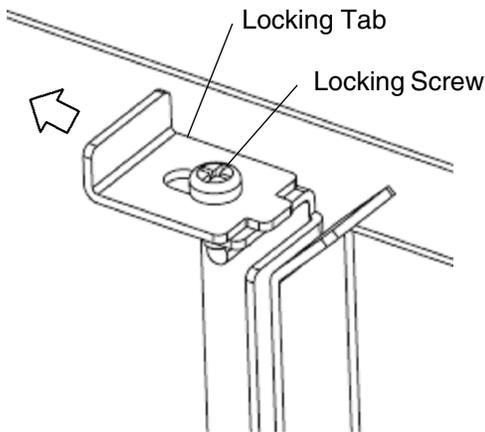


Cover Removal:

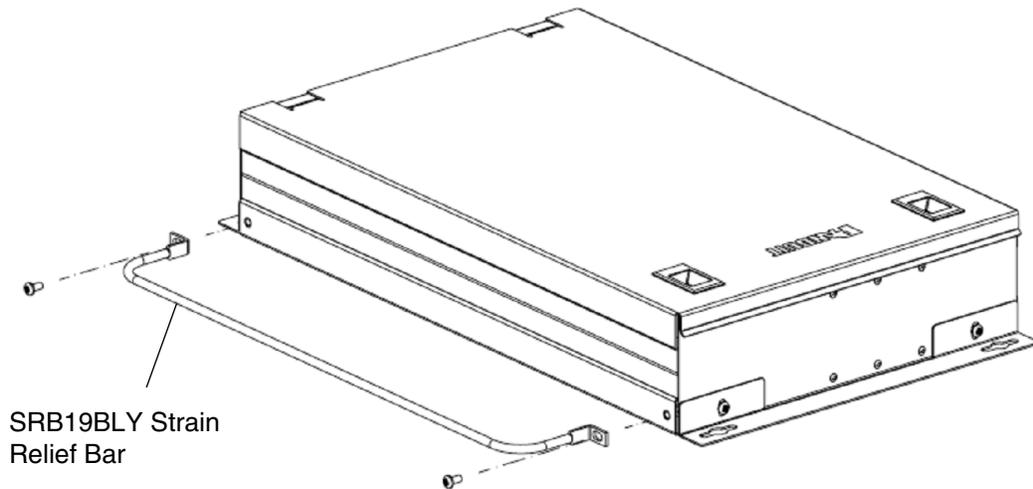
Pull latches simultaneously away from the edge of the cover and lift cover until tabs on opposite side disengage from enclosure base.

Base Mounting:

The enclosure base may be mounted to a horizontal or vertical surface using the internal keyhole features or using the external supplied brackets. The external mounting brackets are intended for situations where it is desirable to move the enclosure without needing to remove the cover. The external mounting brackets attach to the sides of the base using the supplied mounting bracket screws.

Patch Panel Installation:

- Ensure panel locking tabs are positioned away from panel slot. Loosen locking screws and pull tabs away from slot opening if necessary. For CBP6BL and CPB12BL, the included Mini-Com™ panel can be removed at this time.
- Install patch panel in desired location. It is recommended to populate patch panel prior to installing into enclosure for ease of access to panel ports.
- With patch panel fully inserted into base slots, slide the panel locking tabs into the top most mounting hole locations of the patch panel and tighten locking screws.

Optional Strain Relief Bar Attachment (CPB24BL and CPB48BL only):

PANDUIT strain relief bars (sold separately) may be mounted to the front and rear of the 24 and 48 port enclosures using the threaded holes in the enclosure base and the screws supplied with the strain relief bar.