
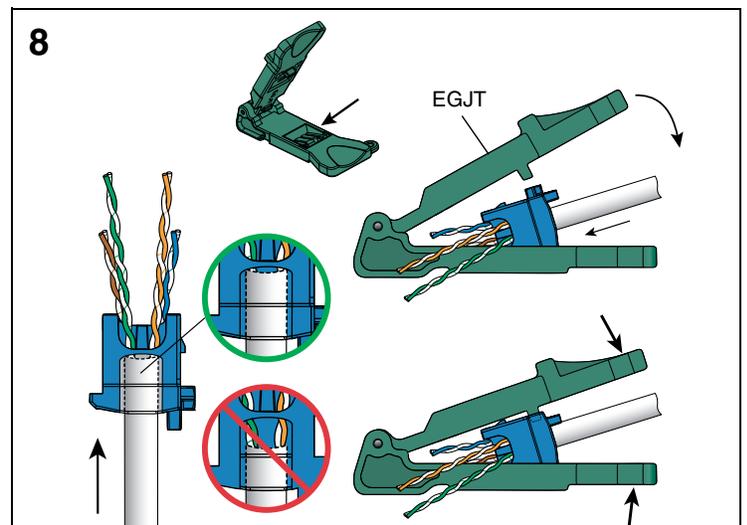
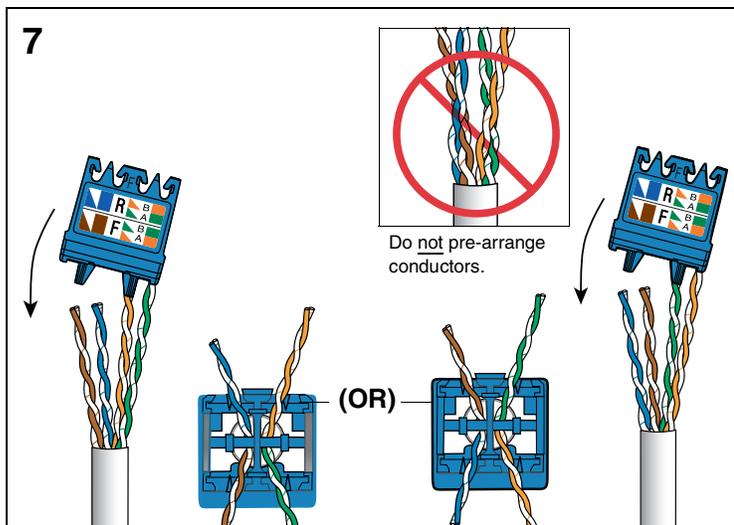
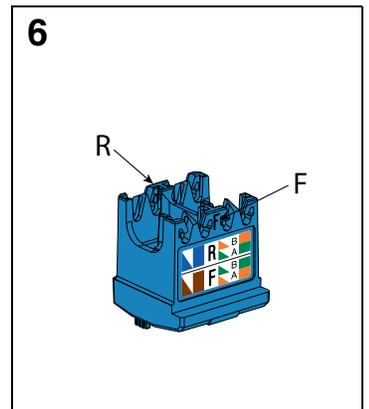
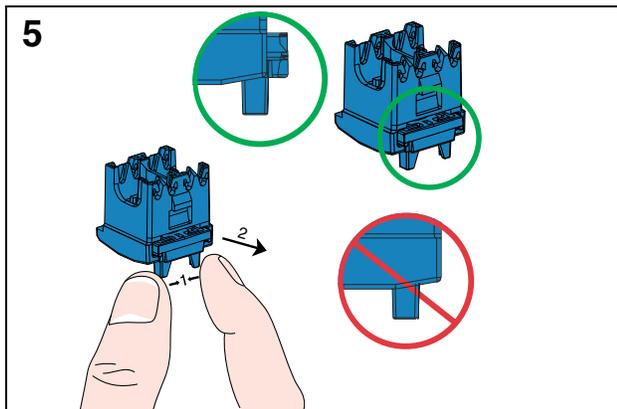
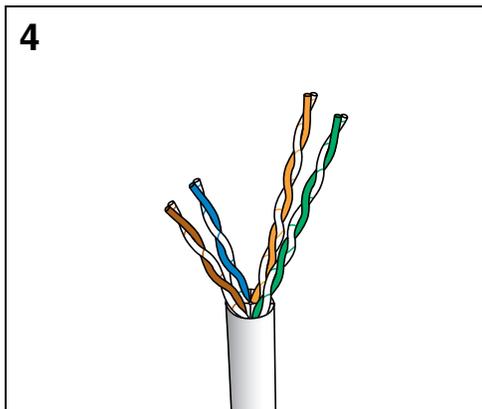
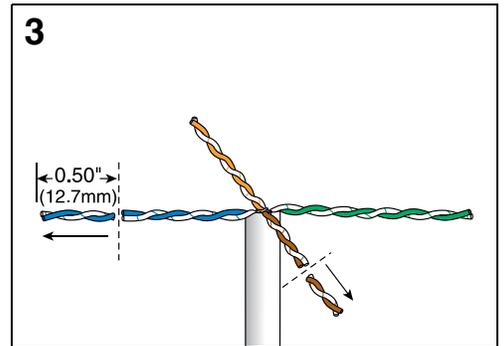
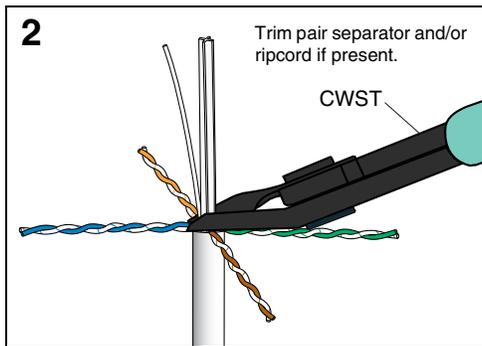
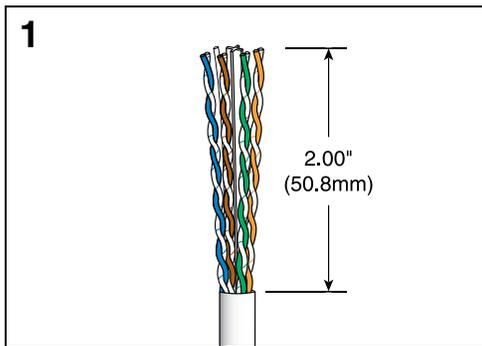


TERMINATION STEPS

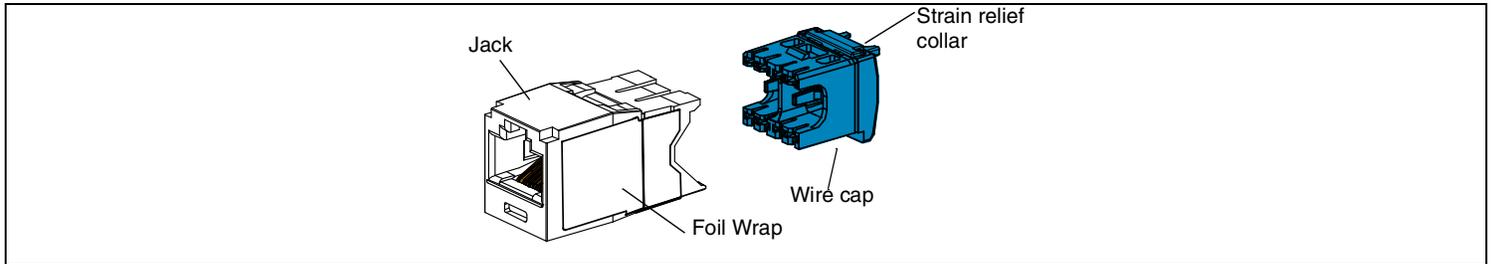

** Denotes color.

Note: For bulk packaged TG style jack modules, add -24 to end of part number.

9 T568B Wiring

Legend for T568B:

- Correct: Blue (B) to 1, Orange (A) to 2, Green (B) to 3, Brown (A) to 4.
- Incorrect: Blue (B) to 2, Orange (A) to 1, Green (B) to 4, Brown (A) to 3.

Steps:

- Strip the cable and insert wires into the jack.
- Push the wires into the jack until they are fully seated.

9 T568A Wiring

Legend for T568A:

- Correct: Blue (B) to 2, Orange (A) to 1, Green (B) to 3, Brown (A) to 4.
- Incorrect: Blue (B) to 1, Orange (A) to 2, Green (B) to 4, Brown (A) to 3.

Steps:

- Strip the cable and insert wires into the jack.
- Push the wires into the jack until they are fully seated.

10

11

12

REMOVAL STEPS

1

2

3

Legend for Removal:

- Correct: Pulling the jack straight out.
- Incorrect: Pulling the jack at an angle.

- Notes:**
- Corrosion Resistant jack modules may be re-terminated a maximum of 3 times at the wire cap and a maximum of 5 plug insertions.
 - For specified performance, follow ANSI/TIA-568.2-D installation guidelines.
 - Corrosion resistant jack modules can terminate 22-26 AWG solid or stranded IWC data cable with 0.062" (1.57mm) maximum insulated conductor outside diameter.
 - For technical and performance information, consult *PANDUIT* technical support.
- As with all Communication Components, the following statements apply:**
- Never install communications wiring during a lightning storm.
 - Never install communications wiring in wet locations unless the jack is specifically designed for use in wet locations.
 - Never touch uninsulated communications wiring or terminals unless the communication line has been disconnected at the network interface.
 - Use caution when installing or modifying communication wiring.

CJE6X88 INSTALLATION BEST PRACTICES**

