

REMOTE FOOT SWITCH FOR THE CT-902HP & CT-901HP HYDRAULIC PUMPS INSTALLATION INSTRUCTIONS

© Panduit Corp. 2019

Hook-Up for CT-902HP Pump:


1. Unplug the CT-902HP Hydraulic Pump power cord from the electrical receptacle.
2. Remove the upper cover (Blue=120V; Yellow=220V) from the CT-902HP Hydraulic Pump by removing the four (4) socket head cap screws and washers. Set the upper cover and fasteners aside.
3. Disconnect any current controller from the hydraulic pump by disconnecting the controller cable wires from the hydraulic pump. The controller cable is easily disconnected by unplugging the bullet-type disconnects. Make a note of the cable wires connections (color-coding) in the event that the controller would be re-installed.
4. Connect the CT-902RFS Remote Foot Switch to the Hydraulic Pump by connecting the foot switch cable to the pump, following the wiring diagram below. Replace cover.

120 V Units: (shown in illustration)

- Step 1: Connect **Red** and **Black** wires from Foot Switch together. (This step may be completed at factory)
- Step 2: Connect the **Red** and **Black** on Foot Switch to the **Black** on Pump.
- Step 3: Connect the **Green** on Foot Switch to **Yellow** on Pump
- Step 4: Connect the **White** on Foot Switch to **Blue** on Pump.

220 V Units: (not shown)

- Step 1: Connect **Red** and **Black** wires from Foot Switch together. (This step may be completed at factory)
- Step 2: Connect the **Red** and **Black** on Foot Switch to the **Red** on Pump.
- Step 3: Connect the **Green** on Foot Switch to the **White** on Pump.
- Step 4: Connect the **White** on Foot Switch to **Black** on Pump.

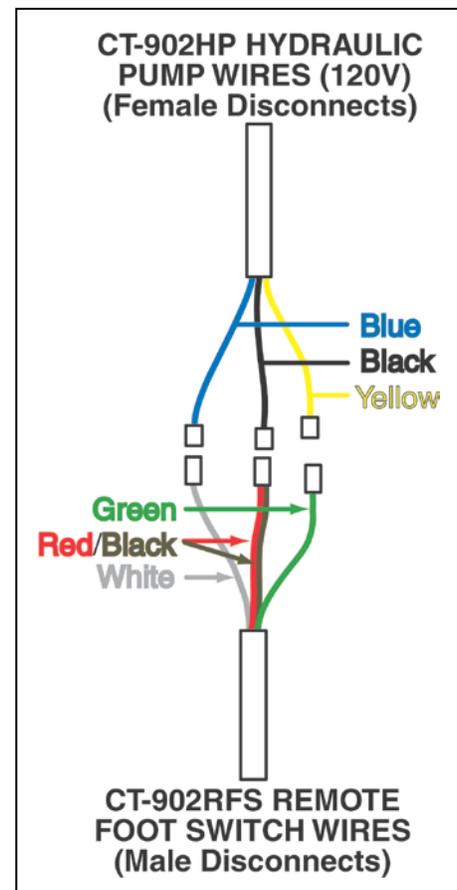


See Page 2 for CT-901HP Hook-Up

Hook-Up for CT-901HP Pump:

1. Unplug the CT-901HP Hydraulic Pump power cord from the electrical receptacle.
2. Remove the upper (orange) cover from the CT-901HP Hydraulic Pump by removing the four (4) socket head cap screws and washers. Set the upper cover and fasteners aside.
3. Disconnect any current controller from the hydraulic pump by disconnecting the controller cable wires from the hydraulic pump. The controller cable is easily disconnected by unplugging the bullet-type disconnects. Make a note of the cable wires connections (color-coding) in the event that the controller would be re-installed.
5. Connect the CT-901RFS Remote Foot Switch to the Hydraulic Pump by connecting the foot switch cable to the pump, following the wiring diagram below. Replace cover.

- Step 1: Connect **Red** and **Black** wires from Foot Switch together. (This step may be completed at factory)
- Step 2: Connect the **Red** and **Black** on Foot Switch to the **Red** on Pump.
- Step 3: Connect the **Green** on Foot Switch to White on Pump
- Step 4: Connect the White on Foot Switch to **Black** on Pump.

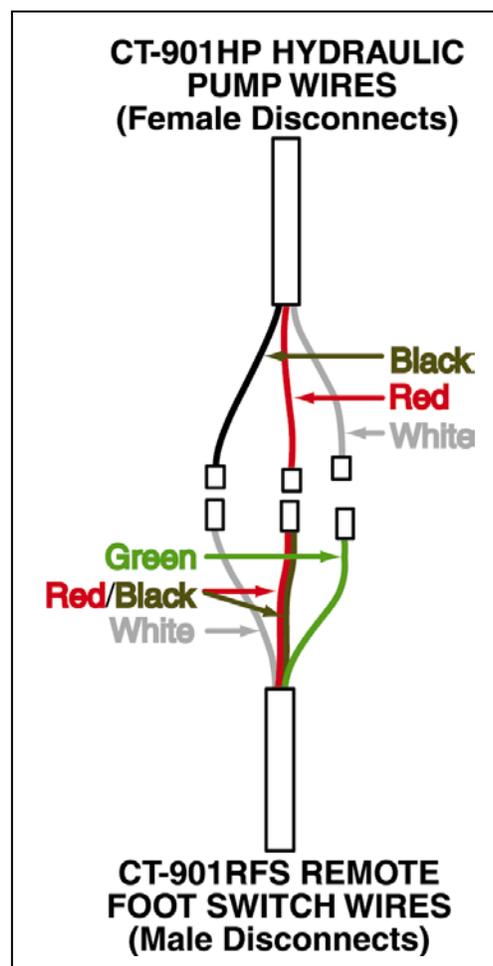

Email:
techsupport@panduit.com

EU Website:
www.panduit.com/emea

EU Email: emeatoolservicecenter
@panduit.com

PANDUIT

www.panduit.com

Technical Support
Tel: 1-800-777-3300

Panduit Europe • EMEA Service Center
Almelo, Netherlands
Tel: +31 546 580 452 • Fax: +31 546 580 441