

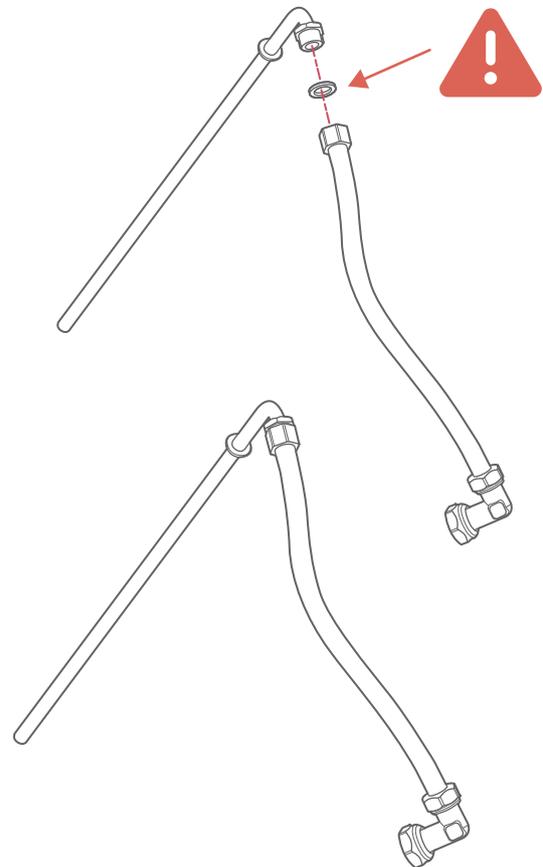
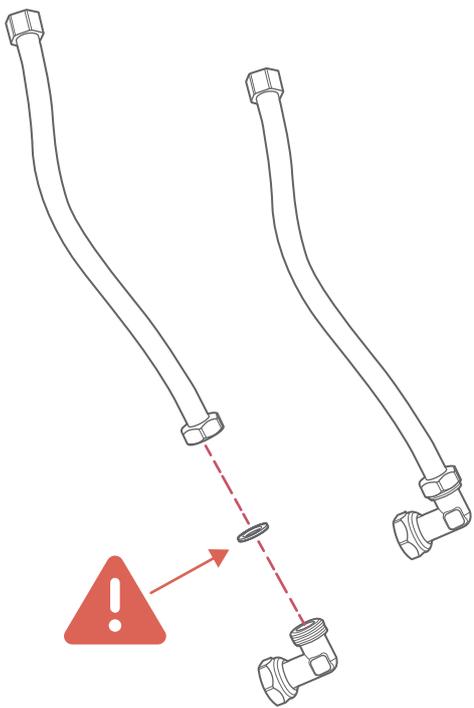
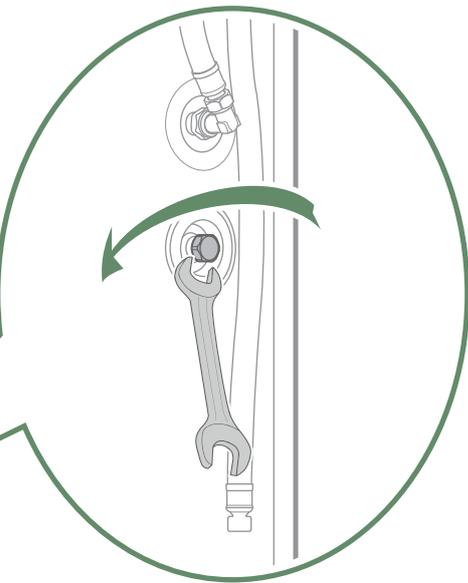
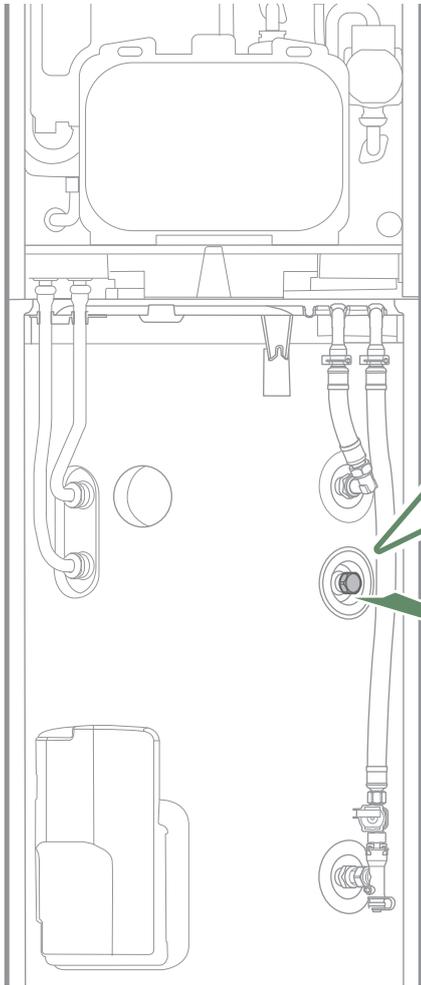
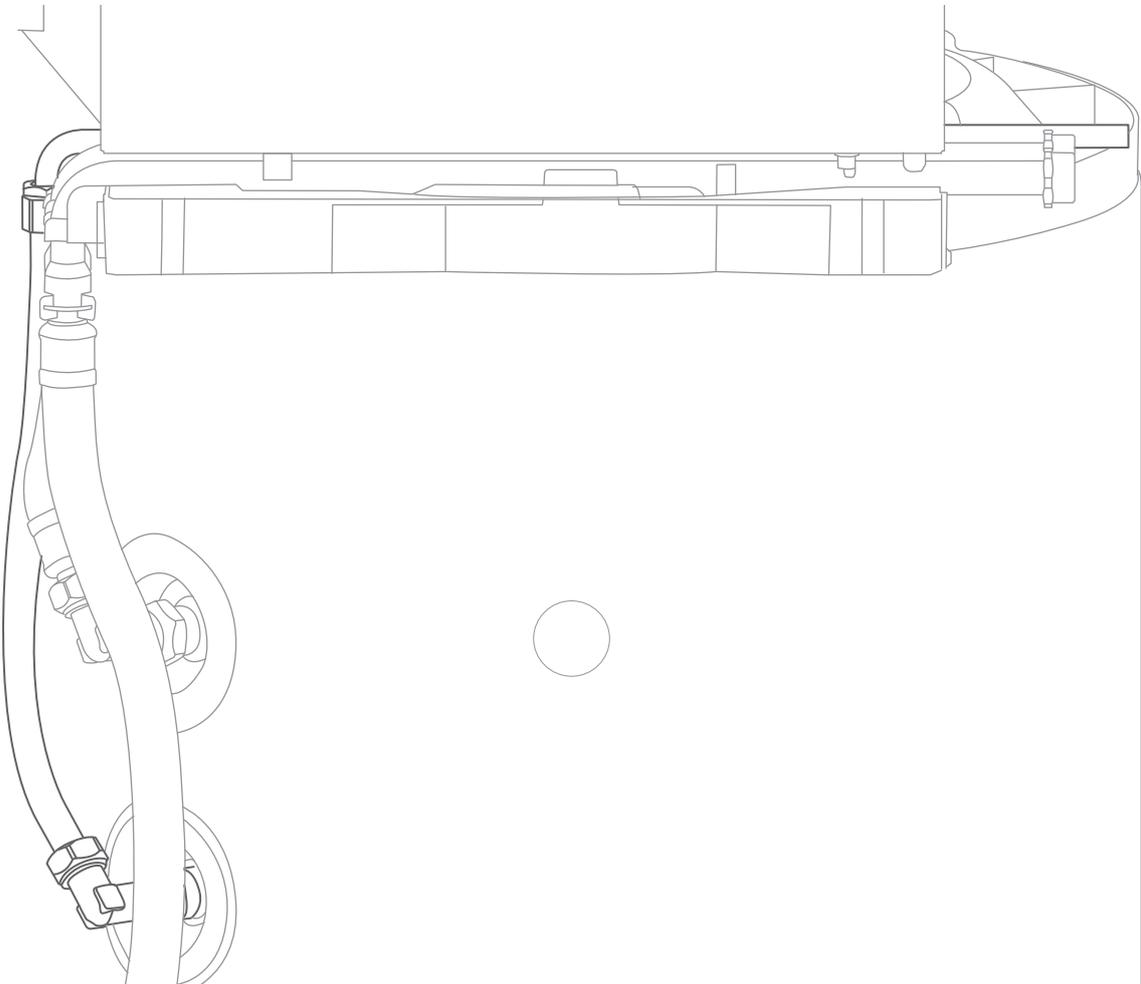




ML


INSTALLATION // INSTALLATIE // INSTALACIÓN // INSTALAÇÃO //  
INSTALLAZIONE // MONTAŽ // INŠTALACIJA


# Kit de recirculation ECS Kit recirculation DHW (074876)

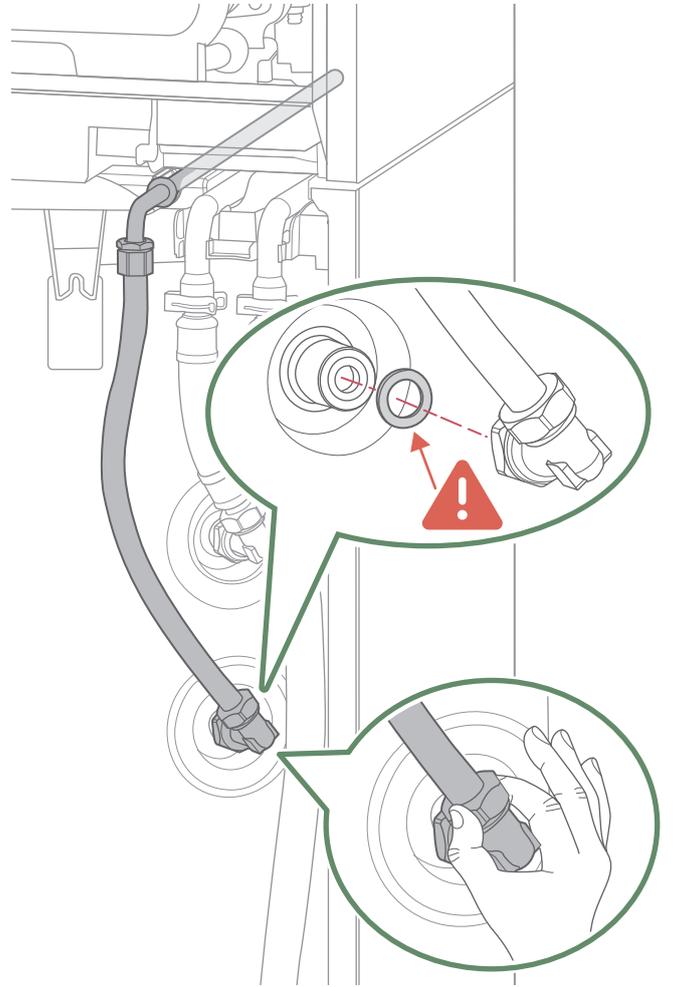

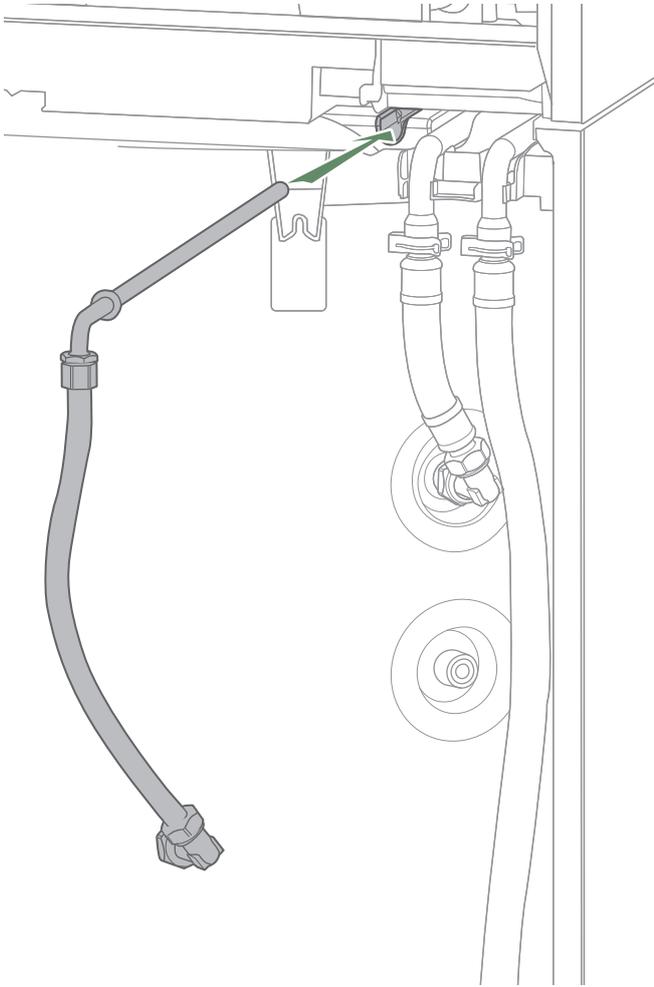

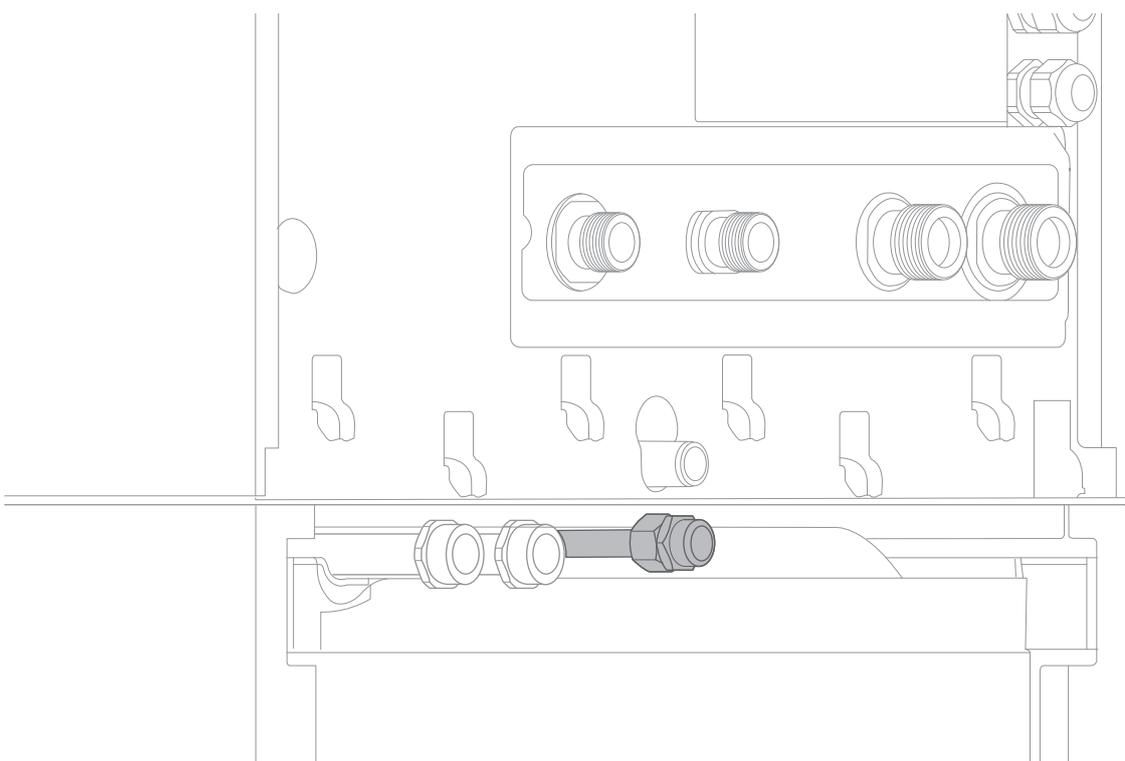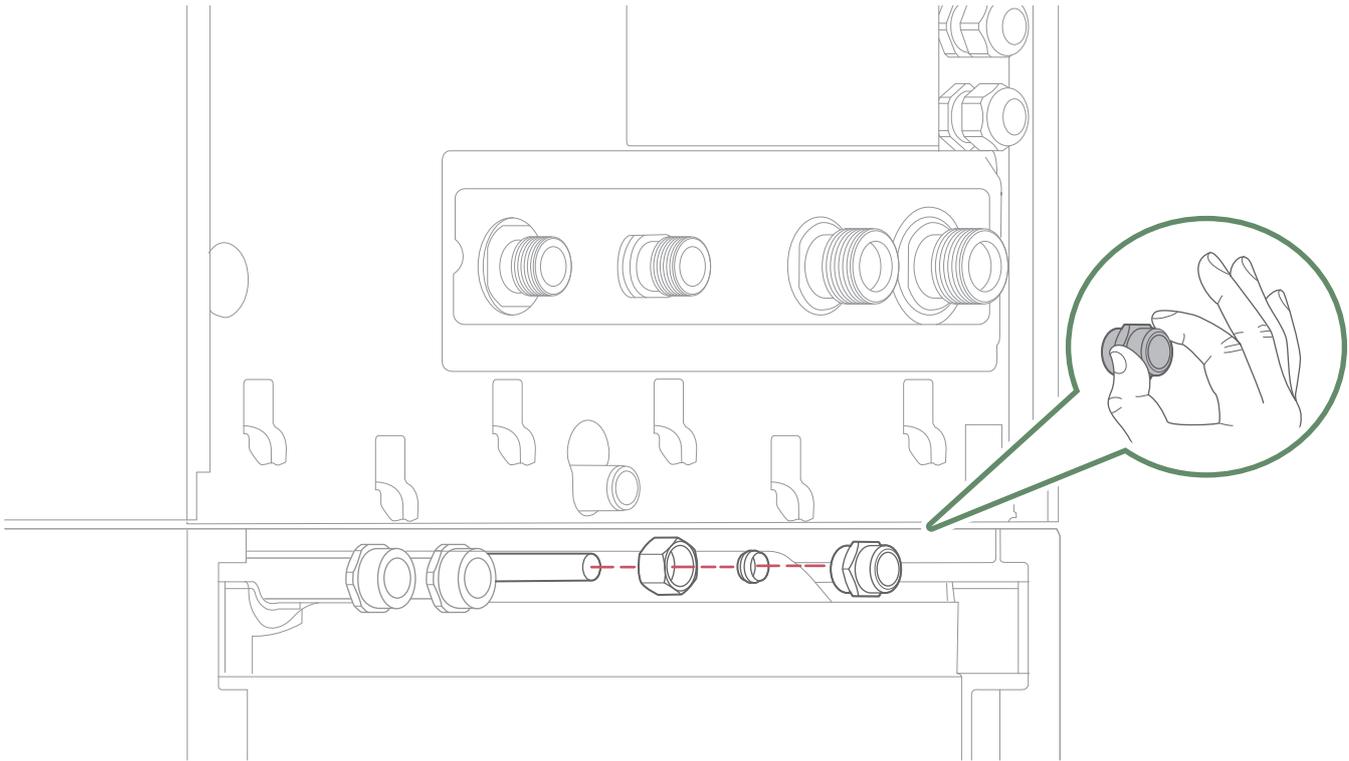

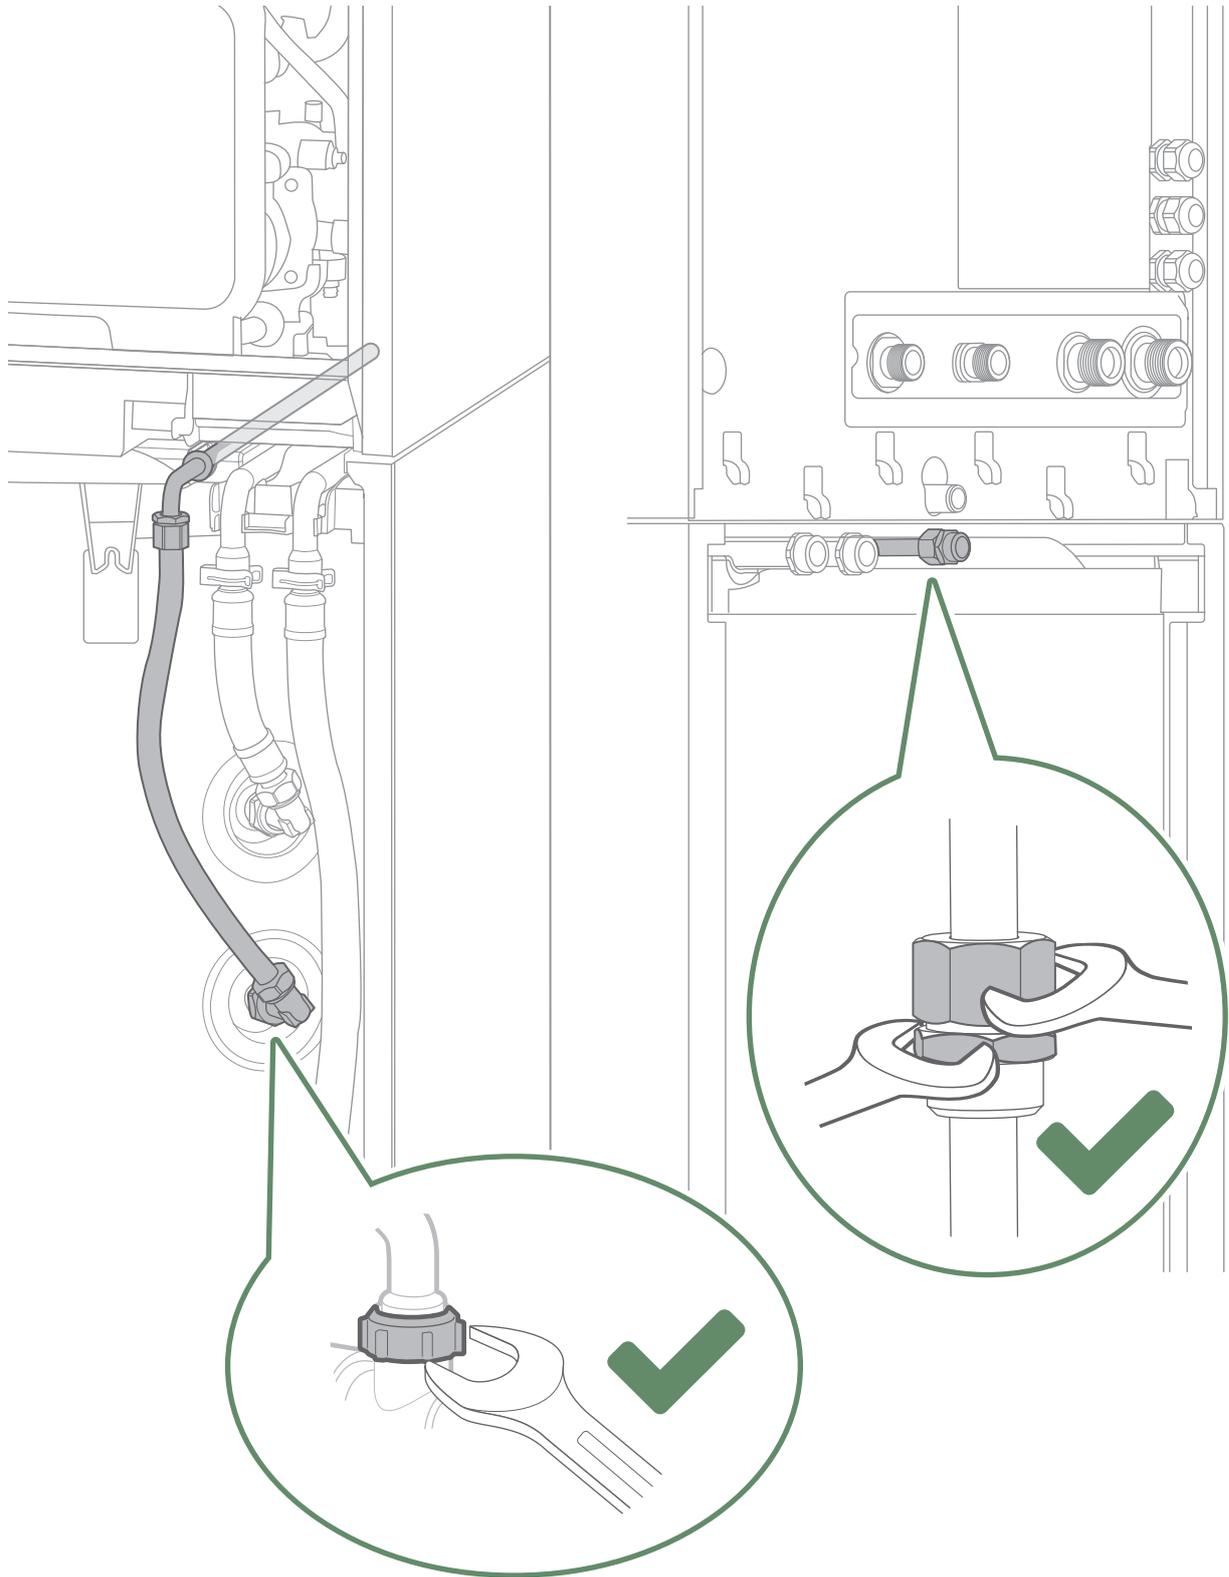


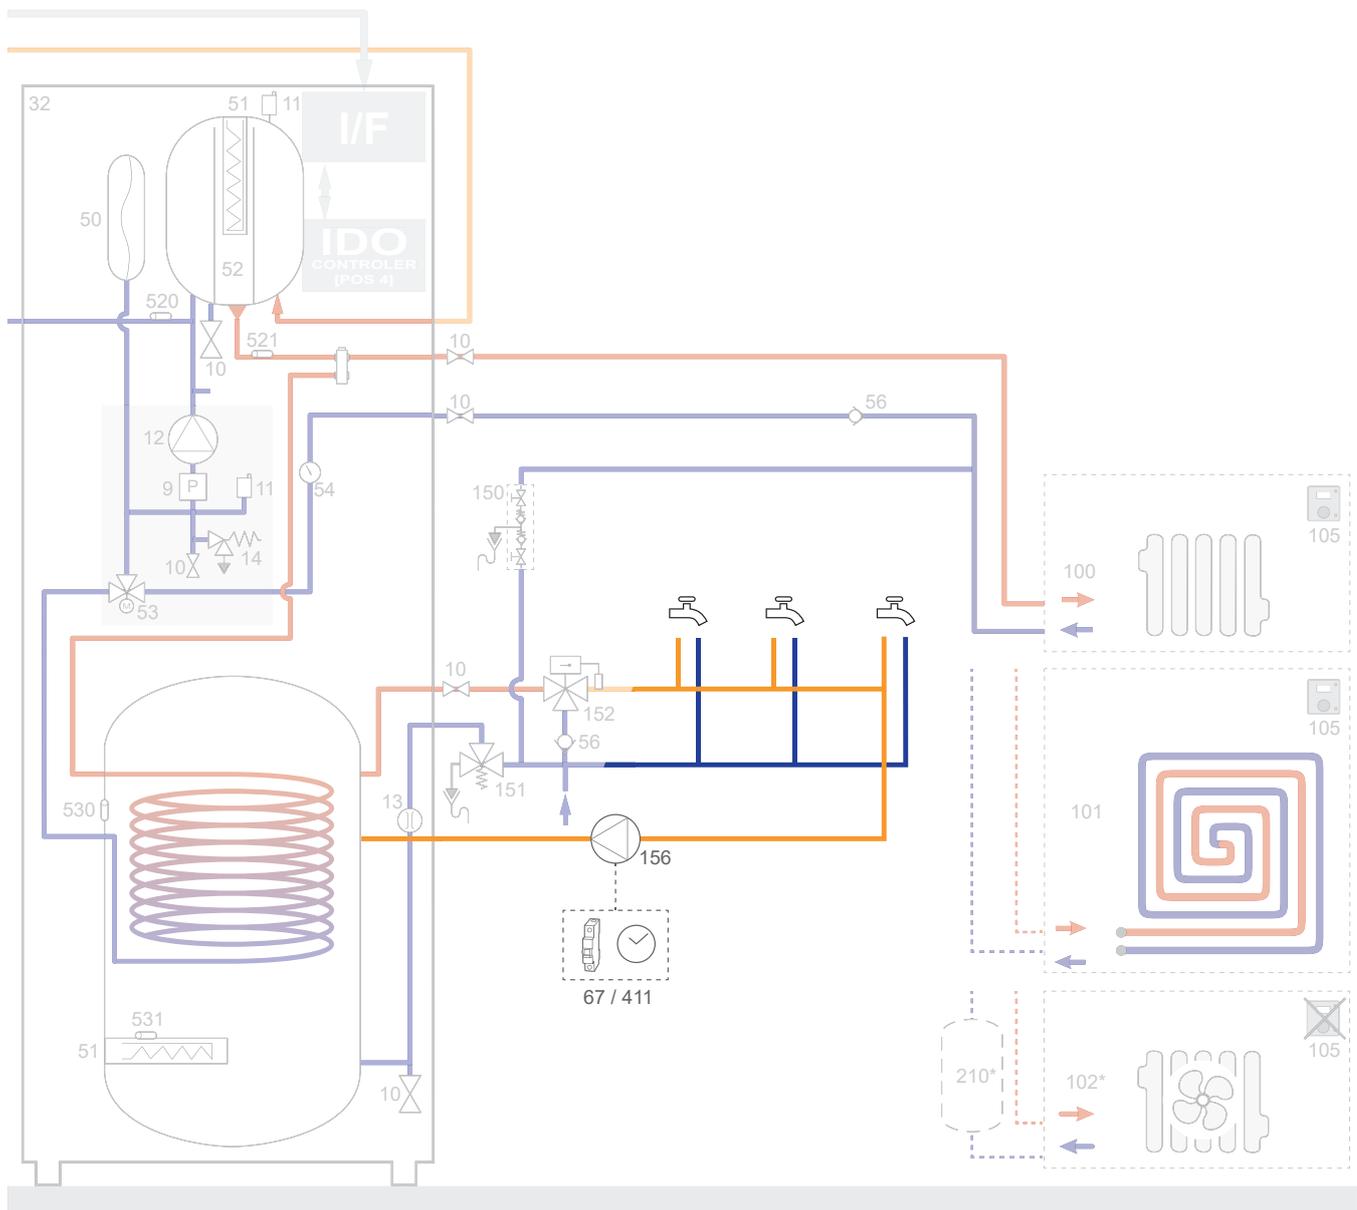

- 9 - Water pressure sensor (Value)
- 10 - Valve
- 11 - Drain valve
- 12 - System pump
- 14 - Safety valve
- 18 - Sludge pot (decanter)
- 32 - Duo hydraulic unit (2 services)
- 50 - Expansion vessel
- 51 - Electrical backup


- 52 - Decoupling bottle
- 53 - Directional valve
- 54 - Manometer
- 56 - No-return valver
- 67 - Electrical supply (not supplied)
- 100 - Radiator
- 101 - Underfloor heating system
- 102 - Dynamic radiator (fan-convector)
- 105 - Thermostat or room sensor
- 150 - Disconnecter

- 151 - Safety group
- 152 - Thermostatic mixing valve
- 156 - Recirculating pump (not supplied)
- 210 - Buffer tank
- 411 - Programmation (not supplied)
- 520 - Return temp. sensor (heating circuit)
- 521 - Flow temp. sensor (heating circuit)
- 530 - DHW temp. sensor
- 531 - DHW electrical backup thermal safety

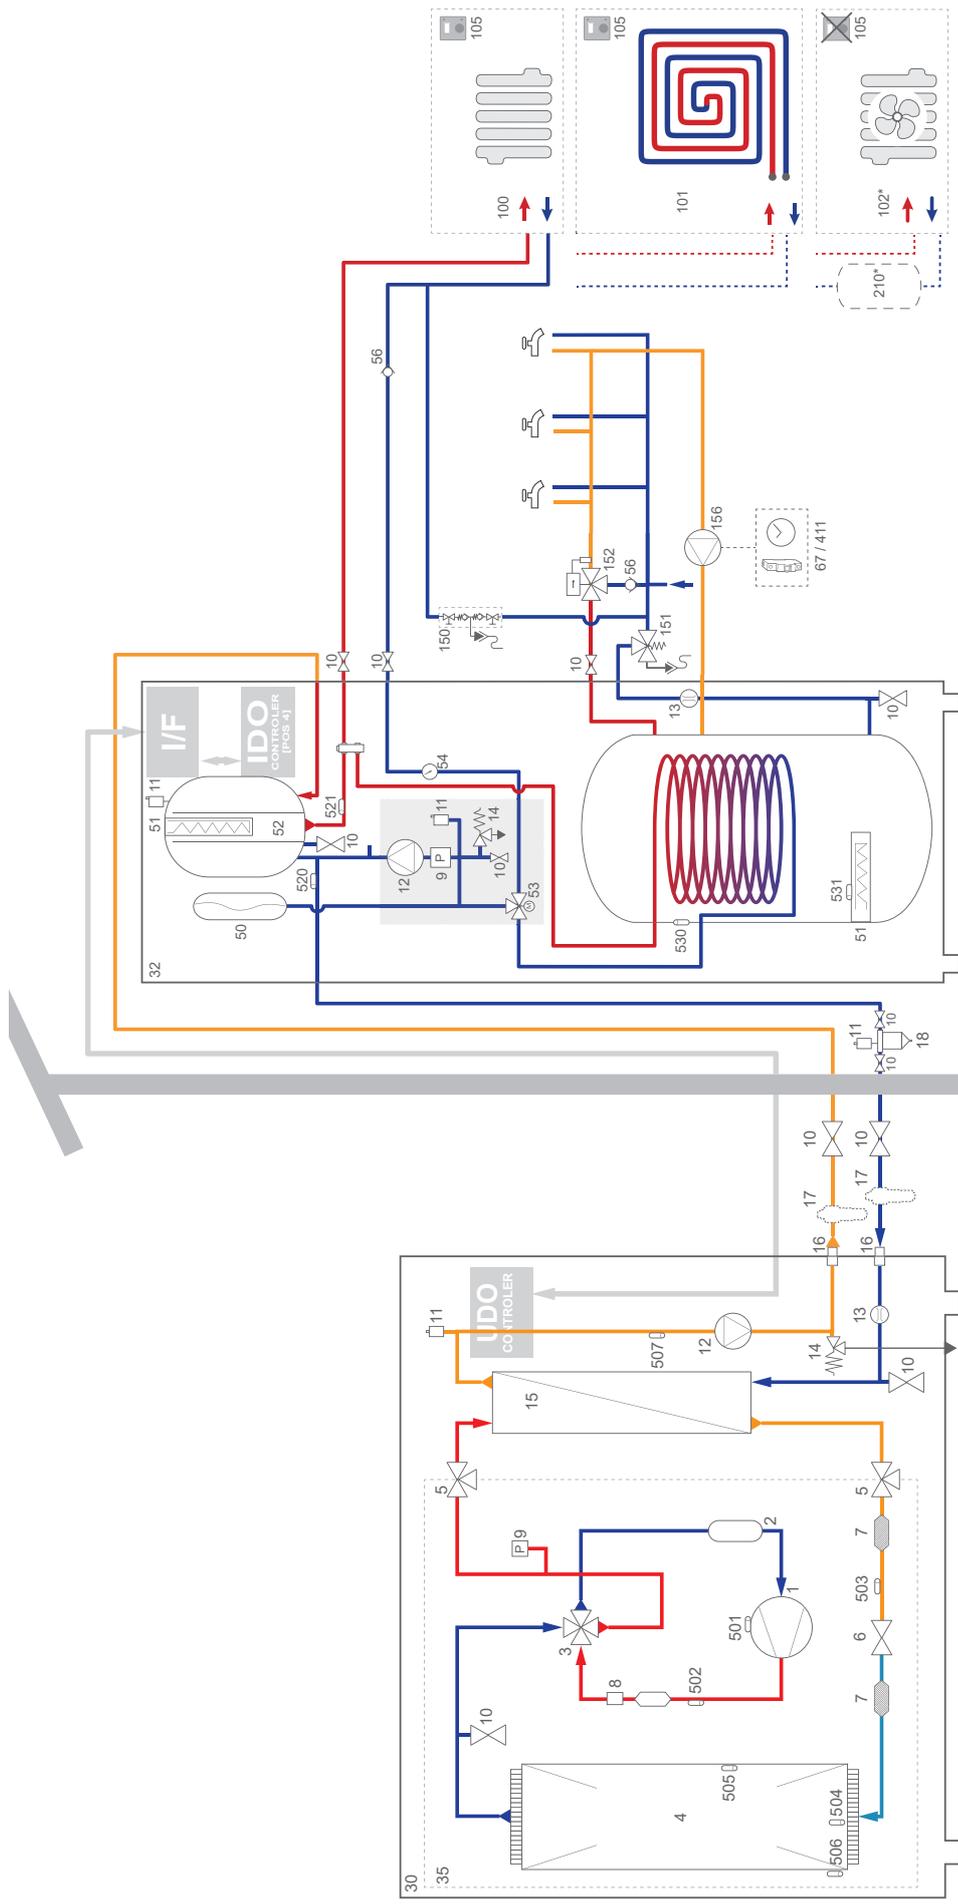

- 1 - Compressor
- 2 - Accumulator
- 3 - 4-way valve
- 4 - Heat exchanger (Evaporator)
- 5 - 3-way valve
- 6 - Expansion valve
- 7 - Filter
- 8 - Pressure switch (On/Off)
- 9 - Water pressure sensor (Value)
- 10 - Valve
- 11 - Drain valve
- 12 - System pump
- 13 - Flowmeter
- 14 - Safety valve
- 15 - Refrigerant to Water Heat Exchanger
- 16 - Connection
- 17 - Frost protection valve
- 18 - Sludge pot (decanter)
- 30 - Outdoor unit
- 32 - Duo hydraulic unit (2 services)
- 50 - Expansion vessel
- 51 - Electrical backup
- 52 - Decoupling bottle
- 54 - Directional valve
- 55 - Manometer
- 56 - No-return valver
- 67 - Electrical supply (not supplied)
- 100 - Radiator
- 101 - Underfloor heating system
- 102 - Dynamic radiator (fan-convector)
- 105 - Thermostat or room sensor
- 150 - Disconnector
- 151 - Safety group
- 152 - Thermostatic mixing valve
- 156 - Recirculating pump (not supplied)
- 210 - Buffer tank
- 411 - Programming (not supplied)
- 501 - Compressor temp. sensor
- 502 - Discharge temp. thermistor
- 503 - Input temp. sensor (Expansion valve)
- 504 - Inlet heat exchanger temp. thermistor (refrigerant heat exchanger)
- 505 - Middle heat exchanger temp. thermistor (refrigerant heat exchanger)
- 506 - Output temp. sensor (Air to Refrigerant Heat Exchanger)
- 507 - Flow temp. Thermistor (hydraulic heat exchanger)
- 520 - Return temp. sensor (heating circuit)
- 521 - Flow temp. sensor (heating circuit)
- 530 - DHW temp. sensor
- 531 - DHW electrical backup thermal safety

Nr	Code	Typ	Qty
1	182963		01
2	164298		01
3	142442	20x27	03
4	182962		01
5	164297		01

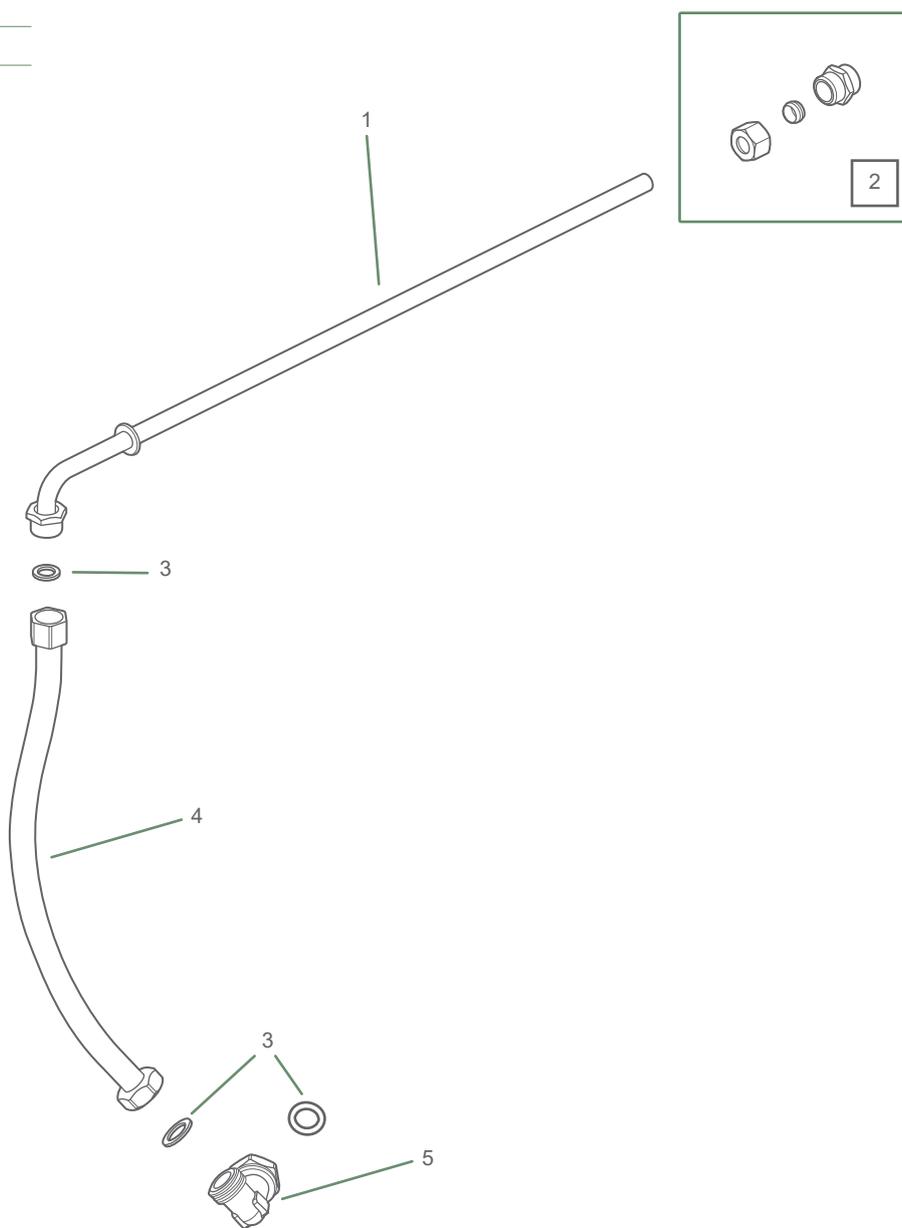

**FR**  
 Cet appareil, ses accessoires, piles et cordons se recyclent

REPRISE À LA LIVRAISON    À DÉPOSER EN MAGASIN    À DÉPOSER EN DÉCHÈTERIE

Points de collecte sur [www.quefairedemesdechets.fr](http://www.quefairedemesdechets.fr)

Commissioning date:

Address of your heating installer or customer service.

Société Industrielle de Chauffage  
 SATC - BP 64 - 59660 MERVILLE - FRANCE