

# EcoStruxure™ EV Charging Expert

## User Guide

10/2025



## Legal information

The information provided in this document contains general descriptions, technical characteristics and/or recommendations related to products/solutions.

This document is not intended as a substitute for a detailed study or operational and site-specific development or schematic plan. It is not to be used for determining suitability or reliability of the products/solutions for specific user applications. It is the duty of any such user to perform or have any professional expert of its choice (integrator, specifier or the like) perform the appropriate and comprehensive risk analysis, evaluation and testing of the products/solutions with respect to the relevant specific application or use thereof.

The Schneider Electric brand and any trademarks of Schneider Electric SE and its subsidiaries referred to in this document are the property of Schneider Electric SE or its subsidiaries. All other brands may be trademarks of their respective owner.

This document and its content are protected under applicable copyright laws and provided for informative use only. No part of this document may be reproduced or transmitted in any form or by any means (electronic, mechanical, photocopying, recording, or otherwise), for any purpose, without the prior written permission of Schneider Electric.

Schneider Electric does not grant any right or license for commercial use of the document or its content, except for a non-exclusive and personal license to consult it on an "as is" basis.

Schneider Electric reserves the right to make changes or updates with respect to or in the content of this document or the format thereof, at any time without notice.

**To the extent permitted by applicable law, no responsibility or liability is assumed by Schneider Electric and its subsidiaries for any errors or omissions in the informational content of this document, as well as any non-intended use or misuse of the content thereof.**

# About this guide

## Document scope

The purpose of this guide is to provide installers, maintenance personnel and users with the technical information necessary to install, commission and use the EcoStruxure EV Charging Expert.

## Introduction

- EcoStruxure EV Charging Expert main features:
  - allocate a current setpoint to the charging stations in operation
  - see in real time the status of the charging stations through the dashboard
  - manage user authentication for charging authorization
  - get the charging sessions history and data from the charging stations in the network
- EcoStruxure EV Charging Expert is compatible with remote supervision from a Charge Point Operator in OCPP 1.6 Json.
- EcoStruxure EV Charging Expert allows two access profiles:
  - **Admin:** Access to all configuration parameters and features, dashboard operation and RFID cards management.
  - **EBMS (Building Management System):** Role used for Energy of Building Management Softwares, capable of managing charging stations directly through the REST API of EcoStruxure EV Charging Expert.

## Related documents

Title of documentation	Reference number
eMobility Infrastructure Design guide for building applications	EVSOL1DG001EN
Instructions sheet for Acti9 Smartlink SI D gateway A9XMWA20 (English, Dutch, French, German, Italian, Portuguese, Spanish, Chinese, Russian)	NVE60007
Instructions sheet for power meter METSEPM5320 (English, Dutch, French, German, Italian, Portuguese, Spanish, Chinese, Russian)	HRB69887
Instructions sheet for power meter A9MEM3250 (English, Dutch, French, German, Italian, Portuguese, Spanish, Chinese, Russian)	NHA15795
Instructions sheet for Enerlin'X IFE gateway LV434002 (English, French)	DOCA0084
Instructions sheet Enerlin'X EIFE communication module LV851001 (English, French)	DOCA0106
Installation guide for EcoStruxure EV Charging Expert (English)	EIO0000005096

You can download these technical publications and other technical information from our website at <https://www.se/en/download>

## Trademarks

QR Code is a registered trademark of DENSO WAVE INCORPORATED in Japan and other countries.

# Safety information

## Important information

Read these instructions carefully, and look at the equipment to become familiar with the device before trying to install, operate, service, or maintain it. The following special messages may appear throughout this documentation or on the equipment to warn of potential hazards or to call attention to information that clarifies or simplifies a procedure.



The addition of this symbol to a “Danger” or “Warning” safety label indicates that an electrical hazard exists which will result in personal injury if the instructions are not followed.



This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.

### **⚠ DANGER**

**DANGER** indicates a hazardous situation which, if not avoided, **will result in** death or serious injury.

### **⚠ WARNING**

**WARNING** indicates a hazardous situation which, if not avoided, **could result in** death or serious injury.

### **⚠ CAUTION**

**CAUTION** indicates a hazardous situation which, if not avoided, **could result in** minor or moderate injury.

### **NOTICE**

**NOTICE** is used to address practices not related to physical injury.

## PLEASE NOTE

Electrical equipment should be installed, operated, serviced, and maintained only by qualified personnel. No responsibility is assumed by Schneider Electric for any consequences arising out of the use of this material.

A qualified person is one who has skills and knowledge related to the construction and operation of electrical equipment and its installation and has received safety training to recognize and avoid the hazards involved.

# Table of contents

Chapter 1. SYSTEM ENVIRONMENT .....	8
1.1 Glossary.....	9
1.2 EcoStruxure EV Charging Expert .....	9
Overview .....	9
1.3 EcoStruxure EV Charging Expert characteristics .....	18
General characteristics .....	18
Environmental characteristics.....	18
Power supply characteristics .....	19
Communication modules .....	20
1.2.1	
1.4 Set up of EcoStruxure EV Charging Expert system environment .....	21
1.3.1 EcoStruxure EV Charging Expert installation .....	21
1.3.2	
1.3.3	
1.3.4 1.5 Electrical zone definition .....	23
Chapter 2. EcoStruxure EV Charging Expert COMMISSIONNING .....	26
1.4.1	
2.1 Starting with EcoStruxure EV Charging Expert .....	26
Computer configuration .....	26
Login to the EcoStruxure EV Charging Expert .....	27
2.1.1	
2.1.2 2.2 Credentials configuration .....	29
2.3 Wizard steps .....	29
Network.....	29
2.3.1 Remote supervision .....	29
2.3.2 Date & Time.....	29
2.3.3 Energy management .....	29
2.3.4 Stations configuration .....	30
2.3.5 Power meter configuration.....	30
2.3.6 Zones configuration .....	30
2.3.7 Station assignment .....	30
2.3.8 Authentication group.....	30
2.3.9 RFID Cards .....	30
2.3.10	
Chapter 3. OPERATION INTERFACE .....	31
3.2.1	
3.1 Menu and status bar .....	32
3.2.2	
3.2.3 3.2 Dashboard .....	33
Global view .....	33
3.3.1 Zone view .....	34
3.3.2 Transaction view.....	35
3.3.3 Station view .....	35
3.3.4	
3.3 Network configuration .....	37
3.4.1	
3.4.2 EcoStruxure EV Charging Expert name .....	37
3.4.3 Network configuration .....	37
Proxy configuration .....	38
3.5.1 DHCP server configuration.....	38
3.5.2	
3.4 Remote supervision configuration .....	39
Supervision selection.....	39
Unique supervision .....	39
Multiple supervision .....	40
3.5 Energy management configuration .....	42
Load shedding configuration .....	42
Consumption optimisation configuration.....	42

Allow Suspended by System .....	42
Electrical grid .....	<b>Erreur ! Signet non défini.</b>
Local production management .....	43
3.6 Charging stations commissioning .....	45
Prerequisites .....	45
Charging station installation page .....	45
Charging station status .....	46
Charging station configuration .....	47
Manual charging station configuration .....	47
3.7 Power meter configuration .....	50
Prerequisites .....	50
Manage Power Meters .....	50
Define a new power meter model .....	51
3.8 Zone configuration .....	52
Prerequisites .....	52
Zone configuration .....	52
Zone creation .....	52
Degraded Mode .....	53
Charging station electrical zone assignation .....	53
3.9 Time Of Use .....	55
Definition .....	55
Prerequisites .....	55
Time Of Use configuration tab .....	55
Zone configuration tab .....	56
Summary tab .....	56
3.10 Local authentication management .....	57
Authentication group .....	57
RFID cards .....	59
3.11 Certificates .....	60
Manage Certificates .....	60
Device certificates .....	60
3.12 Charging station firmware .....	62
Manage charging station firmware .....	62
Internal HTTP server .....	63
Perform charging station update .....	63
3.13 Advanced configuration .....	64
3.14 User management .....	65
User management landing page .....	65
User addition .....	65
Change the user password .....	66
Edit a user .....	66
3.15 Maintenance .....	67
Device logs .....	67
Device maintenance report .....	67
Charging station maintenance report .....	68
3.16 EV Charging Expert Firmware update .....	69
3.17 License upgrade .....	70
3.18 Reboot and back to factory settings .....	71
Reboot and back to factory settings from the webserver .....	71
Hardware back to factory settings .....	72
3.19 Save and Restore .....	74

---

Save configuration .....	74
Restore configuration.....	74

3.19.1  
3.19.2

# Chapter 1.

# SYSTEM

# ENVIRONMENT

## 1.1 Glossary

- **EV** : Electrical Vehicle
- **AC**: Alternate Current
- **DC**: Direct Current
- **VIP**: Very Important Person
- **RFID**: Radio Frequency Identification
- **CDR**: Charging Data Record
- **HMI**: Human Machine Interface
- **OCPP**: Open Charge Point Protocol
- **DHCP**: Dynamic Host Configuration Protocol

## 1.2 EcoStruxure EV Charging Expert

### Overview

**EcoStruxure EV Charging Expert** (EVCE) is the necessary tool for optimizing the electricity usage associated with the Electrical Vehicule charging needs of a commercial building or a Multi Family Home.

#### EcoStruxure EV Charging Expert main features:

- Allocate a current setpoint to the charging stations in operation.
- See in real time the status of the charging stations through the dashboard.
- Manage user authentication for charging authorization.
- Get the charging sessions history and data from the charging stations in the network.
- Compatibility with remote supervision from a Charge Point Operator in OCPP 1.6 Json.
- EcoStruxure EV Charging Expert allows two access profiles:
  - **Admin**: Access to all configuration parameters and features, dashboard operation and RFID cards management.
  - **User**: Dashboard operation and RFID cards management.

#### 1.2.1.1 Power management functions

For a specific electrical infrastructure, the maximum power available for EV charging is distributed among the connected vehicles.

An electric vehicle needs a minimum setpoint to accept charging and, if this minimum is not available, the charge will temporarily be suspended for this particular charging point.

The Load Management System allows the admin profile to choose between two thresholds (floor values) for AC charging:

- 8A by default for single phase charging and 14A by default for three-phase charging (based on EV/ZE ready)
- 6A by default for both single phase and three-phase (based on IEC 61851)

When a new vehicle connects and there is not enough available power, the system will suspend the charging of another vehicle to allow the new vehicle to charge.

Two options of charging prioritization are available during the configuration of the load management system:

- Energy:

The system suspends the charging of vehicles which have already consumed the highest amount of energy. This option is set by default.

- Duration:

The system suspends the charging of vehicles with the longest charging time.

In both cases, the EcoStruxure EV Charging Expert reviews these values every 15 minutes and updates charging priorities accordingly.

EcoStruxure EV Charging Expert can manage VIP information with operator or admin profile:

- VIP RFID: Once authenticated as VIP EV driver, the EV gets maximum available\* power no matter the charging station.  
*Note: VIP RFID card is not available when remote supervision communication is activated*
- VIP charging station: The charging station allows any EV to get the maximum available\* power.


*\*The maximum available power for VIP status may be lower than the charging station rating depending on the number of simultaneous VIP charging sessions.*

#### 1.2.1.2 Static and dynamic power management

##### Static mode

The maximum current setpoint for the whole charging infrastructure is a static value depending on the subscribed power supply and limitations of power distribution. This current is distributed between all connected vehicles to limit the risk of installation tripping.


Consumption profile in static mode:

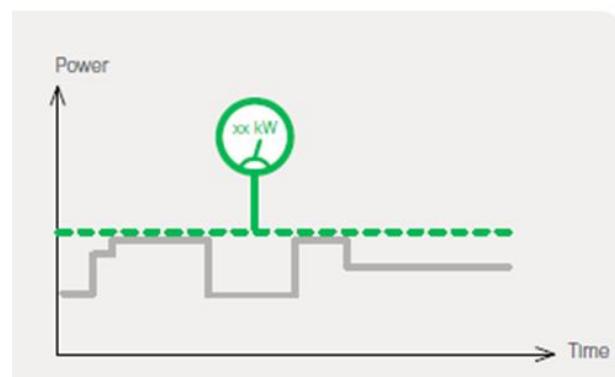

### Dynamic mode

The maximum current setpoint for the whole charging infrastructure changes dynamically according to the building consumption while considering the subscribed power supply and/or local production. The remaining available current is distributed between all connected vehicles to limit the risk of installation tripping.

Consumption profile in dynamic mode:

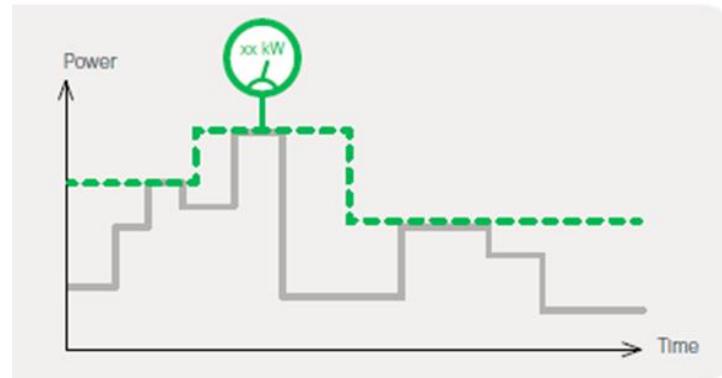

**In dynamic mode, the EcoStruxure EV Charging Expert must be connected to power meters measuring the consumption of the building and the charging stations.**

### 1.2.1.3 EcoStruxure EV Charging Expert product range & features

		Load Management License
		HMIBX1A0NEVB100SCP
Capacity	Max number of charging stations	250
Power Management	With a static setpoint	●
	With a dynamic setpoint	●
Multi zone	Max number of zones	20
	Max number of zone levels (Top zone + sub-zones)	4
Advanced	Local production Local authentication Transactions logs	●

### 1.2.1.4 User profile features

#### Operate EcoStruxure EV Charging Expert Dashboard

The dashboard displays:

- The status of all charge points (connectors)
- The power consumption per phase

#### Remote control of charging station and transactions

Below actions are available through “Charging Station” tab:

- Remote start
- Remote stop
- Remote force stop
- Reboot (automatic charging resume)
- Reset (charging stopped)
- Access to maintenance report
- Access to webserver (if feature available for charging station)

*\*Only available when remote supervision is deactivated*

### RFID cards management

When the EcoStruxure EV Charging Expert is in standalone mode (remote supervision deactivated), it is possible to:

1. Create authentication group
2. Configure authentication strategy of each group
3. Allocate RFID cards and stations to these groups

Access through “RFID cards management” from the dashboard. See [chapter 3.11](#)

### Export Charging Data Records (CDR)

On the EcoStruxure EV Charging Expert Dashboard, the user can see the active charging sessions.

EcoStruxure EV Charging Expert can register over 1 million transactions data, also called charging data records, in its internal memory. The charging data records can be exported as an external file in CSV format for all the charging stations.

It is possible to select the period before exporting the file.

Access through “Export transactions” from the dashboard. See [chapter 3.2.3](#)

#### 1.2.1.5 Admin profile features

In addition to the user profile features, the admin profile can change the configuration of the charging stations, and upgrade EcoStruxure EV Charging Expert firmware.

### EcoStruxure EV Charging Expert commissioning

All parameters are accessible via the admin/configuration page.

The admin profile sets configuration parameters for:

- Network configuration
- Remote supervision
- Energy management
- Date & Time
- Zone management
- Power meters
- Time of use
- Certificates
- Firmwares of charging stations
- Advanced Parameters
- User management
- Logs
- Device report

- Station reports
- Zone/Station configuration


### EcoStruxure EV Charging Expert maintenance

The admin profile can:

- Update the EcoStruxure EV Charging Expert firmware
- Get EcoStruxure EV Charging Expert logs
- Operate a “Back to factory”
- Operate a “Save & restore”
- Manage users accounts and passwords
- Download EcoStruxure EV Charging Expert maintenance report
- Download charging station maintenance report
- Access the Wizard that is used for initial commissioning


#### 1.2.1.6 EcoStruxure EV Charging Expert hardware features

##### Side View

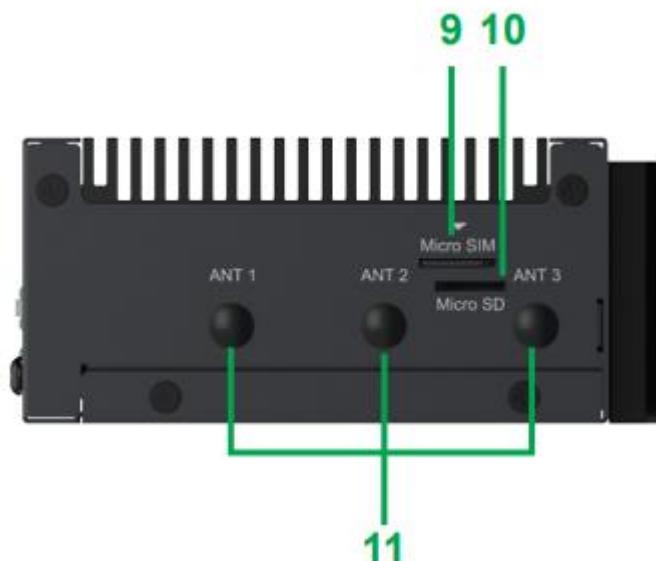

9 – SIM Card slot (not used)  
10 – SD Card slot  
11 – External Antenna slot (not used)

##### Rear View

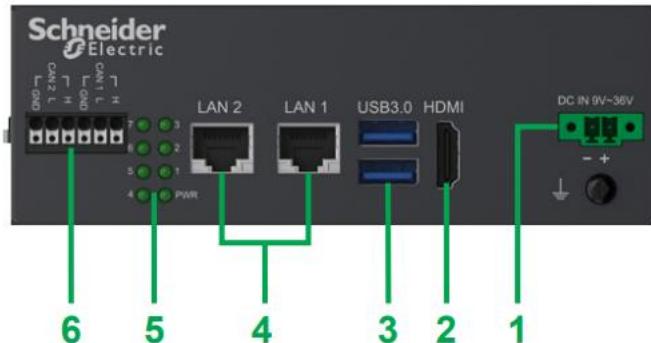

1 – DC power connector  
 2 – HDMI port (**deactivated\***)  
 3 – USB 3.0  
 4 – LAN ports (10/100/1000 Mb/s) (**LAN 2 is deactivated by default**)  
 5 – LEDs  
 6 – CAN ports (**deactivated\***)  
 \* **Hardware deactivation improves cybersecurity**

### 1.2.1.7 EVlink charging stations

Charging station	Supported	Minimal version
EVlink Pro AC	Yes	1.6.1
EVlink Pro DC 120/150/180	Yes	2.7.02
EVlink Pro DC 60	Yes	2.6.15
EVlink Parking	Yes	3.4.0.10
EVlink Smart WallBox	Yes	3.4.0.10
EVlink City	Yes	3.4.0.10
24kW DC Charger	Yes	V028.803
Schneider Charge Pro	Yes	2.0.3
Bender	No	
WallBee	No	

Latest releases are available on [se.com/download](http://se.com/download).

For previous releases, contact [Schneider Electric Customer Care Center](http://schneider-electric-customer-care-center).

### 1.2.1.8 Power meters

Note: power metering is only required when the EcoStruxure EV Charging Expert is used in dynamic mode.

The table below lists few recommended power meters.

Name	Pole description	Input type	Comment
A9MEM3250 (PAS600+ Acti 9 iEM3000)  	1P + N / 3P / 3P + N	External CT: 1 A or 5 A  CT: Current Transformer	
METSEPM5320 (PowerLogic PM5000)  	1P + N / 3P / 3P + N		
A9XMWD20 (PowerTag Link + Power Tags)  	1P + N / 3P / 3P + N	Wireless energy sensor PowerTag up to 630 A	
Compact NSX circuit breaker with embedded metering (with Enerlin'X IFE gateway)  	3P / 4P	Modbus TCP	For 3P, If you want to have power per phase with NSX 3-poles, you must add external neutral voltage tap
Masterpact MTZ circuit breaker with embedded metering (with embedded Enerlin'X EIFE module)  	3P / 4P	Modbus TCP	For 3P, If you want to have power per phase with MTZ 3-poles, you must add external neutral voltage tap

### 1.2.1.8.1 Modbus registers tables

The following tables show the ModBus registers per type of power meter.

Power meter model	"PM5320, IEM3x5x, Power tag A"
Register @	Description
3000	Current Ph1
3002	Current Ph2
3004	Current Ph3
3054	Power Ph1
3056	Power Ph2
3058	Power Ph3
3060	Total Active Power
3204	Total Active Energy Delivered

Power meter model	"NSX legacy"
Register @	Description
12016	Current Ph1
12017	Current Ph2
12018	Current Ph3
12038	Power Ph1
12039	Power Ph2
12040	Power Ph3
12041	Total Active Power
12050	Total Active Energy Delivered

Power meter model	"NSX"
Register @	Description
32028	Current Ph1
32030	Current Ph2
32032	Current Ph3
32077	Power Ph1
32074	Power Ph2
32076	Power Ph3
32078	Total Active Power
32096	Total Active Energy Delivered

Power meter model	"MTZ"
Register @	Description
32028	Current Ph1
32030	Current Ph2
32032	Current Ph3
32077	Power Ph1
32074	Power Ph2
32076	Power Ph3
32078	Total Active Power
32096	Total Active Energy Delivered

Other power meters that are not part of this selection (refer to [chapter 1.1.1.8](#)) are compatible with EcoStruxure EV Charging Expert as well. When commissioning the power meter, select from the drop-down list on "Model" field the corresponding model of power meter matching the appropriate registers list.

See [chapter 3.6](#) for more information.


## 1.3 EcoStruxure EV Charging Expert characteristics

### General characteristics

1.3.1

Element	Characteristics
Operating System	Linux Yocto
Cooling method	Natural air flow
Weight	1 kg (2.2 lbs)

#### 1.3.1.1 Dimensions

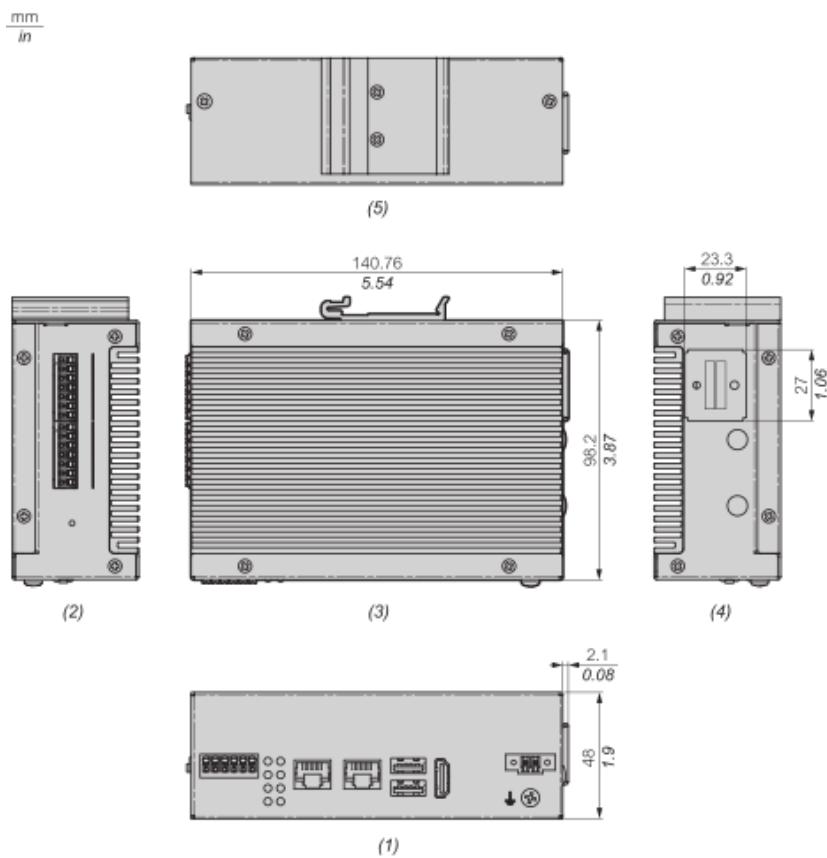

1.3.2

- (1) : Front View
- (2) : Left View
- (3) : Top View
- (4) : Right View
- (5) : Rear View

### Environmental characteristics

Characteristics	Value
Degree of protection	IP 20
Operating temperature	-10...55 °C
Operating temperature for horizontal mounting	-10...55 °C
Storage temperature	-40...80 °C
Storage humidity	10...95 % RH at 40 °C (104 °F), no condensation

### Power supply characteristics

1.3.3

Element	Characteristics
Rated voltage	24 Vdc
Inrush current	1,5 A
Power consumption	16 W

## Communication modules

### 1.3.4.1 USB interface

1.3.4

Element	Characteristics
Type	USB 2.0
Current load	Maximum 0.5 A
Connection	Type A

### 1.3.4.2 Ethernet interface

Element	Characteristics
Type	RJ45
Speed	10/100/1000 Mb/s base-T

# 1.4 Set up of EcoStruxure EV Charging Expert system environment

## EcoStruxure EV Charging Expert installation

See EIO0000005096 EcoStruxure EV Charging Expert installation guide" available on the EcoStruxure EV Charging Expert packaging and on [se.com/download](http://se.com/download).

### 1.4.1.1 Ethernet connection: charging station connection

1.4.1

EcoStruxure EV Charging Expert is connected to the charging station network through ethernet ETH1.

Use an ethernet straight cable between EcoStruxure EV Charging Expert and the charging station Ethernet network.


### NOTICE

#### IMPOSSIBLE TO COMMISSION A CHARGING STATION INTO ECOSTRUXURE EV CHARGING EXPERT

- Connect the charging station network only to ETH 1
- ETH 2 network must be activated through UI (see 3.3 Network Configuration)

Failure to follow this instruction will not enable EcoStruxure EV Charging Expert connectivity and expected functionalities.

### 1.4.1.2 Power meter connection

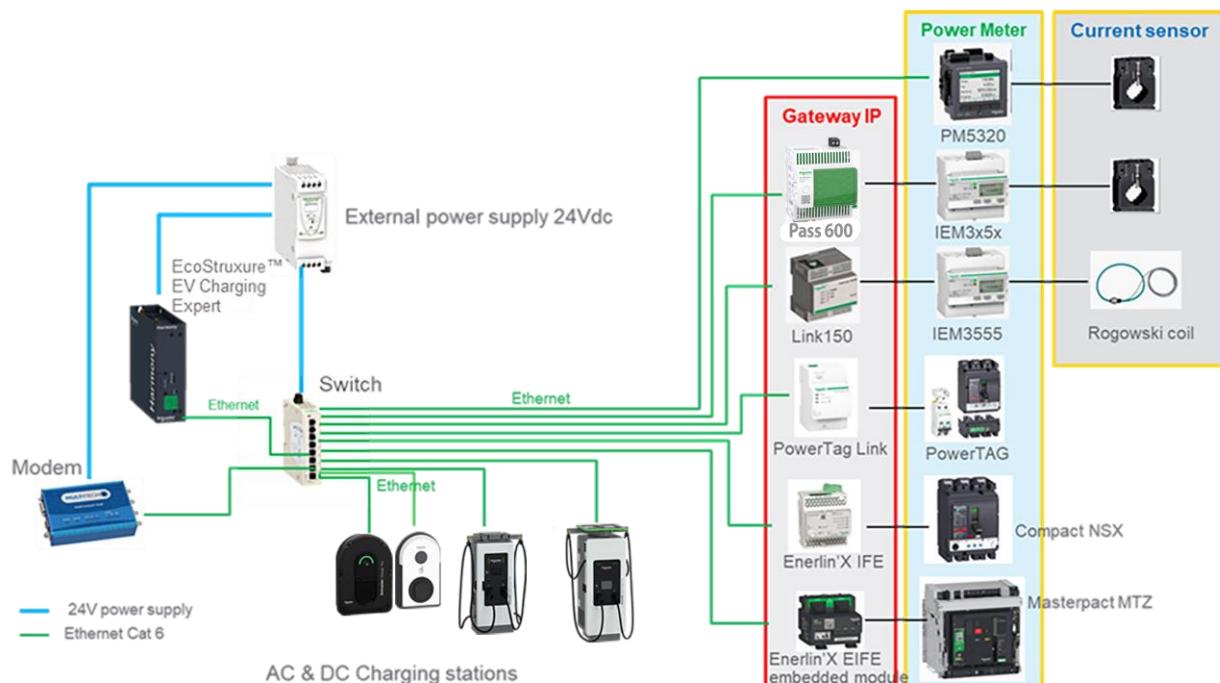

Gateways and power meters must be set correctly before starting the EcoStruxure EV Charging Expert commissioning. Please check the relevant documentation to perform this step.

Note: power metering is only required when the EcoStruxure EV Charging Expert is used in dynamic load management mode.

## 1.5 Electrical zone definition

An electrical zone is made of one switchboard:


- directly supplying charging stations and possibly other electrical loads,
- or supplying other switchboards of which at least one is supplying charging stations and possibly other electrical loads. This latter forms a sub-zone. The total installed current of all sub-zones must be at least equal to the maximum current that can be delivered by the upper zone switchboard. A maximum of three levels of sub-zones is possible.

For a dynamic zone, a maximum degraded current should be defined in case of power meter disconnection. This maximum degraded current corresponds to the among of available current that is always guaranteed for EV charging.

### Example #1: one single zone

In this example, the main switchboard can supply both switchboards at the maximum current. Energy management is required in the zone if the switchboard #1 cannot supply all charging stations and other electrical loads at the same time at the maximum current.

In case of a power meter disconnection, if the maximal building electrical load of the zone is estimated to ~150A, the maximal available current for EV charging in this zone is 100A.

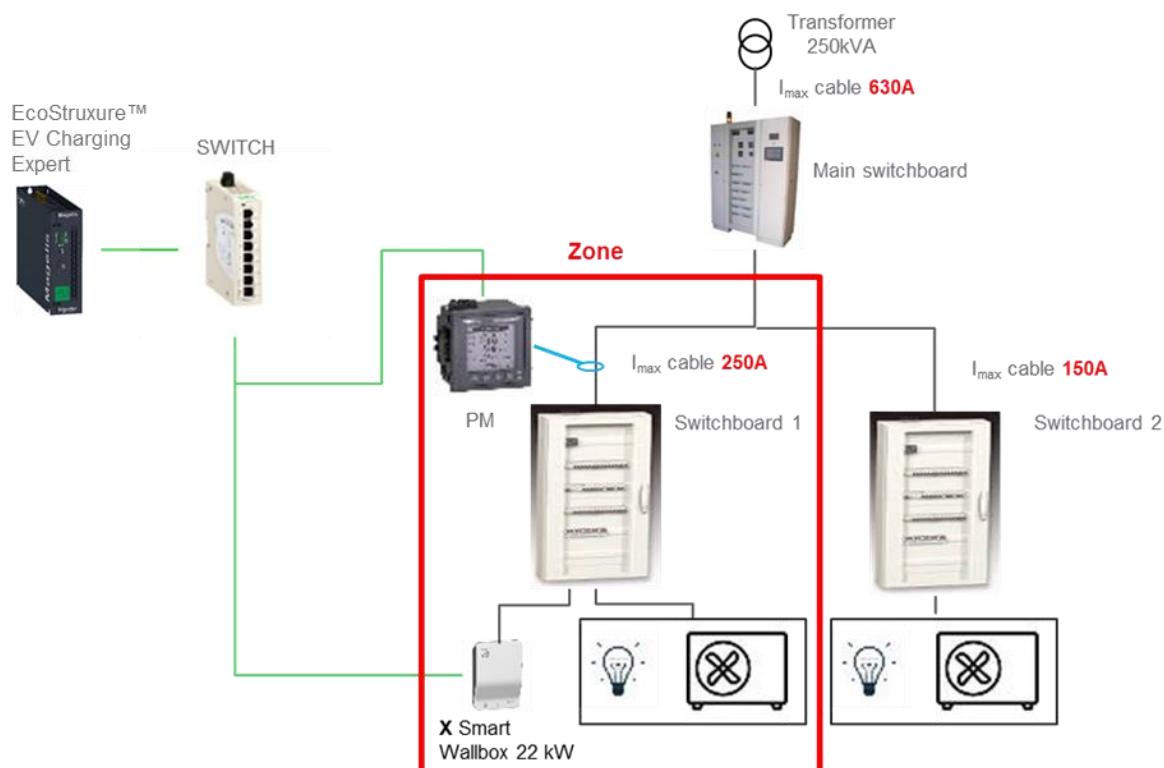

### Example #2: one zone with one sub-zone


In this example, the main switchboard cannot supply both switchboards at the maximum current. In the same way, the switchboard #1 cannot supply all charging stations and other electrical loads at the same time at the maximum current.

The current available for EV charging depends on:

- the total consumption of other electrical loads supplied by switchboards #1 and #2 due to the current limitation of the main switchboard (630 A),
- the consumption of other electrical loads supplied by switchboard #1 due to its current limitation (400 A)


In case of power meter disconnection, the maximum degraded current of the top zone should be defined regarding the estimation of the maximum building electrical loads of switchboards #1 and #2.

As a result, it is necessary to define a zone (main switchboard) with a sub-zone (switchboard #1).

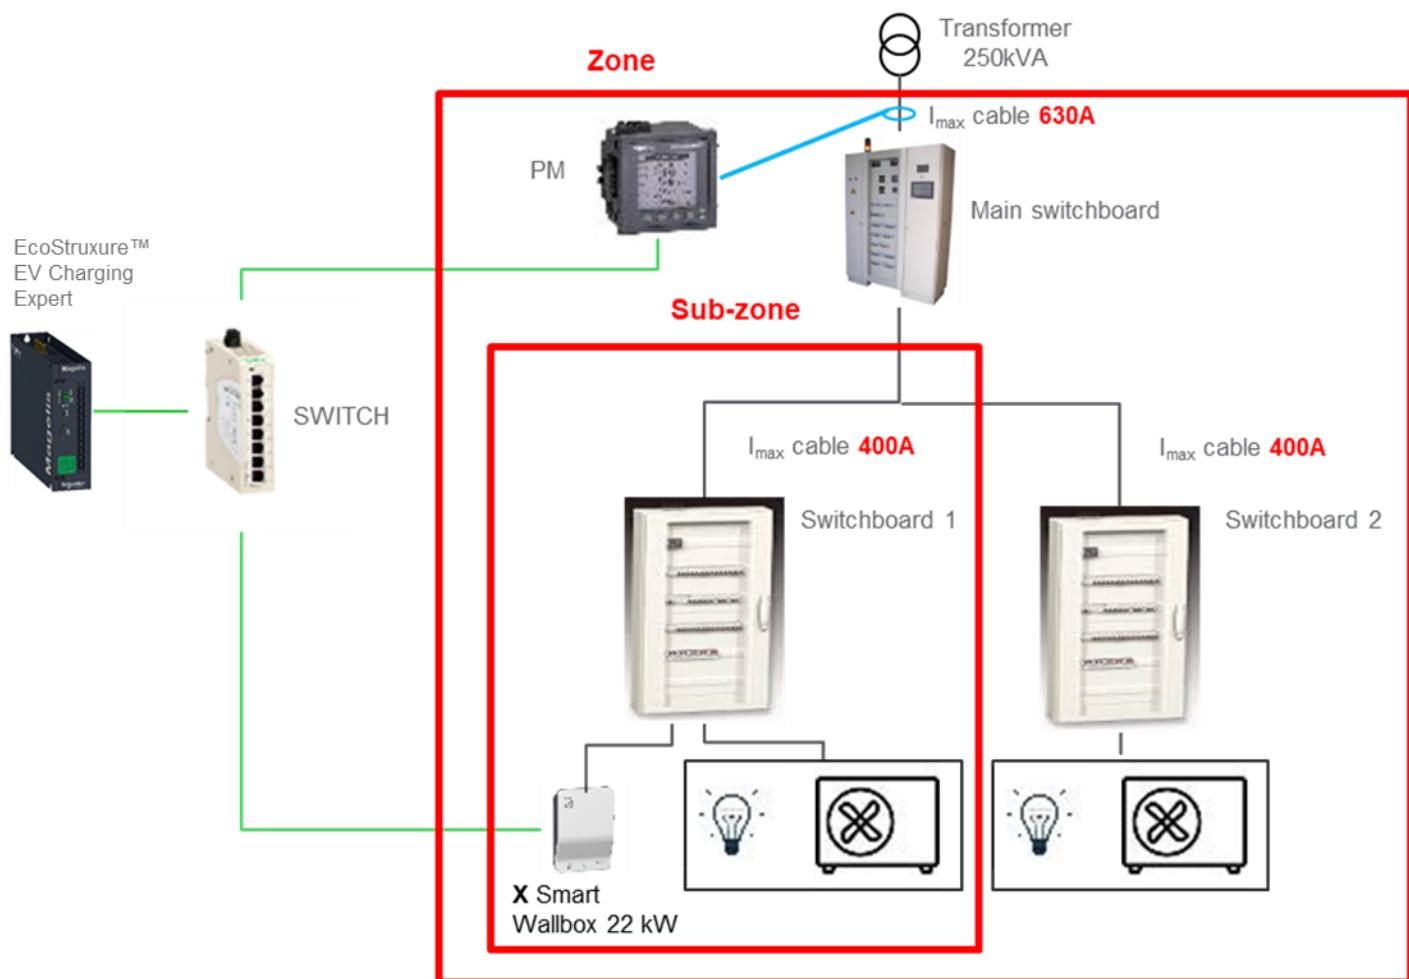

### Example #3: two zones at the same level

In this example, the main switchboard can supply switchboards #1 & #2 at the maximum power. Energy management is required in each zone if switchboards #1 and #2 cannot supply all charging stations and other electrical loads at the same time at the maximum power.

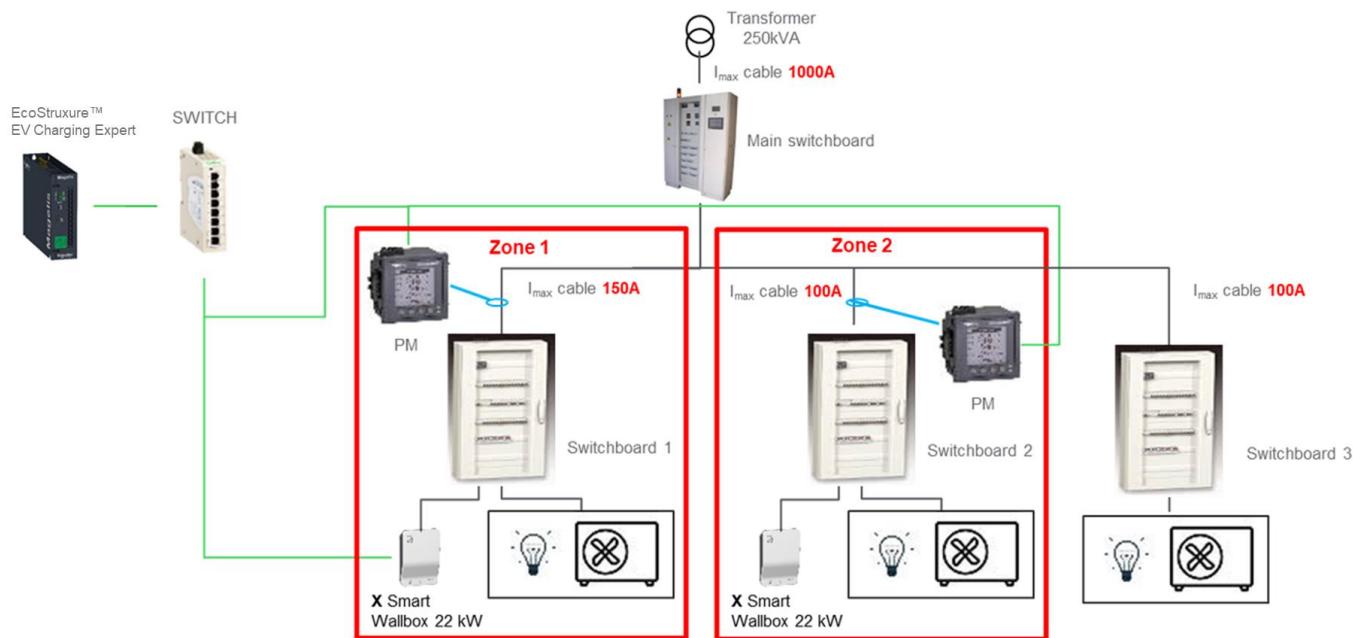

# Chapter 2.

# EcoStruxure EV

# Charging Expert

# COMMISSIONNING

During the first commissioning, a configuration assistant (**wizard**) will guide the installer to set the EcoStruxure EV Charging Expert. If you have already done the first commissioning, please go to [chapter 3 OPERATION INTERFACE](#).

## NOTICE

**IMPOSSIBLE TO COMMISSION IN ECOSTRUXURE EV CHARGING EXPERT A CHARGER WITH ONGOING CHARGING SESSION.**

- Stop all ongoing charging session
- Unplug all cars connected to the charging station
- Start the EcoStruxure EV Charging Expert commissioning or re-commissioning

Failure to follow these instructions can block the stations pairing with EV Charging Expert.

## 2.1 Starting with EcoStruxure EV Charging Expert

### 2.1.1 Computer specification

#### Computer specification



	Minimum requirements	Recommended requirements
CPU	Intel Core i3 or AMD Ryzen 3	Intel Core i5 or AMD Ryzen 5
2.1.2 RAM	4 Go	8 Go


NOTE: Failure to follow the minimum requirements will have impact on the responsiveness of your internet browser.

#### Computer configuration

Step	Action
1	Connect your computer to the EcoStruxure EV Charging Expert Ethernet network
2	Open the local network properties menu on your computer
3	Open Internet Protocol TCP/IP v4 properties.
4	Set the static IP address properties as follows: IP address: 192.168.0.x (where x is a number between 50 and 100) Subnet mask: 255.255.255.0 No default gateway No DNS server No proxy

## Login to the EcoStruxure EV Charging Expert

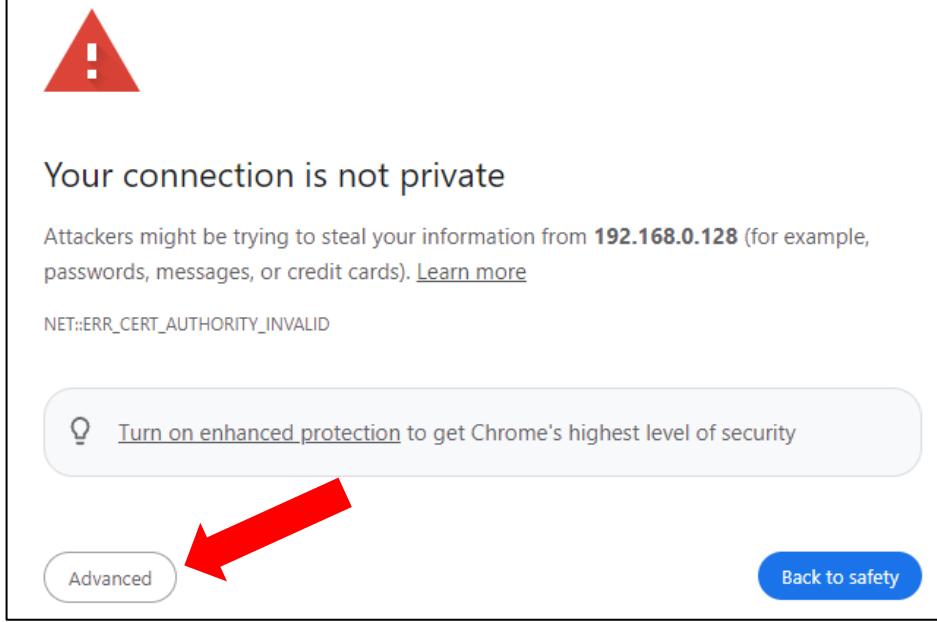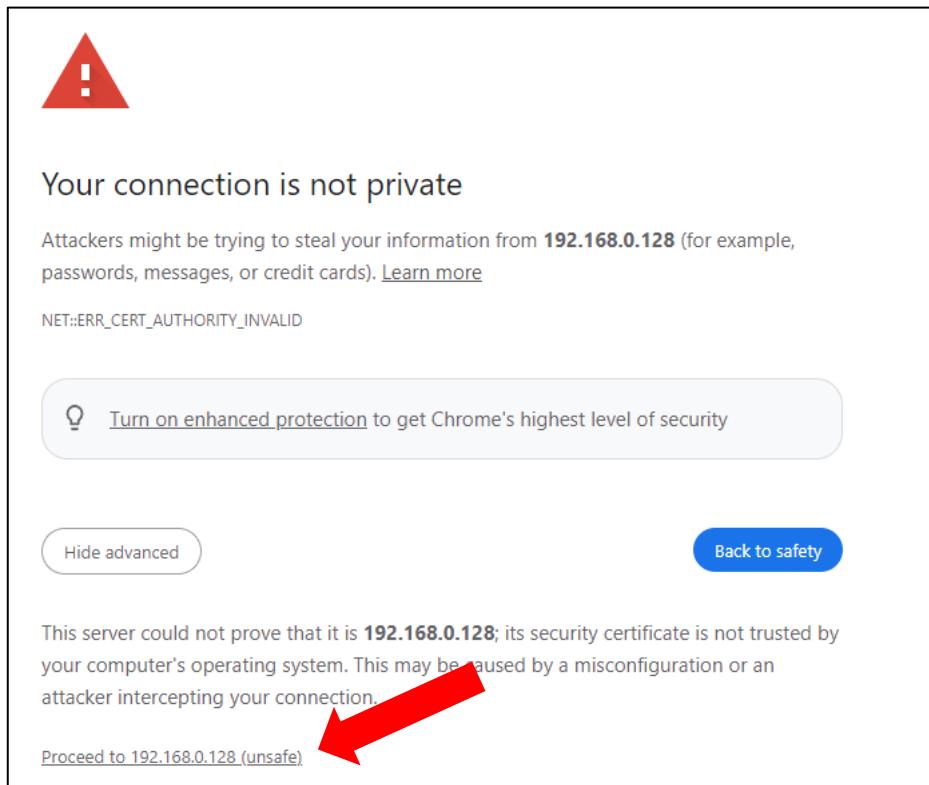Step	Action
1	<p>Open a web browser and type 192.168.0.128 in the URL field</p> <p>A security warning may be displayed: click on "Advanced" button if this occurs (see capture below)</p> <p>2.1.3</p> 
	<p>Then click on "Proceed to @ ..."</p> 

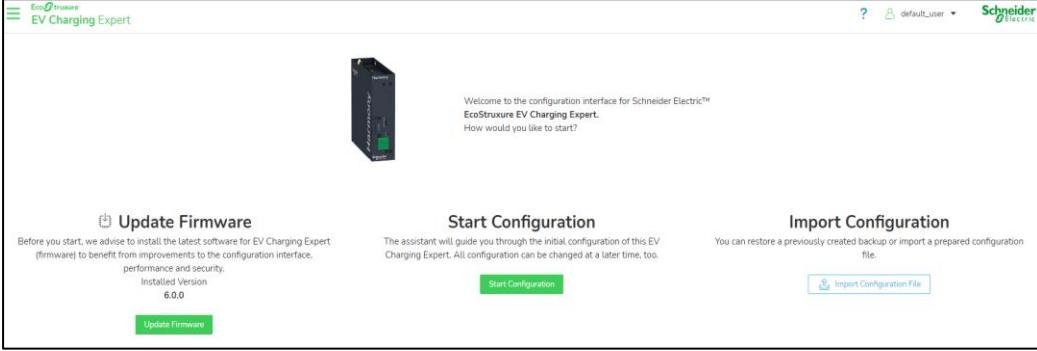Step	Action
2	<p>To start with EcoStruxure EV Charging Expert, there are 3 options:</p>  <ul style="list-style-type: none"> <li>• Update the firmware: It is recommended to update the product with the latest version of firmware that has been issued. The file needs to be available locally, hence the installer needs to download it previously from se.com.</li> <li>• Start new configuration : <a href="#">chapter 2.3</a></li> <li>• Import EcoStruxure EV Charging Expert: <a href="#">chapter 3.20.2</a></li> </ul>

## 2.2 Credentials configuration

In EcoStruxure EV Charging Expert there are two different user profiles:

- **Administrator:** Access to all configuration parameters and features, dashboard operation and RFID card management.
- **User:** Dashboard operation and RFID card management.

Set Login Credentials

To avoid unauthorized access to this configuration interface, please define username and password for an administrator and a first user.

**Administrator**

The administrator has access to all configuration for this EV Charging Expert and needs to complete the initial configuration before users can access the interface.

Username

You should not use Root, Admin or Administrator, as they are easy to guess.

Password

Your password must satisfy the following conditions: at least 12 characters long lowercase characters uppercase characters numbers special characters (@\$!%?&).

Repeat Password

I securely stored these credentials. A factory reset is the only option if they get lost.

**First User**

After initial configuration, users can monitor the installation's status, and manage badges. Please create one first user here, you can add more users later.

Previous Save and Next

At the credentials step, the installer is asked to create an administrator profile and a user profile.

The passwords must satisfy the following conditions:

- at least 12 characters long lowercase
- characters uppercase
- characters numbers
- special characters (@\$!%?&).

The login cannot be “Root”, “Admin” or “Administrator”.

## 2.3 Wizard steps

2.3.1 The wizard allows to configure EcoStruxure EV Charging Expert with only 10 steps.

### Network

2.3.2

See [chapter 3.3](#)

2.3.3

### Remote supervision

2.3.4

See [chapter 3.4](#)

### Date & Time

### Energy management

See [chapter 3.5](#)

**Stations configuration**

See [chapter 3.6](#)

**Power meter configuration**

See [chapter 3.7](#)

2.3.5 **Zones configuration**

See [chapter 3.8](#)

2.3.6 **Station assignment**2.3.7 **See [chapter 3.8.5](#)**2.3.8 **Authentication group**

See [chapter 3.11.1](#)


2.3.9 **RFID Cards**2.3.10 **See [chapter 3.11.2](#)**

# Chapter 3.

# OPERATION

# INTERFACE

## 3.1 Menu and status bar

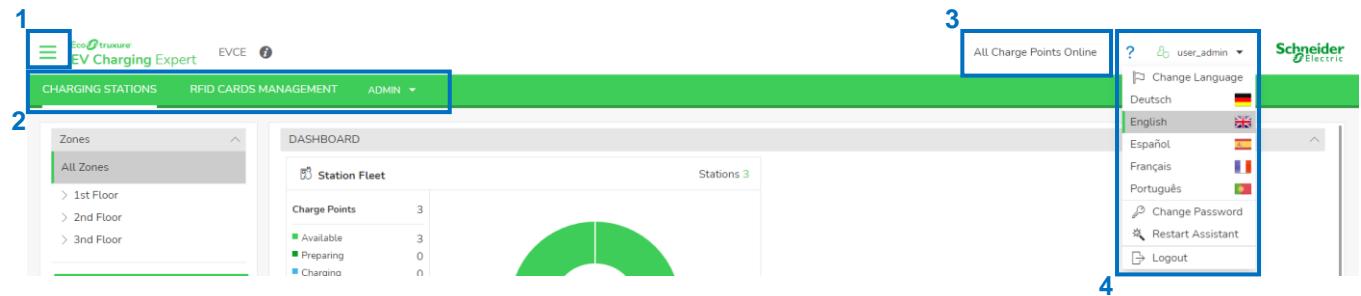


Mark	Description
1	Menu to update EcoStruxure EV Charging Expert and upgrade licence
2	Administrator menu to manage configurations
3	Charging station status (Online/Offline/Faulted state)
4	User management: <ul style="list-style-type: none"> <li>• Change language</li> <li>• Update password</li> <li>• Restart assistant: restart wizard menu</li> <li>• Logout</li> </ul>

## 3.2 Dashboard

### Global view

This page displays the ongoing status of the charging stations, load transaction information and zone configuration. Furthermore, it's possible to manage charging stations (reboot/remote start & stop/diagnostic report).

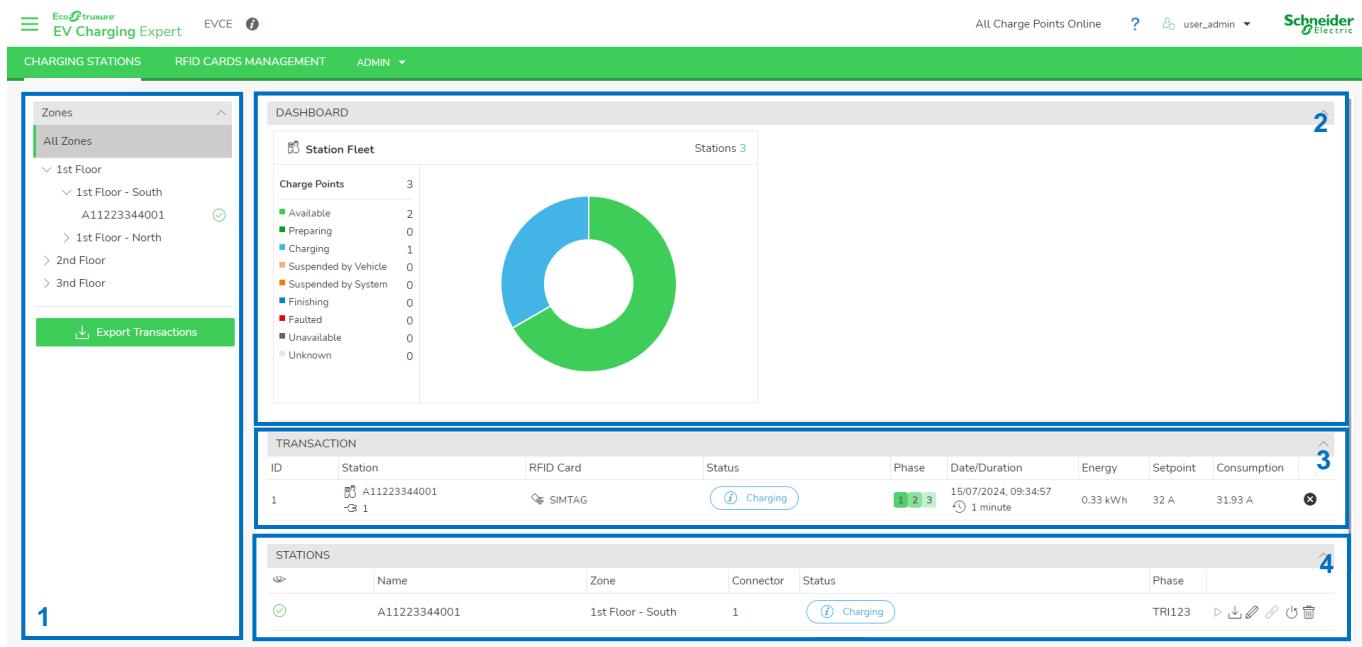

The screenshot shows the 'EV Charging Expert' interface with the following sections:

- 1. Zones:** A sidebar showing a tree structure of zones: All Zones, 1st Floor (1st Floor - South, A11223344001, 1st Floor - North), 2nd Floor, and 3rd Floor. A green 'Export Transactions' button is at the bottom.
- 2. Dashboard:** A section titled 'Station Fleet' showing a pie chart of 3 stations. The data table is:

Charge Points	Stations
Available	2
Preparing	0
Charging	1
Suspended by Vehicle	0
Suspended by System	0
Finishing	0
Faulted	0
Unavailable	0
Unknown	0
- 3. Transaction:** A table showing a single transaction for station A11223344001. The table has columns: ID, Station, RFID Card, Status, Phase, Date/Duration, Energy, Setpoint, Consumption. The transaction details are:


ID	Station	RFID Card	Status	Phase	Date/Duration	Energy	Setpoint	Consumption
1	A11223344001	SIMTAG	Charging	1, 2, 3	15/07/2024, 09:34:57 1 minute	0.33 kWh	32 A	31.93 A
- 4. Stations:** A table showing station A11223344001. The table has columns: Name, Zone, Connector, Status, Phase. The station details are:

Name	Zone	Connector	Status	Phase
A11223344001	1st Floor - South	1	Charging	TRI123

The global view is made of four parts:

1. Electrical zone topology and transactions exports information.
2. Dashboard with zones and charging stations information.
3. Transaction information and management.
4. Stations assignation and management.

## Zone view

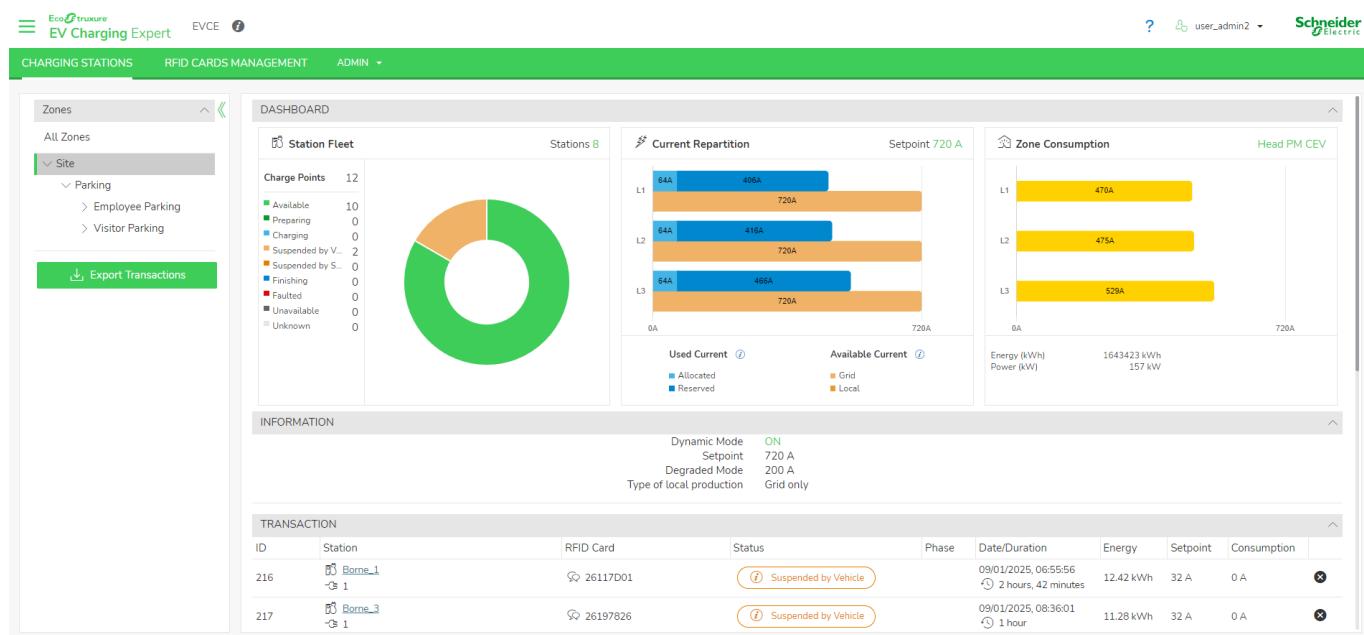

Zone view is available when a zone is selected in the zone topology panel. The zone view provides below data:


- **Station Fleet:** Status of charging stations assigned to the zone.
- **Current Repartition:** Charging setpoint available according to the active zone maximum current, zone consumption and transactions information.
  - **Allocated:** Allocated current to charging stations during transaction
  - **Reserved:** Reserved current for building consumptions and disconnected stations (degraded setpoint apply to charging station).
  - **Grid:** Available current from grid (with reduction)
  - **Local:** Available current from local production
- **Zone Consumption** (only for dynamic zone): Consumption of the zone reported by assigned power meter.

STATIONS						
	Name	Zone	Connector	Status	Phase	
✓	A11223344001	1st Floor - South	1	<span>Charging</span>	TRI123	<span>Edit</span> <span>Print</span> <span>Report</span> <span>Delete</span>

Zone view is enabling charging stations management:

- **Remote start** : Start a charging session (deactivated when supervision is configured).
- **Diagnostic** : Generate a manual charging station report of the charging station (see chapter 3.16.3 for download page).
- **Configuration** : Update charging station configuration (see chapter 3.2.4)
- **Webserver** : Webserver of the charging station (option available only for charging station supporting web pages interface).
- **Reboot**
- **Delete** : Delete charging station configuration into EcoStuxure EV Charging Expert (impossible to delete a charging station with an ongoing transaction).

## Transaction view

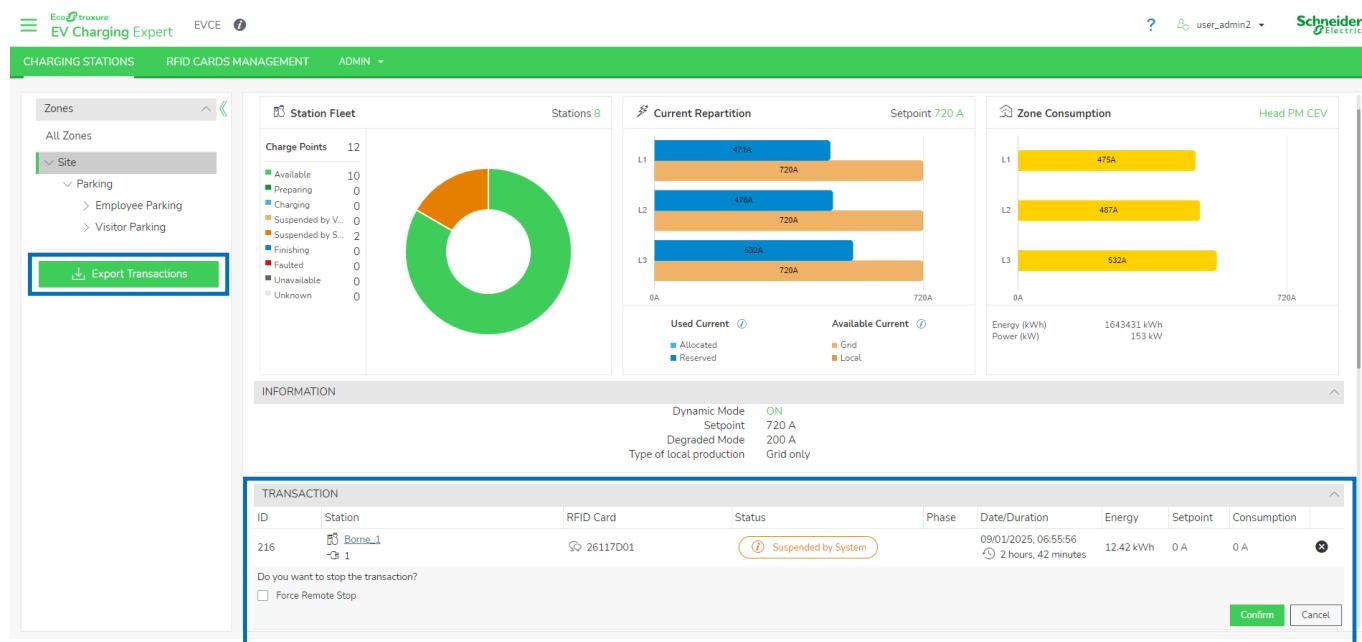

Transaction view provides all information for an active transaction:


- **ID:** Unique identifier of the transaction
- **Station:** Station name and connector used for the charging session
- **RFID Card:** Card which launch the transaction.
- **Status:** Status of the transaction according to OCPP standard (Charging / SuspendedEV / SuspendedEVSE / Finishing)
- **Phase:** Selected phases by EV (mono-phase or tri-phased)
- **Date/Duration:** Transaction start date and effective charging duration (time passed in charging state)
- **Energy:** Energy consumed by the ongoing transaction
- **Setpoint:** Current setpoint (intensity or power allocated to the charging station).
- **Consumption:** Consumption of the charging station.

At the left of ongoing charging session, it's possible to remotely stop the charging sessions with the button **X**, a **Force Remote Stop** option is available to stop a charging session if there are some troubles with this charging session.

### 3.2.4


Transaction logs are available for download by using **Export Transactions** button. Select a start and end date to make a partial transaction export.

## Station view

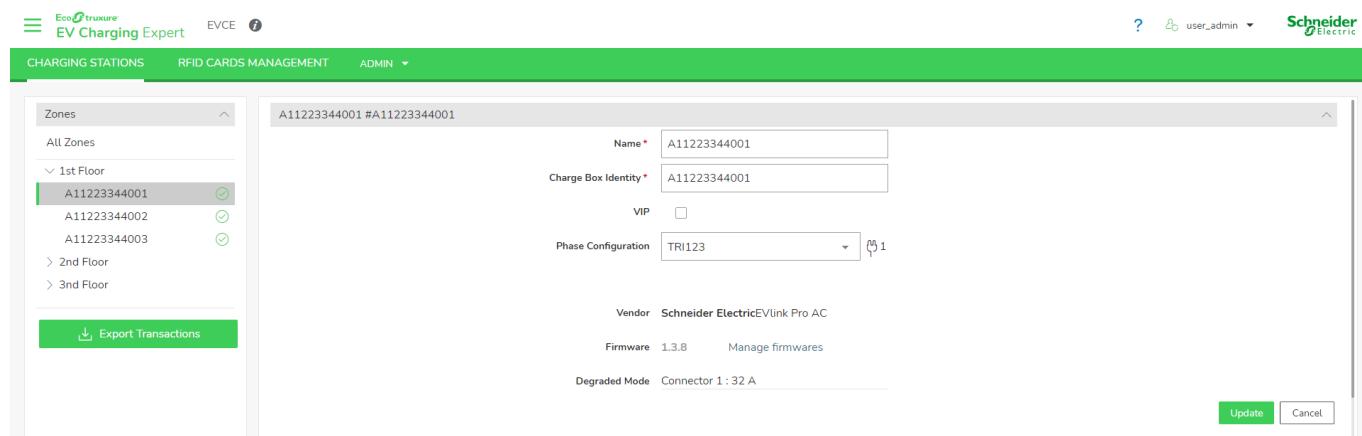

To access the station details, select the charging station in zones hierarchy. Below information is accessible:

- **Name:** Name of the charging station into EcoStruxure EV Charging Expert.
- **Charge Box Identity:** Name of the charging station for the remote supervision.
- **VIP:** Select this option to activate VIP for the charging station.
- **Phase configuration:** Electrical configuration of charging station (see [chapter 3.5.4](#)).
- **Vendor:** Vendor of the charging station.
- **Firmware:** Firmware version and management (see [chapter 3.13](#)).
- **Degraded Mode:** Current allocated to the charging station in degraded mode (see [chapter 3.7.4](#)).

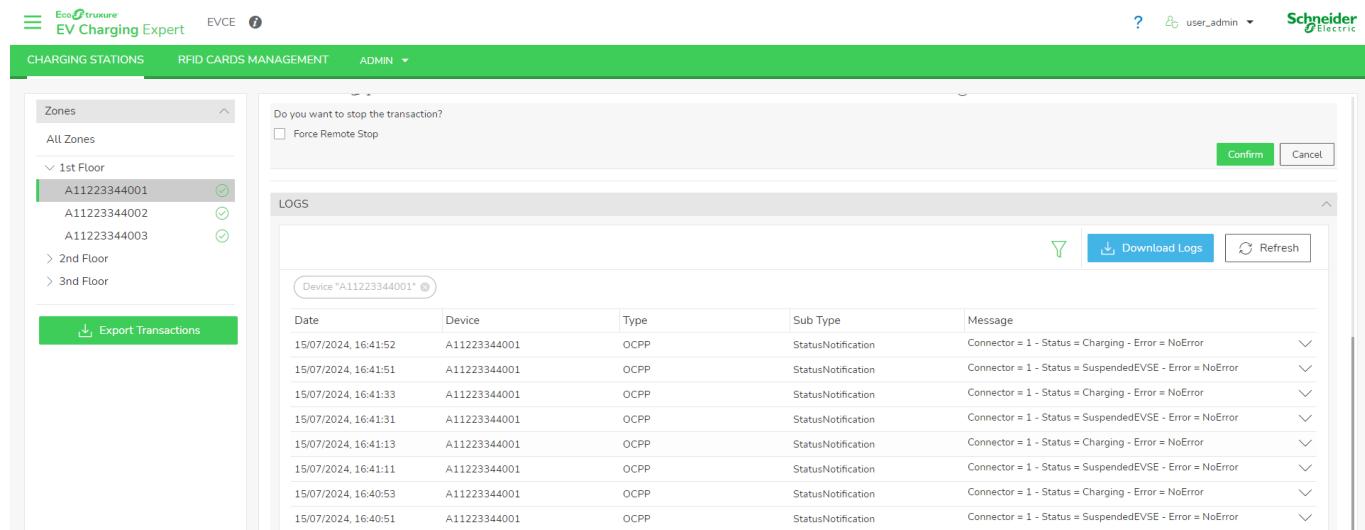

The screenshot shows the EcoStruxure EV Charging Expert software interface. At the top, there is a navigation bar with the Schneider Electric logo, user information (user\_admin), and a help icon. Below the navigation bar, the main menu includes 'CHARGING STATIONS', 'RFID CARDS MANAGEMENT', and 'ADMIN'. The 'CHARGING STATIONS' tab is active, showing a tree view of 'Zones' with 'All Zones' expanded. Under 'All Zones', '1st Floor' is expanded, showing three charging stations: A11223344001, A11223344002, and A11223344003, each with a green checkmark icon. Below the tree view, there is a button labeled 'Export Transactions' with a download icon. To the right of the tree view, a modal dialog box is open, asking 'Do you want to stop the transaction?' with a checkbox for 'Force Remote Stop' and 'Confirm' and 'Cancel' buttons. Below the modal, a 'LOGS' section is visible, showing a table of OCPP commands received by the selected charging station (A11223344001). The table has columns for Date, Device, Type, Sub Type, and Message. The table shows multiple entries for StatusNotification and Connector = 1 - Status = Charging - Error = NoError. At the bottom of the logs section, there are buttons for 'Download Logs' and 'Refresh'.

In station view, a log section displays all OCPP commands received by EcoStruxure EV Charging Expert from the selected charging station.

## 3.3 Network configuration

Access by the Admin tab → Configuration → Network

The screenshot shows the 'Network' configuration page. It includes fields for Device Name (EVCE), Proxy Configuration (OFF), Proxy URL, EV Network (Activate DHCP client OFF, IP Address 192.168.0.150, Subnet Mask 255.255.254.0, Default Gateway 192.168.0.1, DNS Server (Preferred 8.8.8.8, Alternate -), DHCP Server Configuration (OFF), and Address Range (192.168.0.151-192.168.0.155). The Secondary Network section is also shown with Activate DHCP client ON, IP Address 192.168.1.128, Subnet Mask 255.255.255.0, and Default Gateway 192.168.1.1.

### EcoStruxure EV Charging Expert name

#### 3.3.1

#### Network configuration

The screenshot shows the 'Network' configuration page. It includes fields for EV Network (Activate DHCP client OFF, IP Address 192.168.0.151, Subnet Mask 255.255.255.0, Default gateway 192.168.0.254, Preferred DNS server 8.8.8.8, Alternative DNS server -) and Secondary Network (Activate DHCP client ON, IP Address 192.168.1.128, Subnet Mask 255.255.255.0, Default gateway 192.168.1.1).

Fields	Factory setting	Description
<b>EV network</b>		
Activate DHCP client	Activated	Activate or not the DHCP client. The device IP address will change based on the DHCP if you activate this.
IP address	192.168.0.128	EcoStruxure EV Charging Expert IP address
Network mask	255.255.255.0	EcoStruxure EV Charging Expert sub-network mask
Default gateway (1)	192.168.0.254	Gateway IP address. Mandatory to connect two networks so that devices on one network can communicate with the devices of another network.
Preferred DNS server (2)	8.8.8.8	Preferred DNS server IP address (2)
Alternative DNS server	-	Other DNS server IP address (2)
<b>Secondary Network</b>	Deactivated	Activate another subnetwork on the second ethernet port to access the web pages

- (1) Address of the modem used for the connection to the supervision, if any. All charging stations on the same sub-network than EVCE must be configured with the same gateway IP address.
- (2) DNS Server is used to convert URL to IP address. May be provided by the remote supervision (through a dedicated SIM card for example). Google DNS server by default.

**NOTICE****PRESENCE OF CHARGING STATIONS IN A DIFFERENT SUBNETWORK OF ECOSTRUXURE EV CHARGING EXPERT**

Configure for each charging station gateway and DNS information

**Failure to follow these instructions can result in a network issue for all connected devices.**

### Proxy configuration

**Proxy URL:** Proxy URL when proxy is used as an intermediary between a user's device and the internet, enhancing security by masking the user's IP address, allowing organizations to control and monitor internet usage, and enabling access to geo-blocked or restricted content.

3.3.3

### DHCP server configuration

3.3.4

**DHCP:** Dynamic Host Configuration Protocol is a protocol used to provide quick, automatic, and central management for the distribution of IP addresses within a network.

EcoStruxure EV Charging Expert can be configured to act as a DHCP server to assign IP addresses to charging stations in the defined range.

by-default sub-network (192.168.0.0-255) is being used. The use of 192.168.0.0, 192.168.0.254 and 192.168.0.255 are to avoid.

**NOTICE****PRESENCE OF A DHCP SERVER ON THE NETWORK WHICH CONFLICTS WITH ECOSTRUXURE EV CHARGING EXPERT DHCP SERVER.**

Deactivate EcoStruxure EV Charging Expert DHCP server

**Failure to follow these instructions can result in a network issue for all connected devices.**

## 3.4 Remote supervision configuration

Access by the Admin tab → configuration → remote supervision

### Supervision selection

Supervision mode

- Local [?](#)
- Unique [?](#)
- Multiple [?](#)

Save

There are 3 types of EcoStruxure EV Charging Expert supervision:

- **Local:** EcoStruxure EV Charging Expert is managing authentication rules and badges. See [chapter 3.11](#)
- **Unique:** One supervision is managing authentication rules and badges of the complete installation
- **Multiple:** Charging stations are divided in groups managed by a specific supervision or by EcoStruxure EV Charging Expert

### Unique supervision

Advanced Configuration

Remote Supervision URL Address: ws://test.com

Websocket Ping Interval: 10

Message timeout: 10

Forward security event to CPO:  ON

Basic Authentication:  OFF  ON

Save Test Connection

#### 3.4.2.1 Prerequisites

Remote supervision must be enabled to allow its configuration. Enter the URL to be used by the charging stations to establish communication with the remote supervision. The communication protocol **must be OCPP 1.6 Json**.

#### 3.4.2.2 Supervision configuration

- **URL Address:** Enter WebSocket (ws) or WebSocket Secure (wss) URL. It is recommended to use a WebSocket secure as a good practice of cybersecurity. In this case, it is necessary to add a certificate after commissioning steps, see [chapter 3.12](#).
- **Websocket Ping Interval:** Positive values are interpreted as number of seconds between pings. Value must be between 1 and 60s
- **Message timeout:** Interval between request and response OCPP message before considering the connection lost. Value must be between 1 and 60s
- **Forward security event to CPO:** Authorize to forward security event to supervision

#### 3.4.2.3 Basic authentication

Add a Basic Authentication password for all charging stations to secure communication between EcoStruxure EV Charging Expert and supervision. There are 2 options:

- **One password by station:** One unique password for each station. To add or change basic authentication password, it's necessary to select charging station into installation page and click on **Change password**.

- **Same password for all charging stations:** Once the option is selected, a popup will appear offering the possibility to add basic authentication key according to 2 formats (ASCII or HEXA format). Password is used for all stations and can be changed later by supervision through OCPP commands.

#### 3.4.2.4 Restrictions

If remote supervision option is activated, it is the responsibility of the remote supervision system to handle EV driver authentication and to consider charging station specific keys for authentication management.

When the remote supervision is activated, the date and time are provided by the remote supervision even if time zone still has to be configured in the next panel (Date & Time).

#### 3.4.3

### Multiple supervision

#### 3.4.3.1 Supervision configuration

#### 3.4.3.2 Supervision management

The screenshot shows the 'Authentication groups' section of the software. On the left, there is a list of 'Unassigned' stations: Device name (Station 03, Station 04, Station 05, Station 07, Station 08, Station 09, Station 10, Station 11). In the center, there are two sections: 'CPO One' and 'Free parking'. The 'CPO One' section is highlighted with a red box. It contains a table with one row for 'Station 06' (Box ID: S06, IP Address: 192.168.0.6). The 'Charging point operator' dropdown menu is open, showing 'CPO 1' as the selected option. The 'Free parking' section also has a table for 'Station 02' (Box ID: S02, IP Address: 192.168.0.2). The 'Charging point operator' dropdown menu here is set to 'Local'. The top navigation bar includes 'CHARGING STATIONS', 'SUPERVISION MANAGEMENT', 'ADMIN', 'EVCE', and the user 'John Doe'.

Multiple supervisions option offers the possibility to manage authentication strategy according to supervision or local strategy. To manage the installation, it is necessary to create authentication groups and assigned charging stations to a group. An authentication group is a selection of charging stations associated with to a charging point operator. There are 2 charging point operator options:

- Select a **supervision as charge point operator**: select in the list the supervision already configures.
- Select **local as charge point operator**: please see chapter [3.11.1.2](#) and to manage RFID card, please see chapter [3.11.2](#).

## 3.5 Energy management configuration

Access by the Admin tab → configuration → energy management

### Load shedding configuration

#### 3.5.1

Load shedding mechanism is activated once there is not enough available current in a zone to provide floor value to all charges simultaneously. When such a situation happens, chose between energy or duration priority: to favor the newest transactions or the transactions that delivered the lowest amount energy:

- **Energy:** Proportional to the energy consumed (kWh). Favour transaction which has delivered the lowest amount energy. This option is set by default.
- **Duration:** Proportional to the charging time. Favour transaction which has the lowest charging time

The charging station floor value is defined by IEC 61851 and EV/ZE standard for AC installation:

#### 3.5.2

- IEC 61851 (6A in both single and 3-phases connection)
- EV/ZE ready (8A in single-phase, 14A in 3-phase connection)

### Consumption optimization configuration

Consumption optimization mechanism is activated to manage energy management with different parameters:

#### 3.5.3

- **Setpoint reduction trigger value:** Difference between decreasing EV consumption and setpoint before triggering the optimization.
- **Reduction efficiency value:** Gap between the consumption and the new setpoint calculated by the optimization.
- **Minimal gap with EV consumption:** Gap between the increasing EV consumption and the setpoint triggering more power allocation to the charging station.

### Allow Suspended by System

If a transaction stop consuming energy (current lower than 1A), EcoStruxure EV Charging Expert can pause the transaction (Suspended by System) and restart transaction after a wake-up interval defined in second.

## Local production management

### 3.5.1.1 Prerequisites

3.5.1

To manage local production there are 3 options:

- **Grid only** (selected by default): Power coming only from grid
- **Local production + grid**: Local solar production is added to power coming from utility for higher consumption capacity.
- **Local production only**: Enable green charging by considering solar energy only as available power for your EV charging installation

### 3.5.1.2 Local production

If 2<sup>nd</sup> or 3<sup>rd</sup> option are chosen, then it is necessary to add power meter dedicated to solar production. Please see [chapter 3.7.2](#) to add a power meter and [chapter 3.8.3](#) to associate the local production to an electrical zone.

For reduction, when it is applied with EBMS, time of use or DI it concerned only the maximum current of the zone, additional current provides by local production are not consider.


*For example, a zone with 100A a reduction to 70% with a solar production of 20A. After energy management computation there is 90A available for the charging stations.*

Note: The power meter wiring must include a neutral and be wired in the correct direction. Failure to follow these instructions can result in an installation trip.

### 3.5.1.3 Example

For example, there is a dynamic electrical zone on 70A with solar production and 3 charging stations associated to the electrical zone.

The schematic of the installation:

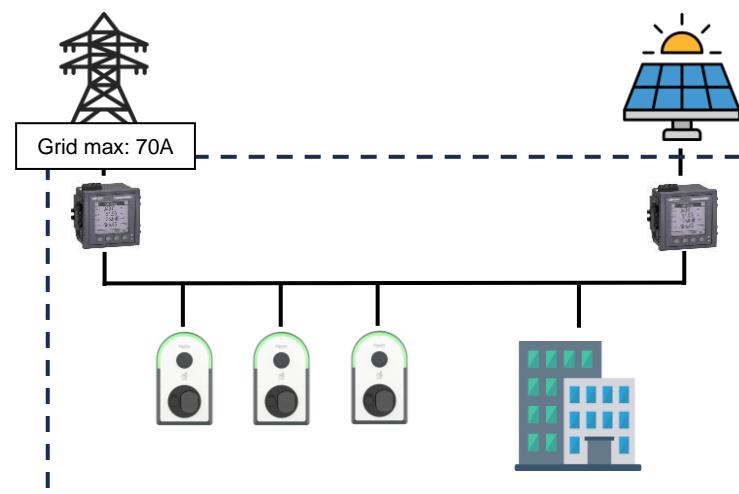

Zone configuration: Main zone has 70A maximum current and MainPowerMeter is the power meter associate to the electrical zone to compute consumption of charging stations and building. SolarPowerMeter is the power meter associated to the local production into the electrical zone.

## Dashboard:

ID	Station	RFID Card	Status	Phase	Date/Duration	Energy	Setpoint	Consumption
1	A11223344001 -> 1	SIMTAG	Charging	1 2 3	24/01/2025, 08:38:22 ⌚ 1 minute	0.28 kWh	27 A	26.52 A
2	A11223344002 -> 1	SIMTAG	Charging	1 2 3	24/01/2025, 08:38:23 ⌚ 56 seconds	0.26 kWh	27 A	26.84 A
3	A11223344003 -> 1	SIMTAG	Charging	1 2 3	24/01/2025, 08:38:23 ⌚ 55 seconds	0.22 kWh	27 A	26.98 A

On the dashboard there is 3 transactions in progress, maximum current of the zone is 70A but it is increase to 100A with 30A of local production. And the building consumes 19A. So the energy management computation gives 27A for each transaction:

$$\frac{(Max\ current+Local\ production)-Building\ consumption}{Number\ of\ transaction} = \frac{(70A+30A)-19A}{3} = 27A$$

## 3.6 Charging stations commissioning

Access by Admin tab → configuration → Installation

### Prerequisites

Charging stations must be powered on and connected to the network before the EcoStruxure EV Charging Expert commissioning. Charging stations must have a compatible firmware version, see [chapter 1.1.2.1 EVlink charging stations](#)

<b>NOTICE</b>	
3.6.1	
<b>IMPOSSIBLE TO INSTALL CHARGING STATION WITH WEB SERVER OPENED.</b>	
Close charging station webserver  <b>Failure to follow these instructions can result in an impossibility of installing a charging station.</b>	

<b>NOTICE</b>	
<b>RESTRICTIONS ON CHARGING STATIONS IP ADDRESSES AND BOX IDENTITIES</b>	
<ul style="list-style-type: none"> <li>• Avoid the use of sub-network addresses +0, +MAX, +MAX-1. If the by-default sub-network (192.168.0.0-255) is being used, avoid the use of 192.168.0.0, 192.168.0.254 and 192.168.0.255.</li> <li>• Charging stations box identities must contain only a-z, A-Z, 0-9, '*', '!', '_', '=', '+', ' ', '@', '!'.</li> <li>• Charging stations box identities should not contain any space</li> <li>• Charging stations box identities must not exceed 30 characters</li> <li>• Charging stations box identities must be unique by station.</li> </ul>	
<b>Failure to follow these instructions can result in an impossibility of installing a charging station.</b>	

### 3.6.2 Charging station installation page

The screenshot shows the 'Charging Stations' page of the EcoStruxure EV Charging Expert software. The top navigation bar includes 'EVCE' and 'user\_admin'. The main content area shows a table with the following data:

Status	Model	Station Name	IP Address	Connectors	Box Identity	Zones
5 Charging Stations Recovered						
<input type="checkbox"/>	New station	Open OCPP Open OCPP cha... SN: A11223344004	A11223344004	DHCP <input checked="" type="checkbox"/> 192.168.0.150	1 TRI123	A11223344004
<input checked="" type="checkbox"/>	New station	Open OCPP Open OCPP cha... SN: A11223344005	A11223344005	DHCP <input checked="" type="checkbox"/> 192.168.0.150	1 TRI123	A11223344005
Vendor	Open OCPP	Authentication group	Group 1 <a href="#">?</a>			
Serial Number	A11223344005	Firmware Version	1.0.0	VIP Charging	<input type="checkbox"/>	
<input type="checkbox"/>	Installed	Open OCPP Open OCPP cha... SN: A11223344001	A11223344001	DHCP <input checked="" type="checkbox"/> 192.168.0.150	1 TRI123	A11223344001 1st Floor - South
<input type="checkbox"/>	Installed	Open OCPP Open OCPP cha... SN: A11223344002	A11223344002	DHCP <input checked="" type="checkbox"/> 192.168.0.150	1 TRI123	A11223344002 1st Floor - North
Installed Station						

All charging stations already installed are present into the installation page before to launch a network discovering. To detect all new charging stations and proceed to installations, first click on **Discover** button to launch a network scan of all stations.

## Charging station status

In charging station installation page after a discovery, some stations may not be installed. Below are the possible reasons:

 
- Current charging station version is not supported by EcoStruxure EV Charging Expert (see [chapter 1.1.2.1](#)). In this case the station must be upgraded to a compatible version first.




- It is impossible to establish a connection with charging station. Try to perform a manual installation (see [chapter 3.5.5](#)) or perform a back to factory of the charging station.





- Charging station is newly discovered and ready to be installed into EcoStruxure EV Charging Expert.



 - Charging station already installed into EcoStruxure EV Charging Expert.



## Charging station configuration

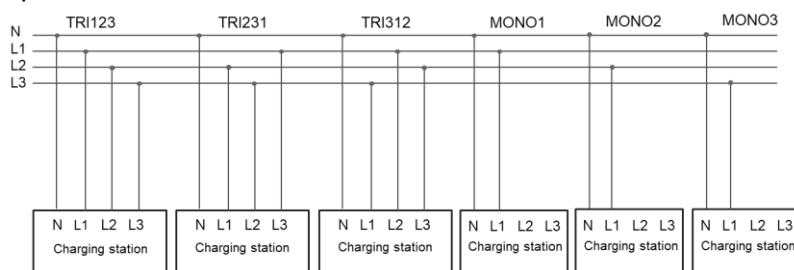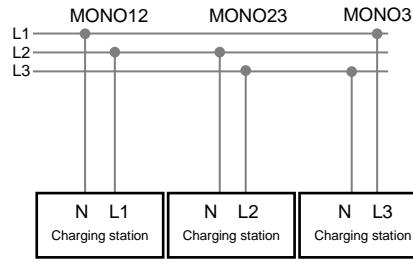Steps	Description
1	Click on  to discover new charging station to install and present into the network
3.6.4	<p>Update charging station settings:</p> <ul style="list-style-type: none"> <li><b>Station name:</b> Select a name to identify your charging station. (max 30 characters)</li> <li><b>IP Address:</b> 2 options: <ul style="list-style-type: none"> <li>DHCP activated: Select DHCP if there is a DHCP server activated (in EcoStruxure EV Charging Expert or local network).</li> <li>DHCP deactivated: Set IP address according to network architecture.</li> </ul> </li> <li><b>Connector(s):</b> Select the phase wiring of each connector in charging station according to electrical cabling.</li> </ul> <p><i>example for 3 x 400V with neutral:</i></p>  <p><i>example for 3 x 230 without neutral:</i></p> 
2	<ul style="list-style-type: none"> <li><b>Box identity:</b> If a supervision is activated, select the name configured by supervision to identify the charging station. Otherwise select a name to identify the charging station.</li> <li><b>Zones:</b> Zone assignment, see <a href="#">chapter 3.7.5</a></li> </ul>
3 3.6.5	<p>Advanced details and configuration:</p> <ul style="list-style-type: none"> <li><b>Vendor:</b> Charging station vendor</li> <li><b>Serial number</b></li> <li><b>Authentication group:</b> Authentication group assignment, see <a href="#">chapter 3.11.1</a></li> <li><b>Version:</b> Charging station firmware version</li> <li><b>VIP Charging:</b> Check the box to activate the VIP status of the charging station. Note: a VIP station status provides VIP privileges on load balancing. It means maximum energy will always be allocated to this station before the others.</li> <li><b>Change password:</b> when one password by station is selected, there is the possibility to add a password for each charging station with hexa or ascii format.</li> </ul>

## Manual charging station configuration

If a charging station is not detected automatically during scan, it is possible to declare it manually with OCPP or IP address (only for EVlink Pro AC or EVlink City / Parking / Smart Wallbox).

### 3.6.5.1 OCPP configuration

To install a new charging station with OCPP, it is mandatory to first update charging station configuration:

- **Supervision URL:** add EcoStruxure EV Charging Expert URL. For unsecure connection:
  - ws://XXX.XXX.XXX.XXX:9979 – No security profile

For secure connection, add **OCPP certificate** (see [chapter 3.12](#)) and update supervision URL:

- `wss://XXX.XXX.XXX.XXX:9980` – Activate security profile 0 with WebSocket secure.
- `wss://XXX.XXX.XXX.XXX:9981` – Activate security profile 1.
- `wss://XXX.XXX.XXX.XXX:9982` – Activate security profile 2.

Replace: `XXX.XXX.XXX.XXX` by EcoStruxure EV Charging Expert IP address.

- **Webserver certificate:** mandatory to get maintenance report and update charging station.

To complete the installation, please return to the installation page.

### 3.6.5.2 IP address configuration

Install a new charging station with IP address is available only for EVlink Pro AC or EVlink City / Parking / Smart Wallbox. After clicking on **+**, a popup will appear to select the charging station model and IP address.

The screenshot shows a list of 45 stations detected. Each station entry includes the following information:

- Status:** All stations are marked as "Installed".
- Model:** Schneider Electric (various models: Pro AC, City, Parking, Smart Wallbox).
- Serial Number:** SN: EVB1A22P4ERI3N1701...
- Station Name:** Station 04, 05, 06, 07, 08, 09.
- IP Address:** 192.168.0.4, 5, 6, 7, 8, 9.
- Power Outlets:** 1 or 2 MONO31 or MONO23 or MONO12.
- Location:** S04, S05, S06, S07, S08, S09.
- Location Description:** 1st Floor - North or 1st Floor - South.

At the bottom of the list, there is a button labeled "Add a Station Manually" with a red box around it.

Once information is confirmed, to complete the installation, please return to the installation page to see charging station.

### 3.6.5.3 Get the serial number of a charging station


For EVlink Parking, EVlink Smart WallBox and EVlink City it is mandatory to add **Serial Number**:

The screenshot shows a list of 8 stations detected. A modal dialog box titled "Add a Station" is open, containing the following fields:

- Model:** EVlink City, Parking or Smart Wallbox
- IP Address:** 192.168.0.0
- Serial Number:** Serial Number

Below the fields, there is a note: "Please refer to the user guide (section 'Get the serial number of a charging station') to find the serial number".

To add Serial number, it is necessary to connect to the webserver interface of the charging station : Maintenance > Report. The concatenation of Serial Number Part 1 & Serial Number Part 2 gives the serial number of the charging station.

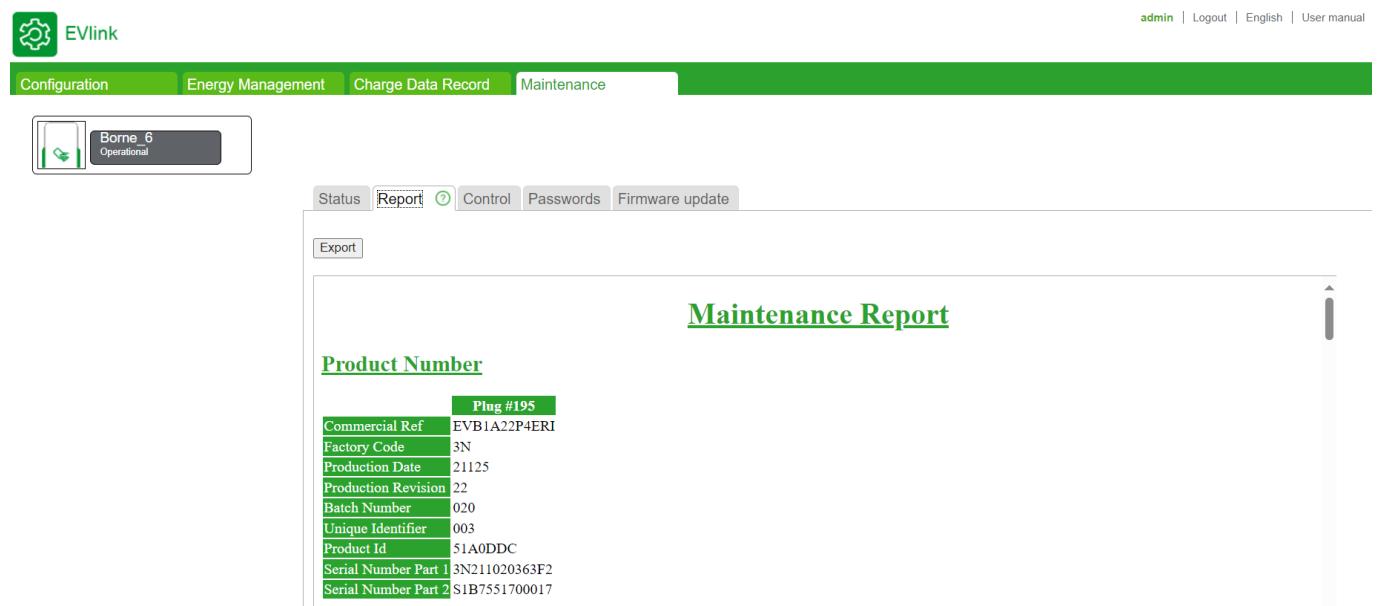

The screenshot shows the EVLink web interface with a green header bar. The header includes the EVLink logo, user status (admin), and links for Logout, English, and User manual. Below the header, there are tabs for Configuration, Energy Management, Charge Data Record, Maintenance, and a sub-menu for Status, Report, Control, Passwords, and Firmware update. The main content area is titled "Maintenance Report" and contains a section for "Product Number" with a table of product details. The table includes a highlighted "Plug #195" column. The table data is as follows:

	Plug #195
Commercial Ref	EVB1A22P4ERI
Factory Code	3N
Production Date	21125
Production Revision	22
Batch Number	020
Unique Identifier	003
Product Id	51A0DDC
Serial Number Part 1	3N211020363F2
Serial Number Part 2	S1B7551700017

ei. :

*With this image above the concatenation of the serial number will be the following:  
3N211020363F2S1B7551700017*

## 3.7 Power meter configuration

Access by Admin tab → configuration → Power meters

The screenshot shows the 'Power Meters' configuration page. At the top, there are tabs for 'Manage Power Meters', 'Define Power Meter Models', and 'Power Meter Configuration'. The 'Power Meter Configuration' tab is active. Below the tabs, a table lists a single power meter named 'Test' with model 'pm5320'. The table columns include Status, Name, Model, Network Configuration, Current (A), Energy (kWh), Power (kW), Edit, and Delete. The 'Edit' button for the 'Test' row is highlighted. Below the table, a detailed configuration form is displayed for the selected power meter. The form fields are: Name (Test), RTU (unchecked), Model (pm5320), IP Address (192.168.0.0), IP Port (502), and Slave ID (255). There are 'Save' and 'Cancel' buttons at the bottom right of the form. A green '+' button is located below the configuration form.

### Prerequisites

#### 3.7.1

Power meters are only required in EcoStruxure EV Charging Expert dynamic mode. Ethernet connection must be configured (see [chapter 1.3.1.2](#)) regardless of the EcoStruxure EV Charging Expert and prior to the commissioning.

#### 3.7.2

### Manage Power Meters

Name *	Power meter zone
RTU	<input type="checkbox"/> <a href="#">i</a>
Model	pm5320
IP Address *	192 . 168 . 0 . 0 <a href="#">i</a>
IP Port *	502
Slave ID *	255

Two options to connect power meter EcoStruxure EV Charging Expert:

- TCP: Connection is made directly with the product through the network. It is mandatory to provide the IP address and port of power meter.
- RTU: The connection is established directly with power meter using RS485 cable and USB adaptor. The power meter configuration should be:
  - **Baud Rate:** 19200 bits per second (bps). This determines the speed at which data is transmitted over the serial communication line.
  - **Data Bits:** 8. Each character is represented by 8 bits of data.
  - **Parity:** None. No parity bit is used for error checking.
  - **Stop Bits:** 1. One stop bit is used to signal the end of each character.

For both solutions, it's mandatory to select a supported model (see [chapter 1.1.1.8](#)) or customized model (see [chapter 3.6.3](#)). Power meter slave id matches the power meter Modbus configuration at this IP address (see [chapter 1.3.1.2](#)).

As soon as the power meter(s) are defined and updated, status column indicate connection status of device with EcoStruxure EV Charger Expert.

## Define a new power meter model

Power Meters Manage Power Meters Define Power Meter Models Power Meter Configuration

Configure new power meter models

Model Name: New Power Meter

Registers

RMS Current on Phase 1

Address	1
Format	float32
Type	Holding Register
Scale Factor	1
Endian	LittleEndian

RMS Current on Phase 2

Address	2
Format	float32
Type	Holding Register
Scale Factor	1
Endian	LittleEndian

RMS Current on Phase 3

Address	3
Format	float32
Type	Holding Register
Scale Factor	1
Endian	LittleEndian

Active Power on Phase 1

Address	4
Format	float32
Type	Holding Register
Scale Factor	1

Active Power on Phase 2

Address	5
Format	float32
Type	Holding Register
Scale Factor	1

Active Power on Phase 3

Address	6
Format	float32
Type	Holding Register
Scale Factor	1

Save Cancel Import Export

1. Click on to create a new power meter model.
2. Enter a name to the new model.
3. Fill the fields in each register:
  - Modbus register address
  - Format (float32, int64, int32, int16, uint64, uint32, uint16)
  - Type (Holding or Input register)
  - Scale factor. In case “Scale factor” is 1, values are expected as units:
    - Amps for current measurements (10 000 as RMS current with Scale factor 0.001 is considered as 10Amps)
    - kW for power measurements (1 000 as active power with Scale factor 0.1 is considered as 100kW)
    - kWh for energy measurements
4. Save the new power meter model.

## 3.8 Zone configuration

Access by the Admin tab → configuration → zone management

### Prerequisites

At zone or subzone creation, it is important to define a maximum current limitation. To declare a zone as dynamic (for dynamic load balancing), simply assign a power meter to the electrical zone (configured power meter [chapter 3.6.2](#)).

### Zone configuration

3.8.1

EcoStruxure EV Charging Expert can manage different zones and subzones based on the electrical architecture deployed in the installation. Please refer to [chapter 1.4](#).

### Zone creation

3.8.3

Step	Comments
1	Click on  to create a zone.
2	Click on  next to <b>Zone name</b> to create a <b>subzone</b> .
3	Set the maximum current allowed in zone or subzone. <b>Note:</b> <ul style="list-style-type: none"> <li><b>The value must be lower or equal to the electrical capacity of the installation.</b></li> <li><b>Max intensity in a sub-zone cannot be higher than the maximum intensity in the related zone.</b></li> </ul>
4	To create a <b>dynamic zone</b> , select the <b>power meter</b> measuring the zone current. A power meter is assigned to a single zone and <b>cannot be shared</b> .
5	For the dynamic zone, set a <b>Degraded Setpoint</b> , it's used when the communication is lost with the power meter. <u>This corresponds to the amount of power that is always available for EV charging, irrespective of other electrical loads in the same zone.</u>
6	Only for local production, select the <b>power meter</b> measuring the local production energy. <b>A power meter cannot be shared</b> .

To delete an electrical zone, it is necessary to delete previously all charging stations assigned to this electrical zone.

## Degraded Mode

Degraded mode allows charging stations to continue charging, even if there is communication loss with EcoStruxure EV Charging Expert. For each charging station connector, an offline maximum current is calculated according to:

- Maximum current of static zone
- Degraded Mode Zone Setpoint of a dynamic zone (refer below)

For a dynamic zone, a **Degraded Mode Zone Setpoint** defines the maximum current that is always available for EV charging irrespective of other loads in same electrical zone. Ensure degraded mode zone setpoint defined for dynamic zone is enough to manage charging stations even if EcoStruxure Charging Expert loses building consumption information. For dynamic zone, offline management is active when communication is lost with charging station or power meter dedicated to the zone.

### Examples:

#### Static zone:

##### Static zone characteristics:

- Maximum current: 60A
- 3 EVlink Pro AC (1 connector)

Degraded calculation:  $60/3 = 20$ , for each connector 20A should be available even if connection is lost with EcoStruxure EV Charging Expert.

#### Static zone with reduction:

##### Static zone characteristics:

- Maximum current: 60A
- 3 EVlink Pro AC (1 connector)
- Reduction to 80% – Only 48A are now available.

Degraded calculation:  $48/3 = 16$ , for each connector 16A should be available even if connection is lost with EcoStruxure EV Charging Expert.

#### Dynamic zone:

##### Dynamic zone characteristics:

- Degraded Mode Zone Setpoint: 30A
- 3 EVlink Pro AC (1 connector)

Degraded calculation:  $30/3 = 10$ , for each connector 10A should be available even if connection is lost with power meter.

3.8.5

## Charging station electrical zone assignation

To manage charging stations, it is required to assign charging stations to electrical zone previously configured. A station can be assigned only to a terminal zone (zone without subzone).

Configuration of stations per zone

Unassigned Stations

Chargers

1st Floor - South

1st Floor - South

Chargers

1st Floor - South

1st Floor - North

2nd Floor - South

2nd Floor - North

3rd Floor

3rd Floor

Chargers

No charger was assigned to this zone yet. Please move the chargers from an existing zone


To assign station in an electrical zone:

- Select multiple charging stations, click on **Move Selection To** and select an electrical zone.
- Click on charging station and select an electrical zone.

## 3.9 Time Of Use

Access: Admin tab → Configuration → Time-of-use

### Definition

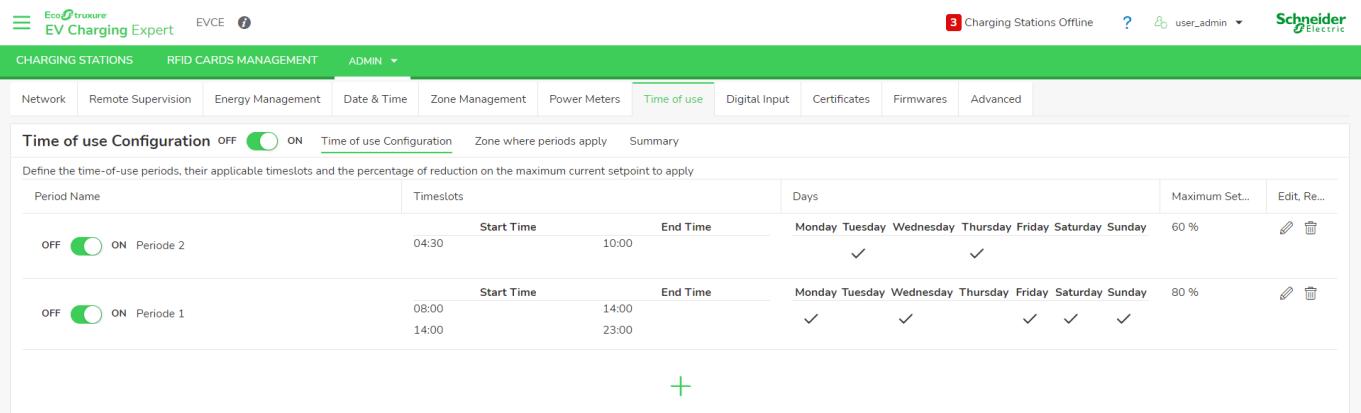

Time of use Configuration OFF  ON Time of use Configuration Zone where periods apply Summary

Define the time-of-use periods, their applicable timeslots and the percentage of reduction on the maximum current setpoint to apply

Period Name	Timeslots	Days	Maximum Set...	Edit, Re...
OFF <input checked="" type="button"/> ON Periode 2	Start Time 04:30 End Time 10:00	Monday Tuesday Wednesday Thursday Friday Saturday Sunday	60 %	<input type="button"/> <input type="button"/>
OFF <input checked="" type="button"/> ON Periode 1	Start Time 08:00 End Time 14:00	Monday Tuesday Wednesday Thursday Friday Saturday Sunday	80 %	<input type="button"/> <input type="button"/>

+

Use Time Of Use (TOU) configuration to reduce the power capacity per zone depending on day/time to match the local tariff policy.

A total of 5 periods and 20 timeslots can be configured. A period is defined by:


- **Days:** Selected days where timeslots are applied.
- **Timeslots:** Start and stop time when reduction is applied.
- **Reduction:** Ratio of the maximum current of a zone. For example, for a zone with a maximum setpoint of 100A, if a ratio at 80% is applied then the new maximum setpoint is 80A for the zone.

### 3.9.2

### Prerequisites

### 3.9.3

### Time Of Use configuration tab

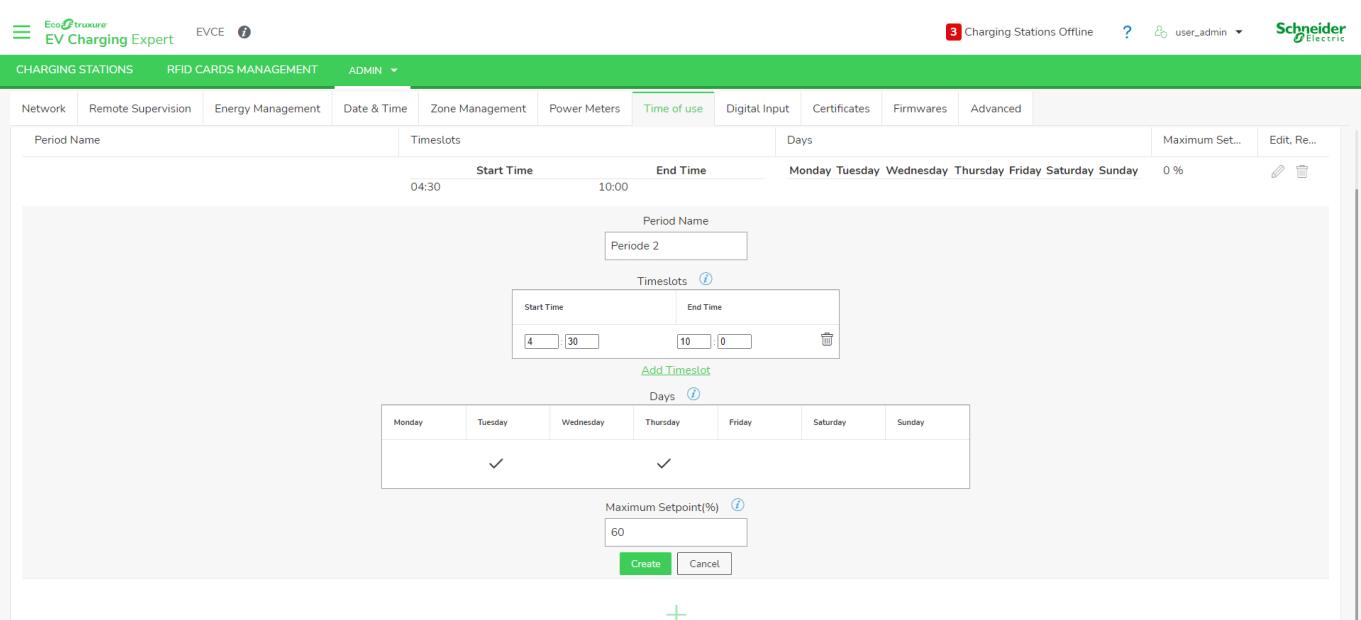

Period Name: Periode 2

Timeslots: Start Time 04:30 End Time 10:00

Days: Monday Tuesday Wednesday Thursday Friday Saturday Sunday

Maximum Set...: 60 %

Add Timeslot

Days: Monday Tuesday Wednesday Thursday Friday Saturday Sunday

Maximum Setpoint(%): 60

Create Cancel

+

step

comments

1	Click on <b>+</b> icon to create a tariff period.
2	Enter period <b>Name</b>
3	<b>Define Timeslots:</b> <ul style="list-style-type: none"> <li>Start time</li> <li>Stop time</li> <li>Clicking on 'Add a timeslot' to add another timeslot for this reduction</li> </ul>
4	Define Days when timeslots are applied
5	Define a ratio (percentage) of <b>Maximum setpoint</b> reduction

## Zone configuration tab

For each reduction, it is possible to assign one or more periods to a zone.

Zone	All Periods	Periode 1	Periode 2	Periode 3
1st Floor	OFF <input checked="" type="button"/> ON			
2nd Floor	OFF <input type="button"/> ON			
3rd Floor	OFF <input type="button"/> ON			

### 3.9.5

## Summary tab

Summary tabs displays maximum current reduction applied to each zone and period.

Zone	Nominal Current (A)	Current on "Periode 1" (A)	Current on "Periode 2" (A)
1st Floor	500	300	0
2nd Floor	500	500	500
3rd Floor	300	300	300

## 3.10 Local authentication management

When there is no configured supervision, the EcoStruxure EV Charging Expert offers the possibility to manage authentication strategy to grant access to the charging stations.

The RFID cards management feature is made of two parts:


- Authentication groups of chargers
- RFID cards

### Authentication group

3.10.1 An authentication group is a selection of charging stations associated with a list of RFID cards. Each authentication group has its own online and offline authentication strategies.

Each charging station can only be associated with a single authentication group when RFID cards can be assigned to several groups (see [chapter 3.11.2](#)).

#### 3.10.1.1 First installation

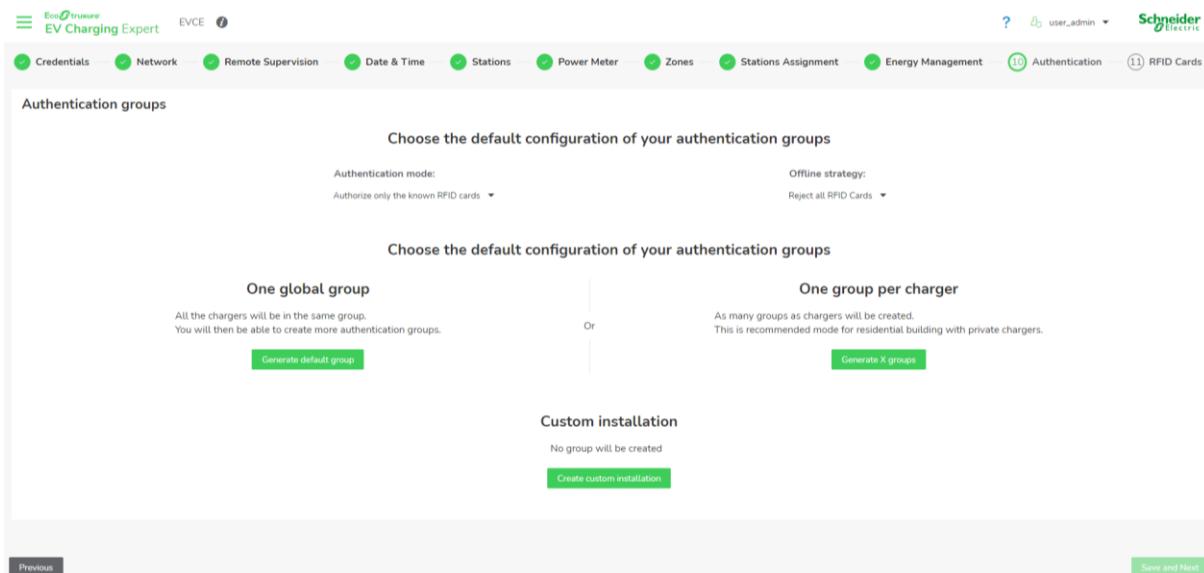

At first installation, three options are proposed:

- One global group: All installed chargers will be assigned to one authentication group.
- One group per charger: An authentication group is created for each charging station (best solution to manage one RFID badge for one charging station).
- Custom installation: Create one or multiple authentication groups according to installation needs.

After configuration, it is possible to change authentication configuration from **Admin** panel.

#### 3.10.1.2 Authentication group management

In authentication group management, **online** and **offline** authentication strategies are defined.

#### About Authentication mode:

- **Authorize all RFID cards:** Charging station starts a transaction only if EV driver uses a RFID card on the charging station (whatever is RFID).
- **Authorize only the known RFID cards:** Charging station starts a transaction only if EV driver uses a RFID card known by EcoStruxure EV Charging Expert.
- **Disable RFID card reader:** Charging station starts a transaction when EV is plugged without any other action.

About **Offline strategy**, the charging station disconnected from EcoStruxure EV Charging Expert behaves as below:

- **Authorize all RFID cards:** Charging station starts a transaction only if EV driver uses a RFID card on the charging station.
- **Reject all RFID cards:** No transaction is allowed when charging station is disconnected from EcoStruxure EV Charging Expert.
- **Using cache:** Offline charging station starts a transaction only if RFID card was already used on the charging station when it was online and accepted by EcoStruxure EV Charging Expert.

## RFID cards

Id	VIP	Authorized	Comments	Registration	Last Time Seen	Authentication group	Actions		
							Bulk Modifications		
E6654ASXF651G	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	Card A	11/07/2024, 15:13:36	11/07/2024, 15:13:36	Group 1	<input type="button" value="+"/>	<input type="button" value="Delete"/>	
E6716CW6514DA	<input type="checkbox"/>	<input checked="" type="checkbox"/>	Card A	09/07/2024, 16:37:54	09/07/2024, 16:37:54	Select options	<input type="button" value="-"/>	<input type="button" value="Delete"/>	

### 3.10.2.1 Add RFID card

In the EcoStruxure EV Charging Expert, a RFID card is added with below details:

- **VIP:** Provide VIP privileges, EV driver will have priority in load management system. Disabled by default.
- **Authorized:** Authorize EV driver to start a transaction with this RFID card. Only used for assigned authentication group with **Authorize only the known RFID cards** authentication strategy. Unauthorized by default.
- **Comments:** Associate a comment to a RFID card.
- **Authentication group:** Assign a RFID card to one or more authentication groups (see [chapter 2.9.1.2](#))

### 3.10.2.2 Import/Export RFID card

RFID cards list can be exported or imported from web interface. The file format supported by EcoStruxure EV Charging Expert is a CSV file with 4 columns:

- **id\_tag:** String type, that corresponds to RFID card information.
- **is\_blocked:** Integer type (only 0 and 1 value accepted), that corresponds to authorize (0) or not (1).
- **vip\_level:** Integer type (only 0 and 1 value accepted), that corresponds to VIP activation (1) or VIP deactivation (0). A VIP badge gets priority on power allocation before the other charging stations.
- **comments:** String type, that corresponds to comment associate to RFID card.

CSV file example:

```
id_tag;is_blocked;vip_level;comments;
E6716CW6514DA;0;0;Card A;
E6654ASXF651G;0;1;Card A;
```

#### NOTICE

**IMPOSSIBLE TO IMPORT RFID CARD LIST FROM ECOSTRUXURE EV CHARGING VERSION BELOW 6.0.0.**

Export csv file from previous EcoStruxure EV Charging Expert version change the format to respect new format and import RFID card list.

**Failure to follow these instructions can result in an impossibility recovery RFID card list.**

## 3.11 Certificates

Access by Admin tab → Configuration → Certificates

### Manage Certificates

Id	Name	Subject	Expires on	Type
1	Amazon_Root_CA_1	C = US, O = Amazon, CN = Amazon Root CA 1	17/01/2038	built-in
2	GlobalSign_Root_CA	C = BE, O = GlobalSign nv-sa, OU = Root CA, C...	28/01/2028	built-in
3	QuoVadis_Root_CA_1_G3	C = BM, O = QuoVadis Limited, CN = QuoVadis ...	12/01/2042	built-in
4	CFCA_EV_ROOT	C = CN, O = China Financial Certification Autho...	31/12/2029	built-in
5	DigiCert_Global_Root_CA	C = US, O = DigiCert Inc, OU = www.digicert.co...	10/11/2031	built-in
6	DigiCert_Global_Root_G2	C = US, O = DigiCert Inc, OU = www.digicert.co...	15/01/2038	built-in
7	Entrust_Root_Certification_Authority_-EC1	C = US, O = "Entrust, Inc.", OU = See www.entr...	18/12/2037	built-in
8	COMODO_RSA_Certification_Authority	C = GB, ST = Greater Manchester, L = Salford, ...	19/01/2038	built-in

Addition or deletion of certificates are allowed in **Manage Certificates** page. For instance, a new remote supervision certificate is uploaded in this bank of certificates to perform a WebSocket secure connection.

#### 3.11.2

### Device certificates

Certificate for the OCPP communication

[Download](#)

Certificate for the webserver

[Download](#)

**OCPP & Webserver certificates** page provides EcoStruxure EV Charging Expert certificates to establish a secure communication between device and charging stations:

- **OCPP certificate:** This certificate is uploaded in the charging station to generate a WebSocket secure connection and manage charging station with OCPP security profiles 1 & 2.

- **Webserver certificate:** This certificate is uploaded in the charging station to establish a HTTPs connection and perform firmware update or get maintenance report in EcoStruxure EV Charging Expert.

## 3.12 Charging station firmware

Access by Admin tab → Configuration → Firmware

### Manage charging station firmware

To update a charging station through EcoStruxure EV Charging Expert, it is required first to add its firmware file in local storage:

- Click on the **Add** button
- Add a firmware version
- Select the charging station model
- Choose the firmware file on your computer
- **Confirm** to start uploading the file into EcoStruxure EV Charging Expert.

3.12.1

Upload progression is displayed as percentage. At the end of the upload, firmware status is displayed as **Available** (Ready for a firmware upgrade operation) or **Upload error** (impossible to upload the firmware file).

EcoStruxure EV Charging Expert doesn't accept more than one firmware per charging station model. There cannot be more than 6 firmware files at a time.

## Internal HTTP server

EcoStruxure EV Charging Expert includes an internal HTTP server, allowing locally connected charging stations to be updated directly from an application or a monitoring system by copying the server URL link.


The URL link is available on firmware station management page and there are two options to get the URL link:

3.12.2

- QR code: 
- Copy/Past: 

It is also possible to manage HTTP unsecure server, see [chapter 3.14](#).


## Perform charging station update

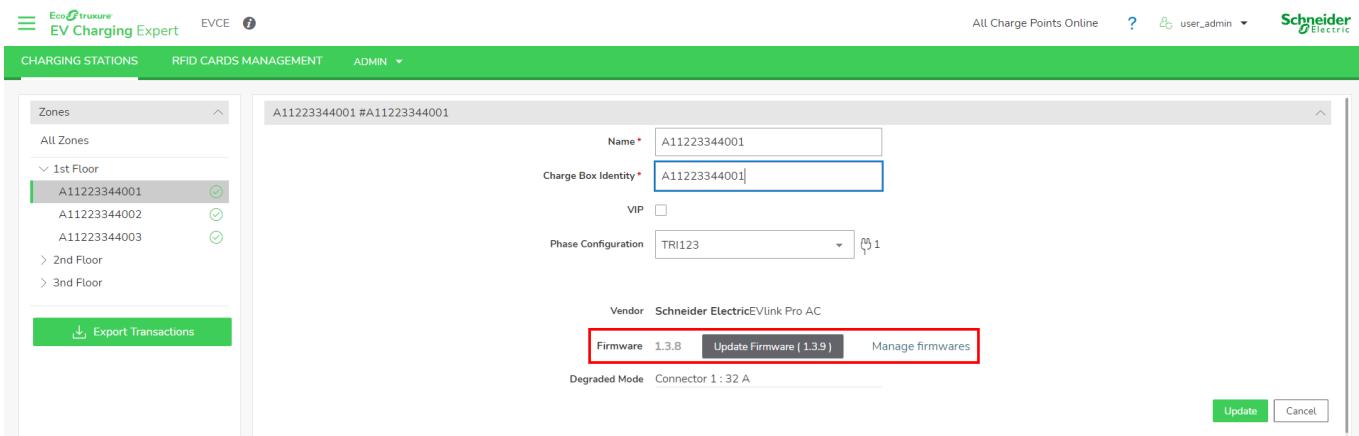

When a new firmware version is available into EcoStruxure EV Charging Expert, **Update Firmware** button appears. The charging station can be upgraded to this new suggested version only when there is no transaction in progress.

## 3.13 Advanced configuration

Access by Admin tab → Configuration → Advanced

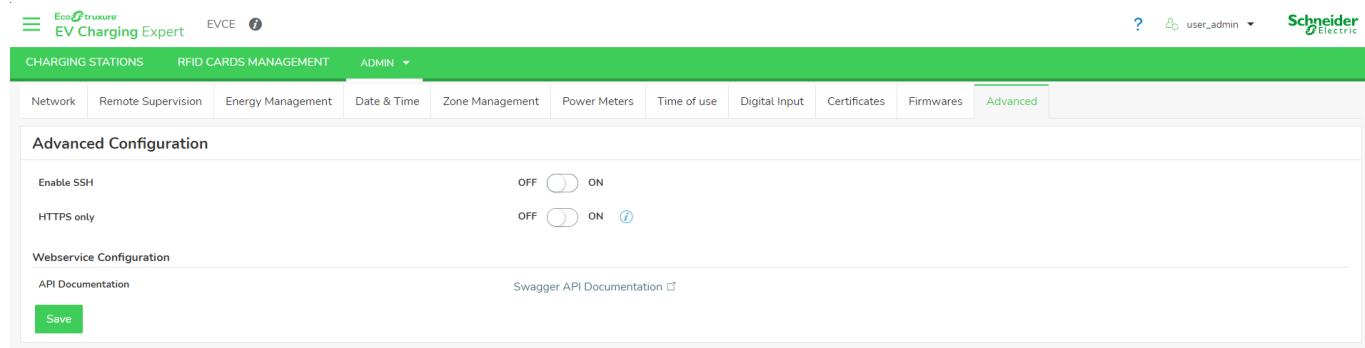

The screenshot shows the 'Advanced' tab selected in the navigation bar. Under 'Enable SSH', the 'ON' toggle is selected. Under 'HTTPS only', the 'ON' toggle is selected. In the 'Webservice Configuration' section, there is a link to 'Swagger API Documentation'. A green 'Save' button is located at the bottom left of the page.

In this section are configured EcoStruxure EV Charging Expert advanced parameters related to SSH and access to API. API documentation is accessible as Swagger format to describe all possible commands to integrate EV charging infrastructure into an Energy or Building Management Software.

With **HTTPS only**, it is possible to deactivate HTTP server and manage EcoStruxure EV Charging Expert communication with charging station only in secure way.

For cybersecurity reasons, it is recommended to activate SSH only for maintenance purpose. Please contact Schneider Electric support prior to use this option.

## 3.14 User management

Access by the Admin tab → Users management

### User management landing page

The screenshot shows the 'User Management' landing page. At the top, there are navigation links for 'CHARGING STATIONS', 'RFID CARDS MANAGEMENT', and 'ADMIN'. The 'ADMIN' link is currently selected, indicated by a dropdown menu. On the right, there are buttons for '+ Add User' and 'Refresh'. The main area is a table with columns: 'Username', 'Role', 'Date of Creation', and 'Last Access'. Two users are listed: 'user\_admin' (Role: admin, Date of Creation: 15/07/2024, 15:38:01, Last Access: 17/07/2024, 11:25:52) and 'user\_operator' (Role: operator, Date of Creation: 15/07/2024, 15:38:01, Last Access: --).

During the wizard, two default users are created (see [chapter 2.2](#)):

- Admin user
- Operator user

### User addition

The screenshot shows the 'User Management' page with an 'Add User' dialog box open. The dialog box has a title 'Add User' and a sub-section 'Provide new user information'. It contains fields for 'New User Role' (with a 'Select options' button), 'New Username' (set to 'user\_ebms'), and 'New User Password' (set to '\*\*\*\*\*'). Below these fields is a note: 'Your password must satisfy the following conditions: at least 12 characters long lowercase characters uppercase characters numbers special characters (@\$!%&?)'. At the bottom of the dialog are 'Save' and 'Cancel' buttons.

To create a user, click on **Add User** and fill below information:

- **New User Role:**
  - Admin: Manager of the installation. This role has access to all settings.
  - EBMS (Building Management System): Role used for Energy of Building Management Softwares, capable of managing charging stations directly through the REST API of EcoStruxure EV Charging Expert.
- **New Username**
- **New User Password / Confirm Password:** The password must be at least 12 characters long and must contain lowercase characters, uppercase characters, numbers, special characters (@\$!%&?)

## Change the user password



The screenshot shows the 'User Management' section of the EV Charging Expert interface. A context menu is open on the right side, with the 'Change Password' option highlighted by a red box. The menu also includes options like 'Change Language', 'Logout', and 'Restart Assistant'.

Username	Role	Date of Creation	Last Access
user_admin	admin	15/07/2024, 15:38:01	17/07/2024, 11:25:52
user_operator	operator	15/07/2024, 15:38:01	--

A user can change webpage password anytime from personal menu.

## Edit a user

Users can be edited from the user administration webpage, only accessible to administrators.



The screenshot shows the 'User Management' section with a context menu open. The 'Edit User' and 'Delete User' options are visible on the right side of the menu.

Username	Role	Date of Creation	Last Access
user_admin	admin	15/07/2024, 15:38:01	17/07/2024, 11:25:52
user_operator	operator	15/07/2024, 15:38:01	--

## 3.15 Maintenance

### Device logs

Access by the Admin tab → Logs

Date	Device	Type	Sub Type	Message
18/07/2024, 15:33:13	EVCE	Security	connection_success	Logon
18/07/2024, 15:31:04	EVCE	Security	connection_failure	Unknown user
18/07/2024, 15:31:04	EVCE	Security	connection_failure	Unknown user
18/07/2024, 15:31:04	EVCE	Security	connection_failure	Unknown user
18/07/2024, 15:31:04	EVCE	Security	connection_failure	Unknown user
18/07/2024, 12:00:09	EVCE	Time of use	Status	Period : P
18/07/2024, 09:44:07	EVCE	Stations maintenance	Restarting periodic generati...	86400s (1 day)
18/07/2024, 09:43:28	EVCE	Security	connection_success	Logon
18/07/2024, 09:43:21	EVCE	Security	connection_failure	Unknown user
18/07/2024, 09:43:21	EVCE	Security	connection_failure	Unknown user

In log tab, all information related to security events, communication and load balancing are available. The logs can be filtered and exported according to charging stations, zones and log types.

#### 3.15.2

### Device maintenance report

Access by the Admin tab → Device Report

EcoStruxure EV Charging Expert diagnostic is a file containing all information about the device (identification, firmware version, logs etc.).

## Charging station maintenance report

Access by the Admin tab → Station reports

Downloading Charging Stations Report (Report Size : 0 / 20MB)


<input type="checkbox"/>	Station Name	Date	Type	Zone
<input type="checkbox"/>	Borne 1.1 (0/9 reports selected)			
<input type="checkbox"/>	Borne 1.1	03/07/2024, 15:07:18	manual	TD_VE
<input type="checkbox"/>	Borne 1.1	03/07/2024, 15:10:53	manual	TD_VE
<input type="checkbox"/>	Borne 1.1	12/07/2024, 11:08:15	periodic	TD_VE
<input type="checkbox"/>	Borne 1.1	13/07/2024, 11:08:15	periodic	TD_VE
<input type="checkbox"/>	Borne 1.1	14/07/2024, 11:08:16	periodic	TD_VE
<input type="checkbox"/>	Borne 1.1	15/07/2024, 11:08:17	periodic	TD_VE
<input type="checkbox"/>	Borne 1.1	16/07/2024, 11:08:17	periodic	TD_VE
<input type="checkbox"/>	Borne 1.1	17/07/2024, 11:08:18	periodic	TD_VE
<input type="checkbox"/>	Borne 1.1	18/07/2024, 11:08:14	periodic	TD_VE
<input type="checkbox"/>	Borne 1.2 (0/8 reports selected)			
<input type="checkbox"/>	Borne 10.1 (0/7 reports selected)			
<input type="checkbox"/>	Borne 10.2 (0/7 reports selected)			
<input type="checkbox"/>	Borne 11.1 (0/7 reports selected)			

For each charging station with maintenance reports generation feature, EcoStruxure EV Charging Expert saves periodically a device report. From 5 to 10 periodic / manual reports can be stored. To generate a report manually, see [chapter 3.2.2](#).

To download device report, please select device reports and click on **Download**.


# 3.16 EV Charging Expert Firmware update

Access by hamburger menu → Firmware Update

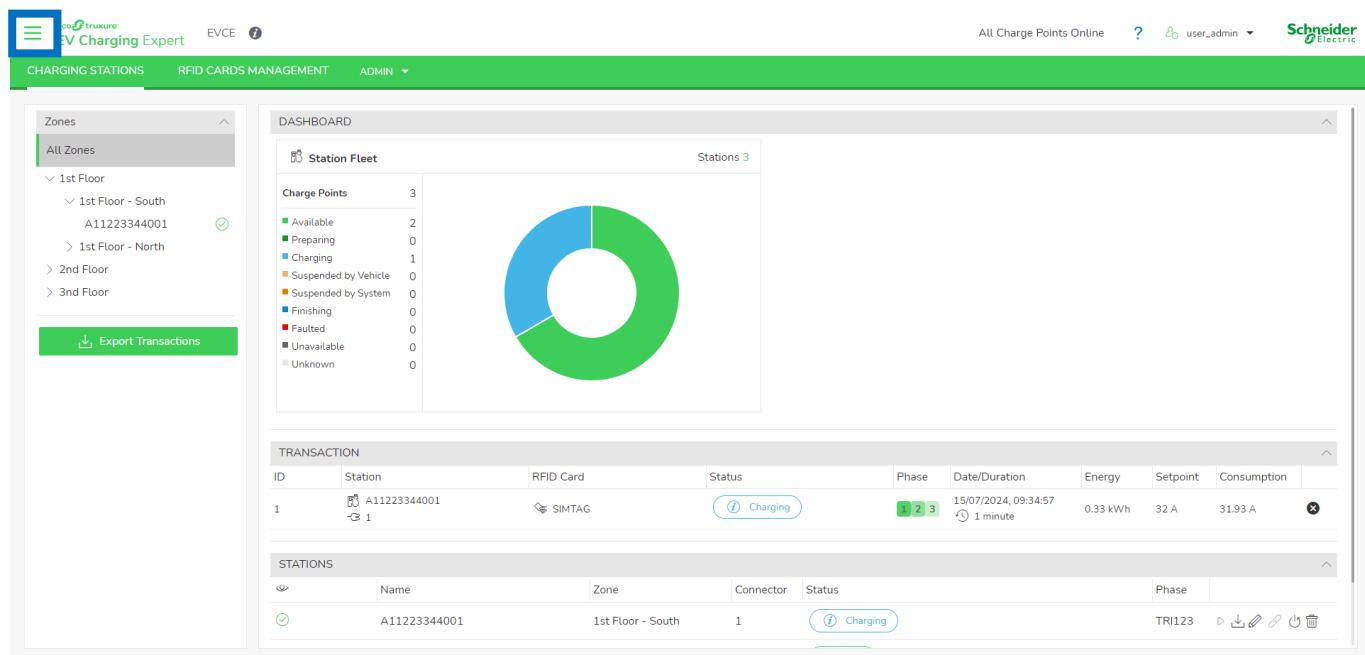

The screenshot shows the main interface of the EcoStruxure EV Charging Expert software. The top navigation bar includes 'EV Charging Expert', 'EVCE', and 'ADMIN'. The left sidebar shows 'Zones' with 'All Zones' expanded, showing '1st Floor' with '1st Floor - South' and '1st Floor - North', and '2nd Floor' and '3rd Floor'. There is a 'Export Transactions' button. The 'DASHBOARD' section features a 'Station Fleet' donut chart and a table of charge point status: Available (2), Preparing (0), Charging (1), Suspended by Vehicle (0), Suspended by System (0), Finishing (0), Faulted (0), Unavailable (0), and Unknown (0). The 'TRANSACTION' section lists a single entry: ID 1, Station A11223344001, RFID Card SIMTAG, Status Charging, Phase 1, Date/Duration 15/07/2024, 09:34:57, Energy 0.33 kWh, Setpoint 32 A, Consumption 31.93 A. The 'STATIONS' section shows station A11223344001 in the 1st Floor - South zone, phase 1, status Charging. The interface is branded with Schneider Electric.

To upgrade EcoStruxure EV Charging Expert, select bundle from desktop. An update page appears while new version gets installed. Around one minute after the upgrade start, an automatic reboot happens to apply the new firmware.

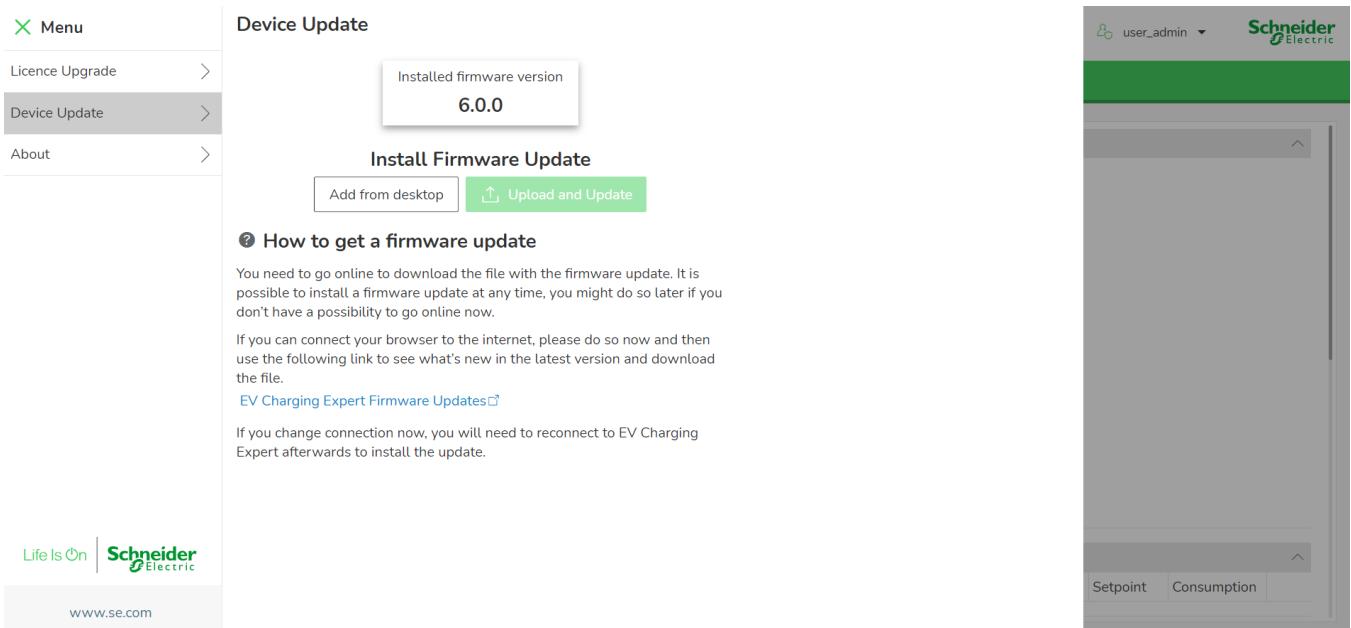

The screenshot shows the 'Device Update' page. The left sidebar includes 'Menu', 'Licence Upgrade', 'Device Update' (which is selected and highlighted in grey), and 'About'. The main content area shows the 'Device Update' section with 'Installed firmware version' 6.0.0 and an 'Upload and Update' button. Below this is the 'Install Firmware Update' section with 'Add from desktop' and 'Upload and Update' buttons. A 'How to get a firmware update' section provides instructions for downloading the update from the Schneider Electric website. The bottom of the page includes the Schneider Electric logo and the website 'www.se.com'.

## 3.17 License upgrade

EcoStruxure EV Charging Expert license can be upgraded for specific use cases. Please contact your Schneider Electric commercial partner.

### Access by hamburger menu → License Update

EcoStruxure EV Charging Expert serial number is required to get an upgrade package. All information is present on license page and should be provided to Schneider Electric.

**User licence**

**Current licence**

Reference Name: HMIBX1A0NEVB100SCP  
Serial Number: 74fe48634732

100 Stations, 20 Zones, 4 Zone levels, Local Production, Local CSMS, Add-on licences

**Licence request**

To request a new licence, please download a summary of your configuration using the Export button, then email the file to the address below. Schneider Electric support will provide a new file to upgrade your licence.

**Upload Licence Key**

Add the licence key from your Desktop and click on Upload.

Description	Type	Reference	Validity
This is a base licence 2	base	HMIBX1A0NEVB100SCP	18/04/2050

**Request By Email** link will automatically open your email software and prepare a message with all required product information.


A license upgrade can:

- Add new models of charging stations.

## 3.18 Reboot and back to factory settings

Access by the Admin tab → Restart or Factory Reset

Reboot and back to factory settings from the webserver

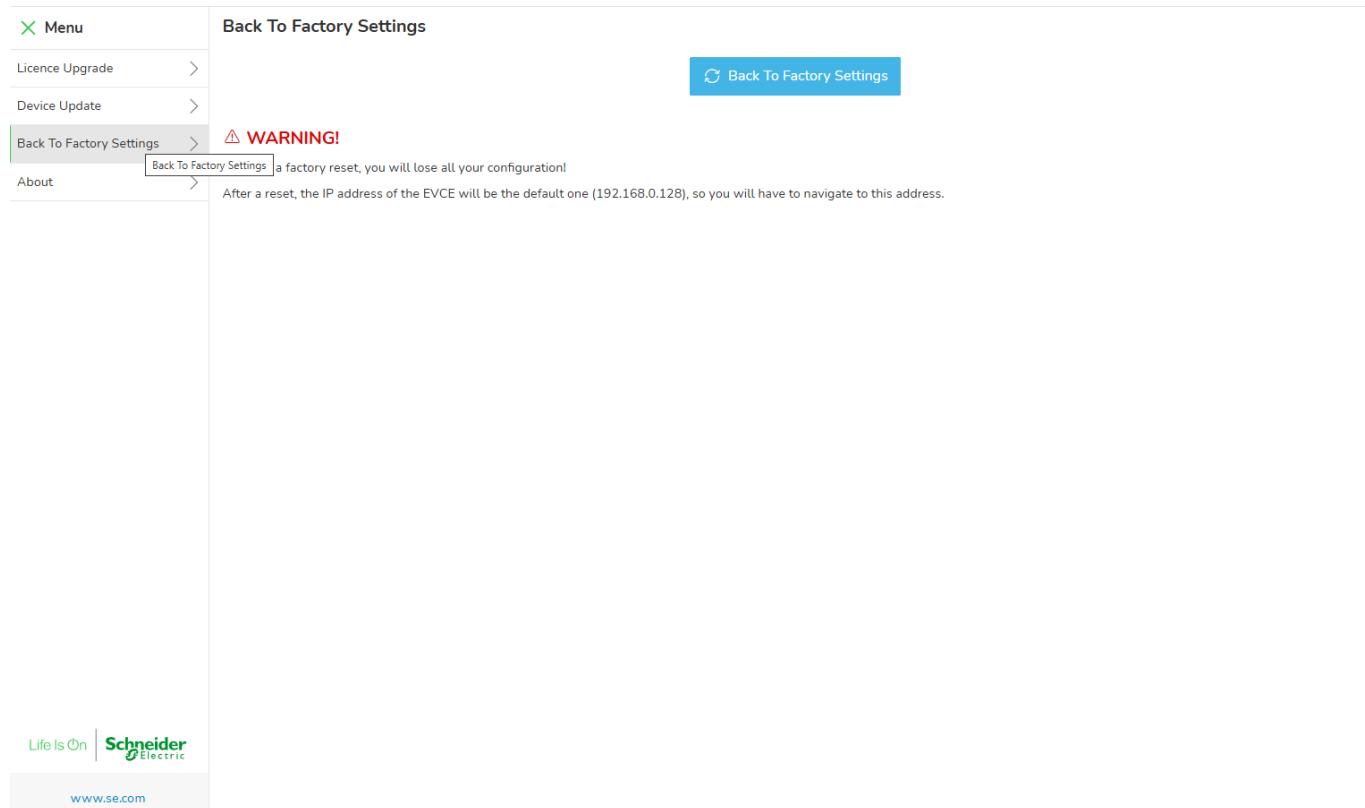


Back To Factory Settings

**⚠️ WARNING!**

Back To Factory Settings a factory reset, you will lose all your configuration!

After a reset, the IP address of the EVCE will be the default one (192.168.0.128), so you will have to navigate to this address.

When **Back To Factory Settings** is selected, all information stored into the EcoStruxure EV Charging Expert is erased. This action is irreversible.

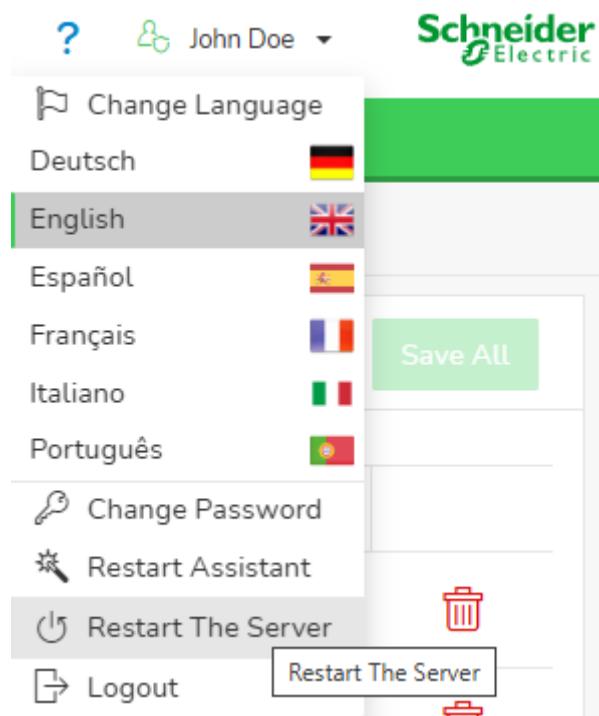

- Change Language
- Deutsch
- English
- Español
- Français
- Italiano
- Português
- Change Password
- Restart Assistant
- Restart The Server**
- Logout

When **Restart The Server** is selected, the EcoStruxure EV Charging Expert reboots. During the reboot, the communication with supervision and charging stations is lost.

## Hardware back to factory settings

This procedure describes the steps to flash an EcoStruxure EV Charging Expert using industrial SD Card. This is the only procedure to run a complete reset of the product to version 6 and more.

### 3.18.2.1 Prerequisites


3.18.2

The following material is required:

- An SD Card of at least 8 GB (can be a microSD card with an SD card adapter)
- A Windows computer with an SD Card reader and administrative rights


### 3.18.2.2 SD Card preparation

The SD card / SD card adapter side latch should be “Unlocked” position:

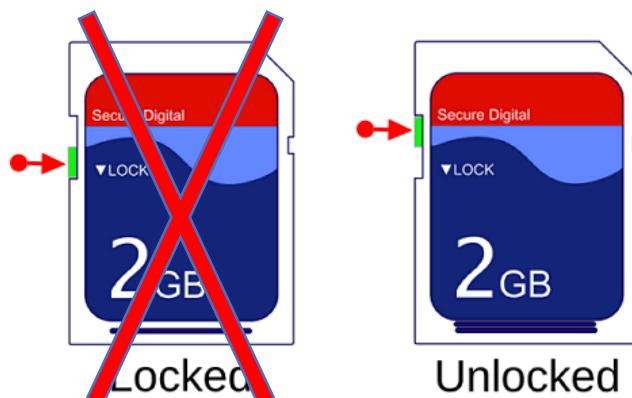

internal SD card reader or an external USB SD card reader. Download Balena Etcher software from <https://etcher.balena.io/>


Install the downloaded software on your computer (administrative rights may be required). Launch the Etcher software:

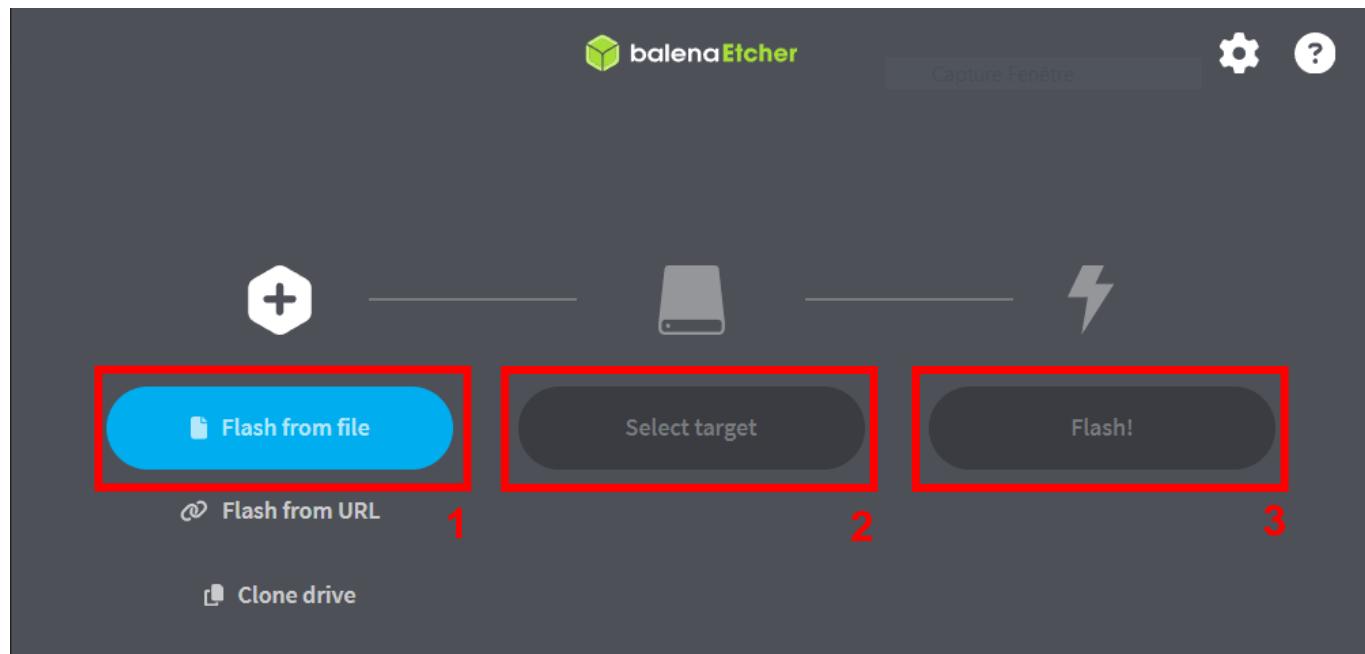

1. Download the EcoStruxure EV Charging Expert SD card back to factory image on se.com, click on “Flash from file” and select the image.
2. Click on “Select target” and select your SD card.

3. Click on “Flash”. The SD card content will be erased and replaced by the EcoStruxure EV Charging Expert back to factory image. Wait for the Decompressing, Flashing and Verifying process to end with success.

At the end you should get the following message:

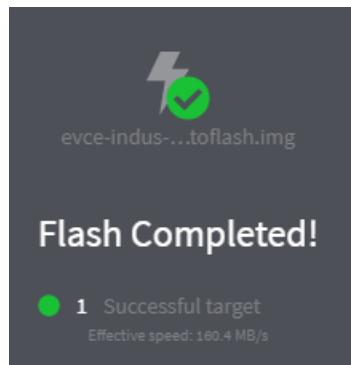

If you have an error, try again by using another SD card or another SD card reader.

### 3.18.2.3 Flashing the EcoStruxure EV Charging Expert

1. Unplug the device from power source.
2. Insert the prepared SD Card into the EcoStruxure EV Charging Expert SD card slot (see [chapter 1.1.1.6](#)).
3. Plug the device from power source.
4. Led start blinking quickly.
5. At the end of the installation, led blinks slowly.
6. Don't forget to remove the SD Card and restart your device.

## 3.19 Save and Restore

### Save configuration

Access by the Admin tab → Save


The EcoStruxure EV Charging Expert allows to save a backup of the current system configuration. This configuration can be imported later to automatically restore a lost configuration.

3.19.1

Configuration export content:


- Admin and user profiles credentials
- Charging stations configuration
- Zones configuration
- Power meters configuration
- Network configuration
- Authentication strategies
- List of RFID cards
- Authentication groups

When clicking **Save** button, a password and comment are required to generate the backup file. To guarantee the security of your information, exported file is encrypted and signed. It is strongly recommended to save the exported file in a safe repository.

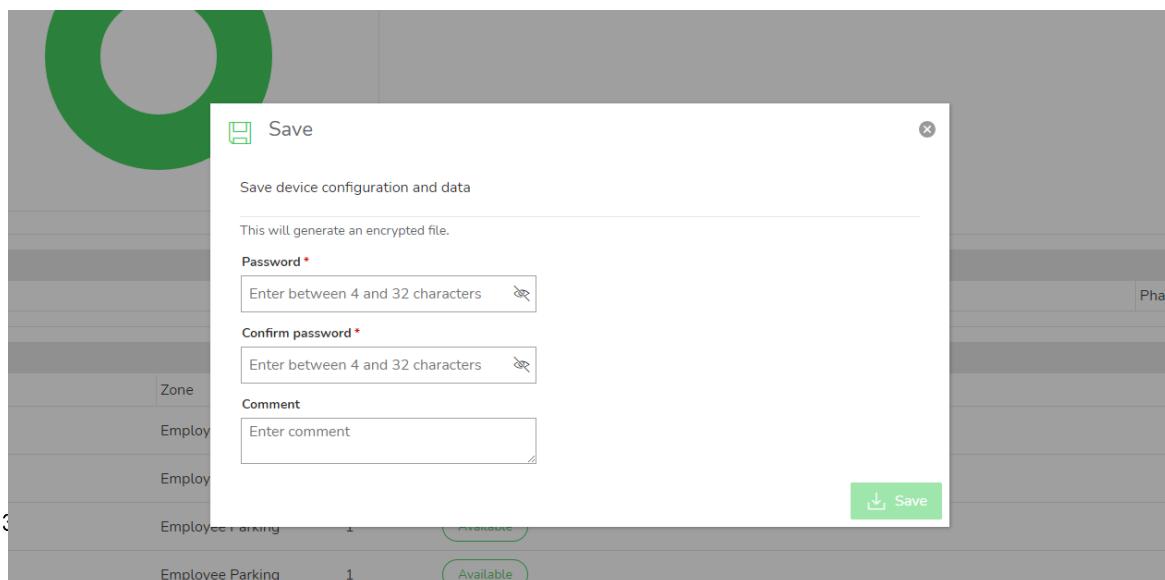

### Restore configuration

**Restore** pop-up allows to recover a configuration from a previous configuration export. Only configuration file from version 6.0.0 or upper are compatible. Restoring the configuration requires the file password.

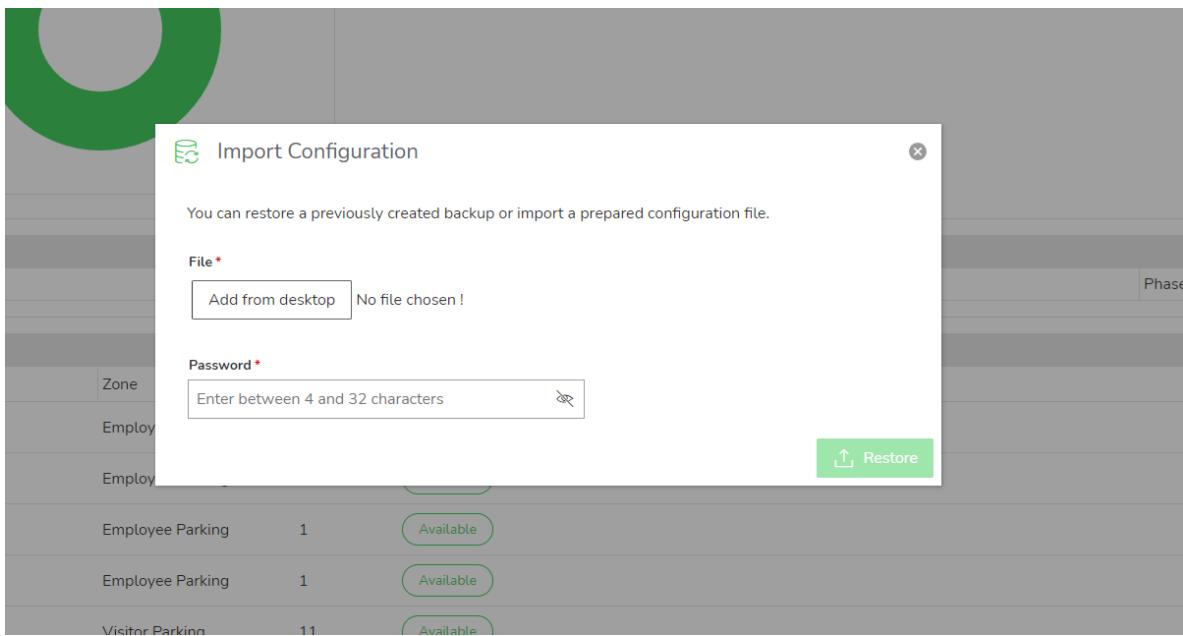

**Schneider Electric Industries SAS**

35, rue Joseph Monier  
CS 30323  
92506 Rueil Malmaison Cedex  
France

[www.se.com](http://www.se.com)

DOCA0429EN © 2020 Schneider Electric. All rights reserved