

We welcome your comments about this document. You can reach us by e-mail at: customer-support@tesensors.com

WARNING


IMPROPER SETUP OR INSTALLATION


- This equipment must only be installed and serviced by qualified personnel.
- Read, understand, and follow the compliance below and the complete XUSL2E/XUSL4E User Manual before installing the XUSL2E/XUSL4E Safety light curtains.
- Do not tamper with or make alterations on the unit.
- Comply with the wiring and mounting instructions.
- Check the connections and fastening during maintenance operations.
- Disconnect all power before servicing equipments.
- The proper functioning of the XUSL2E/XUSL4E Safety light curtains and its operating line must be checked on a regular basis based on the level of security required by the application (e.g. number of operations, level of environmental pollution, etc.).

Failure to follow these instructions can result in death, serious injury, or equipment damage.

These devices have been designed to be in compliance with the standards currently in effect:


XUSL2E: Type 2 (EN/IEC 61496-1), SIL 1 (EN/IEC 61508), SILCL 1 (EN/IEC 62061), PLc–Cat.2 (EN/ISO 13849-1) XUSL4E: Type 4 (EN/IEC 61496-1), SIL 3 (EN/IEC 61508), SILCL 3 I(EN/IEC 62061), PLe–Cat.4 (EN/ISO 13849-1) Package Content (Example) Mounting

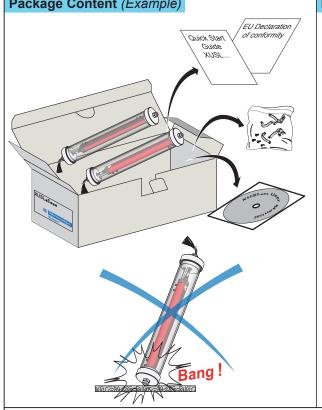

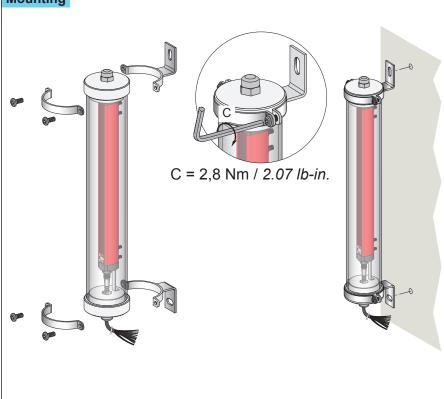

Electrical equipment should be installed, operated and maintained only by qualified personnel. No responsibility is assumed by Schneider Electric for any consequences arising out of the use of this material.

© 2017 Schneider Electric. "All Rights Reserved."

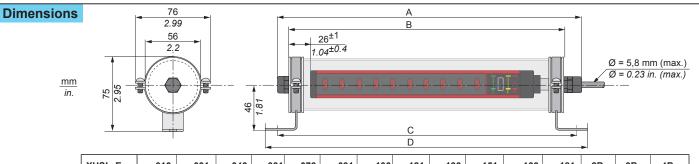

XUSL•E	•••016	•••031	•••046	•••061	•••076	•••091	•••106	•••121	•••136	•••151	•••166	•••181	2B	3B	4B
Α	320	470	620	770	920	1070	1220	1370	1520	1670	1820	1970	760	1060	1160
	12.60	18.50	24.41	30.31	36.22	42.13	48.03	53.94	59.84	65.75	71.65	77.56	29.92	41.73	45.67
В	290	440	590	740	890	1040	1190	1340	1490	1640	1790	1940	730	1030	1130
	11.42	17.32	23.23	29.13	35.04	40.94	46.85	52.76	58.66	64.57	70.47	76.38	28.74	40.55	44.49
C (± 3 mm)	315	465	615	765	915	1065	1215	1365	1515	1665	1815	1965	755	1055	1155
	12.4	18.31	24.21	30.12	36.02	41.93	47.83	53.74	59.65	65.55	71.46	77.36	29.72	41.53	45.47
D	337	487	637	787	937	1087	1237	1387	1537	1687	1837	1987	777	1077	1177
	13.27	19.17	25.08	30.98	36.89	42.8	48.7	54.61	60.51	66.41	72.32	78.23	30.59	42.4	46.34

(R)

Wiring diagrams



WH: White BK: Black BN: Brown GN: Green YE: Yellow GY: Grey PK: Pink BU: Blue RD: Red VT: violet

_							
ιſ	Wire	color	Description				
'	without heating system	with heating system					
	BN	BN	+ 24 Vdc				
	WH	WH	Configuration_0				
	BU	BU	0 Vdc				
	BK	GN	Configuration_1				
	GY	GY	FE				
		YE	0 V (heating system)				
		RD	24 V ∼ / == (heating system)				
		PK	-				

\	Wire	color	Description				
)	without heating system	with heating system					
	WH	WH	OSSD1				
	BN	BN	+ 24 Vdc				
	GN GN		OSSD2				
	YE YE		Configuration_A				
	GY GY		K1_K2 Feedback/Restart				
	PK PK		Configuration_B				
	BU	BU	0 Vdc				
	RD RD		FE				
		BK	0 V (heating system)				
		VT	24 V \sim / $==$ (heating system)				

 
WARNING A

IMPROPER CONNECTION


- The XUSL2E/XUSL4E light curtain system must be powered by a safety extra low voltage (SELV) or a protected extra low voltage (PELV)
- The XUSL2E/XUSL4E light curtain system is designed for use only on a 24 Vdc negative ground electrical system.
- Never connect the XUSL2E/XUSL4E light curtain system to a positive ground system.
- Never connect the ground (here the Functional Earth FE) with the 0 Volt reference of the safety extra low voltage (SELV) power supply.
- The XUSL2E/XUSL4E safety light curtains must be connected using both safety outputs.
- A single safety output, if it fails, may not stop the machine.


Failure to follow these instructions can result in death, serious injury, or equipment damage.

The XUSL2E/XUSL4E light curtain system operates directly from a 24 Vdc ±20% power supply. The power supply must meet the requirements of EN/IEC 60204-1 and EN/IEC 61496-1. The SELV Schneider Electric part number ABL8RPS24 ··· is recommended.





Transmitter - Low range connection

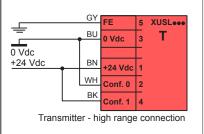

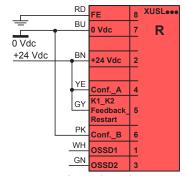


Automatic start/restart without EDM feedback loop

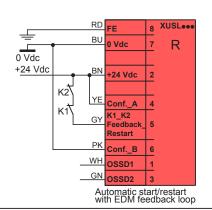


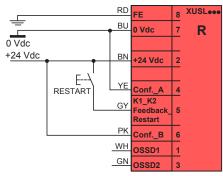

Manual start/restart without EDM feedback loop

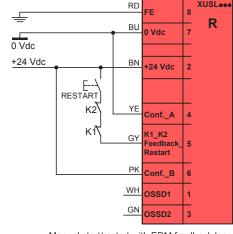

Manual start/restart with EDM feedback loop

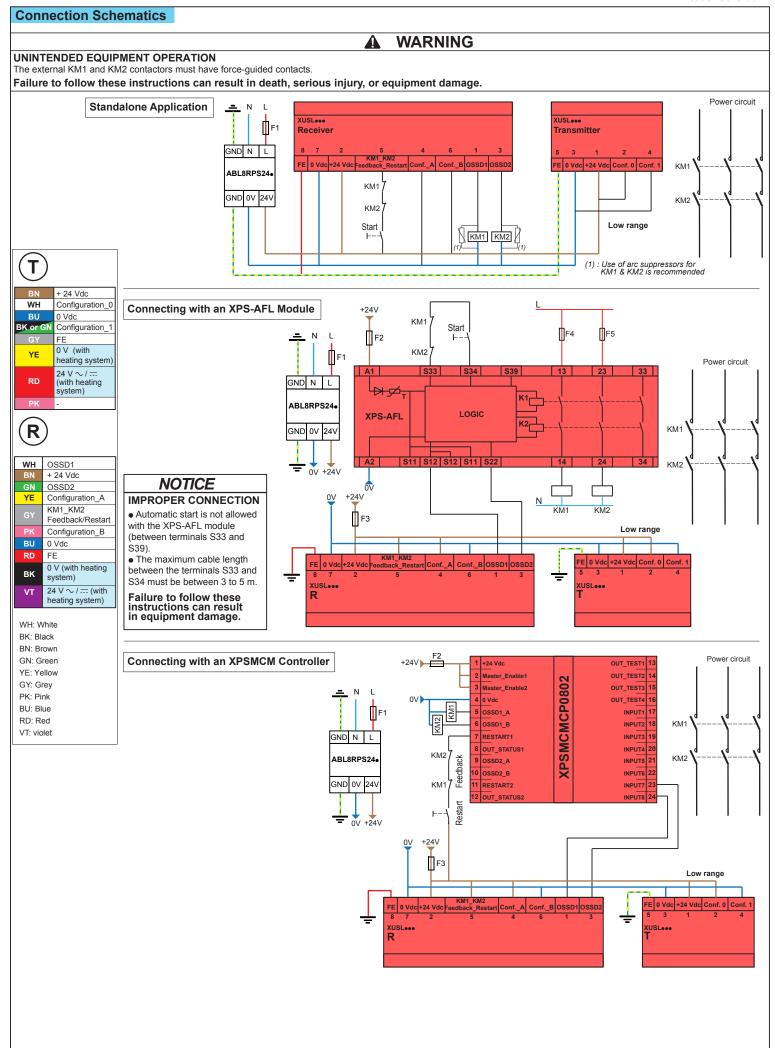


Alignment procedure


1) The transmitter and receiver must be installed with the optical surfaces face to face, connectors oriented in the same way. Perfect alignment of the transmitter and the receiver corresponding beams is mandatory for an optimum functioning, meaning that the transmitter and receiver must have the same height and be parallel. A good positioning will be facilitated by using the provided mounting accessories.

The use of LED indicators helps in proper alignment as described below:


- For all models align the transmitter until the green LED is lit on the receiver.
- For finger detection and long range models, the blue LED weak signal on the receiver will be useful as well. Firstly, find the zone where the blue LED is lit, indicating an approximate alignment, then fine-tune the setting until the blue LED turns OFF and the green LED is lit.

  
 It is also possible to use a laser pointer device as alignment help. (Available as accessory).
- (2) If vibrations are to be expected in your applications, it is strongly recommended to use vibration dampers (Available as accessories).

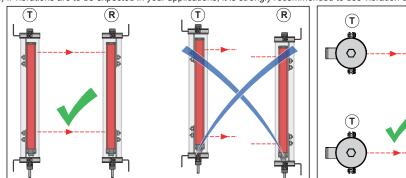

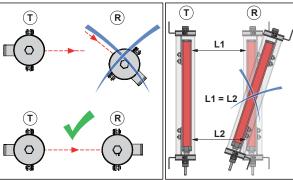









T	R							LEDs Meaning	
	1	2	1 (*)		2 (*)				
Red	Yellow	Red					OFF	Power-On Initialization Test.	
Green	OFF	Green	Blue		Green		ON	Normal operation.	
Green	OFF	Red	Blue		Red		OFF	Detection zone interrupted.	
Green	Yellow	OFF	Blue -Yellow alternate		OFF		OFF	Detection zone clear, waiting for restart.	
Green	Yellow flashes	Yellow flashes	Blue Yellow	Alternate flashes	Yellow OFF	Alternate	OFF	Detection zone clear, waiting for KM1_KM2 feedback.	
Orange	OFF	Red					OFF	Test state (simulation of a detection zone interruption).	
Green	Blue and/or Yellow (*)	Green/Yellow or Red (*)	N				(*)	Weak signal (low signal received) only with type 4 finger detection and long range models.	
Green	Yellow flashes	Red					OFF	Master: Detection zone clear Slave: Detection zone interrupted.	
Red flashes	OFF	Red flashes					OFF	Fail mode (Error state) For more information, refer to "Troubleshooting" section in the User manual.	

(*): When weak signal blue display is available (Type4 finger & long range models). In case of weak signal detected.

Characteristics

Product certifications CE, cULus, TüV, EAC, RCM								
Ambient air temperature Operation	XUSL2E30HeeeNWC	Type 2 IP69K without heating system	Normal consing range	-30°C+55°C (- 22 °F to 131 °F)				
	XUSL2E30HeeeNWH	Type 2 IP69K with heating system	Normal Sensing range					
	XUSL4E14F	Type 4 IP69K without heating system	Normal sensing range	-20°C+55°C (- 4 °F to 131 °F)				
	XUSL4E14F	Type 4 IP69K with heating system		-30°C+55°C (- 22 °F to 131 °F)				
	XUSL4E®B®®®LWC XUSL4E30H®®LWC	Type 4 IP69K without heating system	Long sensing range	-20°C+55°C (- 4 °F to 131 °F)				
	XUSL4E®B®®®LWH XUSL4E30H®®LWH	Type 4 IP69K with heating system	Zong conomig rango	-30°C+55°C (- 22 °F to 131 °F)				
Storage	Type2 and 4 - Standard and Long Sensing Range - With and without heating system: - 3070 °C (- 22 °F to 158 °F)							
Degree of protection	Conforming to EN/IEC 60529: IP65, IP67 - DIN 40050: IP69K							
Shock and Vibration resistance	Conforming to EN/IEC 61496-1:							
	Shock: 10 g							
	● Impulse: 16 ms							
	Vibration: 1055 Hz							
	● Amplitude: 0.35 ± 0.05 mm (0.0014 ± 0.00020 inches)							
Light source	Infrared λ = 950 Nm							
Resistance to light disturbance	Conforming to EN/IEC	61496-2.						
Power Supply	24 Vdc ± 20% - 2 A							
	The power supply must	meet the requirements of EN/IEC 60204-1 re	lative to SELV/PELV po	ower supply				
Maximum current consumption (no load)	Transmitter: 42 mA - F	Receiver: 83 mA						
Input power supply	Transmitter: 42 mA - Receiver: 900 mA (Including OSSD current)							
Resistance to interference	Level depends if the product is Type 2 or Type 4 conforming to EN/IEC 61496-1.							
Safety outputs (OSSD)	Two PNP - 400 mA per output @ 24 Vdc, drop out voltage <0.5 Vdc (Integrated arc suppressors), leakage current							
	(OFF state) < 2 mA. Load capacity 0.82µF under 24 Vdc							
Mission Time (TM)	20 years							
PFH _D	Depends on the models. Refer to the complete User Manual							
First-up time	≤2 s							
OSSDs Pulse Duration	on ≤ 200 μs							
Minimum pulse period	2,5 ms (Type 4 models) and 500 ms (Type 2 models)							
Note: More characteristics in the User Manual								