

USB 3.1 Type-C to Gigabit Ethernet Adapter

User Manual



Contents

1.0 INTRODUCTION 1

2.0 FEATURES 1

3.0 SPECIFICATIONS 1

4.0 PACKAGE CONTENTS 2

5.0 OPERATION 2

6.0 CONNECTION DIAGRAM 3

USB 3.1 Type-C to Gigabit Ethernet Adapter

DEAR CUSTOMER

Thank you for purchasing this product. For optimum performance and safety, please read these instructions carefully before connecting, operating or using this product. Please keep this manual for future reference.

1.0 INTRODUCTION

This USB-C to Ethernet Adapter is a high performance and low expenditure solution. It enables your new Macbook pro or Chromebook or other USB-C Host to get access to a fast Ethernet network by connecting the Gigabit Ethernet port.

2.0 FEATURES

- Supports USB-C and Gigabit Ethernet port
- Supports USB-C plug and play, hot swap
- No extra driver software is required, and auto driver installation
- Supports 10/100/1000Mbps bandwidth
- Supports twisted pair crossover detection and auto-correction
- USB bus power (no external power supply)
- Supports Operating system for computers:

Windows: Windows 7 / Windows 8/Windows10/ Windows Vista/ Windows XP (32/64bit)

Mac: Mac OS X 10.6 to 10.12.5 (For Mac OS 10.6 or below, you need to download driver from official website.)

<http://www.realtek.com.tw/downloads/downloadsView.aspx?Langid=3&PNid=13&PFid=56&Level=5&Conn=4&DownTypeID=3&GetDown=false>)

3.0 SPECIFICATIONS

Input/Output Connector	
Input	USB-C Male ×1
Output	RJ45 ×1
Warranty	

Limited Warranty	1 Year
Environmental	
Operating Temperature	0 °C to +45°C
Operating Humidity	10% to 85 % RH (no condensation)
Storage Temperature	-10°C to +70°C
Storage Humidity	5% to 90 % RH (no condensation)
Accessories Adapter	
User Manual	English Version

4.0 PACKAGE CONTENTS

Before attempting to use this unit, please check the packaging and make sure the following items are contained in the shipping carton:

- Main unit x1
- User Manual x1

5.0 OPERATION

- ① Connect Type-C host PC to USB-C port of this product
- ② Connect Gigabit Ethernet port of this product to Ethernet Router with an Ethernet cable
- ③ Automatically or manually set IP address of computer

6.0 CONNECTION DIAGRAM

