



Adaptors

Adaptors = **wheel and crown**

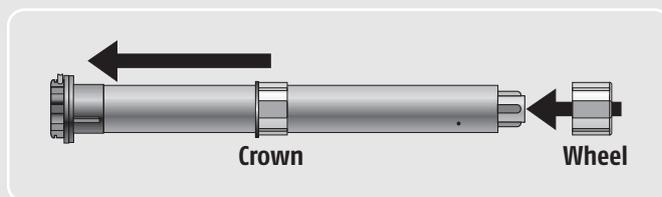

The crown is placed on the tubular motor head and the wheel is on the opposite side, on the output shaft. Both the crown and the wheel are specifically designed to the size and the shape of the tube. The wheel drives the tube and so supports the torque, this is the reason why we advise to rivet the wheel to the tube.

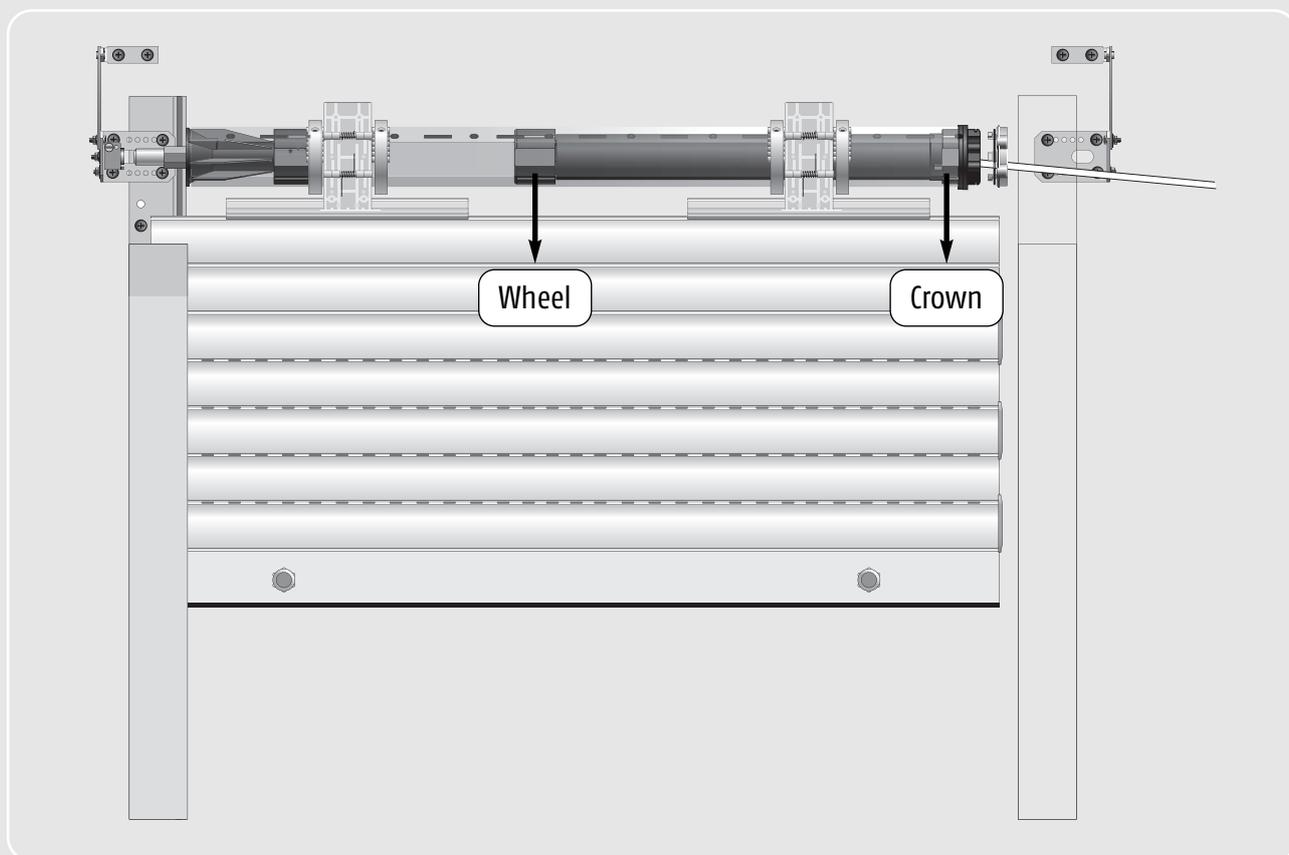

When using an extruded wheel, a stop wheel is required !!



- For diameter 40: stop wheel **9147894**
- For diameter 50: stop wheel **9910004**
- For diameter 60: stop wheel **9910062**

All Somfy adaptors are tested and qualified:

- the LS 40 adaptors are qualified up to 13 Nm
- the diameter 50 adaptors up to 50 Nm
- the diameter 60 adaptors up to 120 Nm