


—
INSTALLATION INSTRUCTION









Cover plate

OMZC2

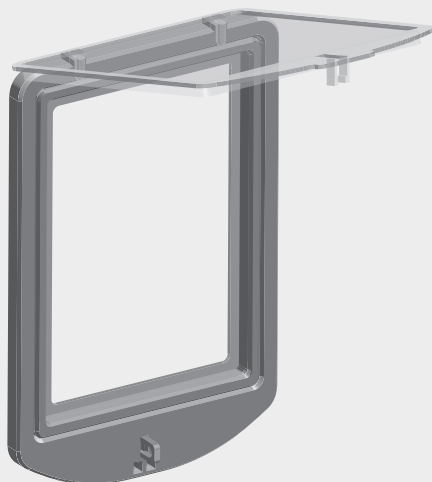








OMZC2

IP54

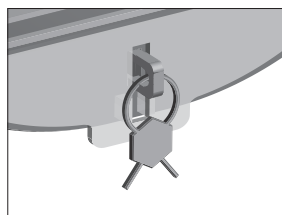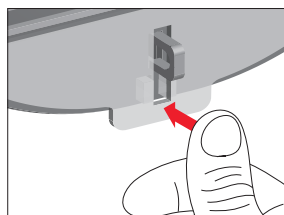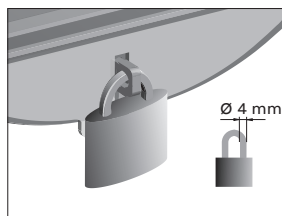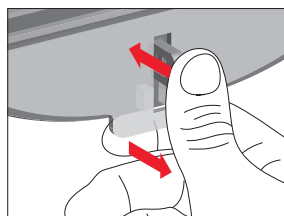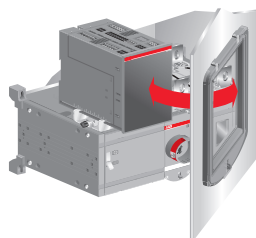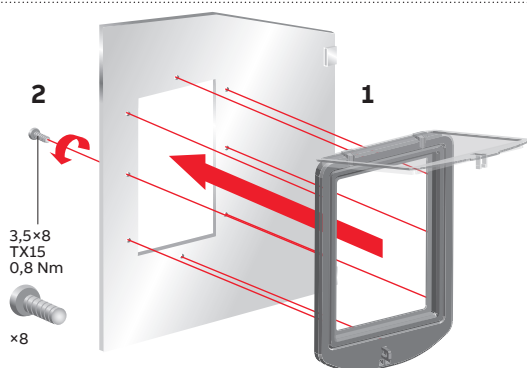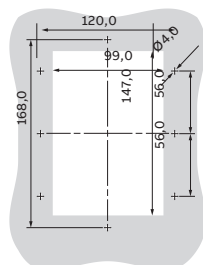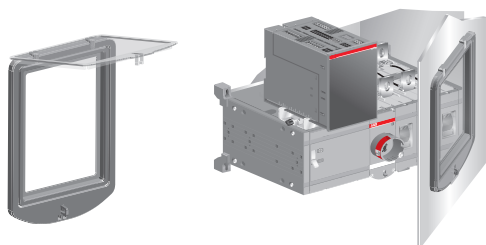

OMZC2

IP54

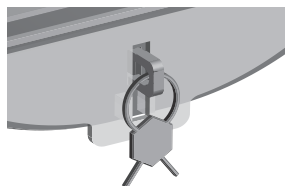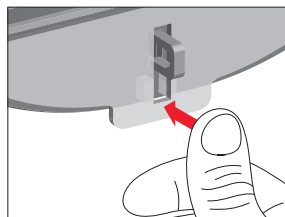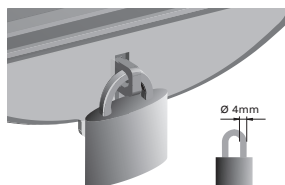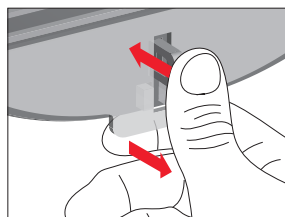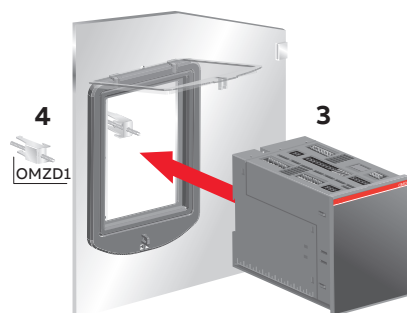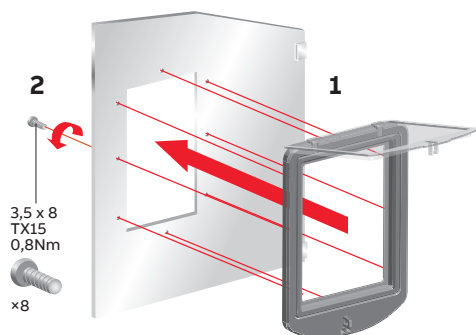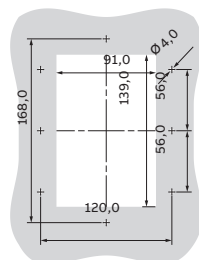



Contact us

ABB Oy

P.O. Box 622
FI-65101 Vaasa
Finland

abb.com/lowvoltage