



INSTRUCTION SHEET

System pro E power

InLine - 800V configuration



1STS100541R0001 - REV A





INSTALLATION AND MAINTENANCE INSTRUCTIONS

The operations for the installation, putting into service and routine and emergency maintenance of the unit must be performed by qualified personnel with a detailed knowledge of the unit. ABB declines all responsibility for injury to people or damage to property resulting from a failure to comply with the instructions set out in this document. Don't hesitate to contact ABB for any further information you may require.




 
 
PKNL1510

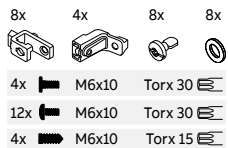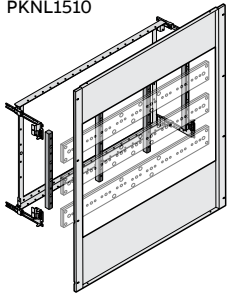


PKNL1015

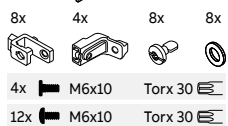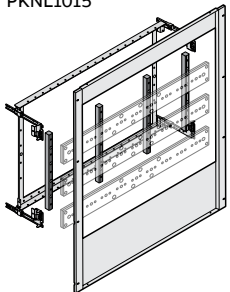  


PPNL6510

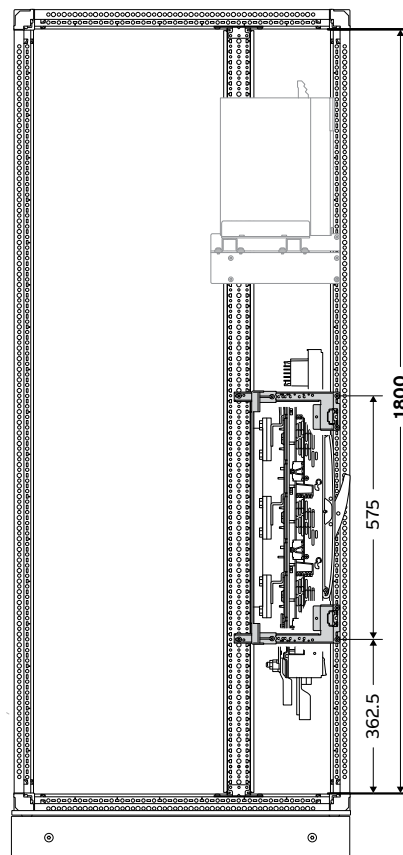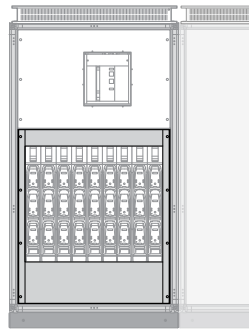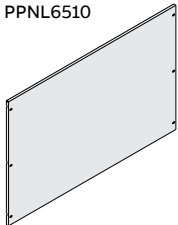     


PUKI1800

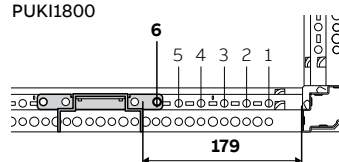 


1

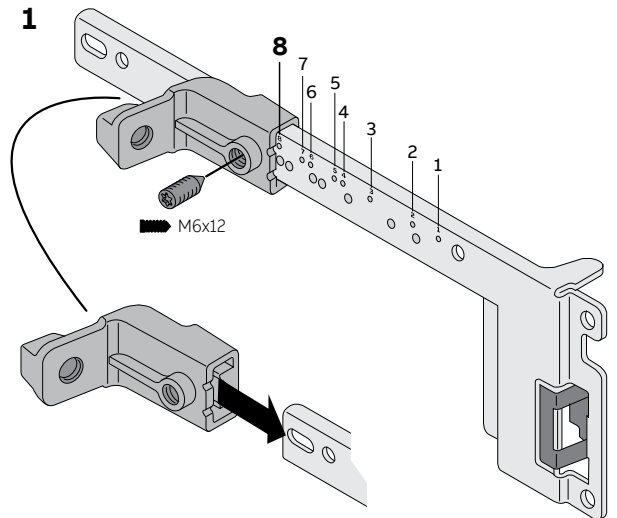 


2

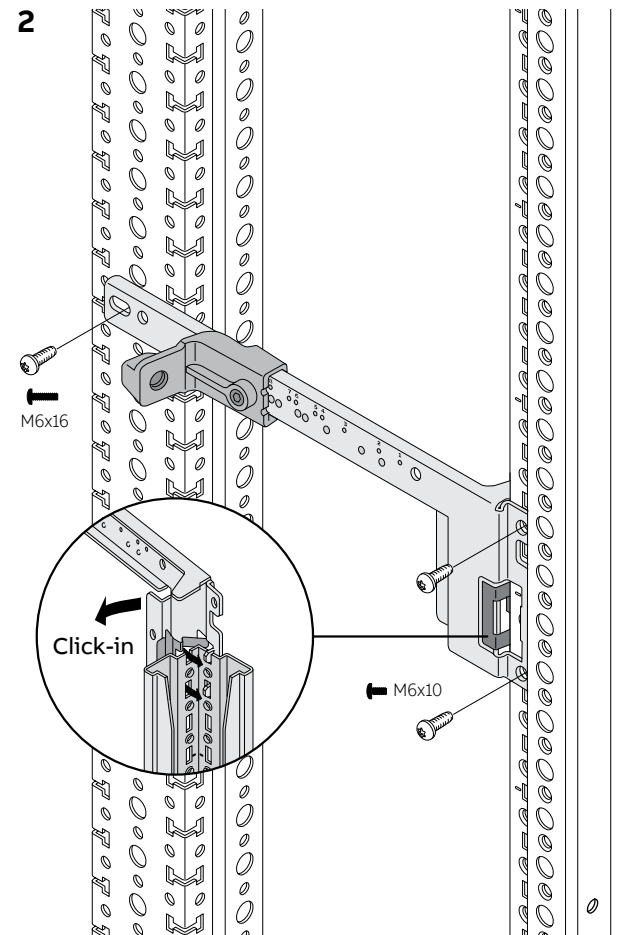 


PCNL1010

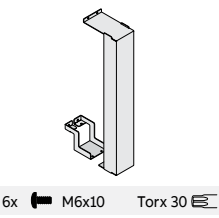 


PCNL1011

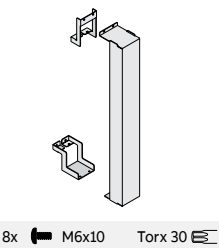 


PSVS1040

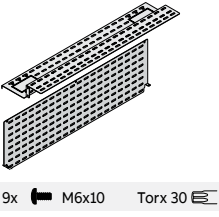 


PFNL1810

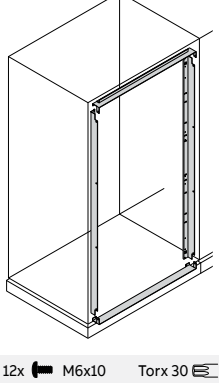 


PPNL1010

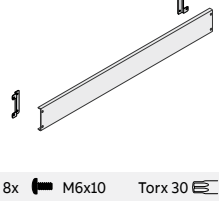 


PPNL1020

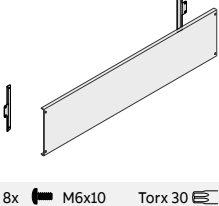 


PPNL1030

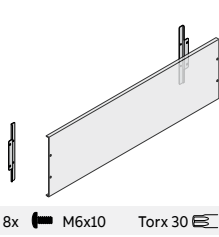 


3






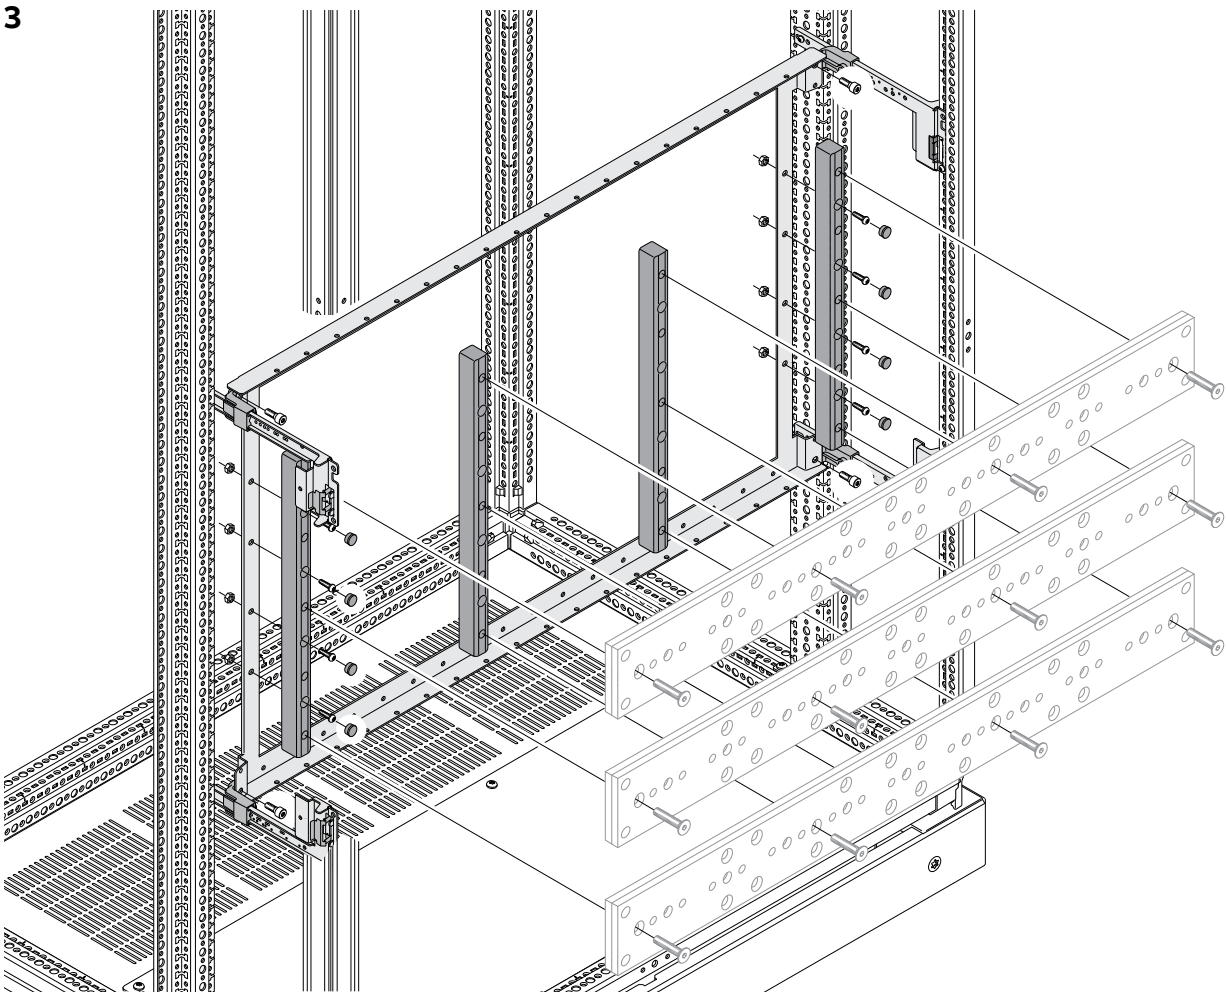 







4

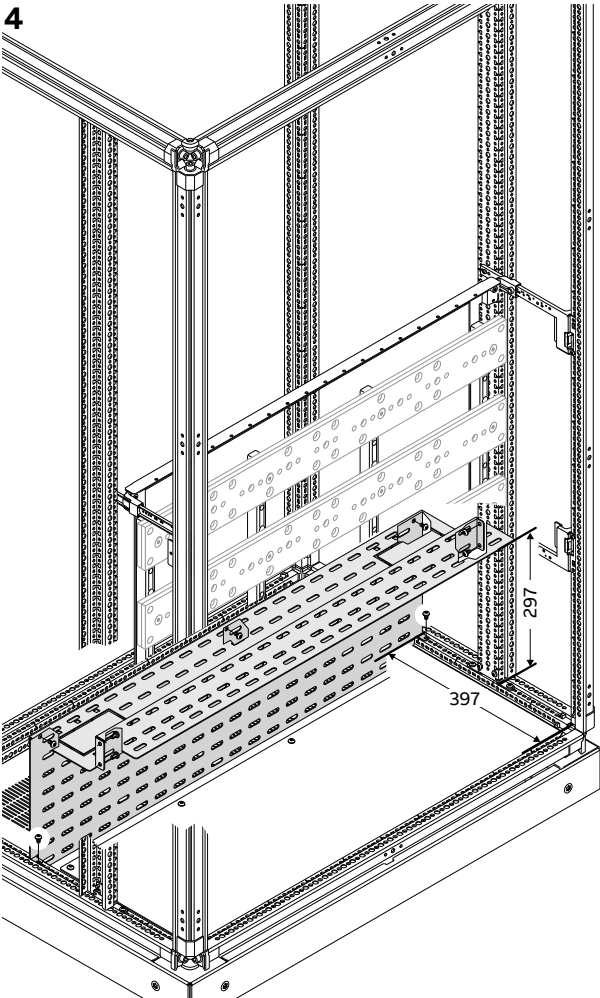 

5

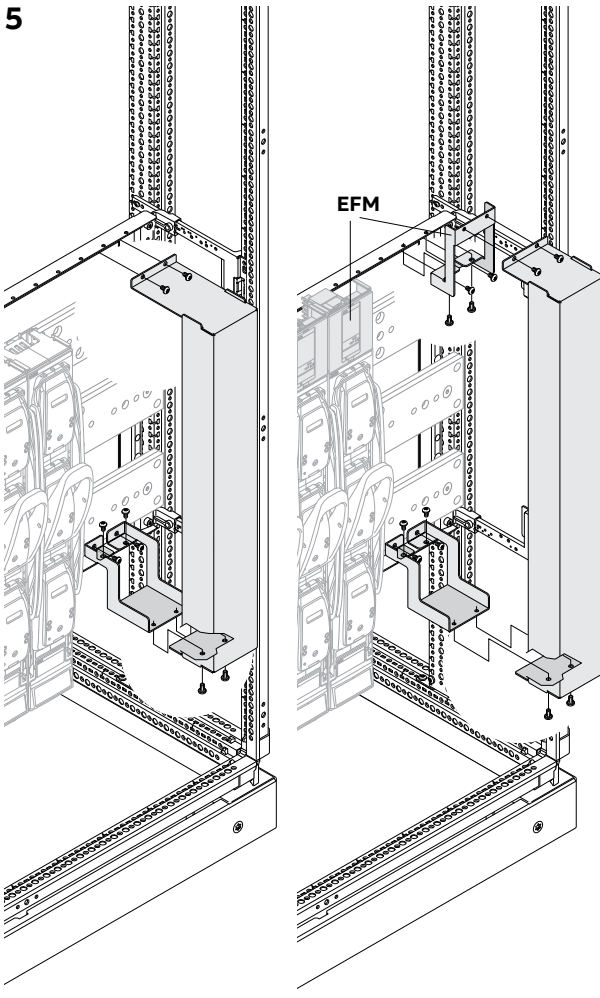 

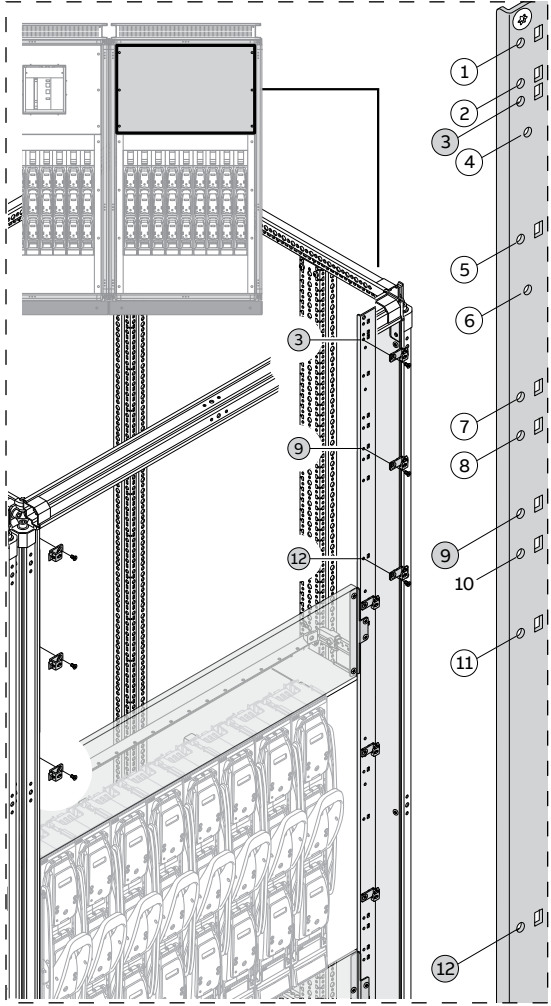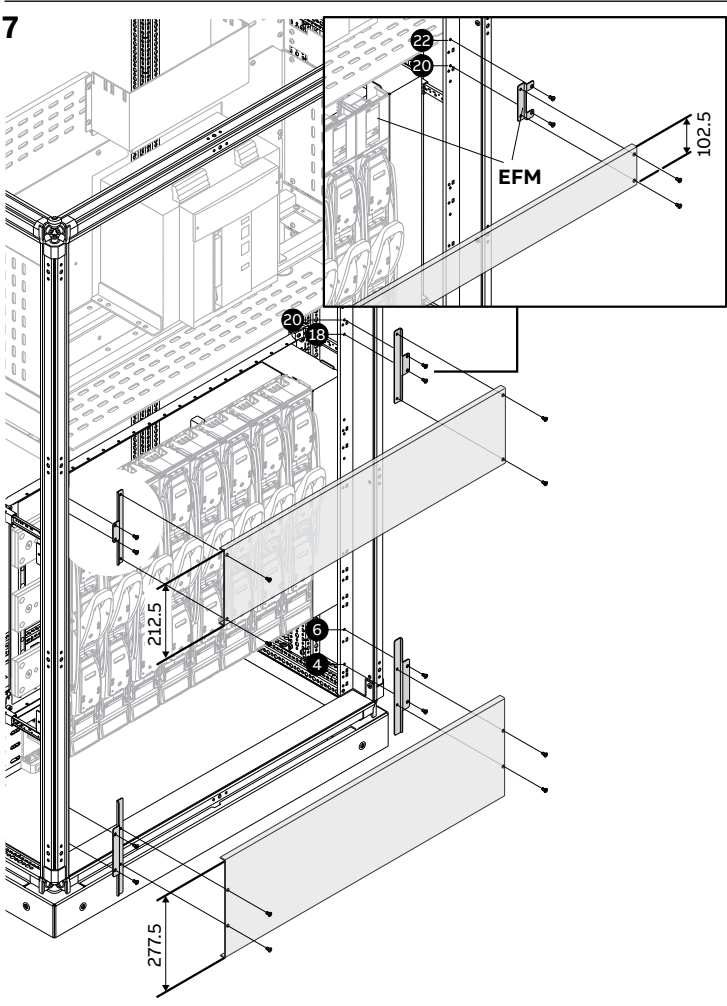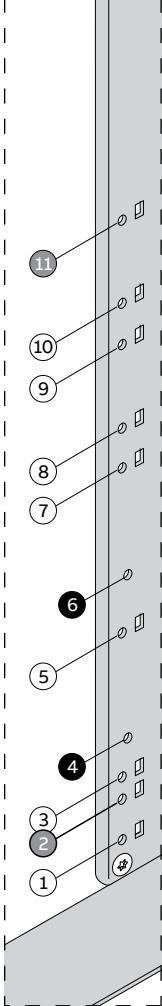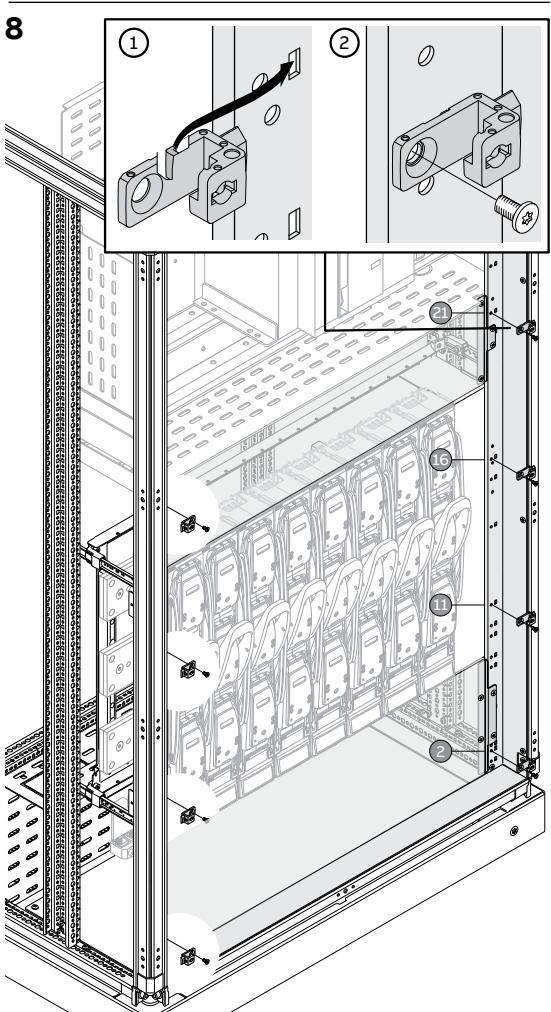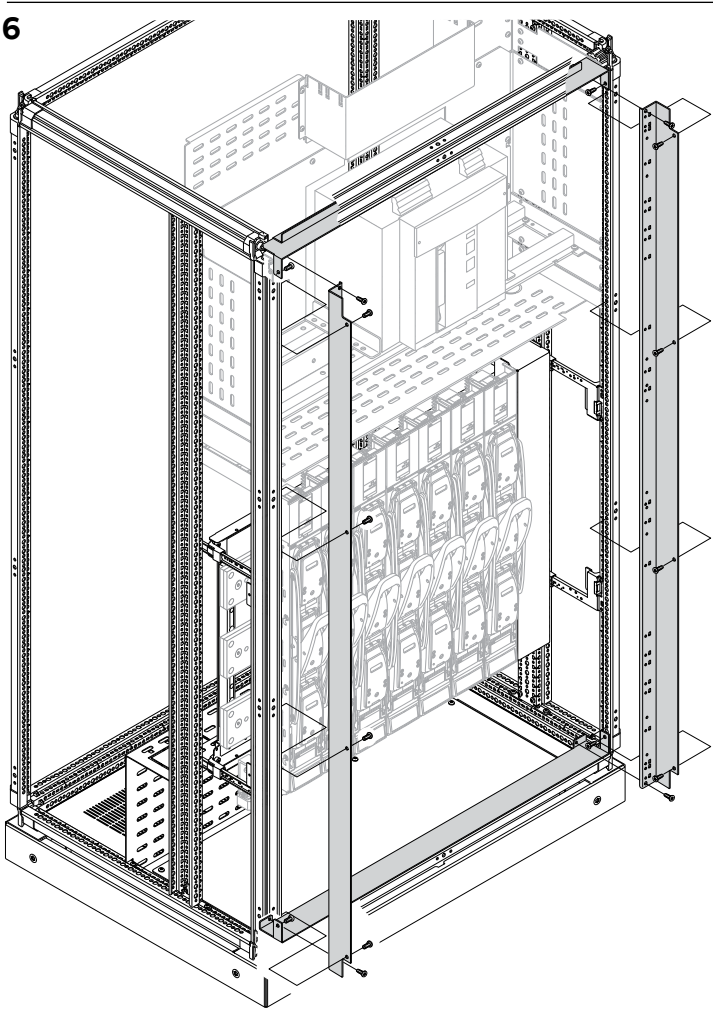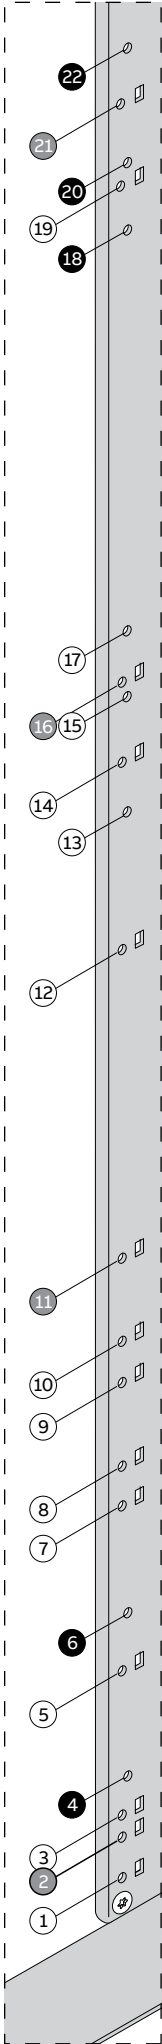      

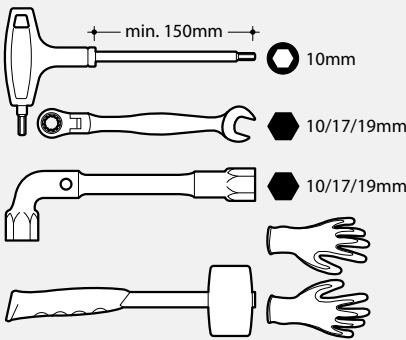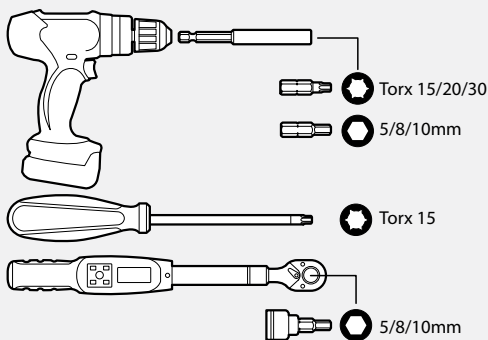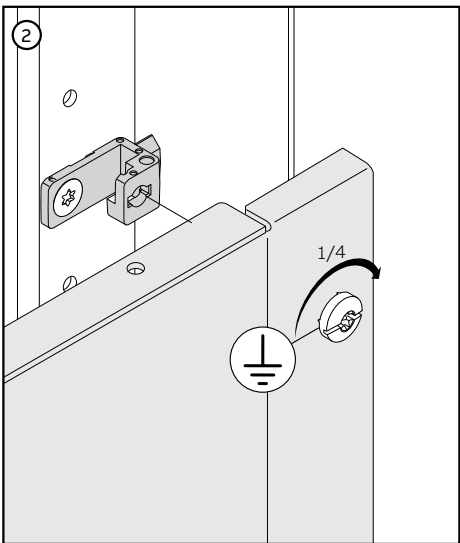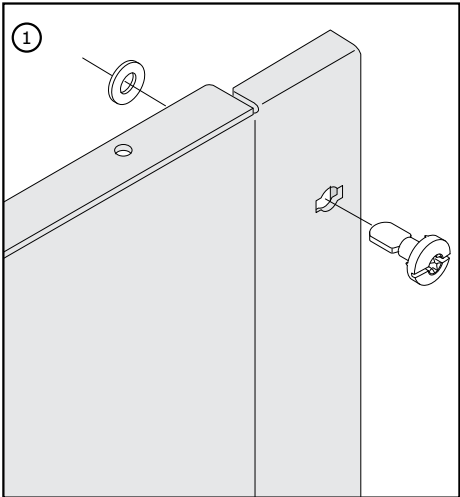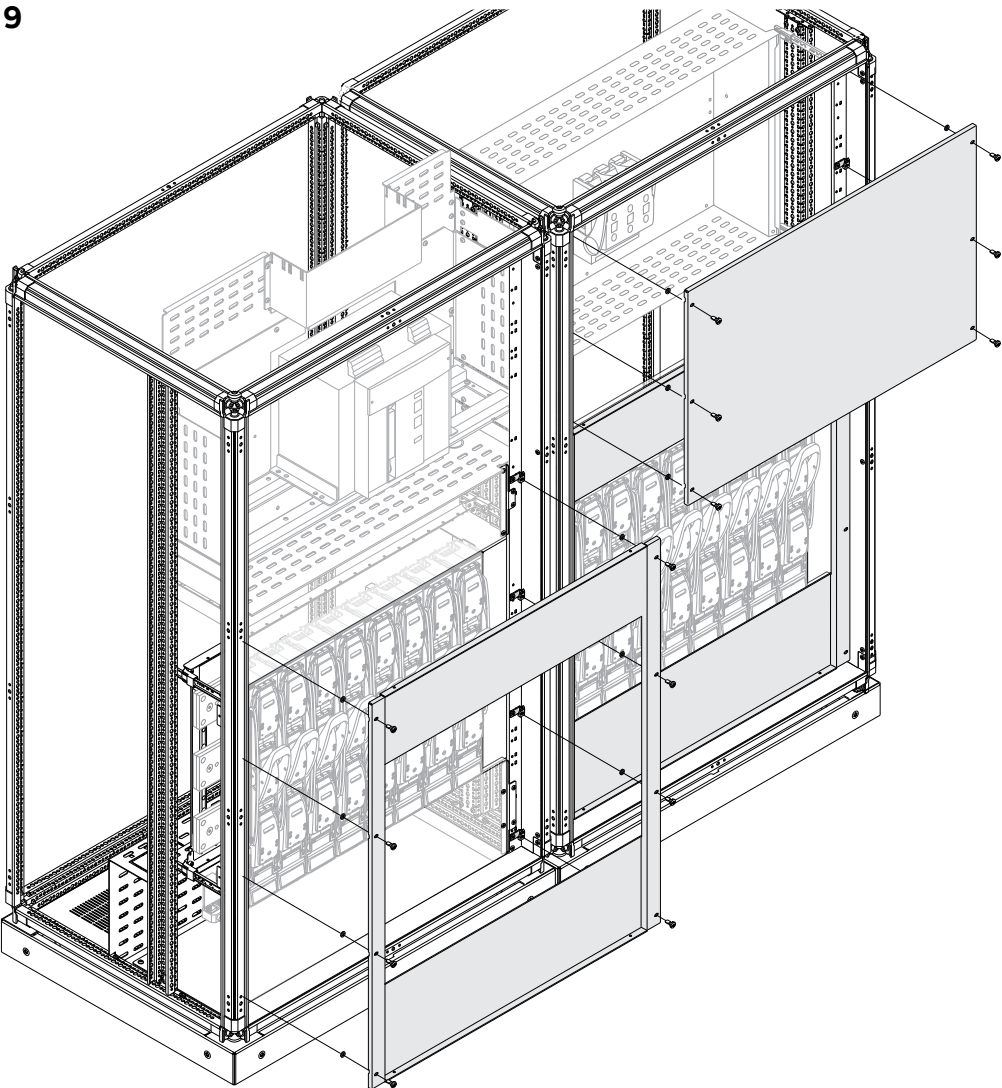     

		max [Nm]
	M6	5
	M6	6
	M6	9÷10
	M6	9÷10
	M8	22÷24
	M10	43÷48
	M12	74÷82
	TCEI M6	20
	TCEI M10	20
	TCEI M12	20

ABB S.p.A
Electrification Business - Smart Power

ABB SACE Division
58, Via Italia
I-23846 Garbagnate Monastero (LC)
Phone: +39 031 3570.111
Fax: +39 031 3570.228
www.abb.com



Due to possible developments of standards as well as of materials, the characteristics and dimensions specified in this document may only be considered binding after confirmation by ABB SACE.

