

Contact us

ABB S.p.A.
V.le dell'Industria, 18
20009 Vittuone (MI) Italy
<https://new.abb.com/low-voltage>

 Warning! Installation by person with electrotechnical expertise only.
Warnung! Installation nur durch elektrotechnische Fachkraft.
Avvertenza! Fare installare solo da un elettricista qualificato.




© Copyright 2024 ABB S.p.A. All rights reserved. Specification subject to change without notice.

1.Packaging Content


- INS-E3
- Installation manual

2.Product overview

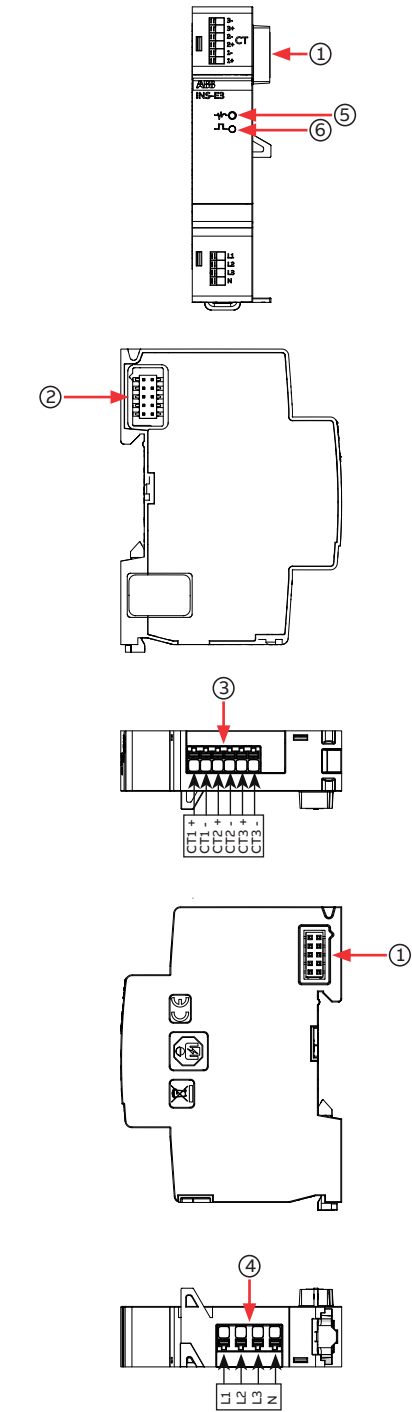

Description	
1	Modular bus connector (output)
2	Modular bus connector (input)
3	CTS current transformers for CT1 (L1), CT2 (L2), CT3 (L3)
4	Voltage measurement L1, L2, L3, N
5	Status LED
6	kWh pulses LED

9AKK108467A9557-D March 2024

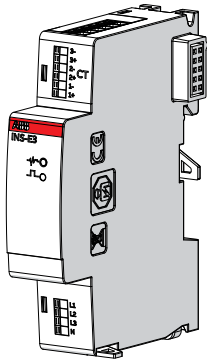


InSite energy management system
INSTALLATION MANUAL

InSite energy meter module INS-E3


3.INS-E3 on 35mm DIN-Rail

3.1.Connection to SCU200


To connect expansion modules remove the flap covering the input connectors of SCU200

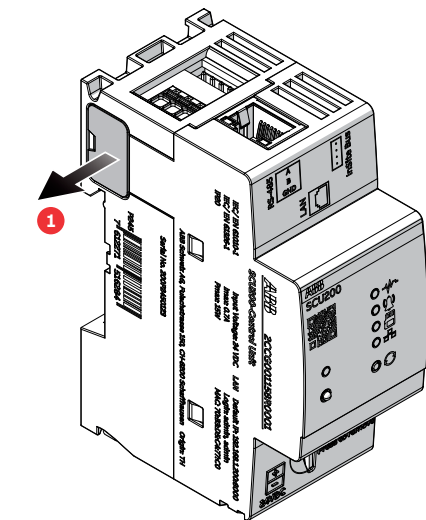

and insert the connector plug placed on the right side of the InSite expansion module. Pay attention to the correct interlocking between modules.

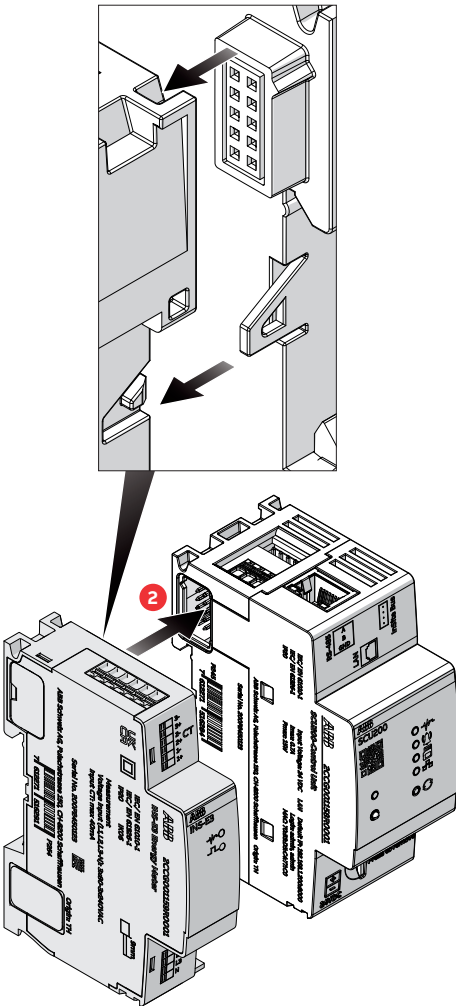


3.2.Connection to additional modules of InSite

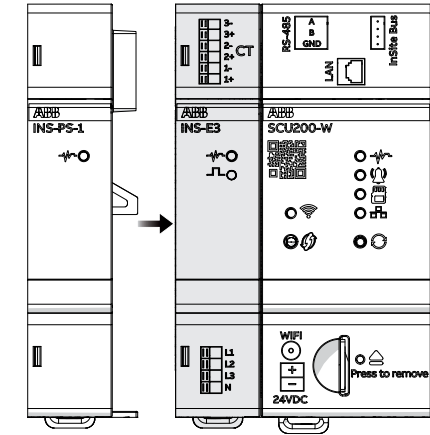


 **Attention:** In case one or more expansion modules have to be added to SCU200 / SCU200-W plug them all first before assembling on DIN-Rail bar.

3.3.Assembly on DIN-Rail

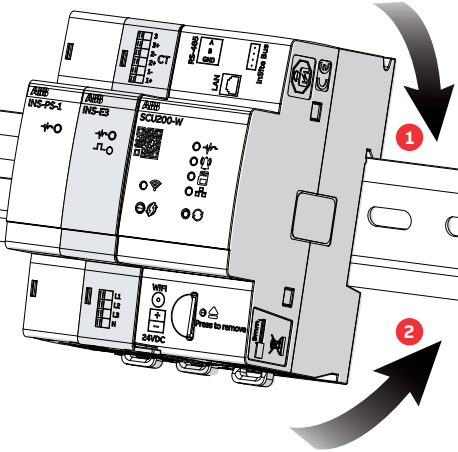


3.4.Disassembly on DIN-Rail

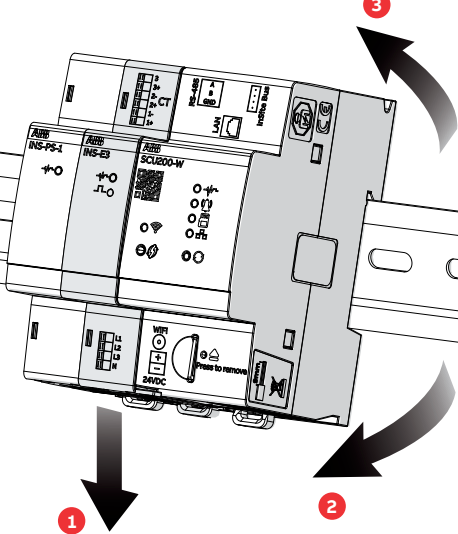

4.Connection diagram


After mounting the modules on the DIN RAIL, proceed with the connection of the cables.

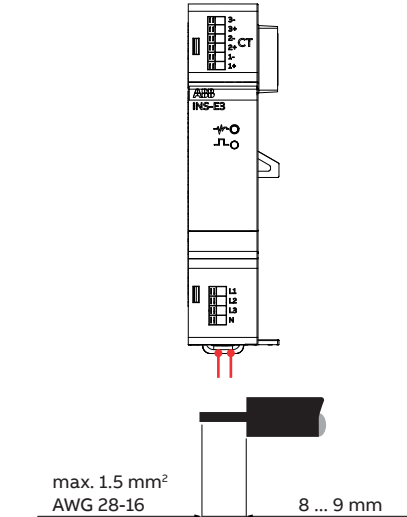

Connect the number of phases desired to the voltage measurement inputs. It is desirable to use L1 & N for one phase network and L1, L2, L3 & N for three phase with neutral network.


4.1.Connection diagram only for CTS family

In case of three phase network, proceed in the same way for the remaining current transformers.

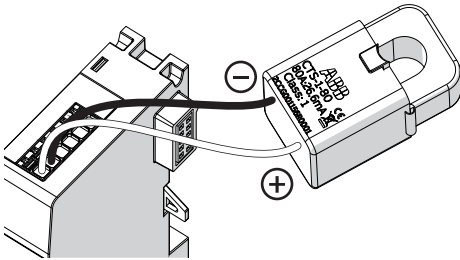


 **Attention:** Ensure correct cable placement of the current transformer by connecting the black cable to the '-' terminal and the white cable to the '+' terminal and twist the cable.

How to extend the cable, see the manual

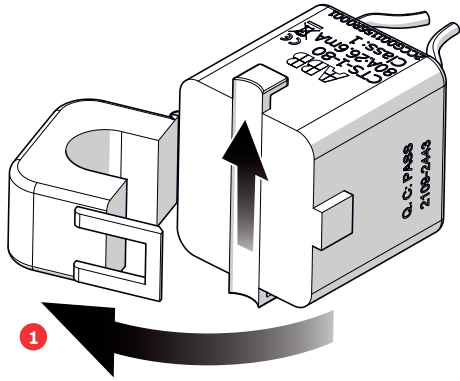

install the sensor with the arrow aligned with the direction of the current, from phase to neutral.

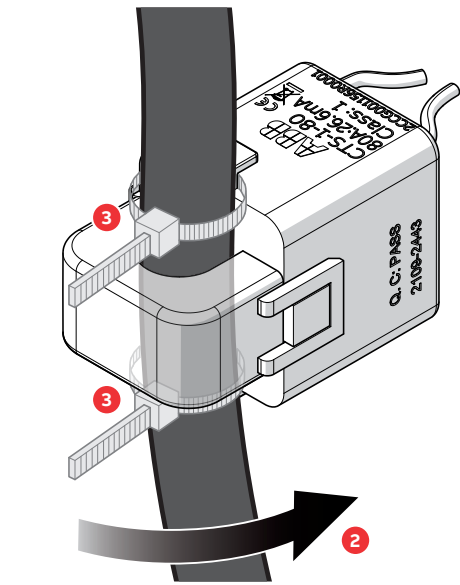

 **Attention:** Do not clamp or pull out non insulated conductors carrying voltage which could cause shock, burn or arc flash (IEC 61010).

 **Attention:** To guarantee measurement accuracy it is recommended to keep the conductor adherent to the CT body by two fixing straps, see figure.

 **Attention:** Assemble correctly the correspondent phase to CT line (e.g. L1 with CT1).

 **Attention:** Only one cable SHALL pass through the sensor

5.Setting and configuration

Detailed explanation to access web User Interface is reported in section "5. Access to control unit and configuration wizard" of the user manual. How to configure the system is detailed in section "6. WebUI" of the user manual.



Download User Manual.

