



# CDVI

Security to Access



## SHL1200

**Electromagnetic Shearlock**  
**Ventouse électromagnétique à cisaillement**  
**1200kg**



EN FR

## 1] PRODUCT OVERVIEW

The SHL1200 is a Shearlock magnet and mortice and monitored as standard and can be surface mounted (Surface housing kit). The magnet can be mounted on any type of doors (vertical or horizontal mount). Its reversibility enables you to choose between a door leaf or a door jamb mounting.

- **Holding force:** 1,200kg / 12000N
- **Kick off springs**
- **Form C output (monitoring)**
- **Finish:** Aluminium/steel
- **Build-in varistor**
- **Operating temperature:** -25°C to +70°C
- **Input voltage:** Free voltage 12-24V DC
- **Dimensions:**
  - Maglock: 267 mm (L), 30 mm (W), 32 mm (D)
  - Armature plate: 267 mm (L), 30 mm (W), 35 mm (D)
- **Inrush current:**
  - 12V DC: 1.8A
  - 24V DC: 1.1A
- **Holding current:**
  - 12V DC: 0.5A
  - 24V DC: 0.3A


 High Resistance  
to vandalism


## 2] RECOMMENDATIONS

### Recommended power supplies

Voltage	ADC335	ADC612S
12V	ADC335	ADC612S
24V	ADC324	ADC624S

### Mounting

Keep imperatively a gap < 5mm between the magnet and the armature plate.

### Optional

Surface housing (Reference: KSHL).




## 3] MOUNTING KIT

FHC Screws (M4x10)	Spanner	Mounting plates
16	1	4


## 4] MOUNTING INSTRUCTIONS

Make sure that there are no pieces missing in the mounting kit. Get the right tools according to the installation type (Drill, screw drivers, metre tape,...) and follow the mounting instructions of the SHL1200.


### A - Wooden door

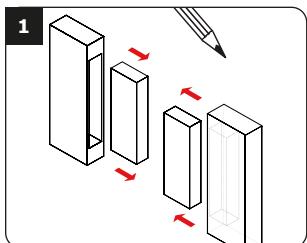

Make a cut on the door leaf and a cut on the door jamb in order to insert the magnet and the armature plate of the SHL1200 magnet. Then mark the mounting holes of the mounting screws. Drill the mounting holes of the magnet and of the armature plate in order to facilitate the screwing. Drill the cable access hole.

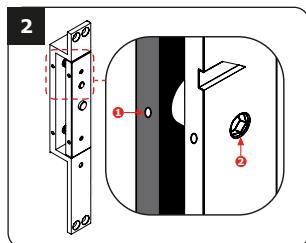


Insert the cable of the magnet. Loosen the screws on the side of the armature plate (1) with the Allen key. Temporarily mount the SHL1200. Then adjust the gap between the magnet and the armature plate by adjusting the top screws on the armature, allow 2mm distance maximum. Tighten the 2 screws on the side of the armature plate (2) once the test on the magnet has been successful.

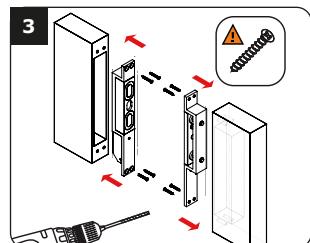


Test the functioning of the armature plate and the back plate, then fix the magnet to the door (note that the mounting screws are not included).


### B - Flush mounting

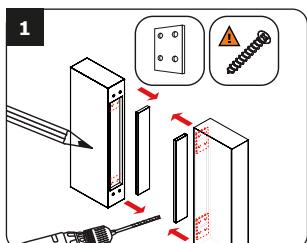

Make a cut on the door leaf and a cut on the door jamb in order to insert the magnet and the armature plate of the SHL1200 magnet. Then mark the mounting holes of the mounting screws and drill the mounting holes of the magnet and of the armature plate in order to facilitate the screwing.

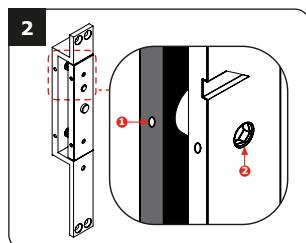


Mount the back plate of the housing (note that the screws are not included). Loosen the screws on the side of the armature plate (1) with the Allen key. Temporarily mount the SHL1200. Then adjust the gap between the magnet and the armature plate by adjusting the top screws on the armature, allow 2mm distance maximum. Tighten the 2 screws on the side of the armature plate (2) once the test on the magnet has been successful.

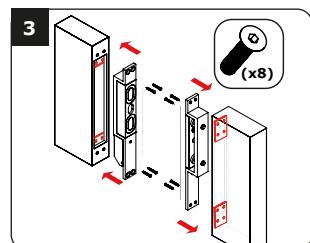


Place the magnet on the back plate of the surface housing as well as the armature on the second back plate of the surface housing and fix the magnet on the door.

### C - Surface mounting (Optional: KSHL Kit)

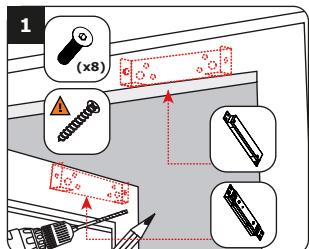


Measure and mark the center lines to determine the magnet position on the jamb and the armature plate on the door leaf frame. Then drill the fixing screw holes to fix the screws easily.

**Important:** The surface housing can be mounted in horizontal or in vertical in the secure side.

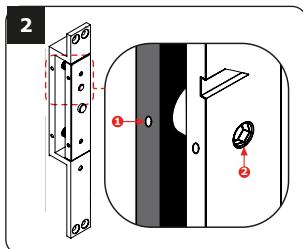

Mount the brackets of the housing on the jamb and on the door leaf. Insert the cable and temporarily fix the magnet and the armature plate to the bracket of the housing. Loosen the screws on the side of the armature plate (1) with the Allen key. Then adjust the gap between the magnet and the armature plate by adjusting the top screws on the armature, allow 2mm distance maximum. Tighten the 2 screws on the side of the armature plate (2) once the test on the magnet has been successfull.

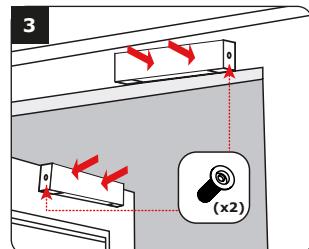

Fix the magnet on the door and place the housings.

## 5] WIRING DIAGRAM

### Terminal block

- + Input voltage 12V or 24V DC\*
- Input voltage 12V or 24V DC\*


**T=NC** Normally closed contact

**C=COM** Common

**R=NO** Normally open contact

#### \*Input voltage: 12V DC or 24V DC

The magnet can be powered in 12 VDC or in 24V DC according to the jumper settings.

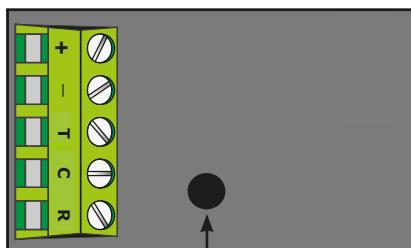

Insert a flat screwdriver to adjust the Time Delay from 0 to 30 seconds.



Shorten

## 1] PRÉSENTATION DU PRODUIT

La SHL1200 est une ventouse à cisaillement, disponible en version encastrée ou saillie (kit en option), est pourvue des dernières technologies de la métallurgie favorisant le positionnement sur la majorité des huisseries ou portes (en vertical ou à l'horizontal). Sa réversibilité vous permettra de privilégier le raccordement le plus approprié (sur la partie fixe ou mobile).

■ **Force de maintien :** 1200kg / 12000N

■ **Dispositif d'anti-rémanence.**

■ **Relais de position.**

■ **Varistance intégrée.**

■ **Température de fonctionnement :**

-25°C à +70°C

■ **Finition :** Aluminium/acier

■ **Alimentation :** Free voltage 12 à 24V DC

■ **Dimensions :**

- Ventouse : 267 mm (L), 30 mm (I), 32 mm (H)

- Contre-plaque : 267 mm (L), 30 mm (I), 35 mm (H)

■ **Courant d'appel :**

- 12V DC : 1,8A

- 24V DC : 1,1A

■ **Courant de maintien :**

- 12V DC : 0,5A

- 24V DC : 0,3A



## 2] RAPPELS ET RECOMMANDATIONS

### Alimentations préconisées

Voltage	ADC335	ADC612S
12V	ADC335	ADC612S
24V	ADC324	ADC624S

### Montage

Laissez impérativement une distance < 5 mm entre la ventouse et la contreplaqué.

### Option

Kit de mise en saillie en option (sur demande - Réf : KSHL).



KSHL


## 3] KIT DE MONTAGE

Vis FHC à tête fraîssée (M4x10)	Clé 6 pans pour vis CHC	Plaque de mise en affleurement
16	1	4


## 4] MONTAGE

Après avoir vérifié que le kit de montage est complet, vous allez pouvoir procéder à l'installation finale du produit. Réunissez le matériel approprié (Perceuse, tournevis, mètre,...) et suivez les recommandations de montage de la SHL1200.


### A - Montage sur surface pleine

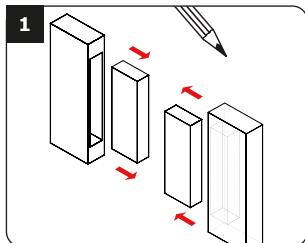

Découpez dans la surface déterminée une partie creuse qui va accueillir la ventouse SHL1200 et son armature. Puis faites les marquages de la position des vis de fixation. Percez la surface au niveau des entraxes de la ventouse et de son armature pour faciliter le vissage. Percez le fond de la surface découpée afin de passer les câbles.

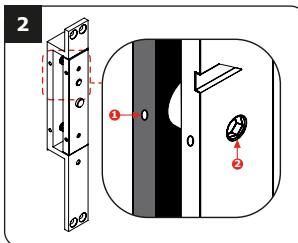


Passez vos fils, et branchez la ventouse. A l'aide de la clé fournie dévissez les 2 écrous de blocage (1). Puis avec une clé 6 pans, ajustez la contre-plaque à 2 mm de la ventouse. Ressérez ensuite les 2 écrous de blocage (2).

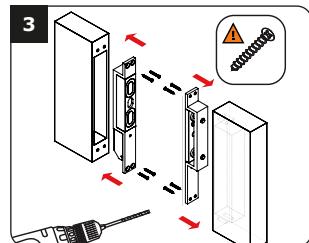


Testez le fonctionnement de la ventouse et de la contre-plaque puis fixez-les (attention les vis de fixation ne sont pas fournies).


### B - Montage encastré

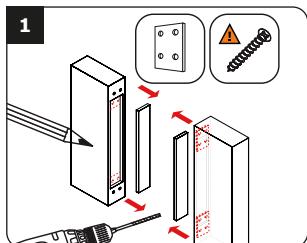

Découpez dans le profilé la surface déterminée qui va accueillir la ventouse SHL1200 et son armature. Faites les marquages de la position des vis de fixation puis percez la surface au niveau de la fixation de la ventouse pour faciliter le vissage. ensuite, fixez les pattes de mise en affleurement (attention les vis de fixation ne sont pas fournies).

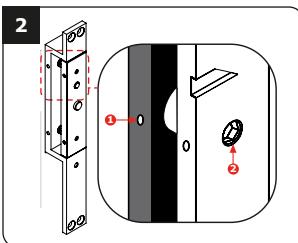


Passez vos fils, et branchez la ventouse. A l'aide de la clé fournie dévissez les 2 écrous de blocage (1). Puis avec une clé 6 pans, ajustez la contre-plaque à 2 mm de la ventouse. Ressérez ensuite les 2 écrous de blocage (2).

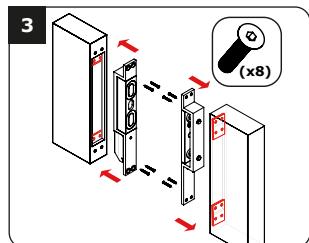

Testez le fonctionnement de la ventouse et de la contre-plaque puis fixez-les aux pattes de mise en affleurement.

## C - Montage en saillie (Option : Kit KSHL)

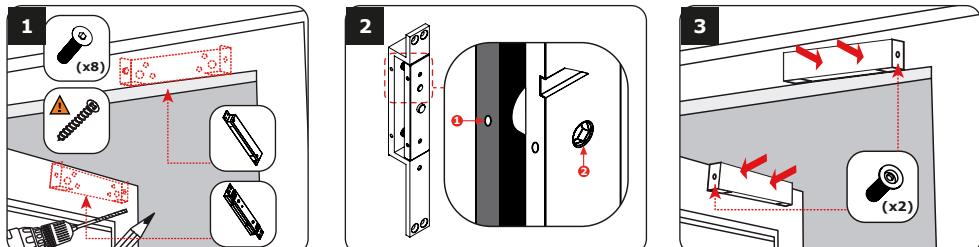

Faites les marquages des entraxes de la ventouse sur le dormant et de la contre-plaque sur l'ouvrant puis percez la surface pour faciliter le vissage.

**Important :** le kit de mise en saillie doit se poser en horizontal ou en vertical sur une porte s'ouvrant vers l'intérieur.

Faites sortir le câble d'alimentation et fixez les éléments du kit sur le dormant et l'ouvrant.

Branchez la ventouse, puis à l'aide de la clé fournie dévissez les 2 écrous de blocage (1). Puis avec une clé 6 pans, ajustez la contre-plaque à 2 mm de la ventouse. Ressérez ensuite les 2 écrous de blocage (2).


Testez le fonctionnement de la ventouse et de la contre-plaque puis fixez-les sur le kit du dormant et de l'ouvrant. Pour finaliser l'installation, vissez la partie supérieure des kits.

## 5] SCHÉMA DE RACCORDEMENTS

### Bornier 5 points

- + Alimentation 12V ou 24V DC \*
- Alimentation 12V ou 24V DC \*
- T=NC** Contact « Normalement Fermé »
- C=COM** Commun du relais 1
- R=NO** Contact « Normalement Ouvert »

\* **Alimentation : 12V DC ou 24V DC**  
En fonction du placement des cavaliers vous alimentez votre ventouse en 12V DC ou en 24V DC.

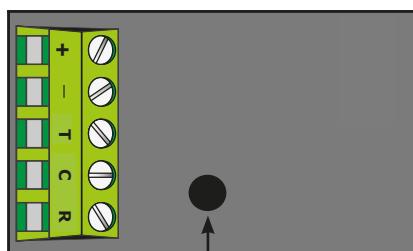

Insérez un tourne vis plat pour ajuster la temporisation de 0 à 30 secondes.



Raccourcir



# CDVI

Security to Access

**Reference :** G0301FR1067V01  
**Extranet :** CDVI\_SHL1200\_IM\_01\_A5\_EN-FR\_C



#### **CDVI Group**

FRANCE (Headquarters)

Phone: +33 (0) 1 48 91 01 02

.....

#### **CDVI FRANCE + EXPORT**

+33 (0) 1 48 91 01 02

[www.cdvi.com](http://www.cdvi.com)

#### **CDVI AMERICAS [CANADA - USA]**

+1 (450) 682 7945

[www.cdvi.ca](http://www.cdvi.ca)

#### **CDVI BENELUX [BELGIUM - NETHERLANDS - LUXEMBOURG]**

+32 (0) 56 73 93 00

[www.cdvibenelux.com](http://www.cdvibenelux.com)

#### **CDVI GERMANY**

+49 (0) 175 2932 901

[www.cdvi.de](http://www.cdvi.de)

#### **CDVI TAIWAN**

+886 (0) 42471 2188

[www.cdvichina.cn](http://www.cdvichina.cn)

#### **CDVI SUISSE**

+41 (0) 21 882 18 41

[www.cdvi.ch](http://www.cdvi.ch)

#### **CDVI CHINA**

+86 (0) 10 84606132/82

[www.cdvichina.cn](http://www.cdvichina.cn)

#### **CDVI IBÉRICA [SPAIN - PORTUGAL]**

+34 (0) 935 390 966

[www.cdviberica.com](http://www.cdviberica.com)

#### **CDVI ITALIA**

+39 (0) 321 90 573

[www.cdvi.it](http://www.cdvi.it)

#### **CDVI MAROC**

+212 (0) 5 22 48 09 40

[www.cdvi.ma](http://www.cdvi.ma)

#### **CDVI SWEDEN [SWEDEN - DENMARK - NORWAY - FINLAND]**

+46 (0) 31 760 19 30

[www.cdvi.se](http://www.cdvi.se)

#### **CDVI UK [UNITED KINGDOM - IRELAND]**

+44 (0) 1628 531300

[www.cdvi.co.uk](http://www.cdvi.co.uk)

#### **CDVI POLSKA**

+48 (0) 12 659 23 44

[www.cdvi.com.pl](http://www.cdvi.com.pl)

All the information contained within this document (pictures, drawings, features, specifications and dimensions) could be perceptibly different and can be changed without prior notice.