

INSTALLATION MANUAL

Branching Header (For R410A and R32)

Please read "Safety Cautions" described in the Installation Manual of the Air Conditioner.

- Check the following parts in the package.
- For piping material and size of the refrigerant pipes, refer to the Installation Manual of the Air Conditioner.

MODEL:


Branching Header

RBM-HY1043E RBM-HY1083E

RBM-HY2043E RBM-HY2083E

PARTS

NOTE : 1. All dimensions are in millimeters. In the following tables, () indicates diameter of the indicated position, and others indicate diameter of the connecting pipe.
2. Please connect pipe to the side with a projection of the socket. (51, 52, 54, 58, 59, 61, 62, 70, 89: without projection)

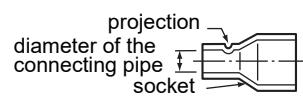


NAME \ MODEL	RBM-HY1043E	RBM-HY1083E	RBM-HY2043E	RBM-HY2083E
Branching pipe gas side				
Branching pipe liquid side				
Heat insulator (gas side/liquid side)				
Socket Gas side	No.	No.	No.	No.
Gas side	(14) Ø15.9×(Ø22.2) 1pc (18) Ø19.1×(Ø22.2) 1pc (70) Ø28.6×(Ø22.2) 1pc (85) Ø12.7×(Ø22.2) 1pc	(06) Ø 9.5 ×(Ø15.9) 4pcs (09) Ø12.7×(Ø15.9) 4pcs	(14) Ø15.9×(Ø22.2) 1pc (18) Ø19.1×(Ø22.2) 1pc (70) Ø28.6×(Ø22.2) 1pc (85) Ø12.7×(Ø22.2) 1pc	(06) Ø 9.5 ×(Ø15.9) 8pcs (09) Ø12.7×(Ø15.9) 8pcs
Liquid side	(06) Ø 9.5 ×(Ø15.9) 1pc (09) Ø12.7×(Ø15.9) 1pc	(01) Ø 6.4 ×(Ø 9.5) 4pcs	(06) Ø 9.5 ×(Ø15.9) 1pc (09) Ø12.7×(Ø15.9) 1pc	(01) Ø 6.4 ×(Ø 9.5) 8pcs
Outlet sealed pipe at gas side Header sealed pipe at liquid side		(Ø15.9) 1pc (Ø15.9) 1pc		(Ø15.9) 3pcs (Ø15.9) 1pc
Outlet sealed pipe at liquid side		(Ø 9.5) 1pc		(Ø 9.5) 3pcs
				(Ø 9.5) 1pc
				(Ø 9.5) 3pcs


CONNECTING METHOD

Select and install the socket that matches the diameter of a pipe to be connected to the indoor unit.

<Gas side>

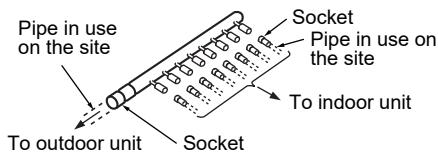

<Liquid side>

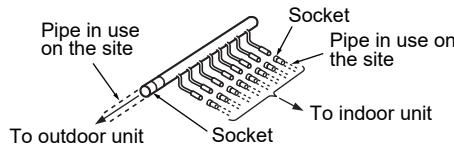

- If the number of indoor units to be connected is fewer than the maximum number of units that can be connected to the branching header, attach a sealed pipe to the unused connectors.


◇ REQUIREMENT ◇

Condensation may occur on the heat insulator according to the atmosphere inside of the ceiling.


If the inside of the ceiling is subject to high temperature and high humidity, please add the glass wool (16 to 20 kg/m³, 10mm thick or more) on the heat insulator described above for the perfect heat insulation.

- Install the branching header so that it branches horizontally.

<Gas side>

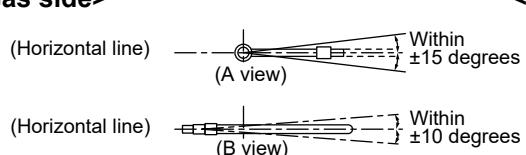

<Liquid side>

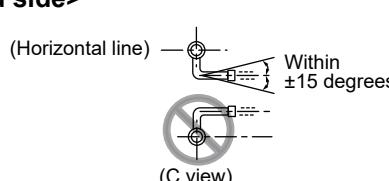


When arranging the branching header at the liquid side, attach a header sealed pipe on the sealing side of the header as shown in the figure at right. Be sure to install the branch pipe downward.

Horizontal viewed from D point should be within ±10 degrees same as view B.

- Supporting branching header

After applying the insulation, set the hanging metals as support. (in use on the site).

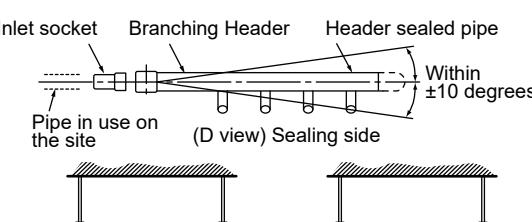

NOTE :

- Install the branching header so that it branches horizontally. It cannot be used in a vertical position.
- Do not use T-type pipe for the branching section.