



de Montageanleitung
en Mounting instructions
fr Instructions de montage
sv Monteringsinstruktion
nl Montage-aanwijzing
it Istruzioni di montaggio
fi Asennusohje
es Instrucciones de montaje
da Monteringsvejledning
tr Montaj talimatları

Differenzdruckfühler
Differential Pressure Sensors
Sonde de pression différentielle
Differenstryckgivare
Drukverschilopnemer
Sonda di pressione differenziale
Paine-eroanturit
Sondas de diferencia de presión
Trykdifferensføler
Fark Basıncı Sensörleri


QBM4000-..
QBM4100-..

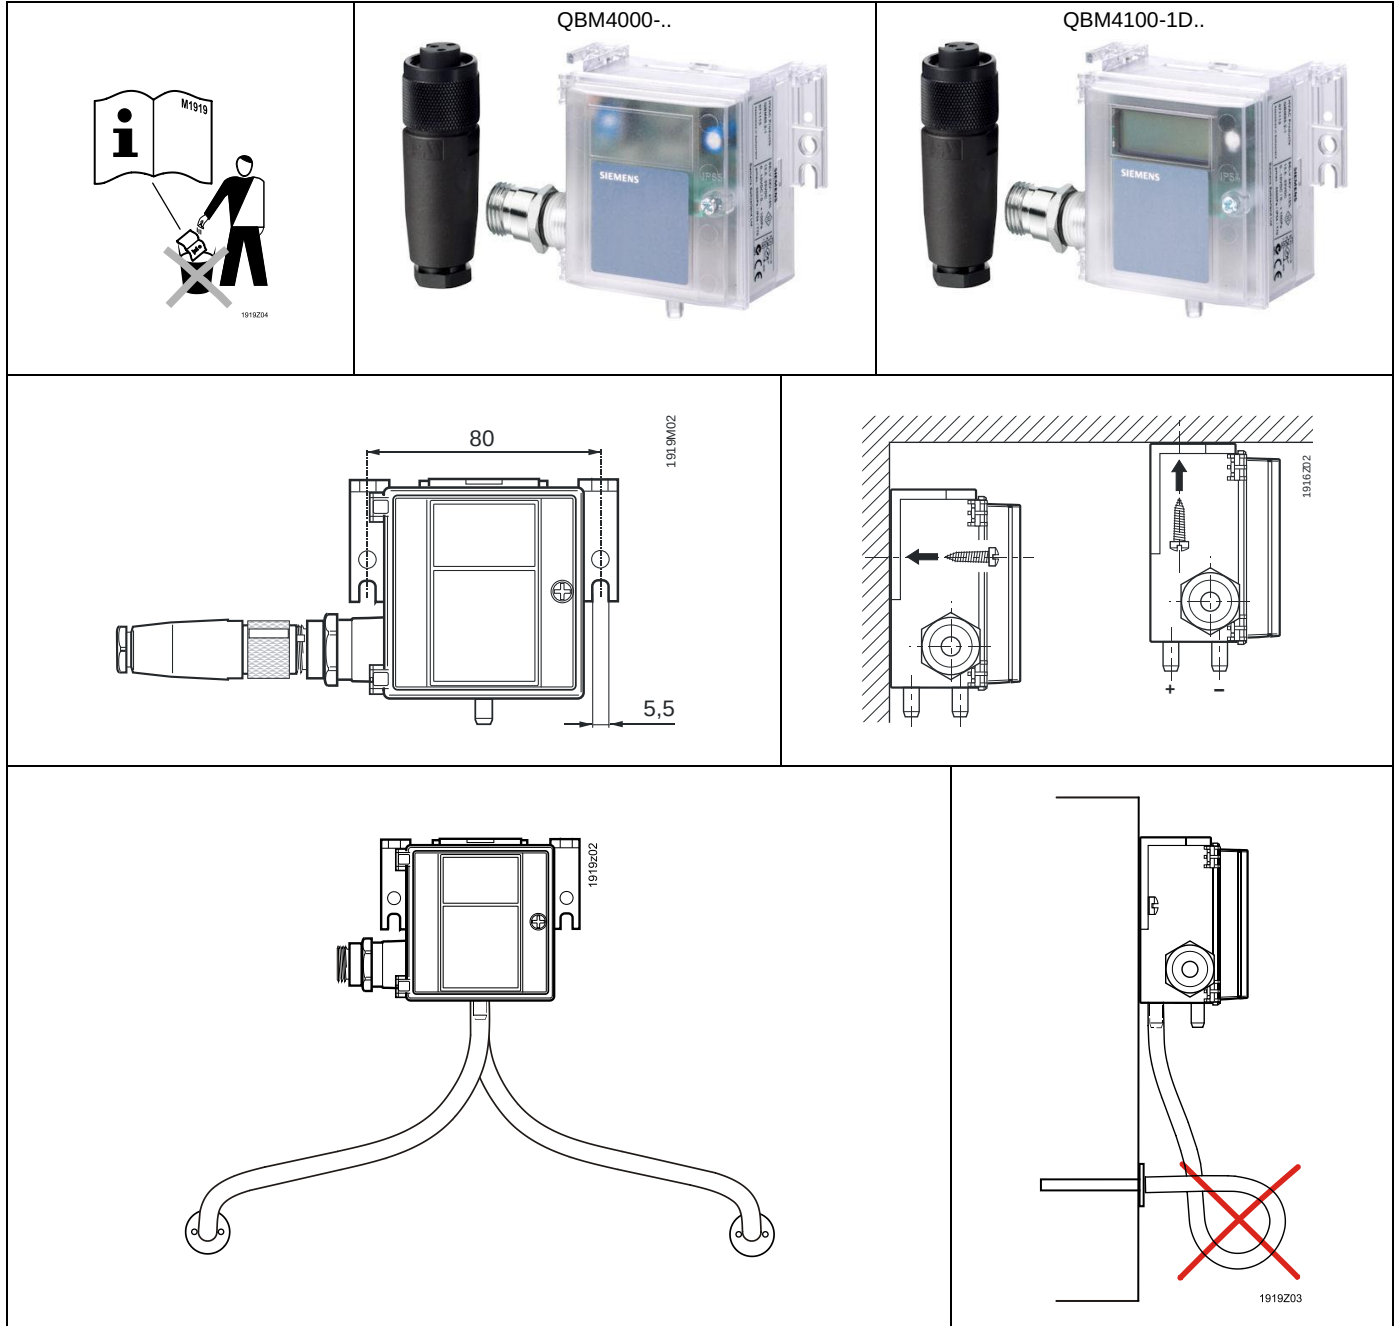


QBM4000-..
Output 0...10 V

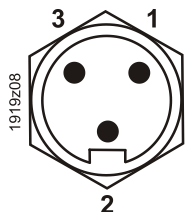



Pin	
3	(GL)
1	(U1)
2	(M)

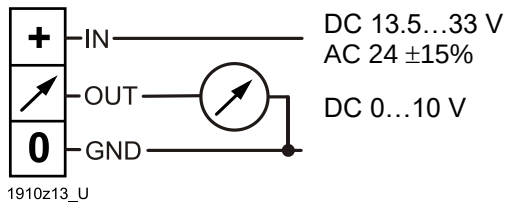

QBM4100-..
Output 4...20 mA

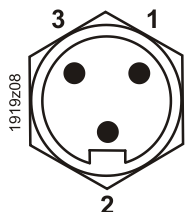

Pin	
3	(G)
1	(I)
2	(-)

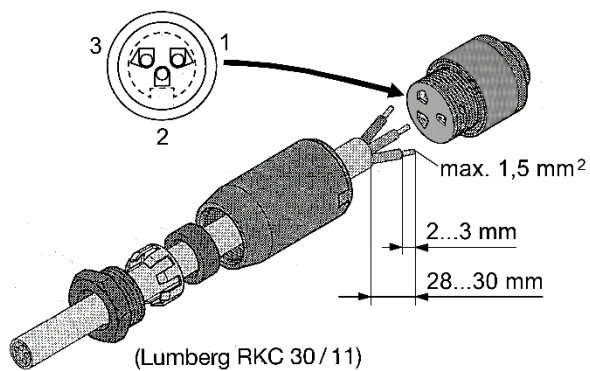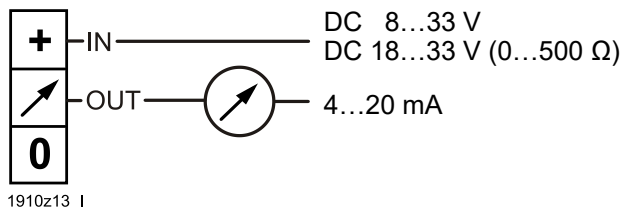

For additional information please refer to the
[Sensor Installation Handbook](#)

and
<https://www.siemens.com/bt/download>

→ search for
"QBM4000" or
"QBM4100"

