


de	Montageanleitung
en	Mounting instructions
fr	Instructions de montage
sv	Monteringsinstruktion
nl	Montage-handleiding
it	Istruzioni di montaggio
fi	Asennusohje
es	Instrucciones de montaje
da	Monteringsvejledning
pl	Instrukcja montażu
cz	Montážní návod
hu	Szerelési útmutató
el	Οδηγίες εγκατάστασης
ru	Инструкция по установке
zh	安裝指導
tr	Montaj talimatları

Handversteller
Manual adjuster
Levier manuel à crans
Handmanöver
Handverstelling
Comando manuale
Käsiohjain
Mando manual
Betjeningshåndtag
Dźwignia sterowania ręcznego
Páka pro ruční nastavení
Kézi állítókar
Χειροκίνητος μοχλίσμός
Ручной регулятор
手柄式开关装置
Manuel ayarlayıcı


ASK41NF04SP
ASK41NF05SP
ASK41NF07SP



1

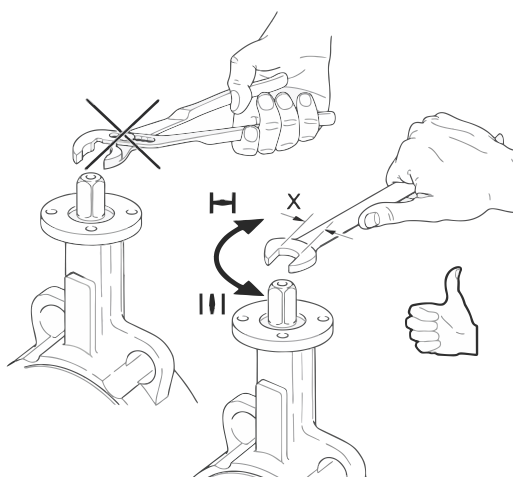


A6V1264979Z06



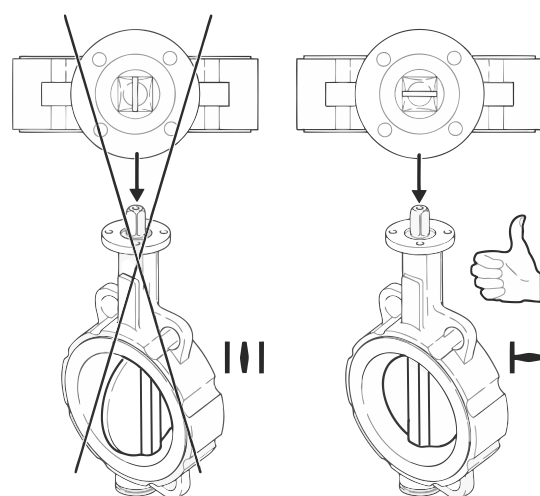


A6V1264979Z05

2

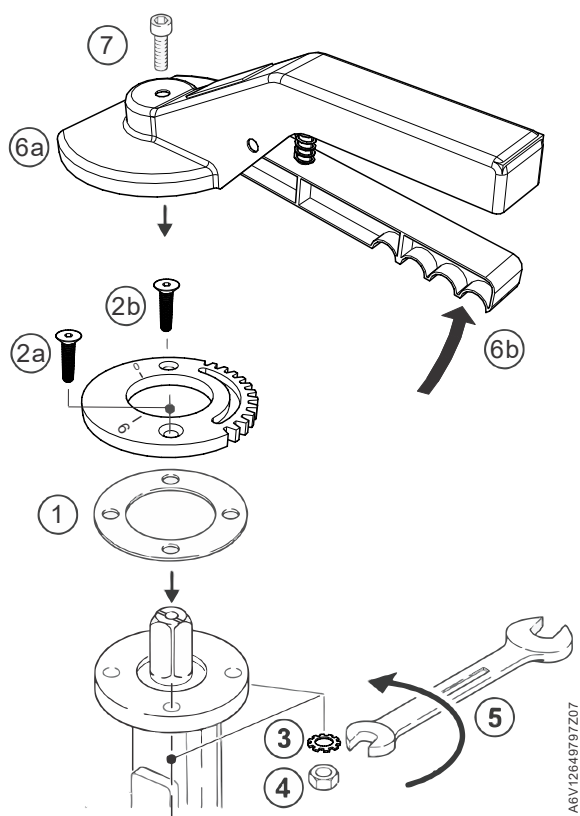

3

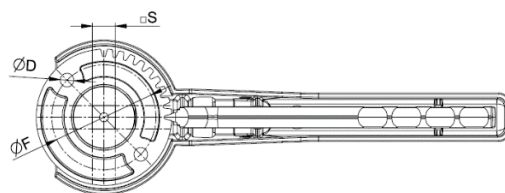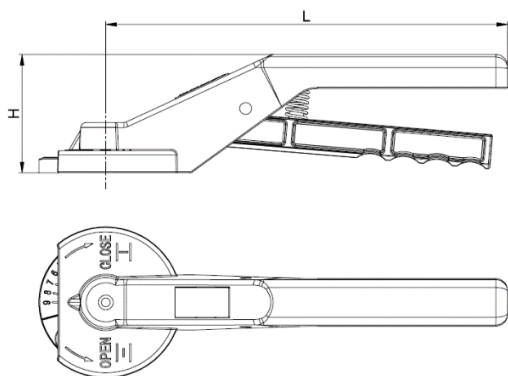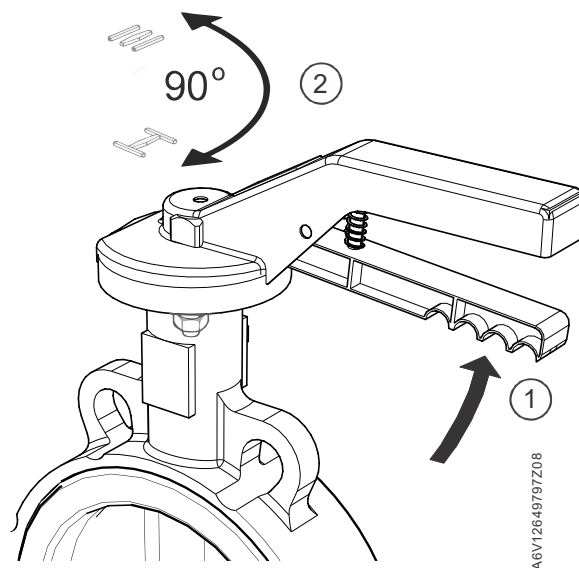

Type	DN	L	H	D	S	F	
				Ø		Ø	[kg]
ASK41NF04SP	40...65	195	68	5.5	11	42	0.32
ASK41NF05SP	80...125	195	68	6.5	14	50	0.32
ASK41NF07SP	150...200	270	80	9.0	17	70	0.64