
Photo

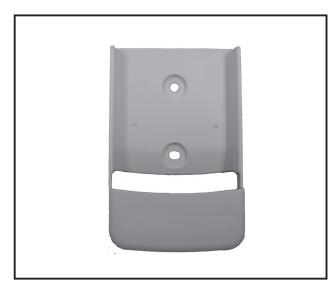

Descriptions

- The controller holder allows you to place the remote controller on the wall.
- It helps to prevent the remote controller, from being misplaced.

Applicable Models

- MSZ-HJ25VA MSZ-HR25VF MSZ-DW25VF
- MSZ-HJ35VA MSZ-HR35VF MSZ-DW35VF
- MSZ-HJ50VA MSZ-HR42VF MSZ-DW50VF
- MSZ-HJ60VA MSZ-HR50VF MSZ-DM25VA

Polystyrene White

- MSZ-HJ71VA MSZ-HR60VF MSZ-DM35VA
 - MSZ-HR71VF

Specifications

Dimensions			Material Color
	Unit : mm	14	
			69)
			100
65		25	•
How to Use / F	How to	Install	

Installation area

1) Installation area

- · Area in which the remote controller is not exposed to direct sunshine.
- Area in which there is no nearby heating source.
- Area in which the remote controller is not exposed to cold (or hot) winds.
- · Area in which the remote controller can be operated easily.
- Area in which the remote controller is beyond the reach of children.

2) Installation method

- ① Attach the remote controller holder to the desired location using two tapping screws.
- ② Place the lower end of the controller into the holder.
 - Remote controller
 - B Wall
 - © Display panel
 - ① Receiver
- The signal can travel up to approximately 7 meters (in a straight line) within 45 degrees to both right and left of the center line of the receiver.