


### Figure

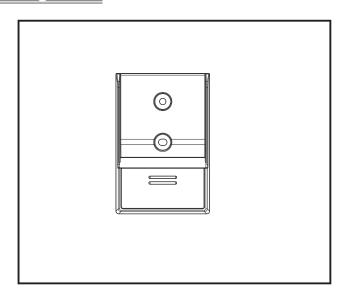

#### **Dimensions**

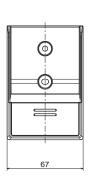

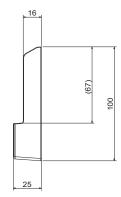

#### Descriptions

- The controller holder allows you to place the remote controller on the wall.
- · It helps to prevent the remote controller, from being misplaced.

# pplicable Models

- MSZ-RW25VG
- MSZ-RW35VG
- MSZ-RW50VG
- MSZ-LN18VG2W
- MSZ-LN25VG2W
- MSZ-LN35VG2W
- MSZ-LN50VG2W
- MSZ-LN60VG2W
- MSZ-FT25VG ■ MSZ-FT35VG
- MSZ-FT50VG
- MSZ-AP15VG
- MSZ-AP20VG
- MSZ-AP25VG
- MSZ-AP35VG
- MSZ-AP42VG
- MSZ-AP50VG ■ MSZ-AP60VG
- MSZ-AP71VG

■ MSZ-EF18VGW,B,S

■ MFZ-KT25VG

■ MFZ-KT35VG

■ MFZ-KT50VG

■ MFZ-KT60VG

**■** MFZ-KW25VG

■ MFZ-KW35VG

■ MFZ-KW50VG

■ MFZ-KW60VG

**■** MLZ-KP25VF

■ MLZ-KP35VF

**■** MLZ-KP50VF

- MSZ-EF22VGW,B,S
- MSZ-EF25VGW,B,S
- MSZ-EF35VGW,B,S
- MSZ-EF42VGW,B,S
- MSZ-EF50VGW,B,S
- MSZ-FH25VE2 ■ MSZ-FH35VE2
- MSZ-FH50VE2
- MSZ-SF15VA
- MSZ-SF20VA ■ MSZ-SF25VE3
- MSZ-SF35VE3
- MSZ-SF42VE3 ■ MSZ-SF50VE3
- MSZ-GF60VE2
- MSZ-GF71VE2
- MSZ-WN25VA ■ MSZ-WN35VA

### Specifications

Material	Polystyrene
Color	White

# How to Use / How to Install

#### Installation area

#### 1) Installation area

- · Area in which the remote controller is not exposed to direct sunshine.
- Area in which there is no nearby heating source.
- · Area in which the remote controller is not exposed to cold (or hot) winds.
- Area in which the remote controller can be operated easily.
- · Area in which the remote controller is beyond the reach of children.

#### 2) Installation method

- ① Attach the remote controller holder to the desired location using two tapping screws.
- ② Place the lower end of the controller into the holder.
  - (A) Remote controller
  - Wall
  - © Display panel
  - ① Receiver
- The signal can travel up to approximately 7 meters (in a straight line) within 45 degrees to both right and left of the center line of the receiver.