

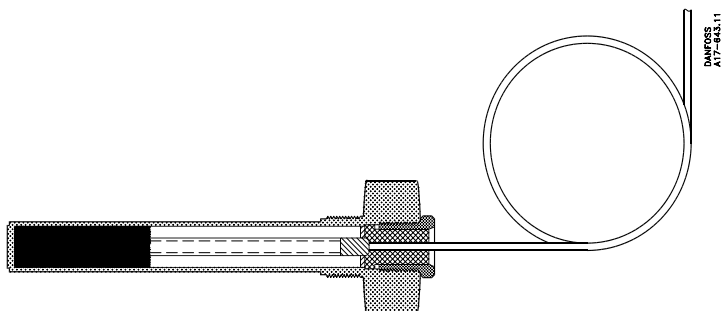
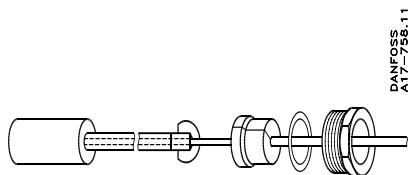
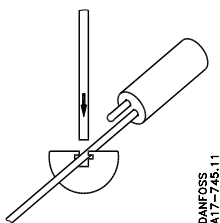


Installation guide Sensor pocket Types KPS, CAS, RT

 

 

060R9307

060R9307

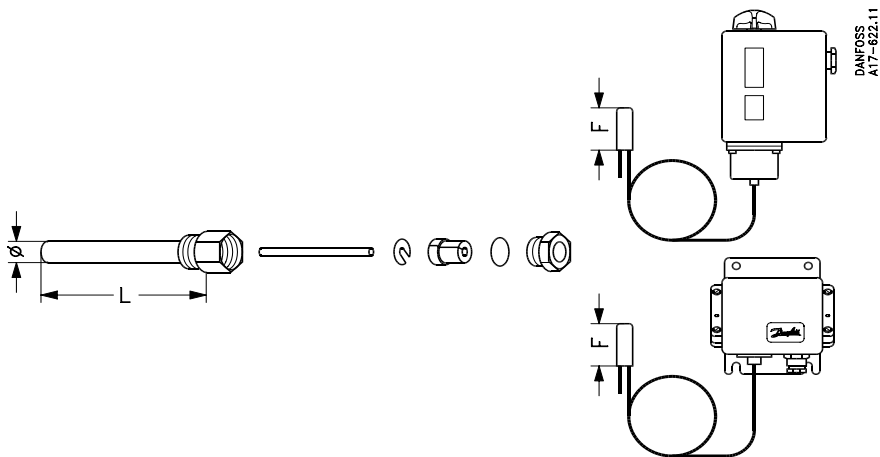

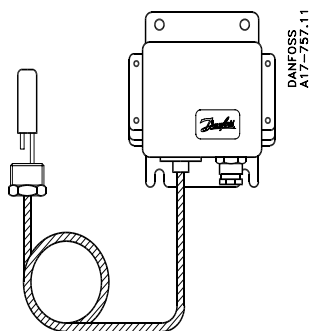

DANFOSS
A17-747.11

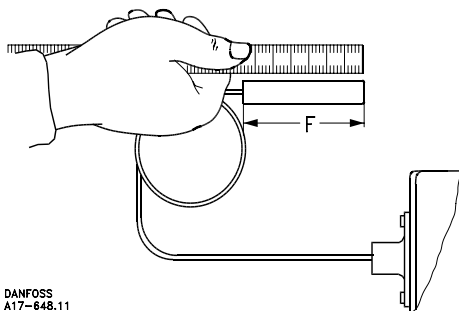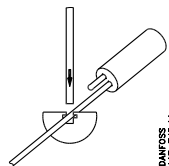

	L=65	L=75	L=110	L=160
F=47,5	A=15	A=25	A=60	A=110
F=75			A=33	A=83
F=85			A=23	A=73

DANFOSS
A17-647.11