


Installation guide

Sensor pocket


Types KPS, CAS, RT

060A0570

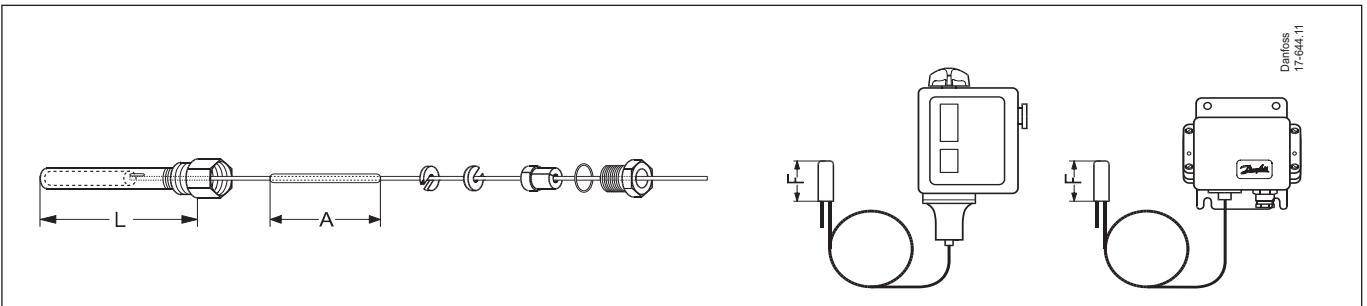


Danfoss
17-644.11

060A0570

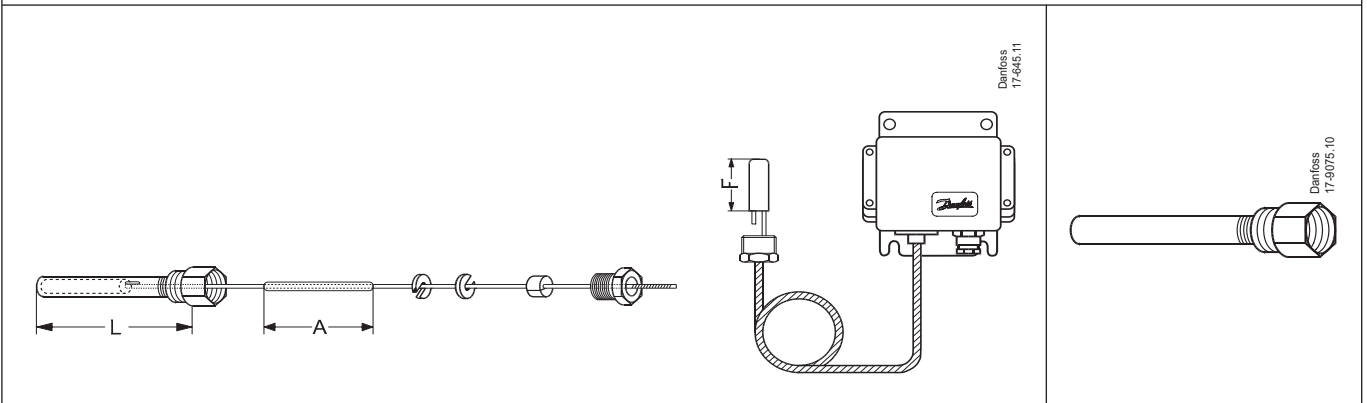

Danfoss
17-645.11


Danfoss
17-9075.10

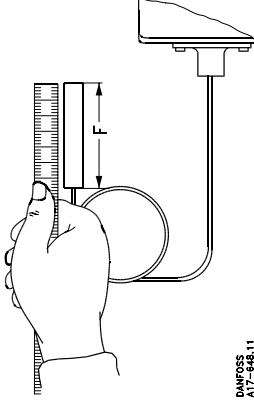

	L=65	L=75	L=110	L=160
F=47,5				
F=75				
F=85				

DANFOSS
A17-648.11

DANFOSS
A17-647.11

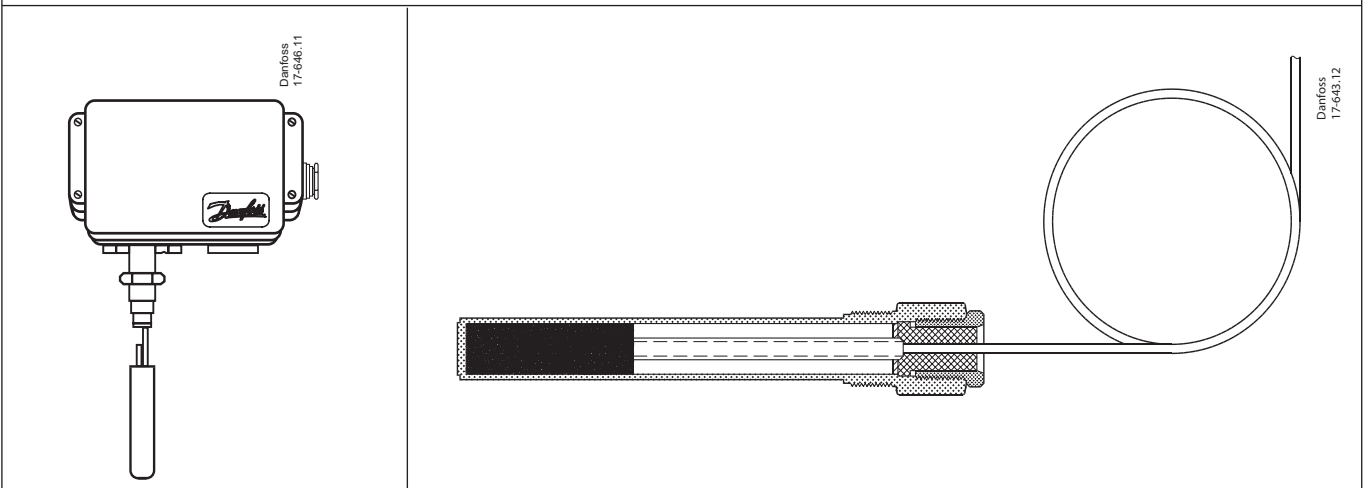

Danfoss
17-646.11

Danfoss
17-643.12