



Sensor DALI Extender Kit

KT200



 




Installation instructions





Instructions d'installation
Instrucciones de instalación

Istruzioni per l'installazione
Installatie-instructies


Installationsanweisungen
インストール手順

安装指示书
إرشادات التركيب

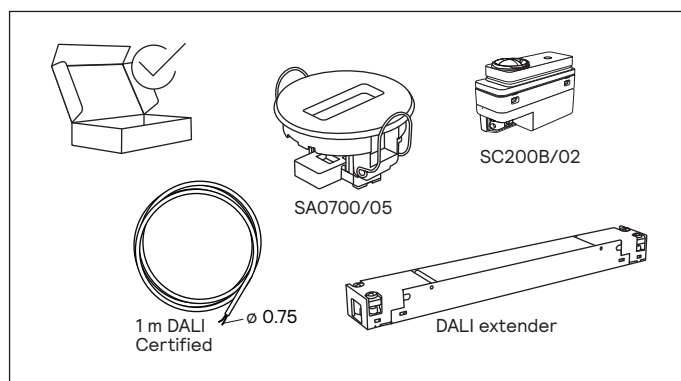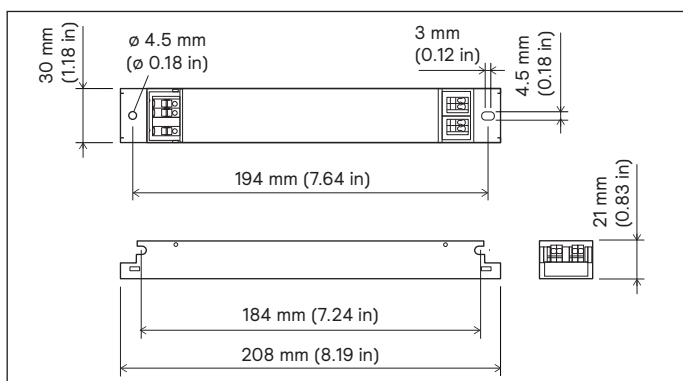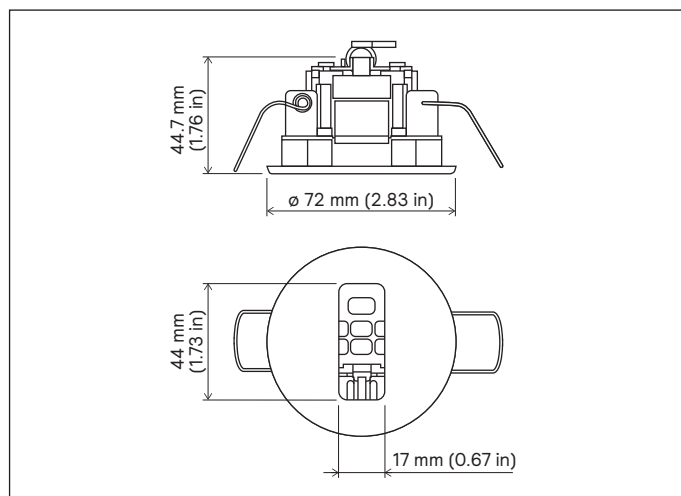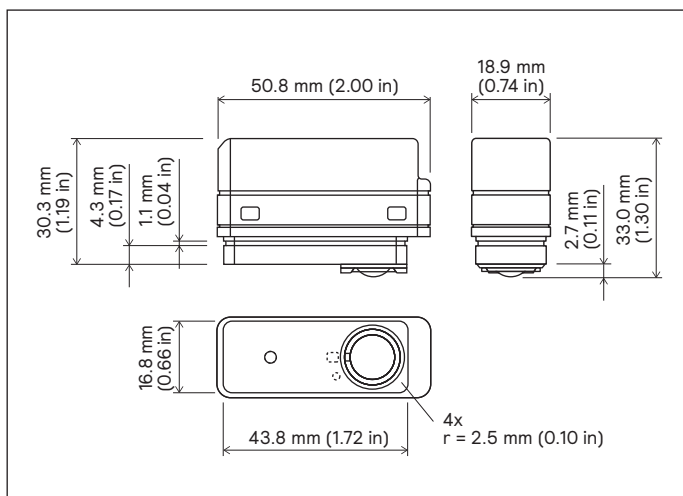

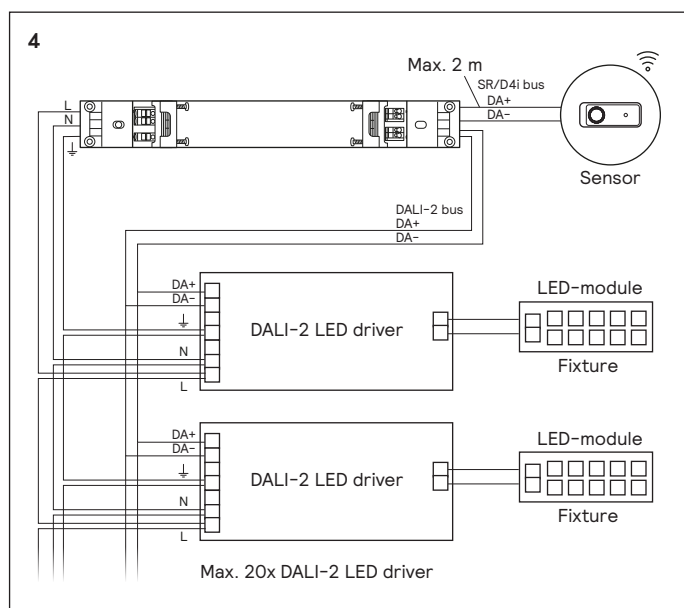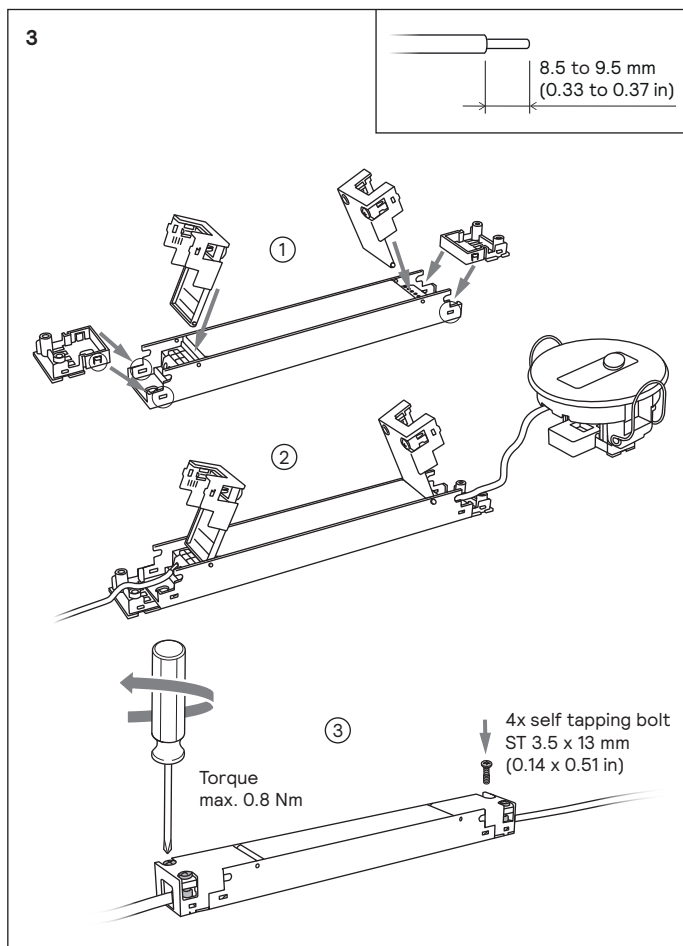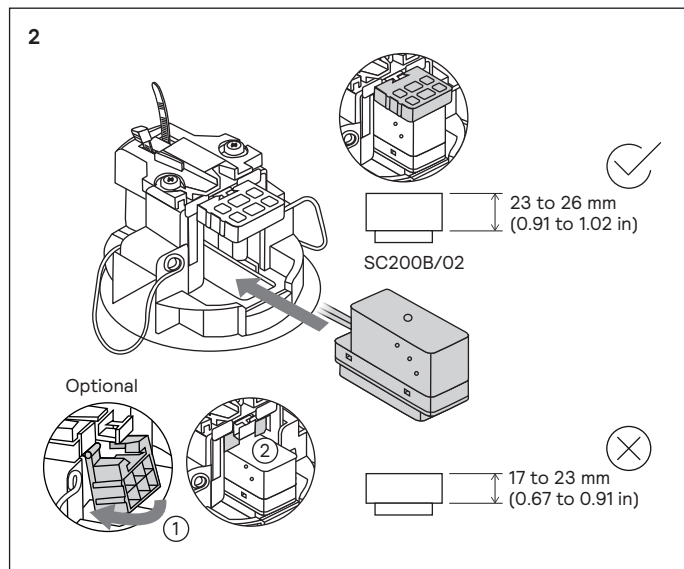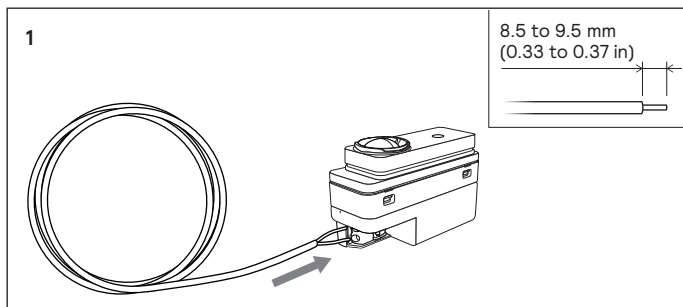

⚠ DALI Extender and drivers must be wired to the same unswitched mains circuit.

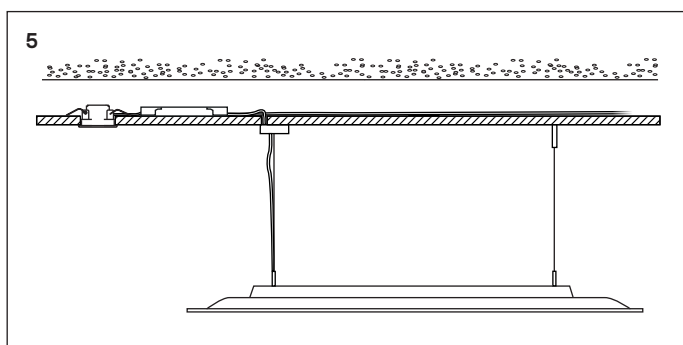

©signify

© 2026 Signify Holding. All rights reserved. The information provided herein is subject to change, without notice. Signify does not give any representation or warranty as to the accuracy or completeness of the information included herein and shall not be liable for any action in reliance thereon. The information presented in this document is not intended as any commercial offer and does not form part of any quotation or contract, unless otherwise agreed by Signify. All trademarks are owned by Signify Holding or their respective owners.

UK importer address:
Signify Commercial UK Limited
2 Guildford Business Park
GU2 8XG, UK