

INSTALLATION INFORMATION

PLEASE READ PRIOR TO INSTALLATION



AE20M Series

ACOUSTIC SIGNALLING DEVICE



- EN Translations & Documentation, scan QR Code
- FR Traductions & Documentation, scannez le QR Code
- DE Übersetzungen & Dokumentation, QR-Code scannen
- IT Traduzioni & Documentazione, scansionare il QR code
- ES Traducciones & Documentación, escanear QR code

APPROVALS AND CONFORMITIES



General Installation Notes

- Installation must be carried out in accordance with the latest codes and regulations by a qualified electrician.
- Ensure power is disconnected prior to installation or maintenance to avoid danger of electrical shock.
- Environmental exposure conditions during installation should be dry. Moist or wet conditions should be avoided.
- Avoid mounting the buzzer where it will be subjected to excessive vibration.

Installation Instructions

Please retain all removed parts for later re-assembly.

Unscrew the locking ring from the thread on the Buzzer


Drill the appropriate hole size for the thread of the Buzzer to fit and locate the Buzzer in place.

Once located, use the locking ring removed earlier and secure the Buzzer in place.

Make the necessary wiring connections as shown in the wiring diagram section.

Wiring Diagram

Tone Selection	12vDC to 48vDC	115vAC to 230vAC
Pulsed	B+A	A+B
Continuous	B+C	A+C

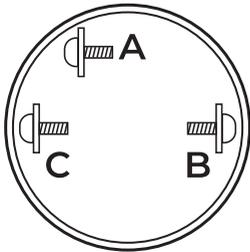

Moflash Signalling Limited accepts no liability for any consequences following use of this document. Any technical specifications and products referred to within this document are subject to change without notice due to continual improvement and product development policies. All dB(A) figures are subject to environmental conditions. The units are sold under Moflash standard conditions of sale, available on request. Additional resources, including installation sheet translations, certificates and DoCs are available from the www.moflash.co.uk website.