

CALLING & COMMUNICATION

Calling

OPERATION	STATUS OF THE CALLED STATION	ACTION
<ol style="list-style-type: none"> 1. Pick up handset. 2. Press two dial buttons of station to talk with (Example: 1, 0 for Station #10). 3. Call by voice, holding down PAGE button in handset. 4. After communication, hang up handset. 	<p>■■■ Tremolo tone</p>	<p>→ Talk as on a telephone after the called station replies.</p>
<ol style="list-style-type: none"> 1. Pick up handset. 2. Press two dial buttons of station to talk with (Example: 1, 0 for Station #10). 3. Call by voice, holding down PAGE button in handset. 4. After communication, hang up handset. 	<p>---- Busy tone The station is communicating with another station</p>	<p>→ Hang up handset and call later. OR Press 0 button. Camp-on busy is set, and hang up. (The LED flashes to indicate)</p>

Receiving

Incoming call is annunciated by either tremolo tone or voice. Simply lift handset to reply.

CALL TRANSFER

When you transfer your call with one station to another;

Method 1;

Press **0** button and a Station No. you will transfer the call to.

Hold on until the Station is available. Hang up.

OR

Method 2;

Press **0** and the Station No.

Intermittent tone means your transfer is being completed. You may hang up.

COMMUNICATION AMONG 3 STATIONS

To have the third Station to join your present talking;

1. Press **0** button and the Station Number to ring.
2. Proceed 3-party communication after the third station replies.
3. After the communication, hang up handset.

Note; If your call will not be answered within approx. 18 seconds, it returns to initial two-party conversation.

SECRETARY TRANSFER (Station transfer)

To have any of incoming calls to be transferred and answered by your Secretary Station or any designated Station;

1. Lift handset.
2. Press **0** button and two dial buttons of Secretary station.
3. Hang up handset.
4. Indicator LED starts flashing on your Station.

To clear;
press **0** and **0** buttons.

SINGLE-ZONE PAGING (when YAW-RB is used)

1. Lift handset.
2. Press **0** button.
3. Press a dial button (0 to 9) assigned for YAW-RB.
4. Transmit your message while holding down PAGE button.
5. Hang up handset.

SELF-CHECK OPERATION

1. Pick up handset and dial tone is heard.
2. Press number buttons 0, 1, 3, 7 and 9.
Your station has been set for self-check mode.
Busy tone means your operation is void. Try again.
3. Depress and hold down either number button 1, 2 or 3 to check the corresponding talk channel.
4. A continuous tone means your station is operative.
An intermittent tone means your station is non-operative.

DIRECTORY

NO.	NAME	NO.	NAME	NO.	NAME
10		40		70	
11		41		71	
12		42		72	
13		43		73	
14		44		74	
15		45		75	
16		46		76	
17		47		77	
18		48		78	
19		49		79	
20		50		80	
21		51		81	
22		52		82	
23		53		83	
24		54		84	
25		55		85	
26		56		86	
27		57		87	
28		58		88	
29		59		89	
30		60		90	
31		61		91	
32		62		92	
33		63		93	
34		64		94	
35		65		95	
36		66		96	
37		67		97	
38		68		98	
39		69		99	




YAZ PHONE TYPE INTERCOM

Model: **YAZ-90-3W**

OPERATION & DIRECTORY SHEET

850742 0204 (A)

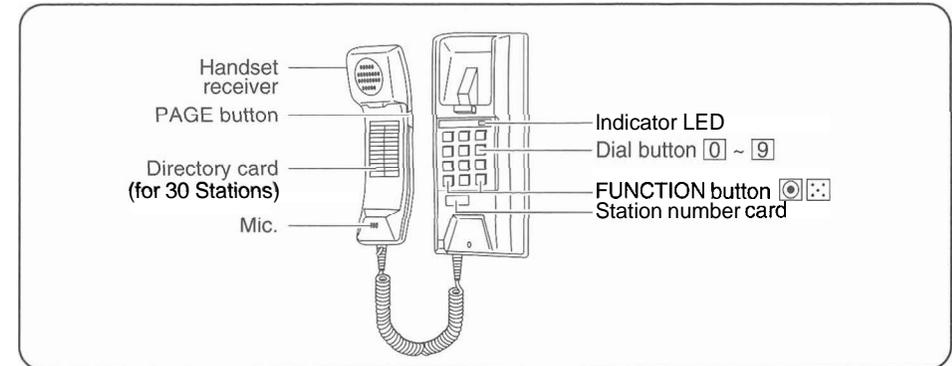

QUICK REFERENCE

• STATION CALL

by tone 1 2 The called Station rings.
by voice 1 2 button

• CAMP-ON-BUSY

1 2 The called Station rings.
CLEAR 1 2

• CALLTRANSFER

Method 1: 1 2 3 After answered, hang up handset.
Method 2: 1 2 3 After busy tone heard, hang up handset.

• CONFERENCE AMONG 3 STATIONS

To have the third station join conversation, 1 2 (→Calls for 18 seconds)

• SECRETARY TRANSFER (Station transfer)

1 2
CLEAR 1 2

• PAGING (w/YAW-RB)

1 2 (0 ~ 9) 3 button