

PT-1211DR


Item 3 MODULES AC POWER SUPPLY FOR INTERCOM

For EU:
Imported by
AIPHONE S.A.S.
ZAC du Bois Chaland - 6 rue des Pyrenees
Lisses 91056 Evry CEDEX, France

USE AND MAINTENANCE INSTRUCTIONS
MANUEL D'UTILISATION
MANUAL DE UTILIZO
GEBRUIKSHANDBOEK
GEbruikers-EN MONTAGEHANDLEIDING
MANUALE D'UTILIZZO
הוראות שימוש ותחזוקה

- This product is designed exclusively for use with Aiphone Intercom Systems.
- Ce produit doit être utilisé exclusivement avec les systèmes Intercom Aiphone.
- Este producto tiene que ser utilizado exclusivamente con los sistemas Intercom Aiphone.
- Diesen Produkt darf nur mit dem Aiphone Intercom System verwendet werden.
- Dit produkt werd exlusief ontworpen voor het gebruik met Aiphone intercomsystemen.
- Questo prodotto è progettato esclusivamente per l'uso con i sistemi Intercom dell'Aiphone.

• Aiphone זה תוכן במילוי לשימוש עם מרכיבים האיזוריה של

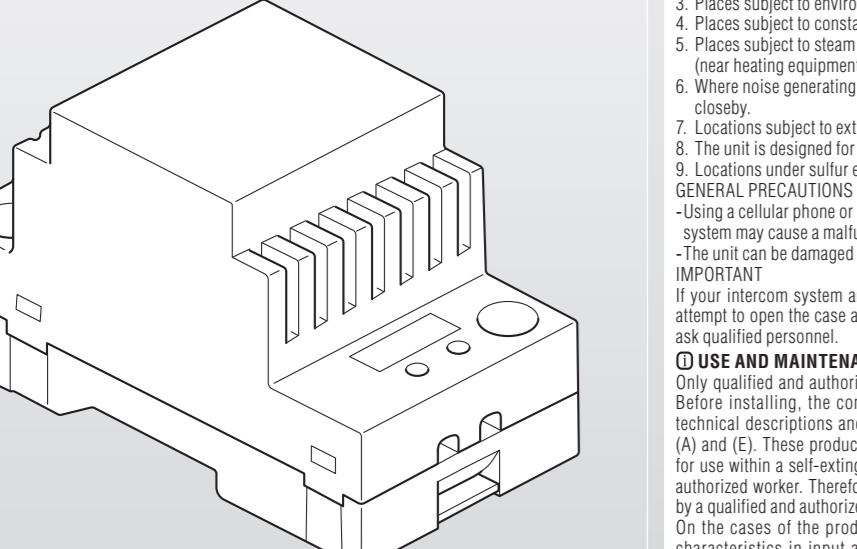

⑤P0820 IQ 63106



DANGER OF ELECTROCUTION Read carefully the following directions

ENGLISH

DO NOT OPEN OR DAMAGE THE BOX – PRECAUTIONS

General prohibitions

Prohibitions to dismantle the unit

General precautions

WARNING (Negligence could result in death or serious injury)

The installation of the unit must be done by qualified and authorized technician.

-Do not connect the unit with any non-specified power source.

Fire or electric shock could result.

-Do not connect any output terminal on the unit to AC power lines.

Fire or electric shock could result.

-High voltage is present internally. Do not open the case.

Electric shock could result.

-Do not install or use near gases or flammable materials.

The unit is not explosion-proof. Fire or explosion could result.

-Do not make the wires or AC output terminals shorted.

Fire or unit trouble could result.

-Do not dismantle or alter the unit. Fire or electric shock could result.

-Keep the unit away from water or any other liquid.

Fire or electric shock could result.

-Do not put any metal or flammable material into the unit through the openings. Fire, electric shock, or unit trouble could result.

CAUTION (Negligence could result in injury or damage to property)

-Do not install or make any wire terminations while the power supply is plugged in. It can cause electrical shock or damage to the unit.

-Before plugging in the unit, make sure the wires are not crossed or shorted. If can cause fire or electric shock.

-Do not install the unit in any of the following locations, as it may cause the system to malfunction:

1. High or extremely cold temperature areas, under direct sunlight, near equipment that varies in temperature, in front of an air-conditioner, inside a refrigerated area, etc.

2. Places subject to moisture or humidity extremes, such as bathrooms, cellars, greenhouses, etc.

3. Places subject to environmental conditions, such as dust, oil, chemicals, salt, etc.

4. Places subject to constant vibration or impact.

5. Places subject to steam or smoke.

(near heating equipment or cooking surfaces)

6. Where noise generating devices such as dimmer switches, inverter electrical appliances, are closely.

7. Locations subject to extremely powerful electric fields.

8. The unit is designed for indoor use only. Do not use outdoor.

9. Locations under sulfur environment such as hot springs

GENERAL PRECAUTIONS

-Using a cellular phone or professional-use radio equipment such as transceiver close to the system may cause a malfunction.

-The unit can be damaged if dropped. Handle with care.

IMPORTANT

If your intercom system and/or power supply does not work properly or malfunctions, do not attempt to open the case and do not attempt to do repairs on the board. Turn-off the power and ask qualified personnel.

USE AND MAINTENANCE NOTES

Only qualified and authorized personnel can install the PT-1211DR (below called "products"). Before installing, the consultation of these instructions is compulsory. What regards the technical descriptions and the dimensional characteristics of these products, see the tables (A) and (E). These products are not adapted for an external use. These products are designed for use within a self-extinguishing electrical case that can be accessed only by a qualified and authorized worker. Therefore, they must be installed within a self-extinguishing electrical case by a qualified and authorized worker and used within the rated value of the equipment.

On the cases of the products the identification code is indicated as well as the electrical characteristics in input and in output. The products must be installed vertically to let the clamping spring show downwards (see table B). The holes and the tabs of the products must not be covered. Keep a free space under and over the products to allow a free air circulation necessary for a correct heat exchange (see table B). For the DIN-rail mounting, please refer to the table C. Before installation, make sure that the power is turned-off and that the input terminals and the output terminals are correctly positioned.

The input and output terminals are identifiable through the description on the case. For the connections, use cables and derivations with a section that does not exceed a current density of 4A/mm² and add the right terminations.

Connect the input terminal to an Overvoltage Category II AC mains supply protected by a surge

protective device (SPD) via a double-pole breaker with a capacity of 16A or lower. Realize a wiring to ensure an appropriate distance between the input and output cables in order to keep the characteristics of the class II of the product and to avoid radio interferences. Make sure that all terminal screws are tightly fastened. For the removal from DIN-rail (see table D), make sure the power is turned off. Remove the wiring from the terminals and insulate it correctly.

DISPOSAL AND RECYCLING OF THE PRODUCTS

For the disposal of these products, follow the directions of the local authority. The used and collected products must be duly recycled. This contributes in minimizing the waste quantity as well as the negative impact that some element could have on the human health and on the environment.

GARANTY

The warranty is valid 24 months from the date of making, if the products

have been used in the indicated working range, and if they have not been opened, changed or damaged by external cause. For the warranty conditions, please contact our company or the distributor.

DANGER D'ELECTROCUSSION

Lire avec attention les avertissements suivants

FRANÇAIS

NE PAS OUVRIR OU PERFORER LE BOÎTIER- PRECAUTIONS

Interdictions générales

Défense d'ouvrir ou endommager l'appareil

Précautions générales

ATTENTION (la négligence peut causer la mort ou des lésions très graves)

-l'équipement doit être installé exclusivement par du personnel habilité

-Ne pas connecter l'équipement à une source d'alimentation non appropriée.

-Do not make the wires or AC output terminals shorted.

Fire or unit trouble could result.

-Do not dismantle or alter the unit. Fire or electric shock could result.

-Keep the unit away from water or any other liquid.

Fire or electric shock could result.

-Do not put any metal or flammable material into the unit through the openings. Fire, electric shock, or unit trouble could result.

DANGER (Negligence could result in injury or damage to property)

-Do not install or make any wire terminations while the power supply is plugged in. It can cause electrical shock or damage to the unit.

-Before plugging in the unit, make sure the wires are not crossed or shorted. If can cause fire or electric shock.

-Do not install the unit in any of the following locations, as it may cause the system to malfunction:

1. High or extremely cold temperature areas, under direct sunlight, near equipment that varies in temperature, in front of an air-conditioner, inside a refrigerated area, etc.

2. Places subject to moisture or humidity extremes, such as bathrooms, cellars, greenhouses, etc.

3. Places subject to environmental conditions, such as dust, oil, chemicals, salt, etc.

4. Places subject to constant vibration or impact.

5. Places subject to steam or smoke.

(near heating equipment or cooking surfaces)

6. Where noise generating devices such as dimmer switches, inverter electrical appliances, are closely.

7. Locations subject to extremely powerful electric fields.

8. The unit is designed for indoor use only. Do not use outdoor.

9. Locations under sulfur environment such as hot springs

GENERAL PRECAUTIONS

-Using a cellular phone or professional-use radio equipment such as transceiver close to the system may cause a malfunction.

-The unit can be damaged if dropped. Handle with care.

IMPORTANT

If your intercom system and/or power supply does not work properly or malfunctions, do not attempt to open the case and do not attempt to do repairs on the board. Turn-off the power and ask qualified personnel.

USE AND MAINTENANCE NOTES

Only qualified and authorized personnel can install the PT-1211DR (below called "products"). Before installing, the consultation of these instructions is compulsory. What regards the technical descriptions and the dimensional characteristics of these products, see the tables (A) and (E). These products are not adapted for an external use. These products are designed for use within a self-extinguishing electrical case that can be accessed only by a qualified and authorized worker. Therefore, they must be installed within a self-extinguishing electrical case by a qualified and authorized worker and used within the rated value of the equipment.

On the cases of the products the identification code is indicated as well as the electrical characteristics in input and in output. The products must be installed vertically to let the clamping spring show downwards (see table B). The holes and the tabs of the products must not be covered. Keep a free space under and over the products to allow a free air circulation necessary for a correct heat exchange (see table B). For the DIN-rail mounting, please refer to the table C. Before installation, make sure that the power is turned-off and that the input terminals and the output terminals are correctly positioned.

The input and output terminals are identifiable through the description on the case. For the connections, use cables and derivations with a section that does not exceed a current density of 4A/mm² and add the right terminations.

Connect the input terminal to an Overvoltage Category II AC mains supply protected by a surge

protective device (SPD) via a double-pole breaker with a capacity of 16A or lower. Realize a wiring to ensure an appropriate distance between the input and output cables in order to keep the characteristics of the class II of the product and to avoid radio interferences. Make sure that all terminal screws are tightly fastened. For the removal from DIN-rail (see table D), make sure the power is turned off. Remove the wiring from the terminals and insulate it correctly.

DISPOSAL AND RECYCLING OF THE PRODUCTS

For the disposal of these products, follow the directions of the local authority. The used and collected products must be duly recycled. This contributes in minimizing the waste quantity as well as the negative impact that some element could have on the human health and on the environment.

GARANTY

The warranty is valid 24 months from the date of making, if the products

have been used in the indicated working range, and if they have not been opened, changed or damaged by external cause. For the warranty conditions, please contact our company or the distributor.

DANGER D'ELECTROCUSSION

Lire avec attention les avertissements suivants

FRANÇAIS

NE PAS OUVRIR OU PERFORER LE BOÎTIER- PRECAUTIONS

Interdictions générales

Défense d'ouvrir ou endommager l'appareil

Précautions générales

ATTENTION (la négligence peut causer la mort ou des lésions très graves)

-l'équipement doit être installé exclusivement par du personnel habilité

-Ne pas connecter l'équipement à une source d'alimentation non appropriée.

-Do not make the wires or AC output terminals shorted.

Fire or unit trouble could result.

-Do not dismantle or alter the unit. Fire or electric shock could result.

-Keep the unit away from water or any other liquid.

Fire or electric shock could result.

-Do not put any metal or flammable material into the unit through the openings. Fire, electric shock, or unit trouble could result.

DANGER (Negligence could result in injury or damage to property)

-Do not install or make any wire terminations while the power supply is plugged in. It can cause electrical shock or damage to the unit.

-Before plugging in the unit, make sure the wires are not crossed or shorted. If can cause fire or electric shock.

-Do not install the unit in any of the following locations, as it may cause the system to malfunction:

1. High or extremely cold temperature areas, under direct sunlight, near equipment that varies in temperature, in front of an air-conditioner, inside a refrigerated area, etc.

2. Places subject to moisture or humidity extremes, such as bathrooms, cellars, greenhouses, etc.

3. Places subject to environmental conditions, such as dust, oil, chemicals, salt, etc.

4. Places subject to constant vibration or impact.

5. Places subject to steam or smoke.

(near heating equipment or cooking surfaces)

6. Where noise generating devices such as dimmer switches, inverter electrical appliances, are closely.

7. Locations subject to extremely powerful electric fields.

8. The unit is designed for indoor use only. Do not use outdoor.

9. Locations under sulfur environment such as hot springs

GENERAL PRECAUTIONS

-Using a cellular phone or professional-use radio equipment such as

ilà lontano da acqua od altri liquidi.
ndio o shock elettrico. ☷
alle aperture dell'unità parti metalliche oppure infiammabili.
ndio, di shock elettrico oppure di danno all'unità. ☷
cuiare i morsetti o i cavi di uscita.

GARANZIA
prodotti siano
lesionati per
distributore.

- Sostituire i cavi rotti o i cavi di uscita.
 - Ricondizionare fiamme o altri inconvenienti. ☺
- Aprire l'unità.
- Ricondizionare fiamme o shock elettrici. ☺
- Mantenere i cavi d'alimentazione AC lontano da condensa o polvere.
- Ricondizionare fiamme. ❶
 - Negligenza può causare lesioni o danni alla proprietà
 - Eseguire connessioni mentre l'unità è alimentata.
- Ricondizionare shock elettrici o danni all'unità. ☺
- Assicurare l'unità assicurarsi che i cavi non siano danneggiati o corto-circuitati. Si

care fiamme o shock elettrici. **!**
n morsetti di terra, collegarli ad una messa a terra.
rificare fiamme o malfunzionamenti. **!**
posizione neutra. Scollegare l'alimentazione per disattivare i conduttori di fase.

l'unità in nessuno dei seguenti luoghi, dato che si possono verificare enti: ☺
a temperature estremamente basse, sotto la luce diretta del Sole, vicino a

- I componenti elettronici sono molto sensibili, connessi ad un circuito stampato, che variano in temperatura, di fronte a condizionatori d'aria, all'interno di aree etc.
- Ilettivi a umidità o condensa estreme, come bagni, cantine, serre, etc.
- Ilettivi a particolari condizioni ambientali, come polvere, olio, prodotti chimici, sale,

et a continue vibrazioni o urti.
etti a correnti di aria calda o fumo.
positivi di riscaldamento o a piani di cottura).
rossimità di apparecchi generatori di rumore come dimmer oppure a prossimità
di corrente e inverter.
getti a campi elettrici estremamente forti.
gettata solo per l'uso in ambienti interni. Non utilizzarla in ambienti esterni.
mbienti sulfurei quali sorgenti termali

GENERALI
telefono cellulare o di dispositivi radio ad uso professionale quale un
ore vicino al sistema potrebbe causare un malfunzionamento.
dere, l'unità potrebbe danneggiarsi. Maneggiarla con cura.

Intercom e/o l'alimentazione non funziona adeguatamente o se presenta qualche
nto, non cercare di aprire la scatola ed eseguire delle riparazioni sulla scheda.
mentazione e rivolgersi a personale specializzato.

L'USO E L'INSTALLAZIONE

Li seguito definiti "prodotti") possono essere installati unicamente da personale.

Il seguito elenca i prodotti che possono essere installati unicamente da personale autorizzato. Prima dell'installazione è obbligatoria la consultazione del presente documento per le descrizioni tecniche e per le caratteristiche dimensionali dei prodotti fare riferimento alle tabelle (A) e (E). Questi prodotti non sono adatti per un uso estremo. Questi sono stati progettati per l'uso all'interno di una scatola elettrica autoestinguente ed installati da personale qualificato ed autorizzato. Quindi, devono essere installati all'interno di una scatola elettrica autoestinguente da personale qualificato ed autorizzato e con i valori nominali del dispositivo. Sulle scatole dei prodotti sono riportati, oltre

identificazione, le caratteristiche elettriche d'ingresso e d'uscita. I prodotti devono essere posizionati in posizione verticale, in modo tale che la slitta di aggancio (2) sia posizionata (vedi tabella B). Non coprire i fori o le alette dei prodotti. Mantenere uno spazio adeguato ed al di sopra dei prodotti per permettere una libera circolazione di aria, un corretto scambio termico (vedi tabella B). Per il montaggio su binario DIN, fare riferimento alla tabella C. Prima dell'installazione accertarsi che l'alimentazione di rete sia stata esattamente collegata e l'esatta posizione dei morsetti d'ingresso e d'uscita. La posizione dei morsetti d'uscita è riconoscibile tramite la dicitura riportata sulla scatola stessa. Per i collegamenti utilizzare cavi di alimentazione o derivazione con sezioni tali da non superare mai i valori di 4 A/mm² e corredare i cavi con terminali adeguati. Collegare il morsetto d'ingresso a una sorgente di alimentazione CA di Categoria di sovratensione II protetta da un dispositivo di protezione dalle sovratensioni (SPD) mediante un'interruttore bipolare con una protezione A o inferiore. Realizzare un cablaggio in modo da garantire una distanza adeguata fra i cavi primari e secondari (vedi tabella E) per mantenere la caratteristica di classe II del dispositivo radio disturbii. Verificare l'accurato e corretto serraggio delle viti nei morsetti. Collegare il dispositivo su binario DIN (vedi tabella D) togliendo, se già inserito, l'alimentazione di rete.

DISMANTOLAMENTO E RICICLAGGIO DEI PRODOTTI Per lo smaltimento dei prodotti seguire delle autorità locali. I prodotti utilizzati e raccolti devono essere debitamente tribuisce a ridurre al minimo la quantità di rifiuti nonché l'impatto negativo che

 
תדי, עיין בטבלה C. לפניהם התקנה וזה שוח舐ל כבוי ומוספי הקטל כראוי.

המשתמש יאשר את השימוש במכשיר באמצעות סיסמה או סיסמה נוספת. עבור החיבורו, יש להשתמש במסמך אמצעות התיאור על המארט. על מנת לסייע לך בבחירה,

בנין שערון ווילג מצטיינות זו עם מומחה אוניברסיטאית ומיומן ים

SPECIFICATIONS - ESPECIFICACIONES - SPECIFICATIES - SPECIFIECHE TECNICHES

Be - Behuizing	
fixation - - Clip voor ocio - קפץ	
entation - elle - ntazione -	AC230V, 50/60Hz 230 V AC, 50/60 Hz 230 V CA, 50/60 Hz AC230V, 50/60Hz AC 230 V, 50/60 Hz 230 V CA, 50/60Hz AC230V, 50/60Hz
tion électrique auch - etico -	15.3W 15,3 W 15.3 W 15,3W 15.3 W 15,3 W 15.3W
ension salida sspannung Tensione di מתוך חשמל ש	AC15V 15 V CA 15 V CA AC15V AC 15 V 15 V CA AC15V
ourant e salida ssstrom - rente di uscita	AC700mA 700 mA CA 700 mA CA AC700mA AC 700 mA 700 mA CA AC700mA
nsions - metingen -	54.0 (W) x 61.0 (D) x 102.0 (H) 2-1/8" W x 2-3/8" D x 4" H 54.0 (L) x 61.0 (P) mm x 102.0 (H) 54.0 (an) x 61.0 (prof.) x 102.0 (H) 54.0 (B) x 61.0 (T) x 102.0 (H) 54.0 (B) x 61.0 (D) x 102.0 (H) 54.0 (L) x 61.0 (P) x 102.0 (H) 102.0 x (עומק) 61.0 (H)
Gewicht -	Approx. 380 g (0.84 lbs.) Environ 380 g Aprox. 380 g Ca. 380 g Ca. 380 g Circa 380 g D
ure ambiante - sttemperatur - tura ambiente -	0 - 40 °C (+32°F - +104°F) 0 - 40 °C 0 - 40 °C 0 - 40°C 0 - 40°C 0 - 40°C 104-32 (עומק) גלייזין (Depth) 104-32

	Symbol - Symbole - Símbolo - Symbol - Symbolo - Simbool - סמל	
	 6mm	The rip Le dé El qu Be 6 m Ge wo Il rin
		Ex La Se Be Bi É
		Ci Eq Ki
	 UP	In Di In
	 OUTPUT	Up Bo Bo .II
	 INPUT	Lo Bo Or .II
		The La La Di De La
		The - E St sh

