

Enerlin'X FDM128

Ethernet Display for Eight Devices

User Guide

01/2019



Vijeo Design' Air
app

The information provided in this documentation contains general descriptions and/or technical characteristics of the performance of the products contained herein. This documentation is not intended as a substitute for and is not to be used for determining suitability or reliability of these products for specific user applications. It is the duty of any such user or integrator to perform the appropriate and complete risk analysis, evaluation and testing of the products with respect to the relevant specific application or use thereof. Neither Schneider Electric nor any of its affiliates or subsidiaries shall be responsible or liable for misuse of the information contained herein. If you have any suggestions for improvements or amendments or have found errors in this publication, please notify us.

You agree not to reproduce, other than for your own personal, noncommercial use, all or part of this document on any medium whatsoever without permission of Schneider Electric, given in writing. You also agree not to establish any hypertext links to this document or its content. Schneider Electric does not grant any right or license for the personal and noncommercial use of the document or its content, except for a non-exclusive license to consult it on an "as is" basis, at your own risk. All other rights are reserved.

All pertinent state, regional, and local safety regulations must be observed when installing and using this product. For reasons of safety and to help ensure compliance with documented system data, only the manufacturer should perform repairs to components.

When devices are used for applications with technical safety requirements, the relevant instructions must be followed.

Failure to use Schneider Electric software or approved software with our hardware products may result in injury, harm, or improper operating results.

Failure to observe this information can result in injury or equipment damage.

© 2019 Schneider Electric. All rights reserved.

Table of Contents



	Safety Information	5
	About the Book	7
Chapter 1	Introduction	11
	Overview	12
	Architecture Examples	15
	Recommendations	23
	Certifications and Standards	24
	General Specifications	25
	Functional Specifications	27
	Interface Specifications	28
Chapter 2	Presentation	29
	Screen	30
	Menu Structure	32
	Browsing	33
Chapter 3	Configuration	35
	Prerequisites	36
	Setting Wizard	37
	Settings During Operation	40
Chapter 4	Operation	43
	Logins and Passwords	44
	General View	46
	Real-Time Alarms	49
	Device View for Circuit Breakers and Switch-Disconnectors	51
	Device View for Devices Connected to the Acti9 Smartlink	55
Chapter 5	Update and Maintenance	59
	Firmware Update	60
	Adding, Removing, and Replacing Devices	62
	Regular Cleaning	63
	Troubleshooting Checklists	64
	Protecting the Environment	65
Appendices	67
Appendix A	FDM128 Icons	69
	Icon List	69
Appendix B	Glossary of Acronyms	73
	Acronym	73



Important Information

NOTICE

Read these instructions carefully, and look at the equipment to become familiar with the device before trying to install, operate, service, or maintain it. The following special messages may appear throughout this documentation or on the equipment to warn of potential hazards or to call attention to information that clarifies or simplifies a procedure.



The addition of this symbol to a “Danger” or “Warning” safety label indicates that an electrical hazard exists which will result in personal injury if the instructions are not followed.



This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.

DANGER

DANGER indicates a hazardous situation which, if not avoided, **will result in** death or serious injury.

WARNING

WARNING indicates a hazardous situation which, if not avoided, **could result in** death or serious injury.

CAUTION

CAUTION indicates a hazardous situation which, if not avoided, **could result in** minor or moderate injury.

NOTICE

NOTICE is used to address practices not related to physical injury.

PLEASE NOTE

Electrical equipment should be installed, operated, serviced, and maintained only by qualified personnel. No responsibility is assumed by Schneider Electric for any consequences arising out of the use of this material.

A qualified person is one who has skills and knowledge related to the construction and operation of electrical equipment and its installation, and has received safety training to recognize and avoid the hazards involved.

FCC Notice

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designated to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at this own expense.



At a Glance

Document Scope

This guide describes how to use Enerlin'X™ the FDM128 Ethernet display for eight devices, installed in an Ethernet network, to monitor and control the following devices:

- Circuit breakers equipped with communicating Micrologic™ trip units, such as:
 - Masterpact™ MTZ circuit breakers
 - Masterpact™ NT/NW circuit breakers
 - Compact™ NS circuit breakers
 - Compact™ NSX circuit breakers
 - PowerPact™ P- and R-frame circuit breakers
 - PowerPact™ H-, J-, and L-frame circuit breakers
- Switch-disconnectors such as:
 - Masterpact NT HA switch-disconnectors
 - Masterpact NW NA/HA/HA10/HF switch-disconnectors
 - Compact NS NA switch-disconnectors
 - Compact NSX NA switch-disconnectors
- Acti9 Smartlink™ devices, such as:
 - Acti9 Smartlink SI B
 - Acti9 Smartlink SI D
 - Acti9 Smartlink Modbus devices
- PowerTag™ devices such as:
 - PowerTag Link
 - PowerTag Link HD

NOTE: The Acti9 Smartlink product range is not available in the following countries: United States, Canada, Mexico. Consult the catalog for the list of products available in your country.

Validity Note

This documentation is valid for all FDM128 Ethernet display for eight devices.

The information contained in this document is likely to be updated at any time. Schneider Electric strongly recommends that you have the most recent and up-to-date version available on www.schneider-electric.com/docs.

The technical characteristics of the devices described in the present document also appear online. To access the information online:

Step	Action
1	Go to the Schneider Electric home page www.schneider-electric.com .
2	In the Search box type the reference of a product or the name of a product range. <ul style="list-style-type: none">● Do not include blank spaces in the reference or product range.● To get information on grouping similar modules, use asterisks (*).
3	If you entered a reference, go to the Product Datasheets search results and click on the reference that interests you. If you entered the name of a product range, go to the Product Ranges search results and click on the product range that interests you.
4	If more than one reference appears in the Products search results, click on the reference that interests you.
5	Depending on the size of your screen, you may need to scroll down to see the data sheet.
6	To save or print a data sheet as a .pdf file, click Download XXX product datasheet .

The characteristics that are presented in the present document should be the same as those characteristics that appear online. In line with our policy of constant improvement, we may revise content over time to improve clarity and accuracy. If you see a difference between the document and online information, use the online information as your reference.

Related Documents for IEC Devices

Title of Documentation	Reference Number
Enerlin'X FDM128 - Ethernet Display for Eight Devices - Instruction Sheet	HRB4577Z
Enerlin'X FDM128 - Ethernet Display for Eight Devices - Firmware Release Note	DOCA0151EN
Enerlin'X IFM - Modbus-SL Interface for One Circuit Breaker - Instruction Sheet	NVE85393
Enerlin'X IFE - Ethernet Interface for One Circuit Breaker - Instruction Sheet	QGH13473
Enerlin'X IFE - Ethernet Interface for One Circuit Breaker - User Guide (IEC version)	DOCA0142EN DOCA0142ES DOCA0142FR DOCA0142ZH
Enerlin'X IFE - Ethernet Switchboard Server - User Guide (IEC version)	DOCA0084EN DOCA0084ES DOCA0084FR DOCA0084ZH
Enerlin'X EIFE - Embedded Ethernet Interface for One Masterpact MTZ Drawout Circuit Breaker - Instruction Sheet	NVE23550
Enerlin'X EIFE - Embedded Ethernet Interface for One Masterpact MTZ Drawout Circuit Breaker - User Guide	DOCA0106EN DOCA0106ES DOCA0106FR DOCA0106ZH
Enerlin'X IO - Input/Output Application Module for One Circuit Breaker - Instruction Sheet	HRB49217
Enerlin'X IO - Input/Output Application Module for One Circuit Breaker - User Guide (IEC version)	DOCA0055EN DOCA0055ES DOCA0055FR DOCA0055ZH
BCM ULP Circuit Breaker Communication Module - Installation Manual	EAV36080 (EN, ES, FR)
Acti9 Smartlink Modbus Communication System - User Manual	DOCA0004EN DOCA0004DE DOCA0004ES DOCA0004FR DOCA0004IT DOCA0004PT
Acti9 Smartlink Ethernet Communication System - User Manual	DOCA0073EN DOCA0073DE DOCA0073ES DOCA0073FR DOCA0073IT DOCA0073PT
Acti9 Smartlink SI B Communication System - User Manual	DOCA0123EN DOCA0123FR DOCA0123DE DOCA0123ES DOCA0123IT
Acti9 Smartlink SI D Communication System - User Manual	DOCA0115EN DOCA0115FR DOCA0115DE DOCA0115ES DOCA0115IT
EGX300 PowerLogic™ Ethernet Gateway - User Guide	63230-319-216 (EN, ES, FR)
Micrologic 5/6/7 Trip Units for Compact NSX Circuit Breakers - User Guide	DOCA0141EN DOCA0141ES DOCA0141FR DOCA0141ZH
Compact NSX Modbus Communication Guide	DOCA0091EN DOCA0091ES DOCA0091FR DOCA0091ZH
Micrologic A/E Trip Units for Masterpact NT/NW Circuit Breakers - User Guide	04443724AA (EN) EAV16735 (ES) 04443723AA (FR)

Title of Documentation	Reference Number
Micrologic P Trip Units for Masterpact NT/NW Circuit Breakers - User Guide	04443726AA (EN) EAV16736 (ES) 04443725AA (FR)
Micrologic H Trip Units for Masterpact NT/NW Circuit Breakers - User Guide	04443728AA (EN) EAV16737 (ES) 04443727AA (FR)
Masterpact NT/NW, Compact NS Modbus Communication Guide	DOCA0054EN DOCA0054ES DOCA0054FR DOCA0054ZH
Masterpact MTZ1 Circuit Breakers and Switch-Disconnectors - User Guide	DOCA0100EN DOCA0100ES DOCA0100FR DOCA0100ZH
Masterpact MTZ2/MTZ3 Circuit Breakers and Switch-Disconnectors - User Guide	DOCA0101EN DOCA0101ES DOCA0101FR DOCA0101ZH
Micrologic X Control Unit for Masterpact MTZ Circuit Breakers - User Guide	DOCA0102EN DOCA0102ES DOCA0102FR DOCA0102ZH
Masterpact MTZ Modbus Communication Guide	DOCA0105EN DOCA0105ES DOCA0105FR DOCA0105ZH
ULP System for Compact and Masterpact Circuit Breakers - User Guide	DOCA0093EN DOCA0093ES DOCA0093FR DOCA0093ZH
TCSEGWB13FA0 - Portable Battery Powered Wi-Fi Access Point - Instruction Sheet	NHA24030

You can download these technical publications and other technical information from our website at <https://www.schneider-electric.com/en/download>

Related Documents for UL/ANSI Devices

Title of Documentation	Reference Number
Enerlin'X FDM128 - Ethernet Display for Eight Devices - Instruction Sheet	HRB4577Z
Enerlin'X FDM128 - Ethernet Display for Eight Devices - Firmware Release Note	DOCA0151EN
Enerlin'X IFM - Modbus-SL Interface for One Circuit Breaker - Instruction Sheet	NVE85393
Enerlin'X IFE - Ethernet Interface for One Circuit Breaker - Instruction Sheet	QGH13473
Enerlin'X IFE - Ethernet Interface for One Circuit Breaker - User Guide (UL version)	0602IB1801EN 0602IB1801FR 0602IB1801ES 0602IB1801ZH
Enerlin'X IFE - Ethernet Switchboard Server - User Guide (UL version)	1040IB1401 (EN) 1040IB1402 (ES) 1040IB1403 (FR) 1040IB1404 (ZH)
Enerlin'X EIFE - Embedded Ethernet Interface for One Masterpact MTZ Drawout Circuit Breaker - Instruction Sheet	NVE23550
Enerlin'X EIFE - Embedded Ethernet Interface for One Masterpact MTZ Drawout Circuit Breaker - User Guide	DOCA0106EN DOCA0106ES DOCA0106FR DOCA0106ZH
Enerlin'X IO - Input/Output Application Module for One Circuit Breaker - Instruction Sheet	HRB49217

Title of Documentation	Reference Number
Enerlin'X IO - Input/Output Application Module for One Circuit Breaker - User Guide (UL version)	0613/B1317 (EN) 0613/B1318 (ES) 0613/B1319 (FR) 0613/B1320 (ZH)
BCM ULP Circuit Breaker Communication Module - Installation Manual	EAV36080 (EN, ES, FR)
EGX300 PowerLogic™ Ethernet Gateway - User Guide	63230-319-216 (EN, ES, FR)
Micrologic 5 and 6 Trip Units for PowerPact H-, J-, and L- Frame Circuit Breakers - User Guide	48940-312 (EN, ES, FR)
PowerPact H-, J-, and L- Frame Circuit Breakers Modbus Communication Guide	0611/B1302 (EN) 0611/B1303 (ES) 0611/B1304 (FR) 0611/B1305 (ZH)
Micrologic 2.0A, 3.0A, 5.0A, and 6.0A Trip Units - Instruction Bulletin	48049-136 (EN, ES, FR)
Micrologic 5.0P and 6.0P Trip Units - Instruction Bulletin	48049-137 (EN, ES, FR)
Micrologic 5.0H and 6.0H Trip Units - Instruction Bulletin	48049-330 (EN, ES, FR)
Masterpact NT/NW, PowerPact P- and R-Frame Modbus Communication Guide	0613/B1313 (EN) 0613/B1314 (ES) 0613/B1315 (FR) 0613/B1316 (ZH)
Micrologic X Control Unit for Masterpact MTZ Circuit Breakers - User Guide	DOCA0102EN DOCA0102ES DOCA0102FR DOCA0102ZH
Masterpact MTZ Modbus Communication Guide	DOCA0105EN DOCA0105ES DOCA0105FR DOCA0105ZH
ULP System for PowerPact and Masterpact Circuit Breakers - User Guide	0602/B1503 (EN) 0602/B1504 (ES) 0602/B1505 (FR) 0602/B1506 (ZH)
TCSEGWB13FA0 - Portable Battery Powered Wi-Fi Access Point - Instruction Sheet	NHA24030

You can download these technical publications and other technical information from our website at <https://www.schneider-electric.com/en/download>

Trademark Notice

All trademarks are owned by Schneider Electric Industries SAS or its affiliated companies.

Chapter 1

Introduction

What Is in This Chapter?

This chapter contains the following topics:

Topic	Page
Overview	12
Architecture Examples	15
Recommendations	23
Certifications and Standards	24
General Specifications	25
Functional Specifications	27
Interface Specifications	28

Overview

Presentation

The FDM128 Ethernet display for eight devices is a 1-to-8 human machine interface (HMI). The main component is a 5.7-inch touch screen.

An FDM128 display can be connected to devices via an Ethernet interface by using:

- One or more Ethernet gateways (IFE server, Link150, PowerLogic EGX300 and EGX100 Ethernet, Acti9 Smartlink SI B, Acti9 Smartlink SI D, or Acti9 Smartlink Ethernet gateways).
- One or more third-party Ethernet gateways that possess the appropriate characteristics.

Each type of connection is described further in this section.

The FDM128 display can monitor and control up to eight devices. The information displayed includes measurements, alarms, and operating assistance data.

For ease of installation, a device discovery function is embedded in the FDM128 display.

Number and Nature of Connected Devices

Up to eight devices from the following list can be monitored simultaneously:

- Masterpact MTZ circuit breakers
- Masterpact NT/NW circuit breakers or switch-disconnectors
- Compact NS 1600b-3200 circuit breakers or switch-disconnectors
- Compact NS 630b-1600 circuit breakers or switch-disconnectors
- PowerPact P- and R-frame circuit breakers
- Compact NSX circuit breakers or switch-disconnectors
- PowerPact H-, J-, and L-frame circuit breakers
- Acti9 Smartlink SI B
- Acti9 Smartlink SI D
- Acti9 Smartlink Modbus
- PowerTag Link
- PowerTag Link HD

Monitored Devices Through Acti9 Smartlink SI B

When an Acti9 Smartlink SI B is connected to the FDM128 display, the status of the devices connected through the Acti9 Smartlink SI B can be viewed on the FDM128 display.

The status of the following devices can be viewed on the FDM128 display:

- Acti9 iOF+SD24 and OF+SD24 indication auxiliaries
- Acti9 OF24 indication auxiliaries
- Acti9 SD24 indication auxiliaries
- Acti9 iACT24 and iATL24 auxiliaries for contactors and impulse relays in the Acti9 range
- Acti9 RCA iC60 remote control module with Ti24 interface
- Acti9 Reflex iC60 integrated control circuit breaker with Ti24 interface
- Acti9 PowerTag energy sensors, which are directly mounted on a Acti9 circuit breaker and communicate with the Acti9 Smartlink SI B through wireless communication. Refer to the Component Part Numbers for the list of Acti9 PowerTag energy sensors (*see page 21*).
- PowerTag NSX energy sensors, which are directly mounted on a Compact NSX circuit breaker and communicate with the Acti9 Smartlink SI B through wireless communication. Refer to the Component Part Numbers for the list of PowerTag NSX energy sensors (*see page 21*).
- iEM2000T, iEM3110, iEM3155, iEM3210, and iEM3255 energy meters
- Compact NSX OF+SD indication auxiliaries

NOTE: The Acti9 Smartlink product range is not available in the following countries: United States, Canada, Mexico. Consult the catalog for the list of products available in your country.

Monitored Devices Through Acti9 Smartlink SI D, PowerTag Link, or PowerTag Link HD

When an Acti9 Smartlink SI D, PowerTag Link, or PowerTag Link HD is connected to the FDM128 display, the status of the devices connected through the Acti9 Smartlink SI D, PowerTag Link, or PowerTag Link HD can be viewed on the FDM128 display.

The status of the following devices can be viewed on the FDM128 display:

- Acti9 PowerTag energy sensors, which are directly mounted on a Acti9 circuit breaker and communicate with the Acti9 Smartlink SI D through wireless communication. Refer to the Component Part Numbers for the list of Acti9 PowerTag energy sensors (*see page 21*).
- PowerTag NSX energy sensors, which are directly mounted on a Compact NSX circuit breaker and communicate with the Acti9 Smartlink SI D through wireless communication. Refer to the Component Part Numbers for the list of PowerTag NSX energy sensors (*see page 21*).

NOTE: The Acti9 Smartlink product range is not available in the following countries: United States, Canada, Mexico. Consult the catalog for the list of products available in your country.

Remote Display on iOS or Android Smartphone or Tablet

The contents displayed by FDM128 display can be remotely displayed on an iOS or Android smartphone or tablet using the Vijeo Design'Air app. The Vijeo Design'Air app requires a Wi-Fi access point in the switchboard.


Download the Vijeo Design'Air app from the App Store or Google Play. For more information about the app, search for Vijeo Design'Air on www.schneider-electric.com.

Follow these steps to set up remote display on a smartphone or tablet.

Step	Action
1	Download the Vijeo Design'Air app from the App Store or Google Play onto an iOS or Android smartphone or tablet.
2	Connect the smartphone or tablet to the switchboard Wi-Fi.
3	Using the Vijeo Design'Air app, scan for FDM128 displays that are available in the Wi-Fi network.
4	Select an FDM128 display. The FDM128 display is mirrored on the smartphone or tablet.

Consider using the WIFER accessory to create a temporary Wi-Fi access point quickly and easily, without additional communication settings. For information about WIFER, see the *TCSEGWB13FA0 Portable Battery Powered Wi-Fi Access Point Instruction Sheet*.

The below figure shows a simple architecture with WIFER connection.

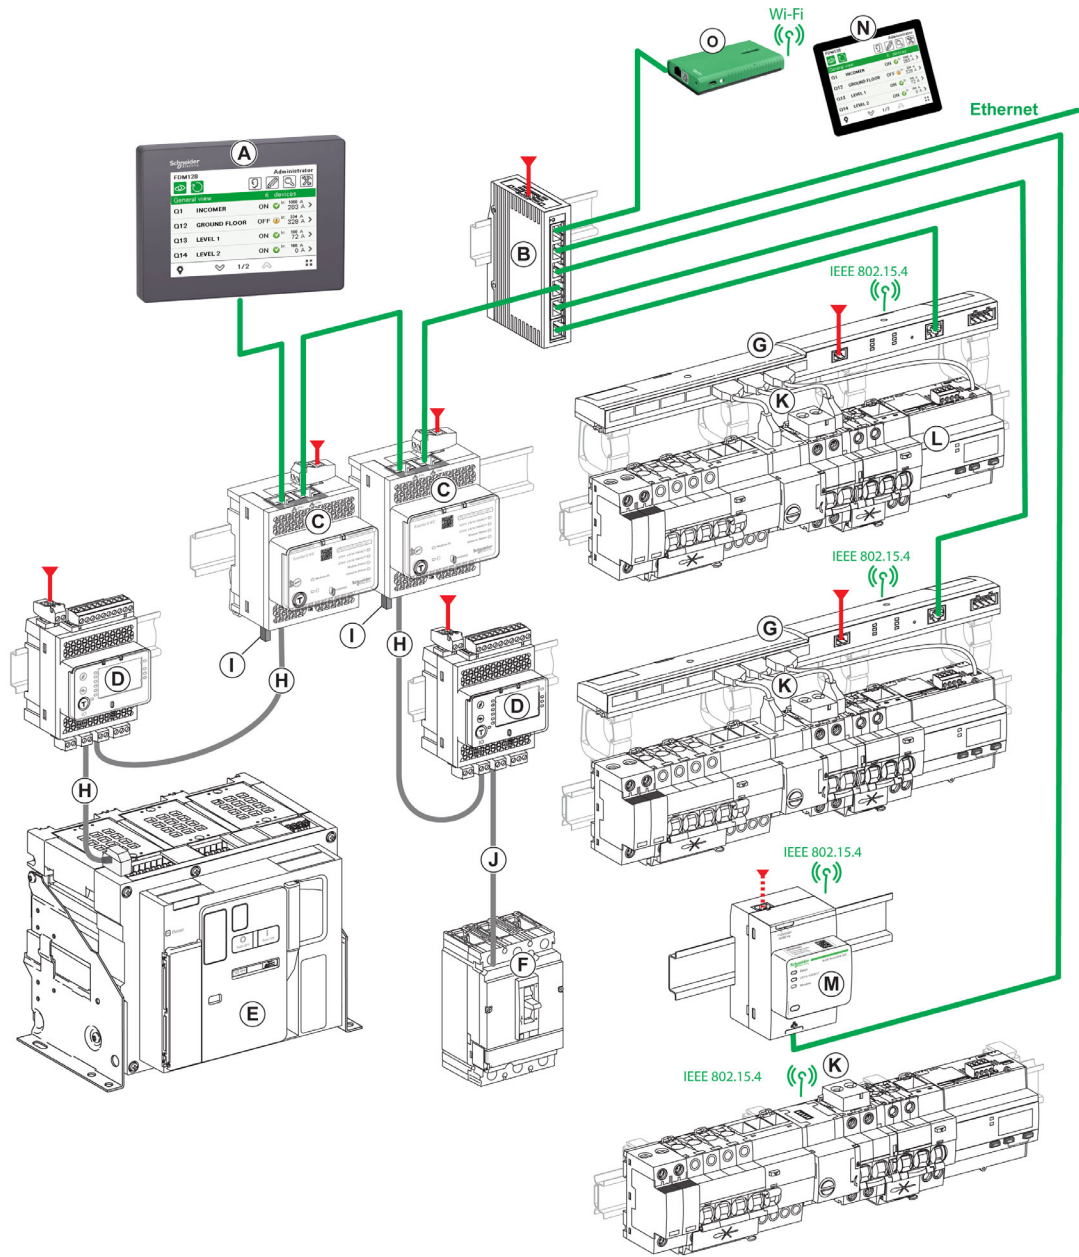


- | | |
|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <p>A FDM128 Ethernet display for eight devices</p> <p>B ConneXium switch</p> <p>C IFE Ethernet interface for one circuit breaker</p> <p>D I/O input/output application module for one circuit breaker</p> <p>E Masterpact MTZ fixed circuit breaker</p> <p>F Compact NSX, PowerPact H-, J-, or L-frame circuit breaker</p> <p>G Acti9 Smartlink SI B</p> <p>H ULP cord</p> <p>I ULP line termination</p> <p>J NSX cord</p> | <p>K Acti9 PowerTag energy sensor</p> <p>L Acti9 iEM energy meter</p> <p>M Acti9 Smartlink SI D</p> <p>N Smartphone or tablet</p> <p>O WIFER access point</p> <p>— Ethernet</p> <p>— Modbus-SL</p> <p>— 24 Vdc</p> <p>- - - 110/230 Vac</p> |
|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

Architecture Examples

FDM128 Display Connected to an IFE Server

The following diagram is an example of an IFE- based network architecture:

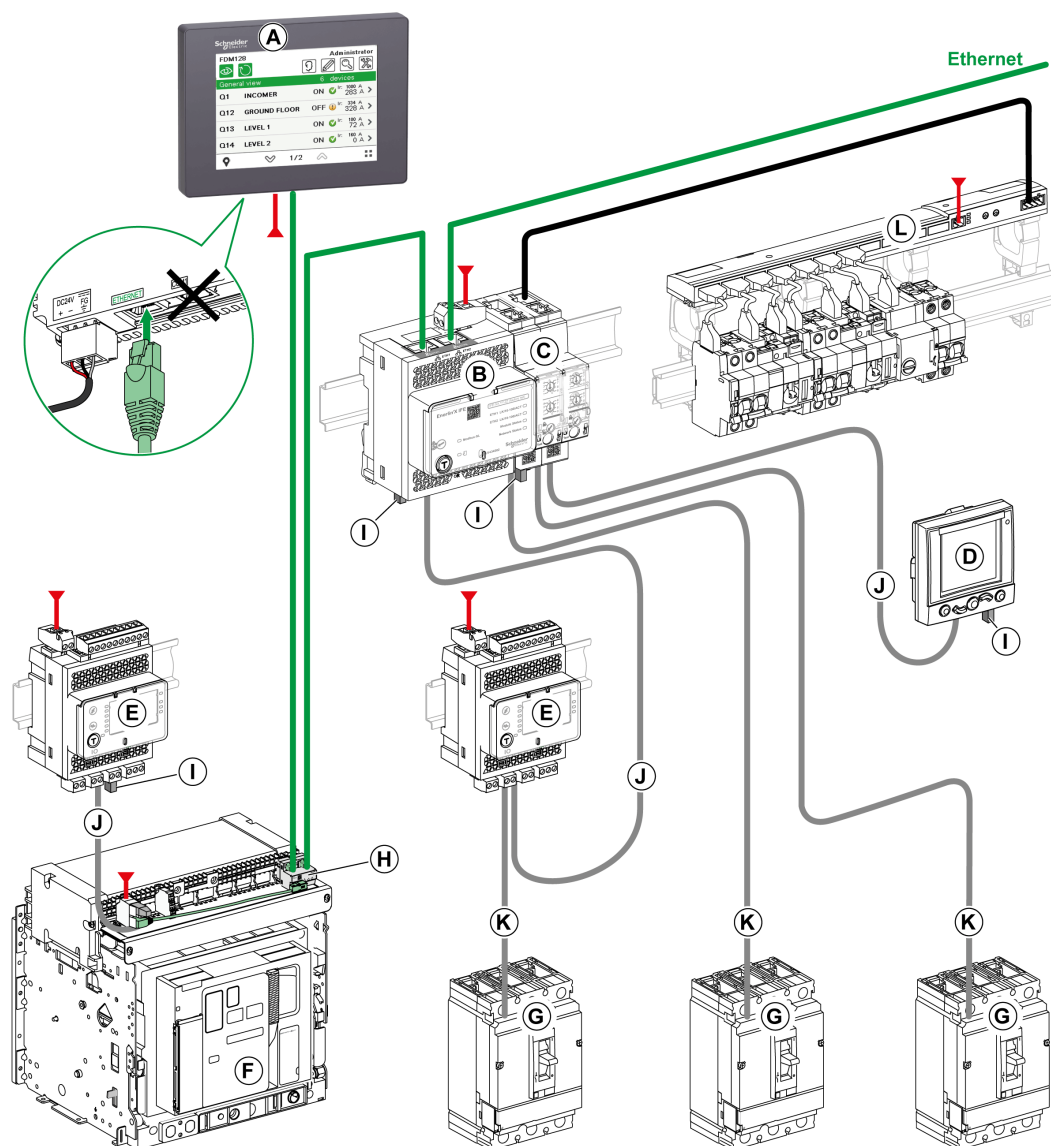


- A** FDM128 Ethernet display for eight devices
- B** IFE Ethernet switchboard server
- C** IFM Modbus-SL interface for one circuit breaker
- D** FDM121 ULP display for one circuit breaker
- E** I/O input/output application module for one circuit breaker
- F** Masterpact MTZ drawout circuit breaker
- G** Compact NSX, PowerPact H-, J-, or L-frame circuit breaker

- H** EIFE embedded Ethernet interface for one Masterpact MTZ drawout circuit breaker
- I** ULP line termination
- J** ULP cord
- K** NSX cord
- L** Acti9 Smartlink Modbus

- Ethernet
- Modbus-SL
- 24 Vdc

FDM128 Display Connected to an Acti9 Smartlink SI B Gateway


The following diagram is an example of an Acti9 Smartlink SI B network architecture, in a floor switchboard application:

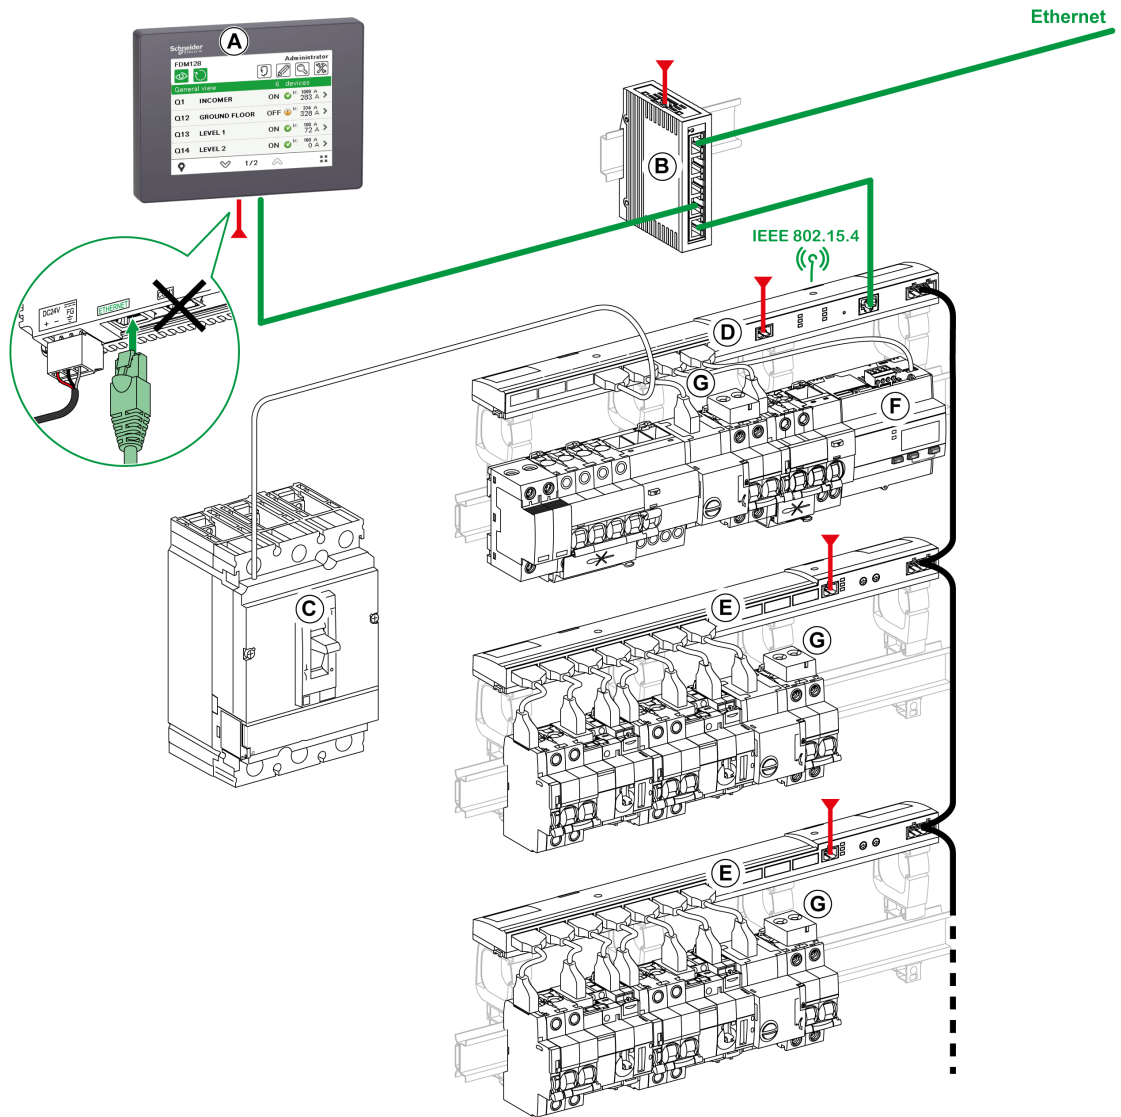

- A** FDM128 Ethernet display for eight devices
- B** ConneXium switch
- C** Compact NSX, PowerPact H-, J-, or L-frame circuit breaker
- D** Acti9 Smartlink SI B
- E** Acti9 Smartlink Modbus
- F** Acti9 iEM energy meter
- G** Acti9 PowerTag energy sensor
- Ethernet
- Modbus-SL
- 24 Vdc
- TI24 cord

FDM128 Display Connected to an Acti9 Smartlink SI D Gateway


The following diagram is an example of an Acti9 Smartlink SI D wireless network architecture, in a floor switchboard application:

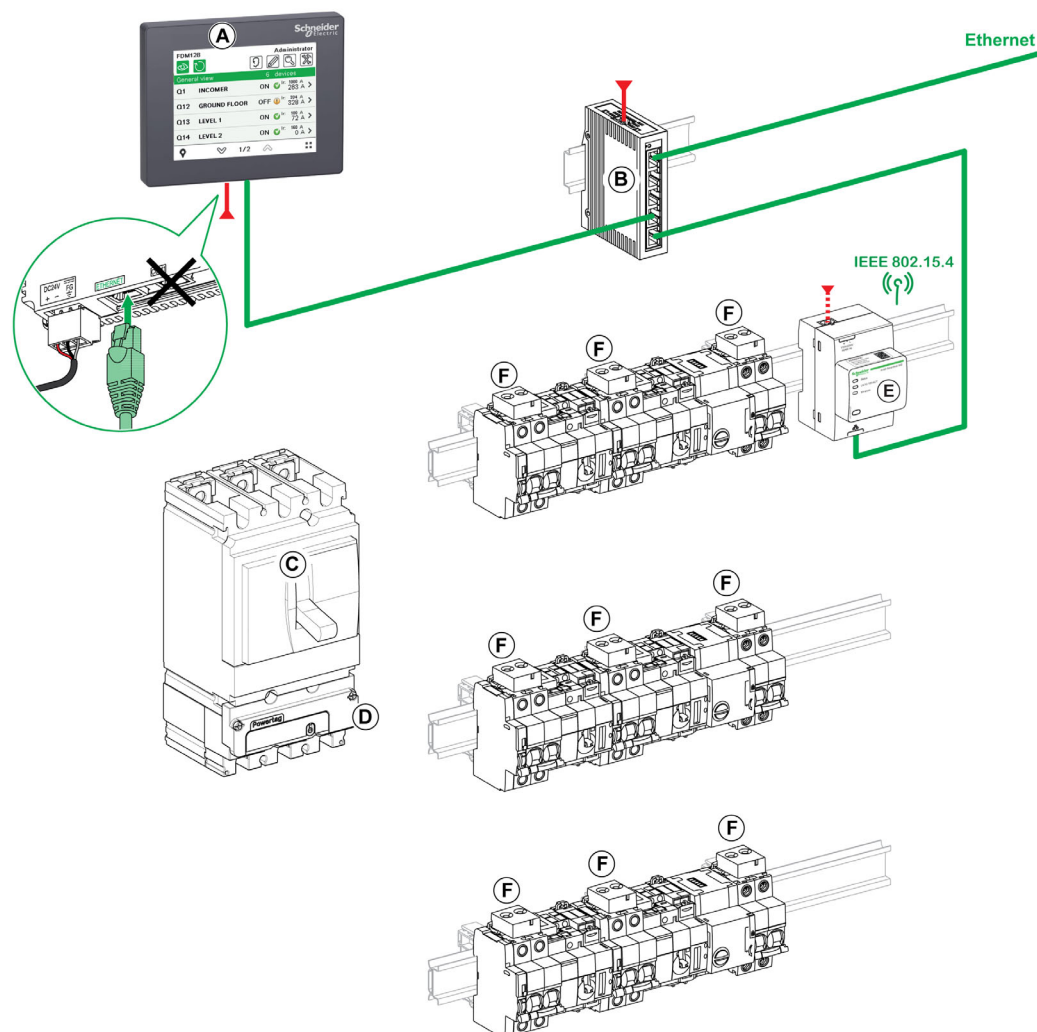

- A** FDM128 Ethernet display for eight devices
- B** ConneXium switch
- C** Compact NSX circuit breaker
- D** PowerTag NSX energy sensor
- E** Acti9 Smartlink SI D
- F** Acti9 PowerTag energy sensor
- Ethernet
- 24 Vdc

FDM128 Display Connected to a PowerLogic EGX300 or EGX100 Ethernet Gateway


The following diagram is an example of a network architecture with a PowerLogic EGX300 Ethernet gateway:

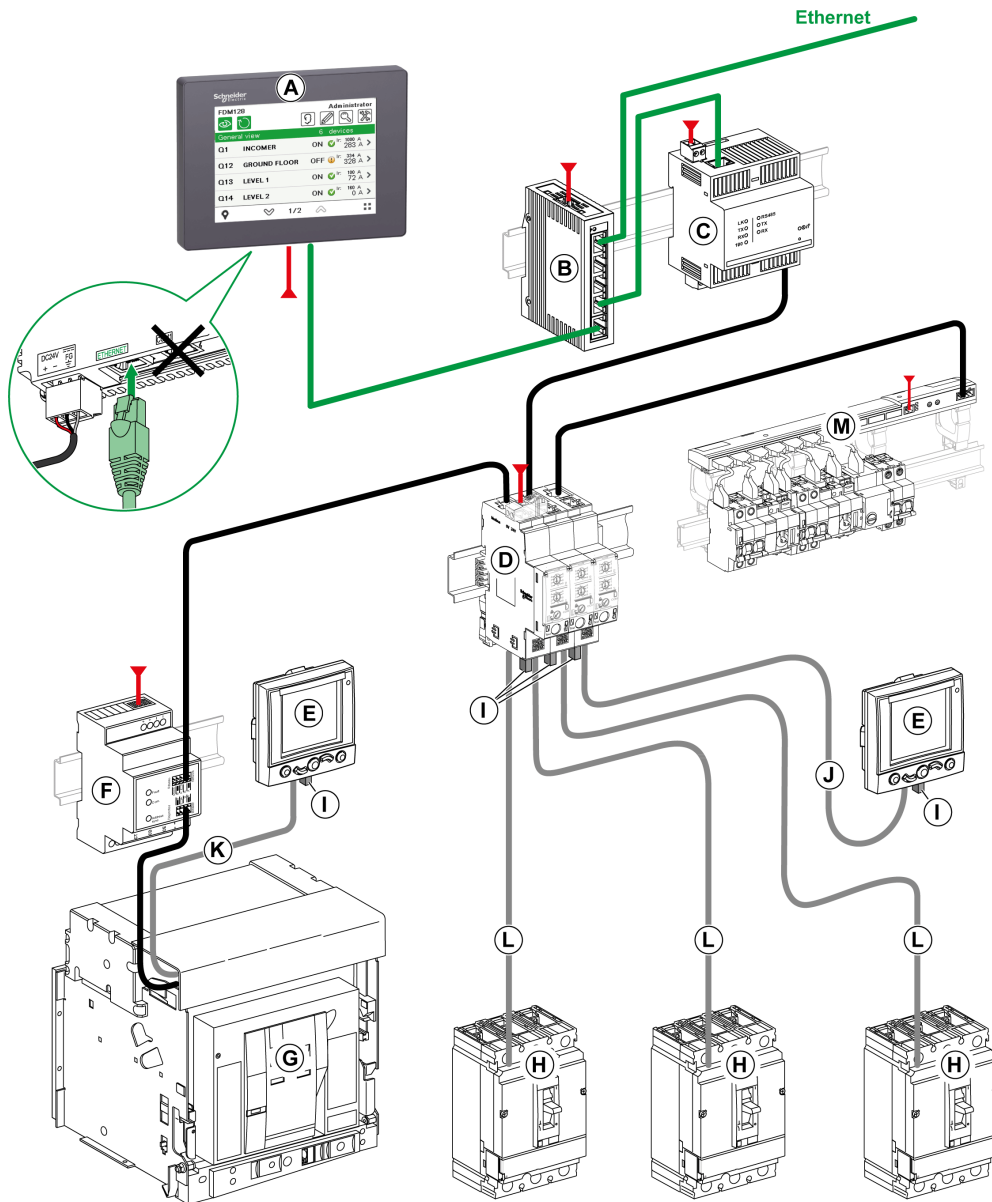

- | | |
|--------------------------------------------------------------------|---------------------------------|
| A FDM128 Ethernet display for eight devices | I ULP line termination |
| B ConneXium switch | J ULP cord |
| C EGX300 Ethernet gateway | K BCM ULP cord |
| D IFM Modbus-SL interface for one circuit breaker | L NSX cord |
| E FDM121 ULP display for one circuit breaker | M Acti9 Smartlink Modbus |
| F CCM Modbus cradle communication module | — Ethernet |
| G Masterpact NT/NW circuit breaker | — Modbus-SL |
| H Compact NSX, PowerPact H-, J-, or L-frame circuit breaker | — 24 Vdc |

FDM128 Display Connected to Several Gateways

The following diagram is an example of architecture where the FDM128 display is connected to several gateways:

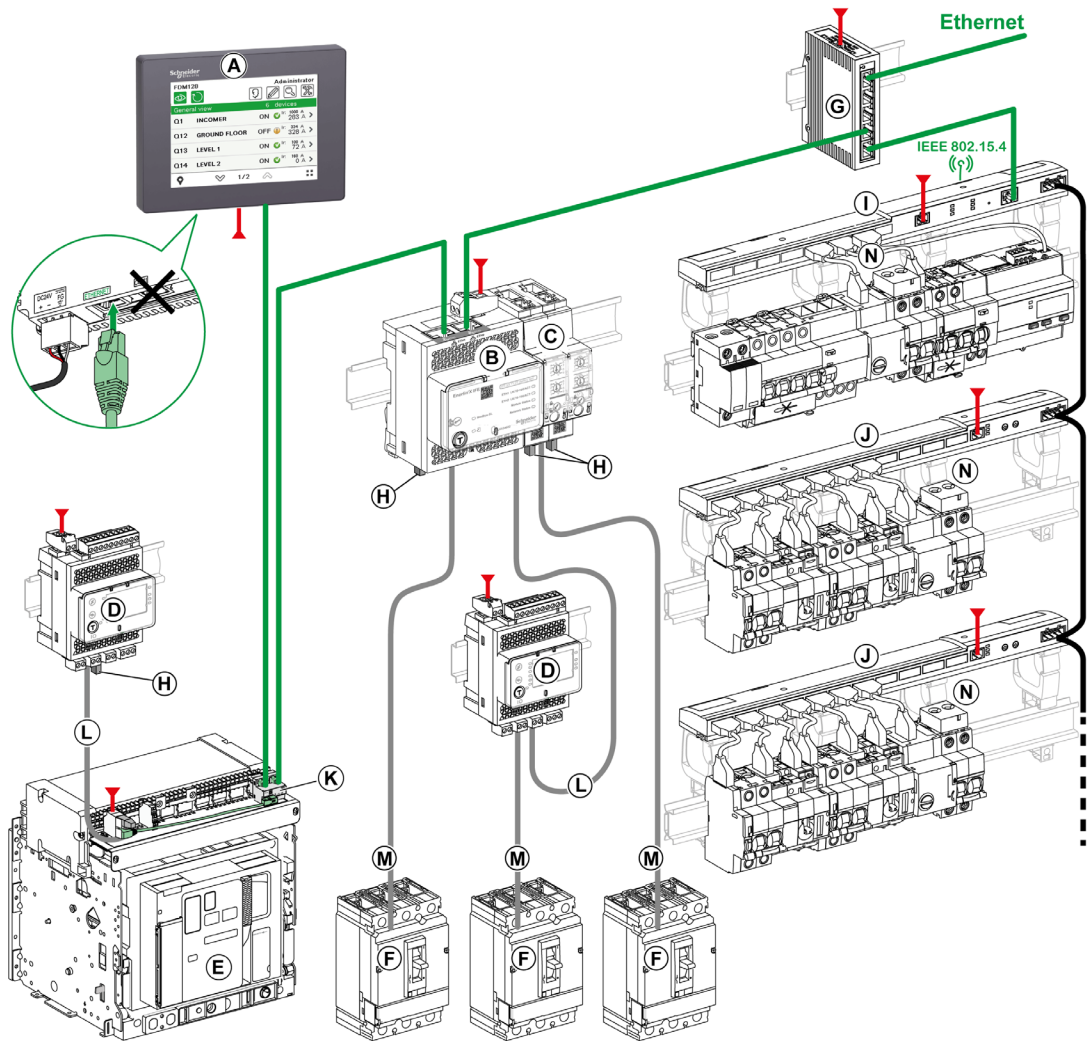

- | | |
|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <p>A FDM128 Ethernet display for eight devices</p> <p>B IFE Ethernet switchboard server</p> <p>C IFM Modbus-SL interface for one circuit breaker</p> <p>D I/O input/output application module for one circuit breaker</p> <p>E Masterpact MTZ drawout circuit breaker</p> <p>F Compact NSX, PowerPact H-, J-, or L-frame circuit breaker</p> <p>G ConneXium switch</p> <p>H ULP line termination</p> <p>I Acti9 Smartlink SI B</p> | <p>J Acti9 Smartlink Modbus</p> <p>K EIFE embedded Ethernet interface for one Masterpact MTZ drawout circuit breaker</p> <p>L ULP cord</p> <p>M NSX cord</p> <p>N Acti9 PowerTag energy sensor</p> <p>— Ethernet</p> <p>— Modbus-SL</p> <p>— 24 Vdc</p> <p>— TI24 cord</p> |
|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

Component Part Numbers

The following table lists the part numbers for the components in the architecture diagrams:

Component	Description	Part Number
FDM128 Ethernet display for eight devices	–	LV434128
STU 5in7 front module spare part	–	HMIS85
IFE Ethernet interface for one circuit breaker	–	LV434001
IFE Ethernet switchboard server	–	LV434002
EIFE embedded Ethernet interface for one Masterpact MTZ drawout circuit breaker	EIFE embedded Ethernet interface	LV851001
	Spare part kit EIFE for one Masterpact MTZ1 drawout circuit breaker	LV851100SP
	Spare part kit EIFE for one Masterpact MTZ2/MTZ3 drawout circuit breaker	LV851200SP
IFM Modbus-SL interface for one circuit breaker	–	LV434000
FDM121 ULP display for one circuit breaker	–	<ul style="list-style-type: none"> ● TRV00121 (IEC) ● STRV00121 (UL)
I/O input/output application module for one circuit breaker	–	LV434063
ULP line termination	10 ULP line terminations	TRV00880
ULP cord	L = 0.3 m (0.98 ft)	TRV00803
	L = 0.6 m (1.97 ft)	TRV00806
	L = 1 m (3.28 ft)	TRV00810
	L = 2 m (6.56 ft)	TRV00820
	L = 3 m (9.84 ft)	TRV00830
	L = 5 m (16.40 ft)	TRV00850
BCM ULP cord	L = 0.35 m (1.15 ft)	LV434195
	L = 1.3 m (4.26 ft)	LV434196
	L = 3 m (9.84 ft)	LV434197
TI24 cord	-	A9XCAS06
NSX cord	L = 0.35 m (1.15 ft)	LV434200
	L = 1.3 m (4.27 ft)	LV434201
	L = 3 m (9.84 ft)	LV434202
Acti9 Smartlink SI B	–	A9XMZA08
Acti9 Smartlink Modbus	–	A9XMSB11
Acti9 Smartlink SI D	–	A9XMWA20
PowerLogic EGX300 Ethernet gateway	–	<ul style="list-style-type: none"> ● EGX300 (Schneider Electric) ● EGX300SD (Square D)
iEM2000T energy meter	Single-phase energy meter without display	A9MEM2000T
iEM3110 energy meter	Three-phase energy meter with display	A9MEM3110
iEM3155 energy meter	Three-phase energy meter with display	A9MEM3155
iEM3210 energy meter	Three-phase energy meter with display	A9MEM3210
iEM3255 energy meter	Three-phase energy meter with display	A9MEM3255

Component	Description	Part Number
Acti9 PowerTag energy sensor	One-phase wireless energy sensor	A9MEM1520
	One-phase and neutral wireless energy sensor	A9MEM1521
	One-phase and neutral wireless energy sensor	A9MEM1522
	Three-phase wireless energy sensor	A9MEM1540
	Three-phase and neutral wireless energy sensor	A9MEM1541
	Three-phase and neutral wireless energy sensor	A9MEM1542
	One-phase and neutral wireless energy sensor	A9MEM1560
	One-phase and neutral wireless energy sensor	A9MEM1561
	One-phase and neutral wireless energy sensor	A9MEM1562
	One-phase and neutral wireless energy sensor	A9MEM1563
	Three-phase and neutral wireless energy sensor	A9MEM1570
	Three-phase and neutral wireless energy sensor	A9MEM1571
	Three-phase and neutral wireless energy sensor	A9MEM1572
	PowerTag NSX Wireless Communication Energy Sensor 3P for Compact NSX100–250, Compact INS250, Compact INV100–250	Three-phase wireless communication energy sensor
PowerTag NSX Wireless Communication Energy Sensor 4P for Compact NSX100–250, Compact INS250, Compact INV100–250	Four-pole wireless communication energy sensor	LV434021
PowerTag NSX Wireless Communication Energy Sensor 3P for Compact NSX400–630, Compact INS320–630, Compact INV320–630	Three-phase wireless communication energy sensor	LV434022
PowerTag NSX Wireless Communication Energy Sensor 4P for Compact NSX400–630, Compact INS320–630, Compact INV320–630	Four-pole wireless communication energy sensor	LV434023

NOTE: The Acti9 Smartlink product range is not available in the following countries: United States, Canada, Mexico. Consult the catalog for the list of products available in your country.

Recommendations

Critical Systems, Alarms, and Handling Requirements

Critical alarm indicators and system functions require independent and redundant hardware protection and/or mechanical interlocks.

If the FDM128 Ethernet display for eight devices becomes inoperative due to some reason (for example, due to an inoperative backlight), it may be difficult or impossible to identify a function. Functions that may present a hazard if not immediately executed, such as an emergency stop, must be provided independently of the FDM128 display.

The design of the control system must take into account simultaneously:

- An inoperative FDM128 display.
- The operator inability to control the circuit breakers or to respond to detected errors by using the FDM128 display.

Handling the LCD Panel

The following characteristics are specific to the LCD panel and are considered normal behavior:

- LCD screen may show unevenness in the brightness of certain images. These images may appear differently when seen from outside the specified viewing angle. Extended shadows, or cross-talk, may also appear on the sides of screen images.
- LCD screen pixels may contain black and white-colored spots and color display may seem to have changed over time.
- When the same image is displayed for a long period, an after-image may appear when the image changes. If this happens, turn off the FDM128 display, wait 10 seconds, and then restart it.

NOTE: Do not display the same image for a long time, change the screen image periodically.

⚠ CAUTION
<p>SERIOUS EYE AND SKIN INJURY</p> <p>The liquid present in the LCD panel contains an irritant:</p> <ul style="list-style-type: none"> • Avoid direct skin contact with the liquid. • Wear gloves when you handle a broken or leaking FDM128 display. • Do not use sharp objects or tools in the vicinity of the LCD touch panel. • Handle the LCD panel carefully to prevent puncture, bursting, or cracking of the panel material. <p>If the panel is damaged and any liquid comes in contact with your skin, immediately rinse the area with running water for at least 15 minutes.</p> <p>If the liquid gets in your eyes, immediately rinse your eyes with running water for at least 15 minutes and consult a doctor.</p> <p>Failure to follow these instructions can result in injury or equipment damage.</p>

Using the Touch Panel Correctly

⚠ WARNING
<p>UNINTENDED EQUIPMENT OPERATION</p> <ul style="list-style-type: none"> • Operate the touch panel with only one finger. • Do not activate two or more points of the touch panel simultaneously. <p>Failure to follow these instructions can result in death, serious injury, or equipment damage.</p>

Use only one finger to select an object on the touch panel.

If the touch panel receives pressure at two or more points at the same time, an unintended object could be selected.

Certifications and Standards

Introduction

Schneider Electric has submitted this product for independent testing and qualification by third-party listing agencies. These agencies have certified this product as meeting the following standards.

The FDM128 display is certified by the Underwriters Laboratories according to UL 508 for Industrial Control Equipment.

The FDM128 display is designed to comply with merchant navy bridge and deck requirements (refer to the Schneider Electric website for installation guidelines).

For detailed information, contact your local distributor or see the catalog and marking on the product.

Compliance with Standards

The FDM128 display complies with the following standards:

- IEC 60947-1 general rules
- UL 508, Industrial Control Equipment
- CSA C22.2 No. 14-05 Industrial Control Equipment
- IACS E10

Hazardous Substances


The FDM128 display is designed for compliance with the following directives and standards:


- WEEE, Directive 2002/96/EC
- RoHS, Directive 2002/95/EC
- RoHS China, Standard SJ/T 11363-2006

UL Conditions of Acceptability for the FDM128 Display

The FDM128 display is suitable for use in hazardous locations in accordance with Class 1, Division 2 standards. All relevant local, state, and regional codes must be followed.

CE Markings

This product conforms to the requirements for applying the  label.

 WARNING
RISK OF EXPLOSION IN HAZARDOUS LOCATIONS <ul style="list-style-type: none">● Verify that the power, input, and output (I/O) wiring are in accordance with Class I, Division 2 wiring methods.● Do not substitute components that could impair compliance to Class I, Division 2.● Do not connect or disconnect equipment unless power has been switched off or the area is known to be non-hazardous.● Securely lock externally connected units and each interface before turning on the power supply.● Do not disconnect while the circuit is live.● Front panel is a potential electrostatic charging hazard. Wipe the front panel of the terminal with a damp cloth before turning on. Failure to follow these instructions can result in death, serious injury, or equipment damage.

General Specifications

Electrical Characteristics

Characteristic	Value
Rated input voltage	24 Vdc
Input voltage limits	20.4–28.8 Vdc
Acceptable voltage drop	≤ 7 ms
Power consumption	≤ 6.8 W
In-rush current	≤ 30 A
Voltage endurance between power terminal and functional ground (FG)	1,000 Vac 20 mA for 1 minute
Insulation resistance between power terminal and functional ground (FG)	10 MΩ or higher at 500 Vdc

Physical Characteristics

Characteristic	Value
Ambient operating temperature (cabinet interior and panel face)	–10 °C to +55 °C (14–131 °F)
Storage temperature	–40 °C to +85 °C (–40 °F to +185 °F)
Relative humidity	95 % without condensation (non-condensing, wet bulb temperature 55 °C (131 °F) or less)
Air purity (dust)	≤ 0.1 mg/m ³ (≤ 10 ⁻⁷ oz/ft ³) (non-conductive levels)
Corrosive gases	Free of corrosive gases
Atmospheric pressure	800–1,114 hPa (2000 m (6,500 ft) or lower)

Mechanical Characteristics

Characteristic	Value
Vibration immunity (operating)	IEC 60068-2-6 1 gn (1 g) 5–150 Hz (maximum 3.5 mm (0.13 in.))
Protection (front panel)	IP65 (IEC 60529)
Protection structure	Type 4X indoor, installed on a panel
Protection (rear panel)	IP20 (IEC 60529)
Shock immunity (operating)	IK05 (IEC 60068-2-75) 15 gn (1 g) 11 ms
Cooling method	Natural air circulation
Weight	0.25 kg (0.55 lb.)
Color	Front bezel: dark gray
Material	PC/PBT and PAA

Electrical Environment Specifications

Characteristic	Value
Noise immunity	Noise voltage: 1,000 Vp-p Pulse width: 1 μs Rising time: 1 ns
High energy surges	2 kV CM, 0.5 kV DM on DC power supply 2 kV CM on shielded cables
Electrical fast transient burst	2 kV CM, 2 kV DM on DC power supply 1 kV on shielded cables
Radiated radio frequency electromagnetic field	10 V/m / 80 MHz to 2 GHz Sinus amplitude modulated 80 % 1 kHz + internal clock frequency
CM: Common Mode DM: Differential Mode	

Characteristic	Value
Electrostatic discharge immunity	8.8 kV direct contact 12 kV air contact
Power frequency magnetic field	100 A/m continuous
Grounding	D-type grounding (SG-FG connected)
CM: Common Mode DM: Differential Mode	

Functional Specifications

Display Characteristics

Characteristic	Description
Type	Color TFT LCD
Resolution (pixels)	320 x 240 (QVGA)
Active display area (W x H)	115.2 x 86.4 mm (4.53 x 3.40 in.)
Display colors	65,536 colors
Backlight	LED backlight
	Lifetime: 50,000 hours before dimmed to 50 % brightness Ambient temperature: 25 °C (77 °F)
	Non-exchangeable
Brightness adjustment	16 levels of adjustment available via touch panel in the General settings menu.
Brightness on LCD surface	White LED: 350 cd/m ² (33 cd/ft ²) maximum
View angle	<ul style="list-style-type: none"> ● 80 degrees: left, right ● 70 degrees: up ● 70 degrees: down (Test condition: contrast ratio > 2)

Clock

Variations in operating conditions can cause a clock shift from -380 seconds to +90 seconds per month.

Touch Panel

Characteristic	Description
Type	Analog resistance film type (metal tab, golden plated)
Lifetime	1 million touches or more

Interface Specifications

USB1 Interface (USB Peripherals)

HOST Interface Characteristic		Value
Transmission speed	High speed	480 Mbps
	Full speed	12 Mbps
	Low speed	1.5 Mbps
Maximum current supplied		250 mA
Maximum transmission distance		5 m (16.40 ft) at 12 Mbps
Connector		USB Type-A V2.0

Ethernet Interface

LED	Description
Green 1	Link state
Green 2	Activity

Chapter 2

Presentation

What Is in This Chapter?


This chapter contains the following topics:

Topic	Page
Screen	30
Menu Structure	32
Browsing	33

Screen

Overview

The following figure describes the display area:

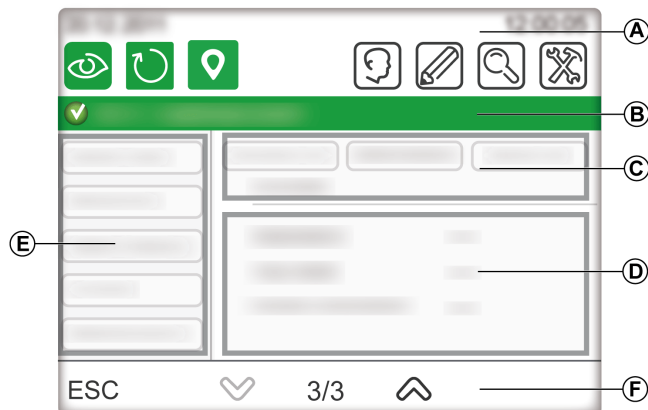








- A Header
- B Title bar
- C Headpiece
- D Right area
- E Left area
- F Footer

Header

The header (A) is composed of the following elements:

- Product name (FDM128) and access profile
- Direct-access icons to the main functions

Icon	Description
	Go to General view menu (<i>see page 46</i>).
	Refresh the display of the names of connected devices.
	Locate the device (or intelligent modular unit) (<i>see page 47</i>).
	Go to Login/Password settings menu (<i>see page 44</i>).
	Go to Editing devices menu (<i>see page 40</i>).
	Go to Communication settings menu (<i>see page 37</i>).
	Go to General settings menu (<i>see page 37</i>).

Title Bar

The title bar (B) contains the title of the screen or name of the selected device.

Main Area

The main area includes the headpiece (C), the right area (D), and the left area (E).

The following table describes the parts of the main display area:

Position	Description	Use
Headpiece (C)	Right area title	Navigate through the submenus items.
Right area (D)	Information	Displays information of the selected submenu or submenu item. Information screens depend on the device.
Left area (E)	Submenus, if applicable	Navigate through the submenus. Various contents depending on the device.

Footer

The footer (F) contains some navigation icons depending on the selected screen.

The icons are listed in the appendix ([see page 69](#)).

If there is more than one page in the selected submenu, the screen number is displayed. The screen number format is X/Y, where X is the current screen number and Y is the total number of screens.

Menu Structure

Menu Types

FDM128 menus are divided into two types:

- Settings menus: blue title bar background
- Operation menus: green title bar background

Settings Menus

Settings menus are composed of two sequences:

- General settings sequence
- Settings sequence for devices: communication settings, device discovery, and editing devices

The setting wizard (*see page 37*) of the FDM128 display guides you through these sequences.

General View

The **General view** menu is used to monitor up to eight devices at the same time.

For further information, refer to the general view topic (*see page 46*).

Device View

Device view menus are only accessible from the **General view** menu.

The **Device view** for circuit breakers menu is composed of the following submenus:

- **Quick view** (*see page 52*)
- **Measures** (*see page 52*)
- **Alarm history** (*see page 52*)
- **Control** (*see page 53*)
- **Maintenance** (*see page 54*)
- **I/O1 and I/O2** (*see page 54*)

The **Device view** for Acti9 Smartlink SI B menu is composed of the following submenus:

- **Status**
- **Counters** (energy, water, gas...)
- **Control** (*see page 56*)
- **PowerTag** (*see page 56*)

The **Device view** for Acti9 Smartlink SI D menu is composed of **PowerTag** submenu (*see page 56*).

Browsing

Navigate Through the Screens

In a menu or a submenu, you can navigate through the screens by using the footer icons.


The browsing actions are executable by pressing the icons. Refer to the icon list (*see page 69*) to get the meaning of each of them.

The icons are available depending on the network configuration, the selected menu, and the possible actions.

NOTE: A gray icon means that the option or action is not available in the actual context.

Data Entry

When an action requires an alphanumeric entry (for example, typing a designation), the following touch keyboard is displayed:

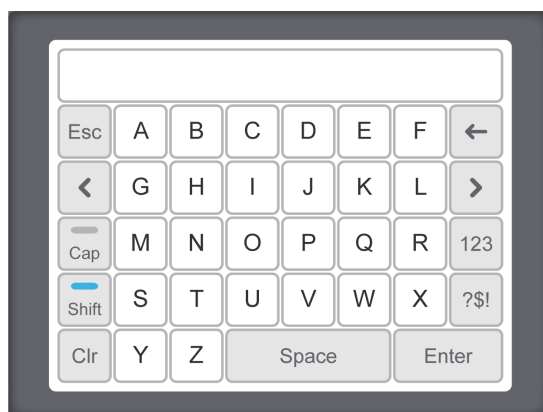

When an action requires a numeric entry (for example, typing an IP address), the numeric keyboard is displayed.

NOTE: You can also display the numeric keyboard by pressing the **123** key on the alphanumeric keyboard.

Chapter 3

Configuration

What Is in This Chapter?

This chapter contains the following topics:

Topic	Page
Prerequisites	36
Setting Wizard	37
Settings During Operation	40

Prerequisites

Ethernet Network

The Ethernet connections of the IP devices in the Ethernet network must be correctly installed and configured.

NOTE: To connect to an Ethernet device outside the subnetwork a popup message requests your confirmation to connect to another subnetwork.

The Ethernet network may include the following IP devices:

- EGX300 or EGX100 gateways
- Link150 gateways
- IFE or EIFE interfaces
- IFE server
- Acti9 Smartlink Ethernet devices
- Acti9 Smartlink SI B
- Acti9 Smartlink SI D
- PowerTag Link
- PowerTag Link HD
- Third-party gateways

For further information, refer to the corresponding user guides (*see page 8*).

Modbus Serial Line Network

The devices in the Modbus serial line network must be correctly installed and configured with the following Modbus parameters:

Parameter	Value
Modbus address (slaves only)	The Modbus address of each monitored device must be unique. The range of Modbus addresses is [1-247].
Physical interface	RS-485 2-wire
Transmission mode	RTU (Automatic)
Communication speed	The communication speed must be the same for all devices.
Parity	The parity must be the same for all devices.
Response time-out	1 second

To check the Modbus parameters of each monitored device, refer to (*see page 8*):

- The *BCM ULP Circuit Breaker Communication Module Installation Manual*
- The *IFM Modbus-SL Interface for One Breaker - Instruction Sheet*
- The *Acti9 Smartlink Modbus Communication System User Manual*

Architecture Network Limitation

The limitations of the architecture network are as follows:

- Modbus serial line time out in the IFE device should be 1 s
- To avoid communication error or not to overload the network, a maximum of two FDM128 displays must be connected to the same IFE device. The FDM128 displays can scan data of the same circuit breaker.

Setting Wizard

Wizard Presentation

A setting wizard is automatically launched at first power-on to help you set up the FDM128 display.

The setting wizard guides you through three main configuration parts:





1. FDM128 display general settings
2. Communication settings depending on the network architecture
3. Editing device function

Each configuration part is described further in this section.

It is recommended that you update the communication settings each time you modify the communication network.

General Settings

The following table describes the sequence of steps presented by the setting wizard to configure the FDM128 general settings:

Step	Screen	Action
1	Welcome	Touch the screen to start the wizard.
2	Language	Select a language. In the footer, press  to access the next step.
3	Refresh Rate	Press one of the two possible ways to set manually the real-time sample rate in the General View : <ul style="list-style-type: none"> ● Fast (default setting): refresh every 3 s for circuit breakers and 5 s for Acti9 Smartlink. ● Slow: refresh every 10 s for all devices. Example: <ul style="list-style-type: none"> ● 8 Masterpact MTZ circuit breakers connected in Fast refresh mode has a maximum duration equal to $(8 \times 3) = 24$ seconds. ● 8 Masterpact MTZ circuit breakers connected in Slow refresh mode has a maximum duration equal to $(8 \times 10) = 80$ seconds. In the footer, press  to access the next step.
4	Phase labels	Press one of the two possible ways to represent the phases 1,2,3,N (default setting), or A,B,C,N. In the footer, press  to access the next step.
5	Units of measurement I/O	Select the units of measurement for the analog input of the I/O modules: <ul style="list-style-type: none"> ● The unit of temperature (°C (default setting) or °F) ● The unit of volume (m³ (default setting) or gallon US or gallon UK) In the footer, press  to access the next step.
6	Brightness	Press the -/+ icons to adjust the brightness level of the display. In the footer, press Finish . The setting wizard displays the Selection of the communication architecture screen to allow you to set up the FDM128 communication. Follow the communication settings procedure that corresponds to your network architecture.

Communication Settings for a Single Gateway-Based Architecture

This procedure is applicable when:

- The FDM128 display is connected to an IFE interface (*see page 19*) or an EIFE interface (*see page 15*)
- The FDM128 display is connected to an Acti9 Smartlink SI B or Acti9 Smartlink SI D gateway (*see page 16*)
- The FDM128 display is connected to an EGX gateway

The FDM128 setting wizard guides you through the following steps:

Step	Action
1	Configure the FDM128 display within the network. Set the following parameters: <ul style="list-style-type: none"> ● The FDM128 IP address ● The subnet mask ● The default gateway IP address
2	Press YES to indicate that the FDM128 display is connected to a gateway.
3	Set the IP address of the gateway.
4	Enter Modbus range between 1–247.
5	Press Start to launch the device discovery sequence (see page 39). Up to 16 devices are displayed.
6	Select up to eight devices among the devices displayed.
7	If you select fewer than eight devices among the devices displayed, you are prompted for an additional gateway. Press NO .
8	If needed, you can configure manually extra IFE, EIFE, Acti9 Smartlink SI B, or Acti9 Smartlink SI D devices.
9	Press Finish . The FDM128 display can now monitor the list of selected devices. The setting wizard displays the Editing devices screen to allow you to edit the label and name of the devices.

Communication Settings for Several Gateway-Based Architectures

This procedure is applicable when the FDM128 display is connected to several gateways (see page 20).

The FDM128 setting wizard guides you through the following steps:

Step	Action
1	Configure the FDM128 display within the network. Set the following parameters: <ul style="list-style-type: none"> ● The FDM128 IP address ● The subnet mask ● The default gateway IP address
2	Press YES to indicate that the FDM128 display is connected to a gateway.
3	Set the IP address of the gateway.
4	Enter Modbus range between 1–247.
5	Press Start to launch the device discovery sequence (see page 39). Up to 16 devices are displayed.
6	Select up to eight devices among the devices displayed.
7	If you select fewer than eight devices among the devices displayed, you are prompted for an additional gateway. If you have another gateway to configure, press YES and go back to step 3.
8	When you have configured all gateways, press NO . You can now manually configure extra IFE, EIFE, Acti9 Smartlink SI B, or Acti9 Smartlink SI D devices.
9	Press Finish . The FDM128 display can now monitor the list of selected devices. The setting wizard displays the Editing devices screen to allow you to edit the label and name of the devices.

NOTE: Before launching the auto discovery, make sure that the Modbus serial line time out is 1 s.

Communication Settings for Several IFE, EIFE, Acti9 Smartlink SI B, or Acti9 Smartlink SI D Architecture

The procedure is applicable when the FDM128 display is connected to several IFE, EIFE, Acti9 Smartlink SI B, or Acti9 Smartlink SI D (see page 19) devices.

The FDM128 setting wizard guides you through the following steps:

Step	Action
1	Configure the FDM128 display within the network. Set the following parameters: <ul style="list-style-type: none"> ● The FDM128 IP address ● The subnet mask ● The default gateway IP address
2	Press NO to indicate that there is no gateway.

Step	Action
3	Configure manually up to eight IFE, EIFE, Acti9 Smartlink SI B, or Acti9 Smartlink SI D devices.
4	Press Finish . The FDM128 display can now monitor the list of selected devices. The setting wizard displays the Editing devices screen to allow you to edit the label and name of the devices.

Device Discovery

The device discovery feature enables detection of devices in a given Modbus range (1–247).

NOTE: The default Modbus range is 1–10.

The device discovery sequence detects up to 16 devices on the network as per the given Modbus range. These devices are displayed sorted in ascending order of Modbus address, with the Modbus address indicated in the first column.

The device discovery sequence time varies depending on the Modbus range selected.

NOTE: The 16 detected devices are those with the 16 first Modbus addresses.

Among the detected devices, you can select a maximum of eight devices.


The FDM128 display guides you through the following device discovery procedure:

Step	Action
1	The device discovery sequence is started during the communication settings procedure. A progress bar is displayed during the device discovery sequence. NOTE: During the device discovery, if you want to stop the discovery sequence, press Cancel . It will take you back to the Device Discovery page.
2	In the list of the discovered devices, select the check box for each device you want to include. Devices previously selected in a device discovery loop are displayed in gray.
3	Press Finish . The Editing devices screen appears.

Manual Configuration of IFE, EIFE, Acti9 Smartlink SI B, and Acti9 Smartlink SI D

You configure devices manually either after a device discovery sequence, or if you do not have a IFE, EIFE, Acti9 Smartlink SI B, or Acti9 Smartlink SI D gateway.

To configure devices manually during the device settings sequence, proceed as follows:

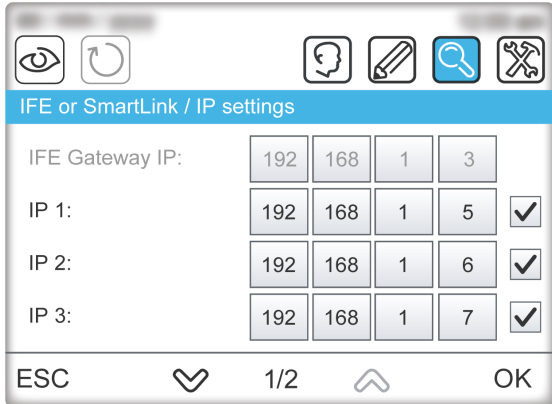Step	Action
1	On the configuration screen, tick the check boxes of the number of IFE, EIFE, Acti9 Smartlink SI B, or Acti9 Smartlink SI D devices to configure. 
2	For each selected device, set its IP address.
3	Press OK .

Power Loss

In case of power loss, the FDM128 display retains the settings.

Settings During Operation

General Settings

Setting functions that can be used during operation, without restarting the setting wizard, are:

- Modifying the general settings
- Editing devices
- Adding single IP devices manually

During operation, you can access the **General settings** menu by pressing .

Editing Devices

Limitations

When the following devices are used together, you cannot write or edit the device name:


- Masterpact with BCM module, firmware version lower than 3.2.5.
- Compact NS with BCM module, firmware version lower than 3.2.5.
- PowerPact P- and R-frame with BCM module, firmware version lower than 3.2.5.


An example network architecture is provided in this guide ([see page 18](#)).

Prerequisites

Before editing devices, you must verify that the following prerequisites are met:

- Circuit breaker must be in the remote control mode.
- Device logging in the IFE or EIFE webpage must be disabled.
- Only the following characters are allowed:
 - Upper case letters from A to Z
 - Lower case letters from a to z
 - Digits from 0 to 9
 - Hyphen -
- Before editing the name and label of the circuit breaker:
 - The EIFE intrusive command mode must be unlocked
 - The locking pad of the IFE, or IFM interface must point to the open padlock, as shown in the following graphic

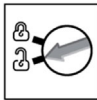

When the communication network is configured, access the **Editing devices** menu by pressing .


Use the **Editing devices** menu to:

- Provide a label for each device:
The label is defined in the **ID** field and is only displayed in the FDM128 display. The **ID** field contains up to 4 characters.
- Rename a device:
The name is defined in **Name** field and is the actual name of the device. You may need to use the device password to rename the device. The **Name** field contains up to 12 characters.

NOTE: Press **OK** to validate the settings and go back to the operation mode.

Communications Settings

During operation, you can access the **Communication settings** menu by pressing .

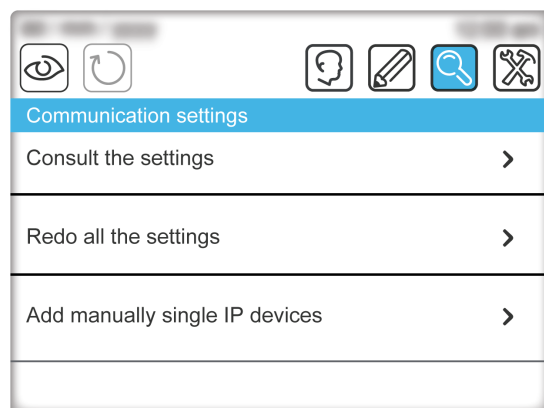

Use this menu to:

- View the present communication settings configuration.
- Restart the setting wizard (*see page 37*), beginning at the point following the general settings, where you can modify the FDM128 display settings.
- If the number of devices is less than eight, manually add an IFE interface, an EIFE interface, an Acti9 Smartlink SI B, or an Acti9 Smartlink SI D.

Password Settings

During operation, you can access the **Password settings** menu by pressing . Use this menu to view and edit user login and password settings (*see page 44*).

Chapter 4

Operation

What Is in This Chapter?

This chapter contains the following topics:

Topic	Page
Logins and Passwords	44
General View	46
Real-Time Alarms	49
Device View for Circuit Breakers and Switch-Disconnectors	51
Device View for Devices Connected to the Acti9 Smartlink	55

Logins and Passwords

Levels of Access

The FDM128 display requires login and password combinations to access the following functions:

- Monitoring functions:
By default, you do not need to log in to access monitoring functions (viewer or guest) access).
- Operation functions:
Log in as an operator to access operation functions (operator access).
- Administration, communication, and other advanced functions:
Log in as administrator to access advanced functions (administrator access).


The various functions that available at different access levels are listed in the table.

Function	Type	Guest	Operator	Administrator
IO output control	Control	No	Yes	Yes
Light and load control	Control	No	Yes	Yes
Breaker control	Control	No	No	Yes
Acti9 device control	Control	No	Yes	Yes
Reset measurement (min max, energy)	Configuration	No	Yes	Yes
Edit breaker device names	Configuration	No	No	Yes
Discovery of devices	Configuration	No	No	Yes
General settings (language, date, brightness)	Configuration	No	Yes	Yes
Configuration of login and password	Configuration	No	No	Yes
Monitoring	Monitor	Yes	Yes	Yes

NOTE: Menus and functions that are not available at an access level are grayed out.


Login Procedure

To log in to the FDM128 display, follow these steps:

Step	Action
1	Press  . The Operator/Administrator access screen opens.
2	Enter your login and password.
3	Press OK . In the screen header, you can now access the direct function icons for your level.

Logout Procedure

To log out of the FDM128 display, follow these steps:

Step	Action
1	When you are logged in to the FDM128 display, press  . The Login/Password management screen opens.
2	Press Logout .
3	When prompted to confirm logout, press YES . In the screen header, you can now access only the Login/Password function icon.






NOTE: If you do not touch any button or function on the FDM128 display for 25 minutes, you are automatically logged out.

Configuring Logins and Passwords


The predefined default user login/password combinations are:

- For the administrator: admin/admin
- For the operator: oper/oper

If you need to change a login name or password, follow these steps:

Step	Action
1	Log in as administrator. In the General view screen, in the screen header, you can now access all the direct function icons.
2	Press  . The Login/Password management screen opens.
3	Press Configuration . The Operator : login configuration screen opens.
4	Type the new login for an operator. The login: <ul style="list-style-type: none"> • Is case-sensitive. • Can contain from 1 to 16 characters. • Can contain alphanumeric characters and symbols, excluding the space character. After editing the operator login value, press  to go to the next screen. The Operator : password configuration screen opens.
5	Type the new password for an operator. The password: <ul style="list-style-type: none"> • Is case-sensitive. • Can contain from 1 to 16 characters. • Can contain alphanumeric characters and symbols, excluding the space character. After editing the operator password value, press  to go to the next screen. The Administrator : login configuration screen opens.
6	Type the new login for an administrator. The login: <ul style="list-style-type: none"> • Is case-sensitive. • Can contain from 1 to 16 characters. • Can contain alphanumeric characters and symbols, excluding the space character. After editing the administrator login value, press  to go to the next screen. The Administrator : password configuration screen opens.
7	Type the new password for an administrator. The login: <ul style="list-style-type: none"> • Is case-sensitive. • Can contain from 1 to 16 characters. • Can contain alphanumeric characters and symbols, excluding the space character. After editing the administrator password value, do one of the following: <ul style="list-style-type: none"> • Press  one or more times to go back to previous login and password configuration screens. • Press OK.
8	When prompted to confirm changes to the logins and passwords, press YES .

Login/Password Reset

You can restore the default login and password settings by pressing  and holding it down for 10 seconds.

General View

Overview

The **General view** menu allows you to monitor up to eight selected devices through summarized information.

There are two display modes:

- Icon
- List

Switch between display modes by pressing the corresponding icon in the lower right corner of the screen.

From this menu, you can reach the **Device view** screens of the monitored devices:

- Device view for Compact, PowerPact, Masterpact circuit breakers (*see page 51*).
- Device view for Acti9 Smartlink devices (*see page 55*).

Icon Mode




In the icon mode, the eight devices are displayed on one screen, each one by an icon.

To reach a **Device view**, press the corresponding icon.

NOTE: If only one device is discovered, the display, skips the **General view** and displays the **Device view** of the discovered device.

List Mode

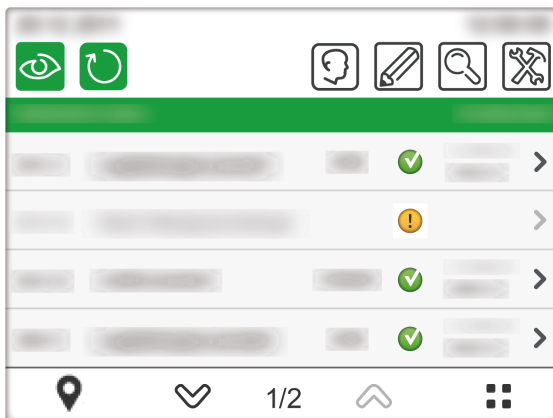

In the list mode, four devices are displayed per screen, one per line.




To reach **Device view**, press **>** on the corresponding line.

Locating Intelligent Modular Units

The FDM128 display enables you to identify a circuit breaker that is part of a monitored intelligent modular unit (IMU), by making its Micrologic trip unit or FDM121 display blink.


NOTE: A modular unit is a mechanical and electrical assembly containing one or more products that perform a function in a switchboard (incoming protection, motor command, and control). An IMU is a circuit breaker in which internal communicating components and external ULP modules are connected to one IFM, IFE, or EIFE interface. An example of internal communicating component is the Micrologic trip unit. Examples of external ULP modules are the FDM121 display or the I/O module.

To locate an IMU:

Step	Action
1	<p>From the General view, in list mode, press  . The list of locatable IMU displays.</p> <p>NOTE: If you do not perform any action on this screen for more than 25 minutes, you are redirected back to the General view screen.</p>
2	<p>From the General settings screen, press the  corresponding to the device to locate. The backlighting of the Micrologic trip unit, or FDM121 display, or both if present, start blinking for around 15 seconds. During this time,  also blinks on the FDM128 display.</p>

Viewing Devices Updated Remotely


The FDM128 display can display the names of the circuit breakers and the name of the Acti9 Smartlink SI B, Acti9 Smartlink SI D, and Acti9 Smartlink Modbus that they are connected to. The names can be remotely updated using EcoStruxure Power Commission software. In this case, you have to refresh the displayed names to see the new names.

To refresh the display of names, press  . A progress bar is displayed while the screen is refreshed.
In networks where names can be updated at anytime, it is recommended to refresh the FDM128 display periodically.

ERMS Status for Masterpact MTZ Circuit Breaker

The ERMS status is displayed in the **General view** for a Masterpact MTZ circuit breaker.


Icon Mode

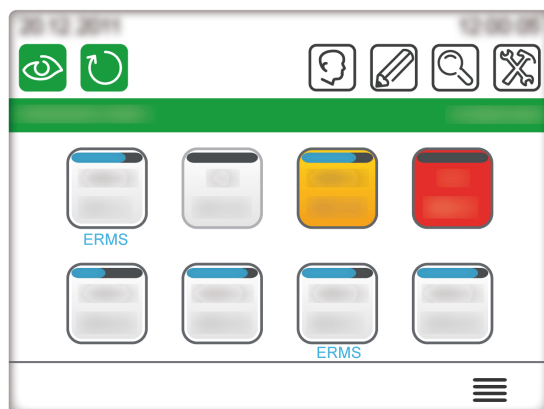

In the icon mode, the device with its ERMS mode engaged displays a blue ERMS message below the device icon.

To reach a **Device view**, press the corresponding icon.

List Mode

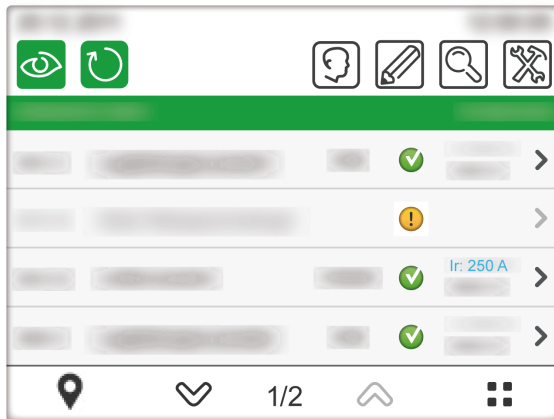

In the list mode, the device with its ERMS mode engaged displays the Ir settings in blue.
 To reach **Device view**, press > on the corresponding line.

Device View



In the **Device view**, the device with its ERMS mode engaged displays an ERMS message in the title bar.

Real-Time Alarms


Overview

Alarms are displayed differently according to their priority level.

NOTE: The alarms must be acknowledged on the circuit breakers. There is no acknowledgment from the FDM128 display.

Alarms for Circuit Breakers

The circuit breaker predefined alarms are displayed on the FDM128 display as follows:

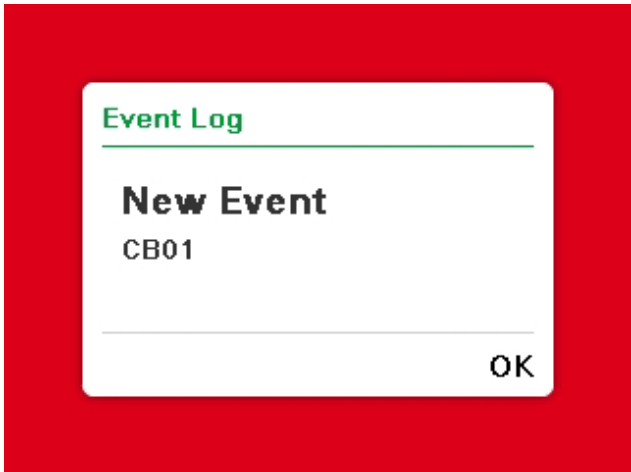Alarm Priority	Description
Trip	<p>When a trip occurs, the FDM128 screen shows a pop-up window. The following window represents an example of a trip on circuit breaker CB01.</p>  <p>You must close this window before returning to the General view. This alarm also appears as a red icon on the General view screen and on the title bar of the Device view screen.</p>
High	<p>The device icon turns red to indicate a high-priority alarm (<i>see page 46</i>). This alarm also appears as a red icon on the title bar of the Device view screen.</p>
Medium	<p>When a medium-priority alarm occurs, an orange icon appears on the General view screens and on the title bar of the Device view screens.</p>
Low	<p>Low-priority alarms are only registered in the alarm history and viewable in the Alarm history submenu.</p>

NOTE: The circuit breaker alarms configured using EcoStruxure Power Commission software are only registered in the alarm history and viewable in the Alarm history submenu. For information about configuring alarms using EcoStruxure Power Commission software, refer to the circuit breaker documentation.

Alarms for Circuit Breakers Connected to Acti9 Smartlink SI B Device

Alarms are raised depending on the type of circuit breaker:

- Acti9 circuit breakers: when an alarm occurs, the FDM128 screen shows a pop-up window. You must close this window before returning to the **General view**. This alarm also appears as a red icon on the **General view** screen and in the corresponding Acti9 Smartlink SI B and Acti9 Smartlink Modbus **Device view (Status)**.
- Other circuit breakers: an alarm appears as a red icon on the **General view** screen and in the corresponding **Device view (Status)**.

An example of this type of circuit breaker is item C in the architecture diagram showing the FDM128 display connected to an Acti9 Smartlink SI B (*see page 16*).

General View Grid Screen Icons

Icon Color	Description
Red	There is an active alarm with a high severity or the circuit breaker has tripped.
Partial orange (current value and ID are displayed)	A medium severity alarm is active.
Full orange (only ID is displayed)	FDM128 display has lost the communication with the circuit breaker. Check the cable connection or check if the Modbus serial line time out is set to 1 s.
Full orange (ID and disconnected symbols are displayed)	The circuit breaker is in disconnected position.

To check the details on the current Active alarm, refer to the **Alarm history** submenu.

Device View for Circuit Breakers and Switch-Disconnectors

Overview

For each submenu selected in the left tab of the main area, a headpiece allows you to navigate through the tabs. Press the corresponding tab title to display it.

Data displayed in the **Device view** screen depends on the type of device. For circuit breakers, it depends also on the type of Micrologic trip unit installed. Refer to the relevant *Micrologic user guides* (see page 8).

The table lists the features available per device type:


Features	Masterpact MTZ circuit breakers	Masterpact NT/NW, Compact NS, and PowerPact P- and R-Frame circuit breakers	Compact NSX and PowerPact H-, J-, and L-Frame circuit breakers	Masterpact NT/NW, Compact, and PowerPact switch-disconnectors
Quick Views	✓	✓	✓	✓
Measures/I	✓	✓	✓	–
Measures/V	✓	✓	✓	–
Measures/PQS	✓	✓	✓	–
Measures/E	✓	✓	✓	–
Measures/F-PF-Cosphi	✓	✓	✓	–
Measures/THD	✓	✓	✓	–
Alarm History/Trip	✓	✓	✓	–
Alarm History/Alarm	✓	–	✓	–
Alarm History/Active	✓	–	–	–
Alarm History/Maintenance	–	–	✓	–
Alarm History/BSCM	–	–	✓	–
Control	✓	✓	✓	✓
Maintenance/Information	✓	✓	✓	✓
Maintenance/Product ID	✓	✓	✓	✓
IO/Status	✓	✓	✓	✓
IO/Counters	✓	✓	✓	✓
IO/Control	✓	✓	✓	✓

Measurement Display Modes

Measurements can be displayed in the following modes:

- Numeric
- Bargraph
- Dial

To switch between modes, press the icon at the bottom-right of the screen.

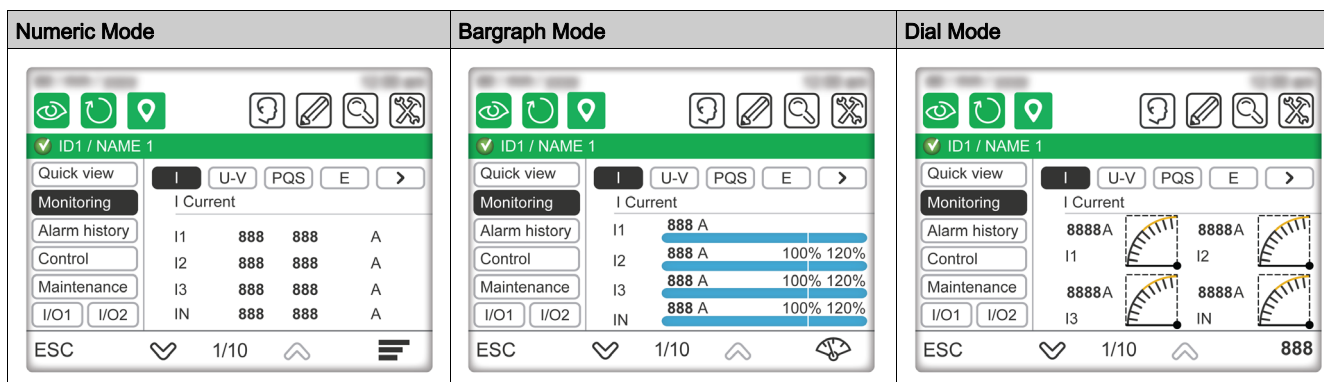

To read the voltage bar graph correctly, you must set up the primary nominal voltage of the circuit breaker.

Quick View

The **Quick view** submenu displays the status and main measurements, and protection settings (long time, short time, instantaneous, ground fault, or earth leakage) from a single circuit breaker.

There is no tab in this submenu.



Measures

The **Measures** submenu displays measurements from a single circuit breaker.

The tabs are the following:

- I
- V
- PQS
- E
- F-PF-Cosφ
- THD

In tabs where the maximum measurement can be reset, you can reset the measurements when the remote control is enabled (IFM or IFE locking pad points to the open padlock, or the EIFE intrusive commands mode is unlocked). In these conditions, press the **Reset** button to access the **RESET** screen, where:

- Pressing  resets the measurements on the previous screen.
- Pressing  resets the maximum values, minimum values, and energy counters of the circuit breaker.

NOTE: The data for Minimum/Maximum CosØ per phase and Minimum/Maximum THD are not available in FDM128 display when connected to Masterpact MTZ circuit breaker. Use EcoStruxure Power Commission to check the values.

Alarm History

The **Alarm history** submenu gives access to the various histories of the circuit breaker.

The table presents the description and number of records of each history according to the circuit breaker.

Tab Active	Description List of active alarm	Number of records: Compact NSX and PowerPact H-, J-, and L-Frame circuit breakers:	Number of records: Masterpact NT/NW, Compact NS, and PowerPact P- and R-Frame circuit breakers	Number of records: Masterpact MTZ circuit breakers
Trip	Trip history	17	10	10
Alarm	Alarm history	10	–	10
Active	Active alarms	–	–	40
Mainten.	Operation history	10	–	–
BSCM	BSCM event history	10	–	–

Each record is summarized by three elements:

- Date and time of event occurrence and completion
- Designation
- Code

NOTE:

- The active alarm events for Masterpact MTZ circuit breaker are not displayed from most recent to the oldest. The order is shown randomly.
- To refresh the **Alarm history** submenu, you need to exit and return to the **Alarm history** submenu.

Control

⚠️ ⚠️ DANGER

HAZARD OF ELECTRIC SHOCK

- Check that the downstream electrical equipment is safe.
- Check that you control the appropriate circuit breaker.

Failure to follow these instructions will result in death or serious injury.

⚠️ WARNING

HAZARD OF CLOSING ON ELECTRICAL FAULT

Do not close the circuit breaker again without first inspecting and, if necessary, repairing the downstream electrical equipment.

Failure to follow these instructions can result in death, serious injury, or equipment damage.

Before controlling a circuit breaker, you have to:

- Verify that you are logged as an administrator. The control functions can be accessed only when you are logged in as an administrator.
- Verify that Masterpact MTZ circuit breakers are equipped with MX and XF communicating voltage releases.
- Verify that Masterpact NT/NW, Compact NS, or PowerPact P-frame circuit breakers are equipped with a BCM ULP, MX, and XF communicating voltage releases or a communicating motor mechanism.
- Verify that Compact NSX or PowerPact H-, J-, and L-frame circuit breakers are equipped with a BSCM and a communicating motor mechanism in automatic mode.
- Verify that the circuit breaker is in remote control mode.
- Verify that you know the circuit breaker password. The password of the circuit breaker is set using the EcoStruxure Power Commission software.
- Verify that the IFE or IFM locking pad points to the unlocked position, when the circuit breaker is connected to an IFE or IFM interface.
- Verify that the intrusive command mode is unlocked, when the circuit breaker is connected to an EIFE interface.

The **Control** submenu allows you to check the status and to execute actions remotely to operate the circuit breaker.

The table presents the possible actions depending on the circuit breaker:

Action	Circuit breaker
Open	All circuit breakers
Close	All circuit breakers
Reset	Compact NSX and PowerPact H-, J-, and L-frame circuit breakers only

The FDM128 display takes you through the following sequence:

Step	Action
1	In the submenu Control , press the action for the target circuit breaker. A breaker opening confirmation popup is displayed.
2	Click OK to continue. A password popup is displayed.
3	Enter the circuit breaker password.
4	Press Enter . A popup message confirms that the command is successfully sent. NOTE: The popup message only confirms that the command is successfully sent. It does not confirm whether the complete operation is successful.
5	Press OK to close the result popup.

Maintenance

The table presents the functions of each tab of the **Maintenance** submenu:

Tab	Function
Information	Maintenance information available for Masterpact MTZ circuit breakers: <ul style="list-style-type: none"> ● remaining service life rate ● contact wear rate ● load profile ● circuit breaker operation counter values ● cradle counter values Maintenance information available for Masterpact NT/NW, Compact NS, Compact NSX, and PowerPact circuit breakers: <ul style="list-style-type: none"> ● contact wear rate ● load profile ● circuit breaker operation counter values ● cradle counter values NOTE: The value displayed for operation counter corresponds to the resettable counter.
Product ID	Displays the identification data of all ULP modules of the intelligent modular unit.

I/O1 and I/O2

For each connected I/O module, the **I/O1** and **I/O2** submenus allow you to:

- Check the status of its inputs
- Control its outputs
- Read its pulse counters

Before controlling an I/O module output, you have to:

- Verify that the output of the I/O module is assigned using EcoStruxure Power Commission software.
- Verify that you know the I/O module password. The password of the I/O module is set using EcoStruxure Power Commission software.
- Verify that the I/O module locking pad points to the unlocked position.
- Verify that the IFE or IFM locking pad points to the unlocked position when the I/O module is connected to an IFE or IFM interface.
- Verify that the intrusive command mode is unlocked when the I/O module is connected to an EIFE interface.

The **Control** submenu allows you to check the status and to execute actions remotely to actuate the I/O module output.

The possible actions are to open or close the output.

The FDM128 display takes you through the following sequence:

Step	Action
1	In the submenu Control , press the action for the target output. A password popup is displayed.
2	Enter the I/O module password. A confirmation popup is displayed.
3	Press YES . The following operations occur: <ol style="list-style-type: none"> 1. The command is sent to the output. 2. The output executes the command. 3. When the execution of the command is finished, a result popup is displayed with a failure or success message.
4	Press OK to close the result popup.

Device View for Devices Connected to the Acti9 Smartlink

Overview

For each submenu selected in the left tab of the main area, a headpiece allows you to navigate through the tabs. Press the corresponding tab title to display it.

Data displayed in the **Device view** screen depends on the device connected to the Acti9 Smartlink. Refer to the relevant user guides (*see page 8*).

Each Acti9 Smartlink device concentrates data from connected devices on its channels.

NOTE: The Acti9 Smartlink product range is not available in the following countries: United States, Canada, Mexico. Consult the catalog for the list of products available in your country.

The table lists the features available per device type:


Features	Acti9 Smartlink SI B	Acti9 Smartlink SI D/ PowerTag Link/ PowerTag Link HD	Acti9 Smartlink Modbus
Control	✓	–	✓
Status	✓	✓	✓
Counters	✓	✓	✓

Monitoring Information

Depending on the type of the connected device, the **Device view** displays:

- The status of the connected device (only for Acti9 Smartlink SI B and Acti9 Smartlink Modbus)
- The counters measured by the connected device (only for Acti9 Smartlink SI B and Acti9 Smartlink Modbus)
- Buttons to control other devices connected to the Acti9 Smartlink (only for Acti9 Smartlink SI B and Acti9 Smartlink Modbus)
- Metering data provided by PowerTag energy sensors (only for Acti9 Smartlink SI B and Acti9 Smartlink SI D)

For example, the layout of the **Device view** for a device connected to an Acti9 Smartlink SI B is as follows:

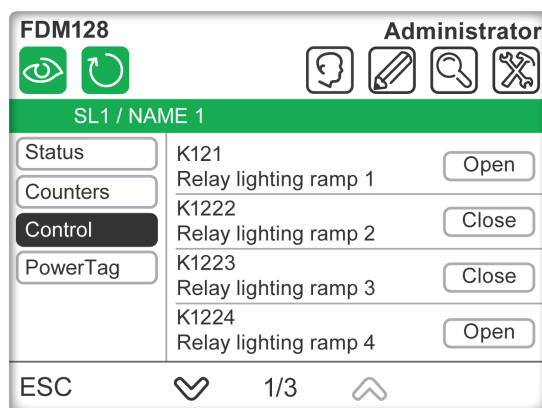

NOTE: When browsing an Acti9 Smartlink device view for the first time or after a configuration update, it may take up to 20 seconds for the displayed data to refresh.

Control

DANGER

HAZARD OF ELECTRIC SHOCK

- Check that the downstream electrical equipment is safe.
- Check that you control the appropriate circuit breaker.

Failure to follow these instructions will result in death or serious injury.

WARNING

HAZARD OF CLOSING ON ELECTRICAL FAULT

Do not close the circuit breaker again without first inspecting and, if necessary, repairing the downstream electrical equipment.

Failure to follow these instructions can result in death, serious injury, or equipment damage.

The procedure to control an Acti9 Smartlink device is as follows:

Step	Action
1	In the submenu Control , press the action (Open or Close) for the target device.
2	Press YES . The following operations occur: <ol style="list-style-type: none"> 1. The command is sent to the device. 2. The device executes the command. 3. When the execution of the command is finished, a result popup is displayed with a detected failure or success message.
3	Press OK to close the result popup.


PowerTag for Acti9 Circuit Breakers

The FDM128 display can show data from up to 20 PowerTag energy sensors per Acti9 Smartlink SI B, Acti9 Smartlink SI D, PowerTag Link, or PowerTag Link HD.


PowerTag Link HD stores configuration details of 100 PowerTags in a block of 500 registers (5 registers for each PowerTag). The FDM128 display scans only the first 300 registers from the block and displays the first 40 PowerTag energy sensors discovered.

The data from each energy sensor is displayed on a dedicated page.

The below figure shows the PowerTag screen of Acti9 Smartlink SI B.

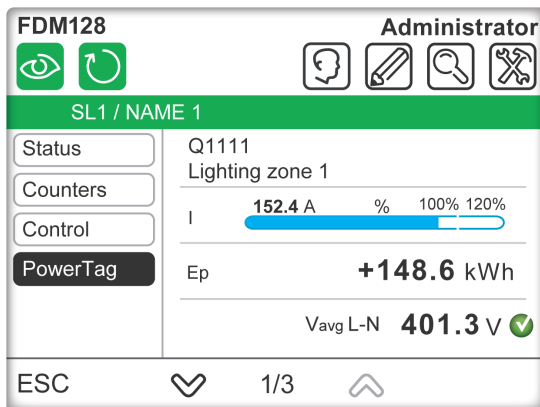

The below figure shows the PowerTag screen of Acti9 Smartlink SI D.

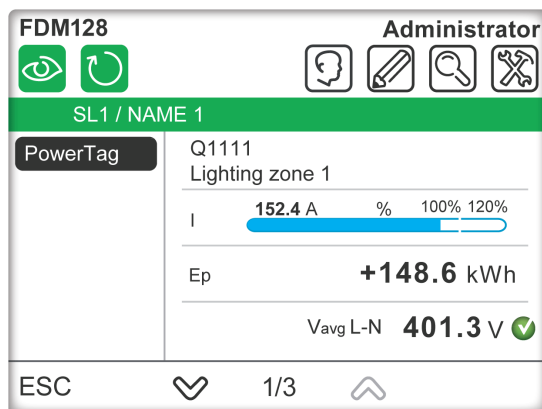

Depending on whether the PowerTag energy sensor is single- or three-phase, the following information is displayed in the submenu.

For single-phase PowerTag energy sensors:

- Label
- Asset name
- Current (I)
- Total active energy (Resettable)
- Voltage status
- Voltage (phase-to-neutral voltage)

For three-phase PowerTag energy sensors:

- Label
- Asset name
- Current (I) among the phases Ia, Ib, and Ic
- Total active energy (Resettable)
- Voltage status
- Average voltage (phase-to-phase voltage)


For three-phase and neutral PowerTag energy sensors:

- Label
- Asset name
- Current (I) among the phases Ia, Ib, and Ic
- Total active energy (Resettable)
- Voltage status
- Average voltage (phase-to-neutral voltage)


PowerTag for Compact NSX Circuit Breakers

The FDM128 display can show data from up to 20 PowerTag NSX energy sensors per Acti9 Smartlink SI B or Acti9 Smartlink SI D. The data from each energy sensor is displayed on a dedicated page.

The below figure shows the PowerTag screen of Acti9 Smartlink SI B.

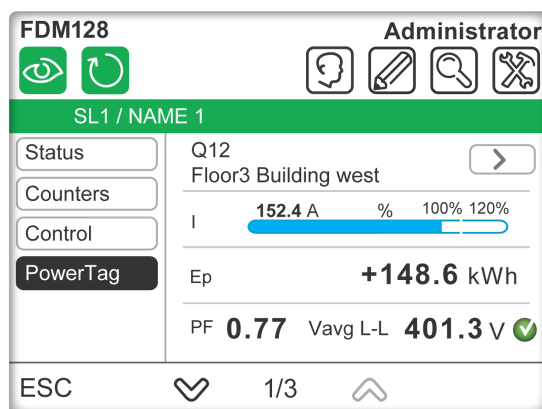

The below figure shows the PowerTag screen of Acti9 Smartlink SI D.

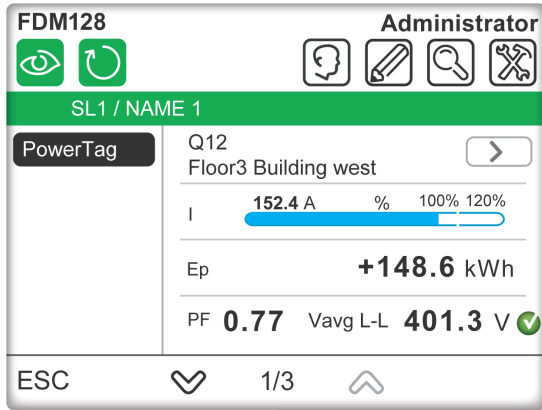

The following information is displayed in the submenu of PowerTag NSX energy sensors:

- Label
- Asset name
- Current (I)
- Total active energy (Resettable)
- Power Factor
- Average voltage
- Voltage status

Chapter 5

Update and Maintenance

What Is in This Chapter?

This chapter contains the following topics:

Topic	Page
Firmware Update	60
Adding, Removing, and Replacing Devices	62
Regular Cleaning	63
Troubleshooting Checklists	64
Protecting the Environment	65

Firmware Update

Firmware Update Policy

The primary reason for updating the firmware of a FDM128 display is to obtain the latest FDM128 features. If the latest FDM128 features are not required, it is not mandatory to update the firmware of FDM128 display.


If you notice a bug on the FDM128 display, refer to [FDM128 firmware release note](#) to check if the bug is corrected in a later version of the firmware. Update the firmware of the FDM128 display to benefit from the correction. If there is no bug fix available, call the Customer Care Centre.

Prerequisites

To update the FDM128 firmware, use a USB memory key.

This USB memory key must be:


- Formatted in FAT32 system format
- Empty

 DANGER	
HAZARD OF ELECTRICAL SHOCK	
<ul style="list-style-type: none"> • Ensure that the zone is safe before connecting or disconnecting the USB key. • Use the USB connector for a temporary connection during maintenance and configuration of equipment. 	
Failure to follow these instructions will result in death or serious injury.	


Downloading the Latest Firmware Version

Step	Action
1	Go to the Schneider Electric home page www.schneider-electric.com .
2	In the Search box, type the reference of the FDM128 display (LV434128) or the name of the product offer (FDM128). <ul style="list-style-type: none"> • Do not include leading or trailing blank spaces in the search string. • To get information on similar modules, use asterisks (*).
3	If you entered the reference, go to the Product datasheets search results. If you entered the name of the product offer, go to the Product Offer search results. Click the link of the FDM128 display product.
4	Click Documents and Downloads , then go to Firmware - Updates section. The list of available firmware for the FDM128 display is displayed.
5	Click the link Firmware update for Enerlin'X FDM128 (zip) of the FDM128 firmware version you want to download. Save the .zip file on your computer.

Updating the Firmware


 WARNING	
LOSS OF DATA	
<p>Note down the old configuration settings to re-configure them after firmware update.</p> <p>The configuration settings of the FDM128 display (such as IP configuration and slave device configuration) may be lost when the FDM128 firmware is updated.</p>	
Failure to follow these instructions can result in death, serious injury, or equipment damage.	

After downloading the firmware, update the FDM128 display as follows:

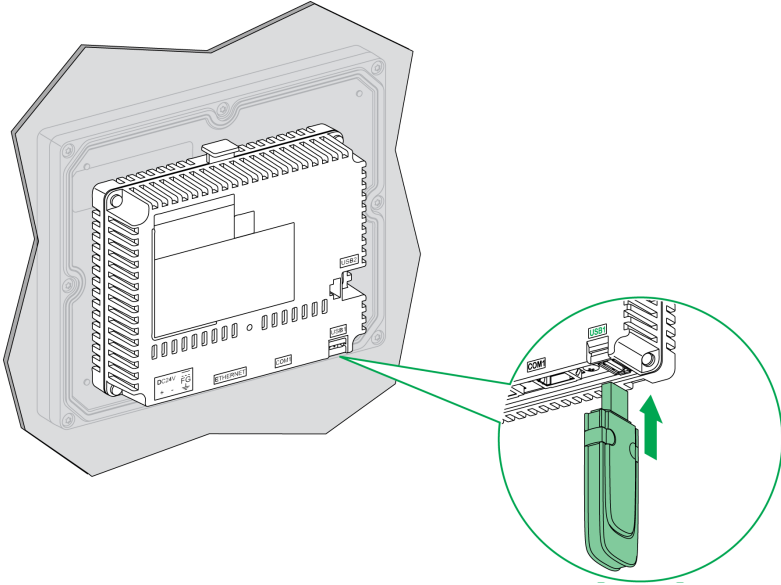
Step	Action
1	Extract files from the <i>.zip</i> file.
2	Load the extracted files onto the USB memory key.
3	Ensure that the FDM128 display is powered ON.
4	Plug the USB memory key into the USB1 port on the FDM128 display. 
5	Follow the instructions on the FDM128 screen.

Adding, Removing, and Replacing Devices


Adding New Devices

Step	Action
1	Ensure that settings of the new devices are compliant with the prerequisites (<i>see page 36</i>).
2	Press the  icon to update the FDM128 communication settings.
3	For devices connected through a gateway: <ol style="list-style-type: none"> 1. Press Redo all the settings. 2. Set the communication settings according to your gateway-based architecture (<i>see page 37</i>). For devices connected directly: <ol style="list-style-type: none"> 1. Press Add manually single IP devices. 2. Manually configure their IP addresses (<i>see page 39</i>).

Removing Selected Devices

Step	Action
1	Disconnect the devices from the network.
2	Press the  icon to update the FDM128 communication settings.
3	For devices connected through a gateway: <ol style="list-style-type: none"> 1. Press Redo all the settings. 2. Set the communication settings according to your gateway-based architecture (<i>see page 37</i>).

Replacing Micrologic

Step	Action
1	Replace the Micrologic trip unit.
2	Press the  icon to update the FDM128 communication settings (<i>see page 39</i>).
3	For devices connected through a gateway: <ol style="list-style-type: none"> 1. Press Redo all the settings. 2. Set the communication settings according to your gateway-based architecture (<i>see page 37</i>).

Regular Cleaning

Cleaning the Display

NOTICE

EQUIPMENT DAMAGE


- Power off the FDM128 display before cleaning it.
- Do not use hard or sharp objects to operate the touch panel since it can damage the panel surface.
- Do not use paint thinner, organic solvents, or a strong acid compound to clean the FDM128 display.

Failure to follow these instructions can result in equipment damage.

When the surface or the frame of the display gets dirty, soak a soft cloth in water with a neutral detergent, wring the cloth tightly, and wipe the display.

Troubleshooting Checklists

Introduction


DANGER

HAZARD OF ELECTRIC SHOCK, EXPLOSION OR ARC FLASH

- Electrical equipment should be installed, operated, serviced, and maintained only by qualified personnel.
- Before working on the equipment, ensure that you are working in a safe area

Failure to follow these instructions will result in death or serious injury.

When a problem is detected, go through the checklist and follow the instructions given.

Possible problems that could occur when using an FDM128 display are:

- Panel display is blank.
- Connected equipment cannot be used.
- Panel does not respond or responds slowly.
- Panel beeps when powered on.

NOTE: Contact your local Schneider Electric vendor or your local distributor.

Panel Display Is Blank

If the display is blank, perform the following check steps:

Step	Check/Operation	Solution
1	Is the FDM128 display using the correct rated voltage?	Verify the power supply connections and levels.
2	Is the power supply off or disconnected?	Follow the instructions in the Instruction Sheet to reconnect the power supply.
3	Is the backlight lit?	Potential detected problem with the FDM128 display. Contact your local Schneider Electric distributor.
4	Is the problem resolved?	If none of the previous steps resolve the detected problem, verify the hardware.

Display Replacement

The following replacements are available:

- Front part only: reference HMIS85
- Whole device, including the front part: reference LV434128

For information about how to reinstall the product, see the Instruction Sheet.

Connected Equipment Cannot Be Used

If the FDM128 display does not communicate with connected equipment, perform the following check steps:

Step	Check/Operation	Solution
1	Is the power supply off or disconnected?	Verify the power supply connections and levels.
2	Is the communication cable connected correctly?	For more information about cable diagrams, refer to , <i>FDM128 Ethernet Display for Eight Devices Instruction Sheet</i> .
3	Is the problem resolved?	If none of the previous steps resolve the communication problem, then check the hardware.

Protecting the Environment

Recycling Packaging

The packaging materials from this equipment can be recycled. Please help protect the environment by recycling them in appropriate containers.

Thank you for playing your part in protecting the environment.

End-of-Life Recycling

At end of life, the FDM128 display has been optimized to decrease the amount of waste and valorize the components and materials of the product in the usual end of life treatment process.

The design has been achieved so components are able to enter the usual end-of-life treatment processes as appropriate: depollution if recommended, reuse and/or dismantling if recommended to increase the recycling performances, and shredding for separating the rest of materials.

Appendices



What Is in This Appendix?

The appendix contains the following chapters:








Chapter	Chapter Name	Page
A	FDM128 Icons	69
B	Glossary of Acronyms	73

Appendix A








FDM128 Icons

Icon List









Header Icons

Icon	Description
	Go to General view menu
	Refresh the display of the names of connected devices
	Locate the device
	Go to Login/Password settings menu
	Go to Editing devices menu
	Go to Communication settings menu
	Go to General settings menu





Footer Icons

Icon	Description
	Go to next screen
	Go to previous screen
	Switch to bargraph mode
888	Switch to numeric mode
	Switch to dial mode
	Switch to icon mode
	Switch to list mode
	Locate a circuit breaker









Action Icons




Icon	Description
	Reset measurements displayed in the previous screen
	Reset all measurements and counters of the circuit breaker
	Reset circuit breaker
	Locate a circuit breaker
	Decrease level
	Increase level
	Display next tabs
	Display previous tabs

Alarm Status Icons

Icon	Description
	Circuit breaker status is OK
	Circuit breaker is offline
	Medium priority alarm is occurring
	High priority alarm is occurring

Circuit Breakers Status Icons

Icon	Description
	Circuit breaker is charged
	Circuit breaker is discharged
	Circuit breaker is closed
	Circuit breaker is open
	Withdrawable circuit breaker is connected
	Withdrawable circuit breaker is disconnected
	Capacitive load
	Inductive load

Icon	Description
	Cradle position: Test active
	Cradle position: Test disabled
	Global health status (For Masterpact MTZ only)

Appendix B

Glossary of Acronyms

Acronym

Acronyms and Definitions

The following table lists the acronyms used in various screens and their respective definition:

Acronym	Definition
Epln	Energy active delivered count positively
EpOut	Energy active received count negatively
EqIn	Energy reactive delivered count positively
EqOut	Energy reactive received count negatively
NA	Not applicable (means either the data is not available from the circuit breaker or communication error)



DOCA0037EN-07

Schneider Electric Industries SAS

35, rue Joseph Monier
CS30323
F - 92506 Rueil Malmaison Cedex

www.schneider-electric.com

As standards, specifications and designs change from time to time, please ask for confirmation of the information given in this publication.

01/2019