

1. Sicherheitshinweise

-  Diese Batterie mit Stecker kann als Alternative zu den vorhandenen Spannungsmodulen des UH50/UC50 verwendet werden.
-  Diese Batterie darf nur zusammen mit dem Halter verbaut werden. Der Halter aus Kunststoff vermeidet beim Einsetzen ins Gehäuse einen Kurzschluss.
-  Der Halter darf nicht von der Batterie entfernt werden.
-  Eventuell vorhandene Spannungsmodule müssen vorher entfernt werden! Weitere Hinweise finden Sie in der Montageanleitung UH50.

2. Installation

Beachten Sie die Ausrichtung vor dem Einsetzen. Setzen Sie die Batterie mit Halter wie in dem Bild beschrieben in das rechte Fach ein. Ein erstes Andrücken an die linke Batteriefeder erleichtert das Einsetzen. Drücken Sie die Batterie dann gleichmässig zwischen die Batteriefedern ins Gehäuse. Stecken Sie die Anschlussleitung der Batterie auf den Steckverbinder auf der Leiterplatte.

3. Deinstallation

Nehmen Sie einen passenden flachen Schraubendreher zur Hand. Indem Sie ihn vorsichtig zwischen Gehäusewand und Batterie ansetzen, hebeln Sie die Batterie raus. Dies soll abwechselnd auf der rechten und linken Seite der Batterie geschehen.

1. Safety Information


-  This battery with connector can be used as an alternative to the UH50/UC50's existing power supply modules.
-  This battery may only be installed together with the holder. The plastic holder prevents a short circuit when inserted into the housing.
-  The holder must not be removed from the battery.
-  Any existing power supply modules must be removed beforehand! Further information can be found in the UH50 installation instruction.

2. Installation

Consider the orientation before inserting. Insert the battery with holder into the right compartment as shown in the picture. A first press on the left battery spring makes inserting easier. Then press the battery evenly between the battery springs into the housing. Plug the battery connection line into the connector on the printed circuit board.

3. Uninstall

Take a suitable flat screwdriver. By carefully placing it between the housing wall and the battery, lever the battery out. This should be done alternately on the right and left side of the battery.

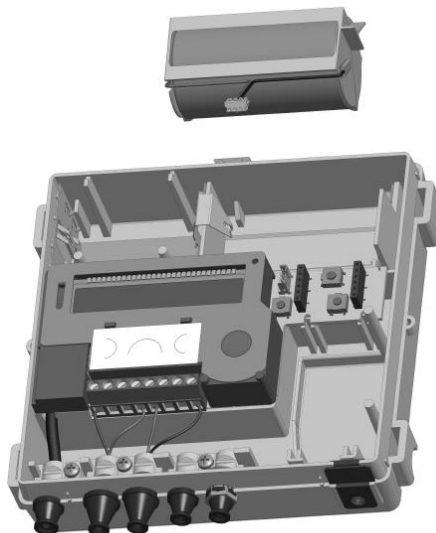

Published by:
Siemens Switzerland Ltd.
Smart Infrastructure
International Headquarters
Theilerstrasse 1a
CH-6300 Zug
Switzerland
Tel. +41 58-724 24 24
www.siemens.com/buildingtechnologies

© Siemens Switzerland Ltd 2024
Delivery and technical specifications subject to change