


- The QuickNet Zero RU Bracket can be mounted onto a previously installed equipment bracket using existing screws:
- (1) Remove screws from existing equipment that align with slots in zero RU bracket.
  - (2) Loosen screws of existing equipment that align with slits in zero RU bracket.
  - (3) Slide zero RU bracket under loosened screws.
  - (4) Replace removed screws and tighten loosened screws.

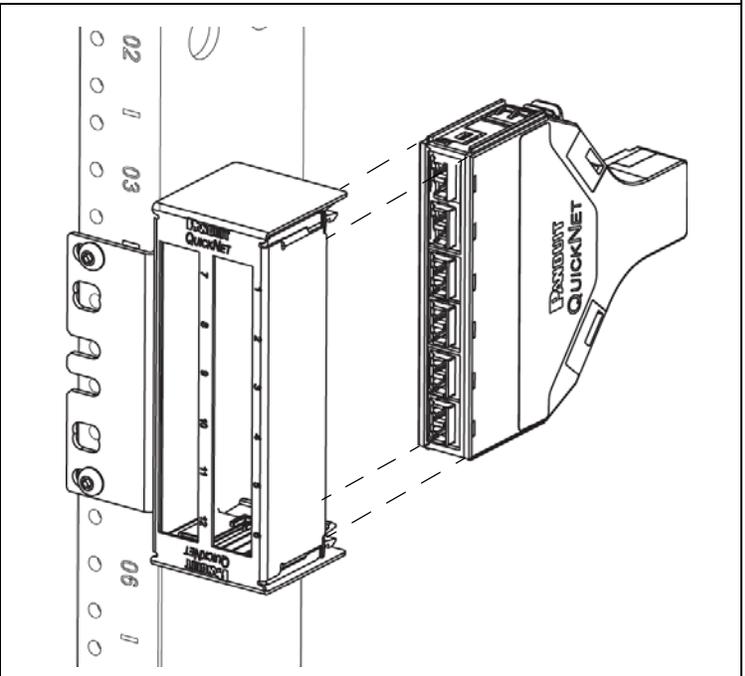

The QuickNet Zero RU Bracket can also be mounted directly to the cabinet rail with the screws provided.

For Instructions in Local Languages  
and Technical Support:

[www.panduit.com/resources/install\\_maintain.asp](http://www.panduit.com/resources/install_maintain.asp)

# PANDUIT

[www.panduit.com](http://www.panduit.com)

E-mail:  
[techsupport@panduit.com](mailto:techsupport@panduit.com)

Phone:  
866-405-6654