





SIDE PANELS  
#10 AWG JUMPER - 6" LONG  
QTY: 2




DOOR  
#10 AWG JUMPER - 18" LONG  
QTY: 1




REAR SECTION  
#10 AWG JUMPER - 16" LONG  
QTY: 1







M6 BONDING NUT  
QTY: 6



ANTI-OX  
QTY: 1



CLEANING PAD  
QTY: 1

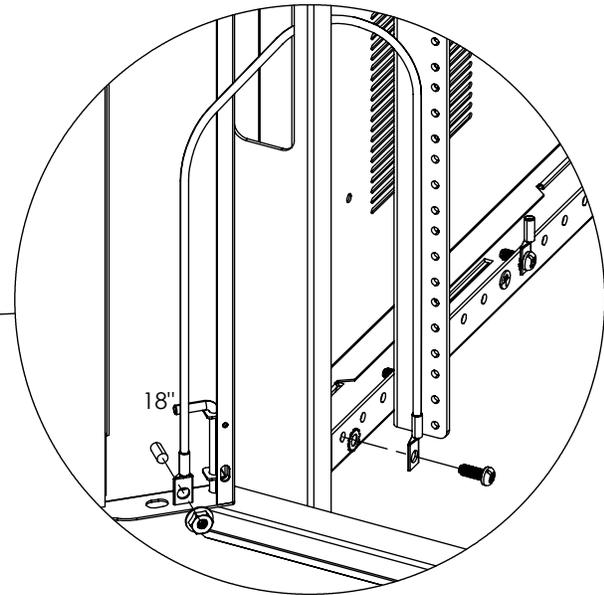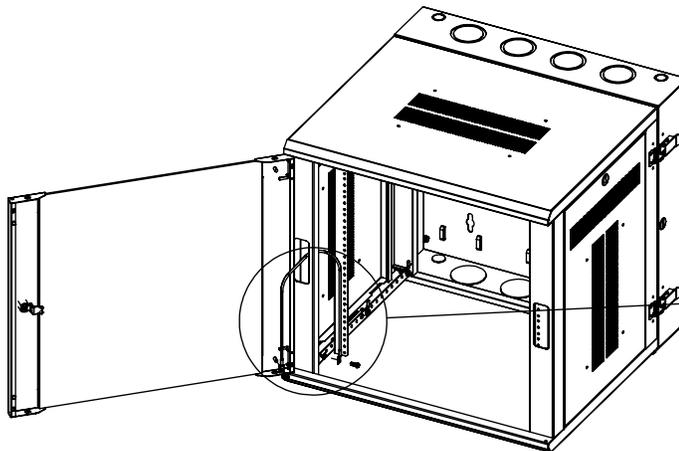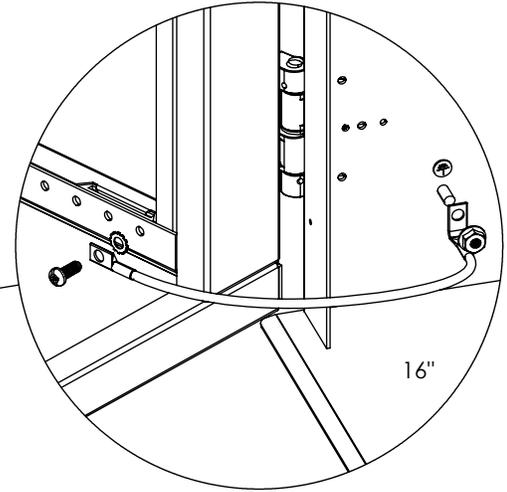
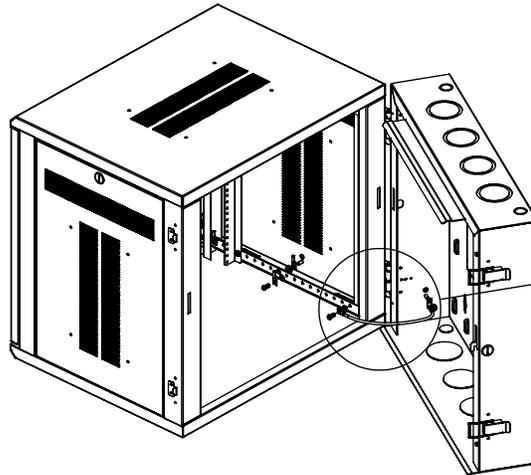


NOTE: DOOR AND REAR SECTION JUMPERS CAN BE INSTALLED ON THE OPPOSITE SIDE IF HINGE DIRECTION IS REVERSED

NOTE: M6 SCREWS (INCLUDED WITH CABINET) ARE THREAD FORMING. CAN BE PLACED ON ANY UNTAPPED HOLES IN MIDDLE SECTION

NOTE: CLEANING PAD AND ANTI-OXIDANT IS OPTIONAL. CAN BE USED TO CREATE BETTER CONTACT BETWEEN SCREWS AND SHEET METAL

NOTE: EXTRA M6 NUTS PROVIDED FOR BONDING REAR SECTION TO THE EARTH WITH ADDITIONAL JUMPER (NOT PROVIDED)

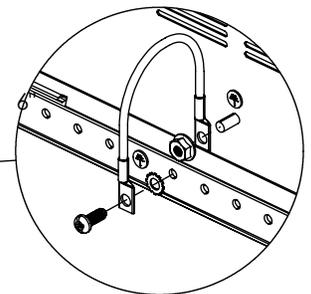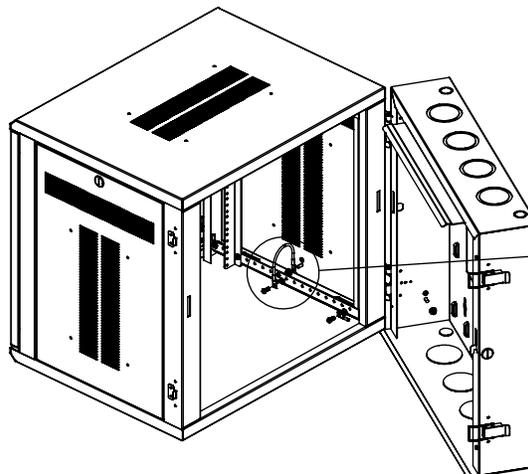

For Instructions in Local Languages  
and Technical Support:

[www.panduit.com/resources/install\\_maintain.asp](http://www.panduit.com/resources/install_maintain.asp)

# PANDUIT

[www.panduit.com](http://www.panduit.com)

E-mail:  
[cs@panduit.com](mailto:cs@panduit.com)

Fax:  
708-444-6993