

## TMSTEH-TOOL OPERATION INSTRUCTIONS FOR USE WITH: TMSTEH SERIES STUD MOUNTS

Panduit Corp. 2019


Original Instructions

### INTRODUCTION


The TMSTEH-TOOL installs stud mounts with the aid of a power drill reducing the risk of repetitive injury. Mounts grip onto the tool due to the interference fit of the drafted side walls allowing the installation to be a one hand operation when needed. Follow instructions below to insure optimum performance from the TMSTEHS series stud mounts.




**WARNING: SAFETY GLASSES MUST BE WORN AT ALL TIMES WHILE USING THIS TOOL.**

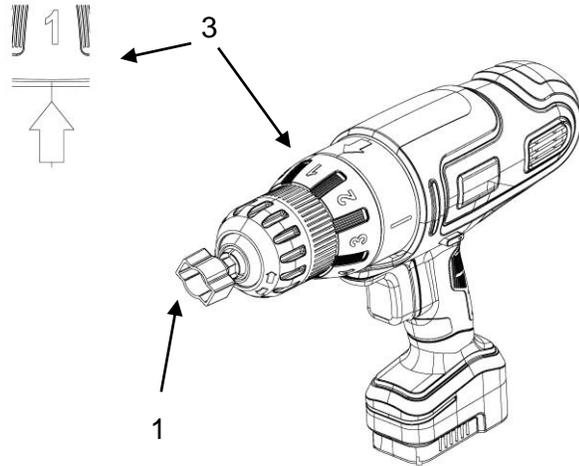

1. Insert TMSTEH-TOOL into 3/8" drill chuck as deep as possible and tighten chuck onto tool.
2. Set drill to "screw" or "torque" setting.
3. Set the torque control to the lowest setting. Generally, this would be a setting of 1.

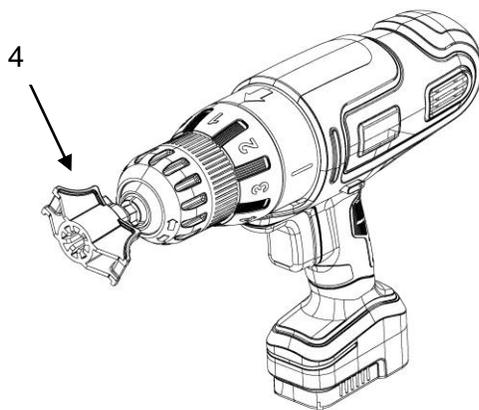

4. Press TMSTEHS\* mount on tool.
5. Center mount opening on stud and use drill to thread the mount on until torque setting has been reached.

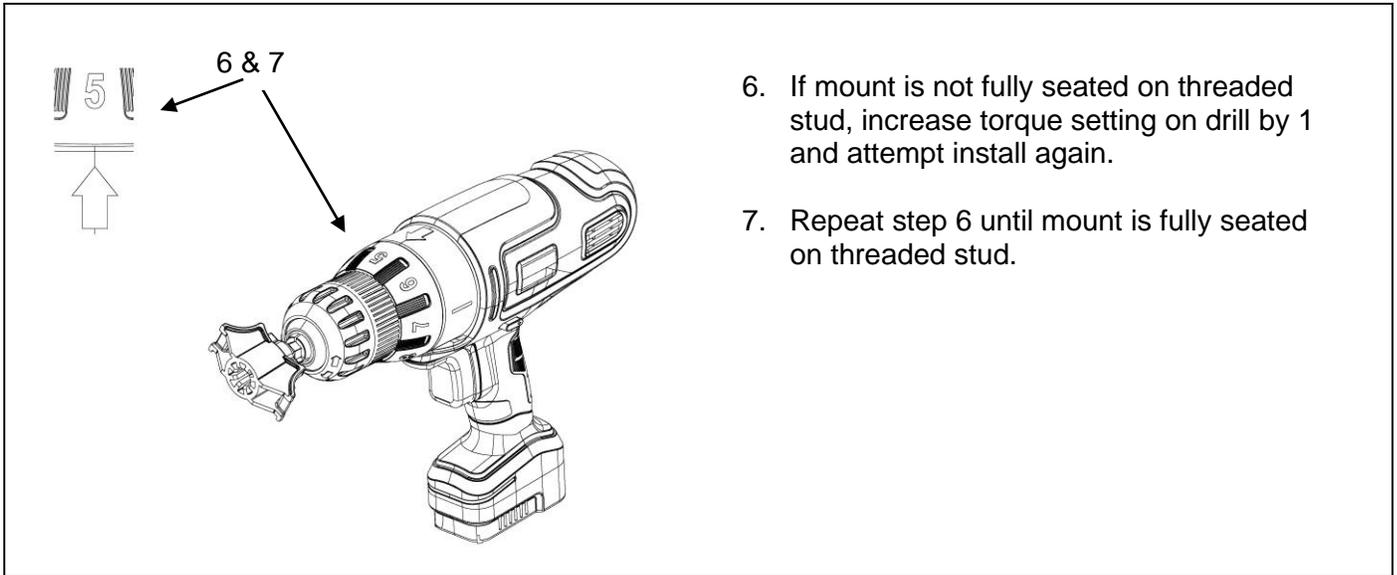

6. If mount is not fully seated on threaded stud, increase torque setting on drill by 1 and attempt install again.
7. Repeat step 6 until mount is fully seated on threaded stud.

North America Tech Support:  
techsupport@panduit.com  
Tel: 1-866-405-6654



EU Tech Support:  
techsupportemea@panduit.com  
Tel: +31-546-580-452  
Fax: +31-546-580-441