

Required tools - not included

Phillips head driver



3/8" Hex driver




Required hardware - included

#12-24 nut




#12-24 x 1" screw

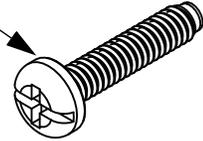


Step 1

1. Install #12-24 screw in the bottom mounting hole of the patch panel.

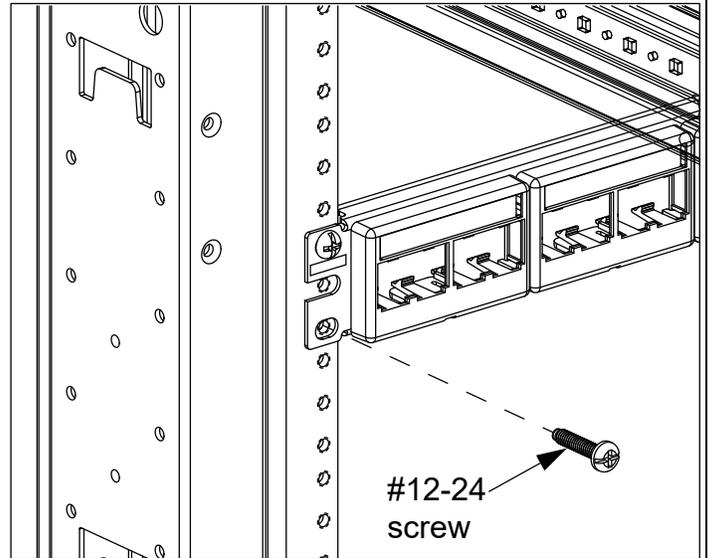

Step 2

1. Slide strain relief bar (sold separately) on the end of the screw protruding behind the patch panel.
2. Use #12-24 hex nut to secure the strain relief bar in place by using a 3/8" Hex driver.

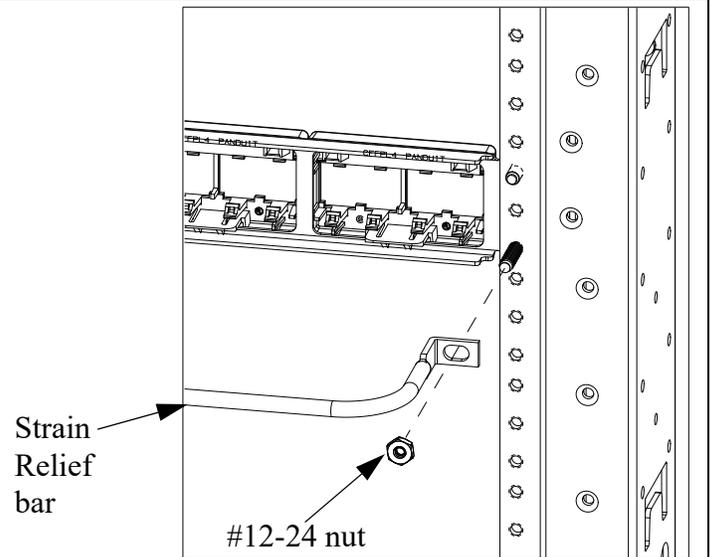

*For recommended strain relief bars, refer to the specification sheet at Panduit.com