



# PANDUIT WIRE BASKET STRUT CLIP KIT


Part Numbers: PWBSCEZ

©Panduit Corp. 2021


## INSTALLATION INSTRUCTIONS

FS176

KIT INCLUDES 50 PIECES.

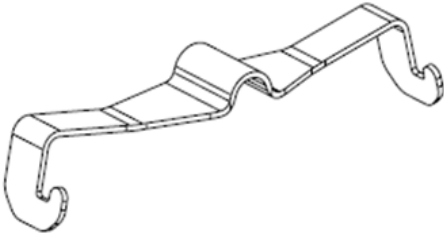

### INSTALLATION:

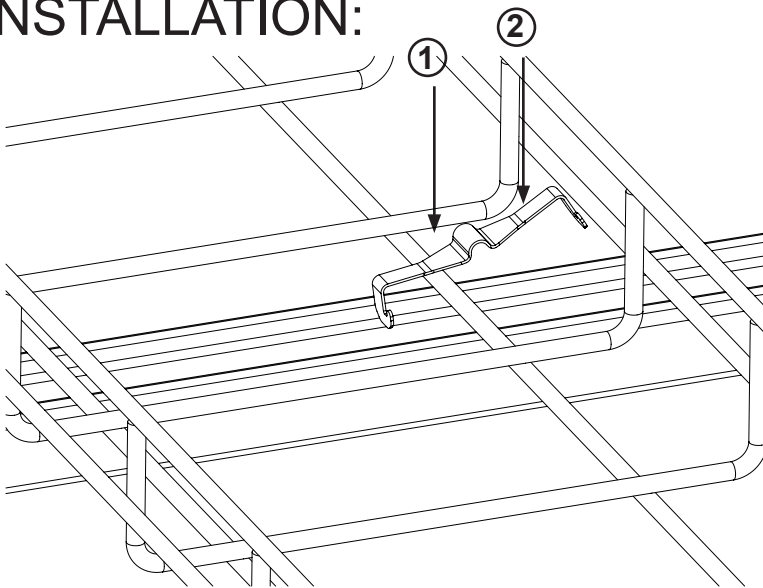


USE FINGER TO PUT ONE SIDE IN FIRST AND PRESS THE OTHER SIDE DOWN AND ROTATE INTO PLACE.

STRUT CLIP INSTALLED IN PAIRS. ONLY 2 UNITS OF CLIPS ARE REQUIRED REGARDLESS OF THE PATHWAY SIZE.


LOAD NOT TO EXCEED 136 LBS. PER SET OF PWBSCEZ.

REPEAT FOR 2ND WIRE AS SHOWN.

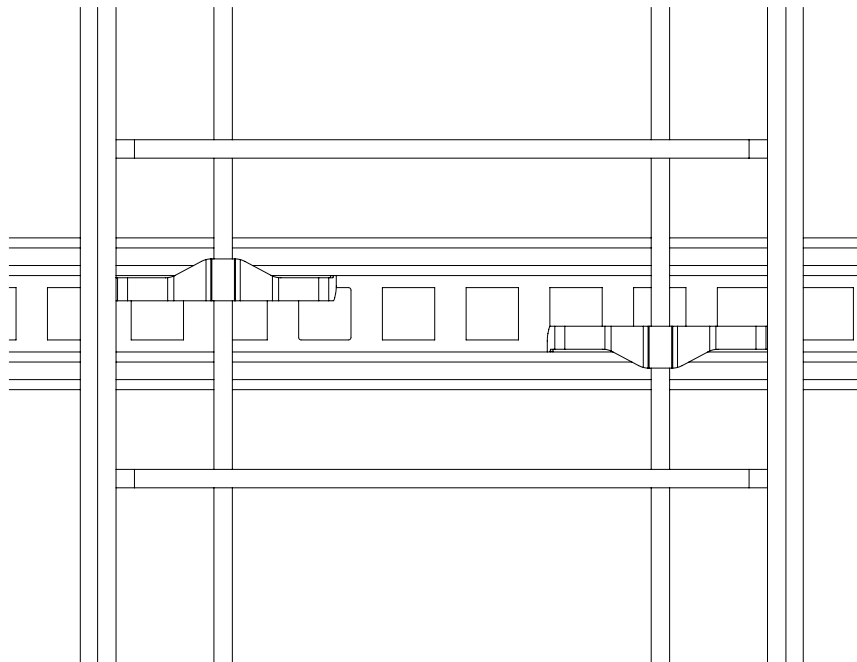

THE SECOND CLIP IS INSTALLED ORIENTATED FACING THE OPPOSITE WAY AS SHOWN.

## REMOVAL:

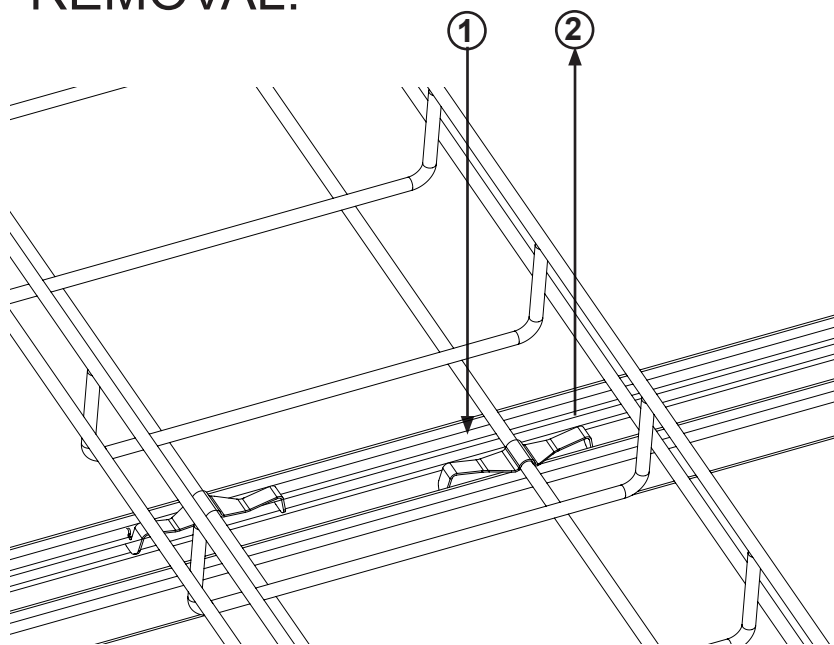

PRESS ON 1 SIDE AND USE A SCREWDRIVER TO SWITCH STRUT CLIP OFF,