

# PANDUIT® NET-ACCESS S-Type and N-Type Cabinets


(S7VPPB, SN8VPPB Vertical Patch Panel Brackets)

## INSTRUCTIONS CM657A

© Panduit Corp. 2013

### Install Vertical Patch Panel Bracket - S-Type Cabinets


- Secure Vertical Patch Panel Bracket to Net-Access S-Type cabinet rear equipment rail with [4] M5 Torx screws (use T25 Torx bit) as shown below.

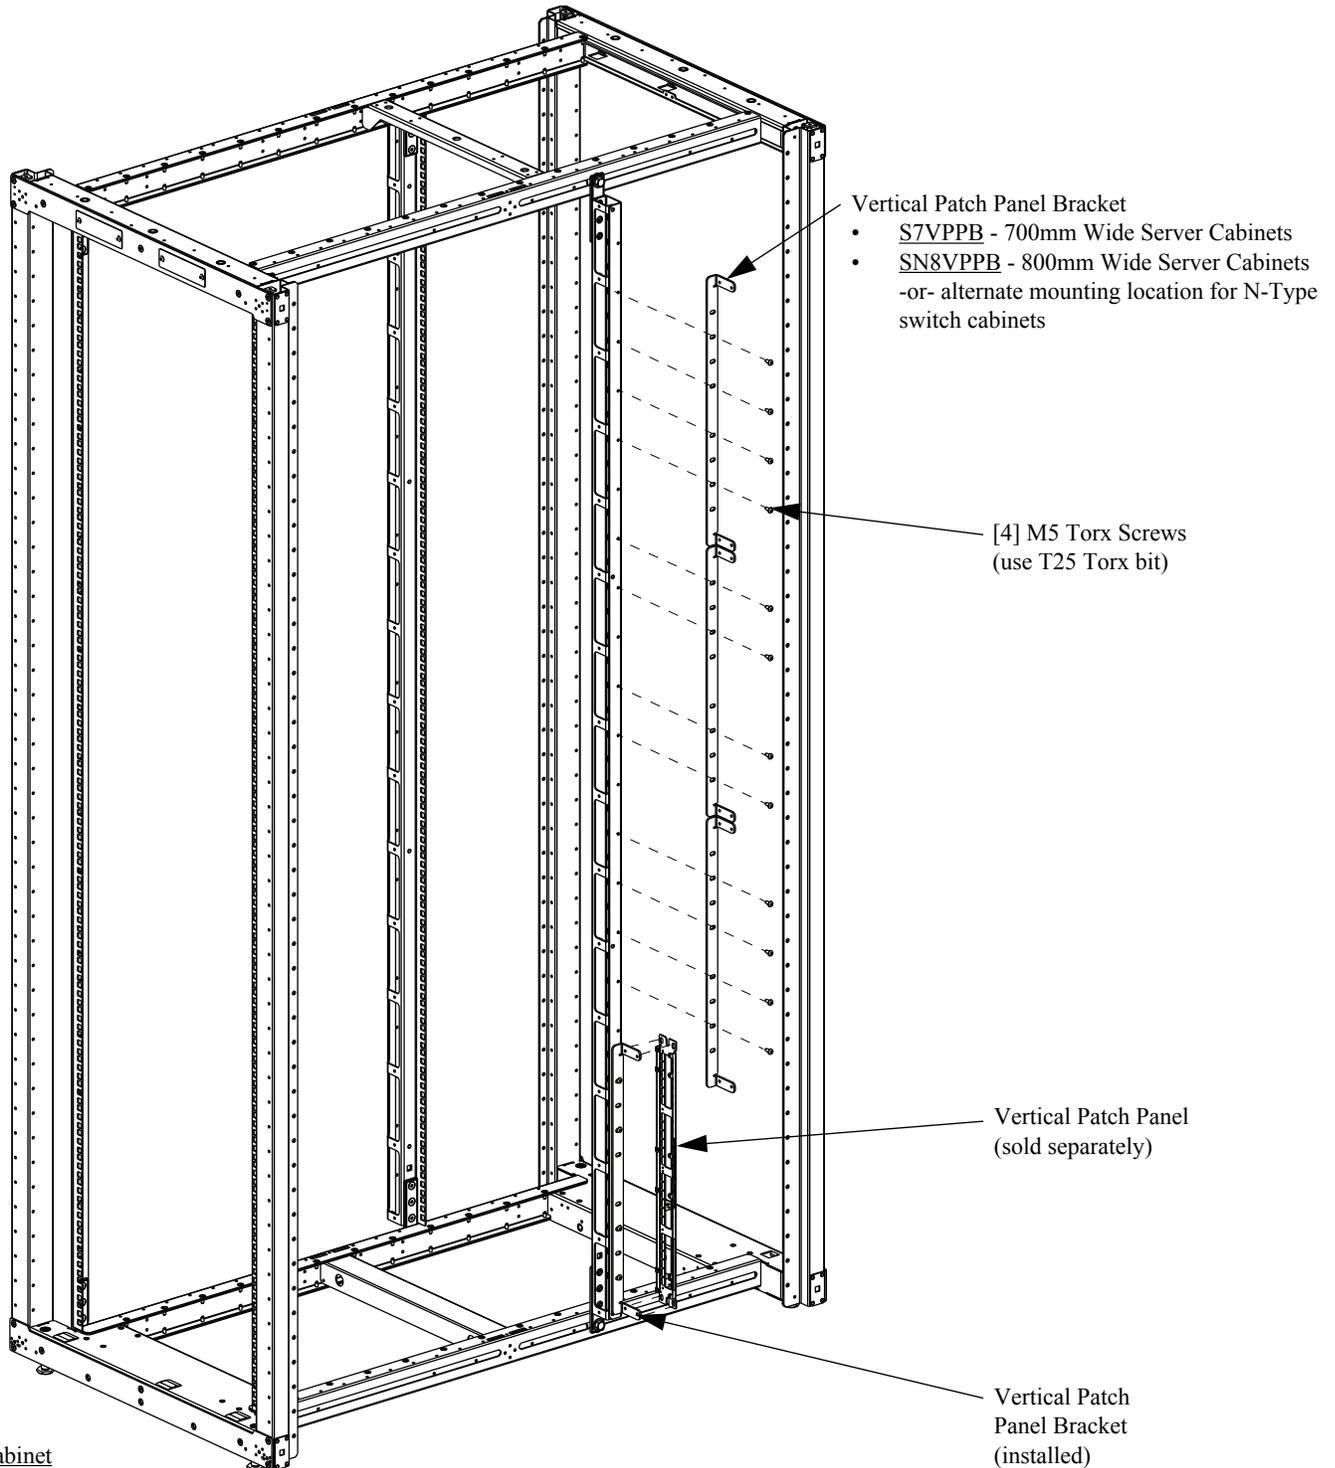

FOR TECHNICAL SUPPORT [www.panduit.com/resources/install\\_maintain.asp](http://www.panduit.com/resources/install_maintain.asp)

## Install Vertical Patch Panel Bracket - N-Type Cabinets

- Secure Vertical Patch Panel Bracket to Net-Access N-Type cabinet front vertical post with [4] M5 Torx screws (use T25 Torx bit) as shown below.

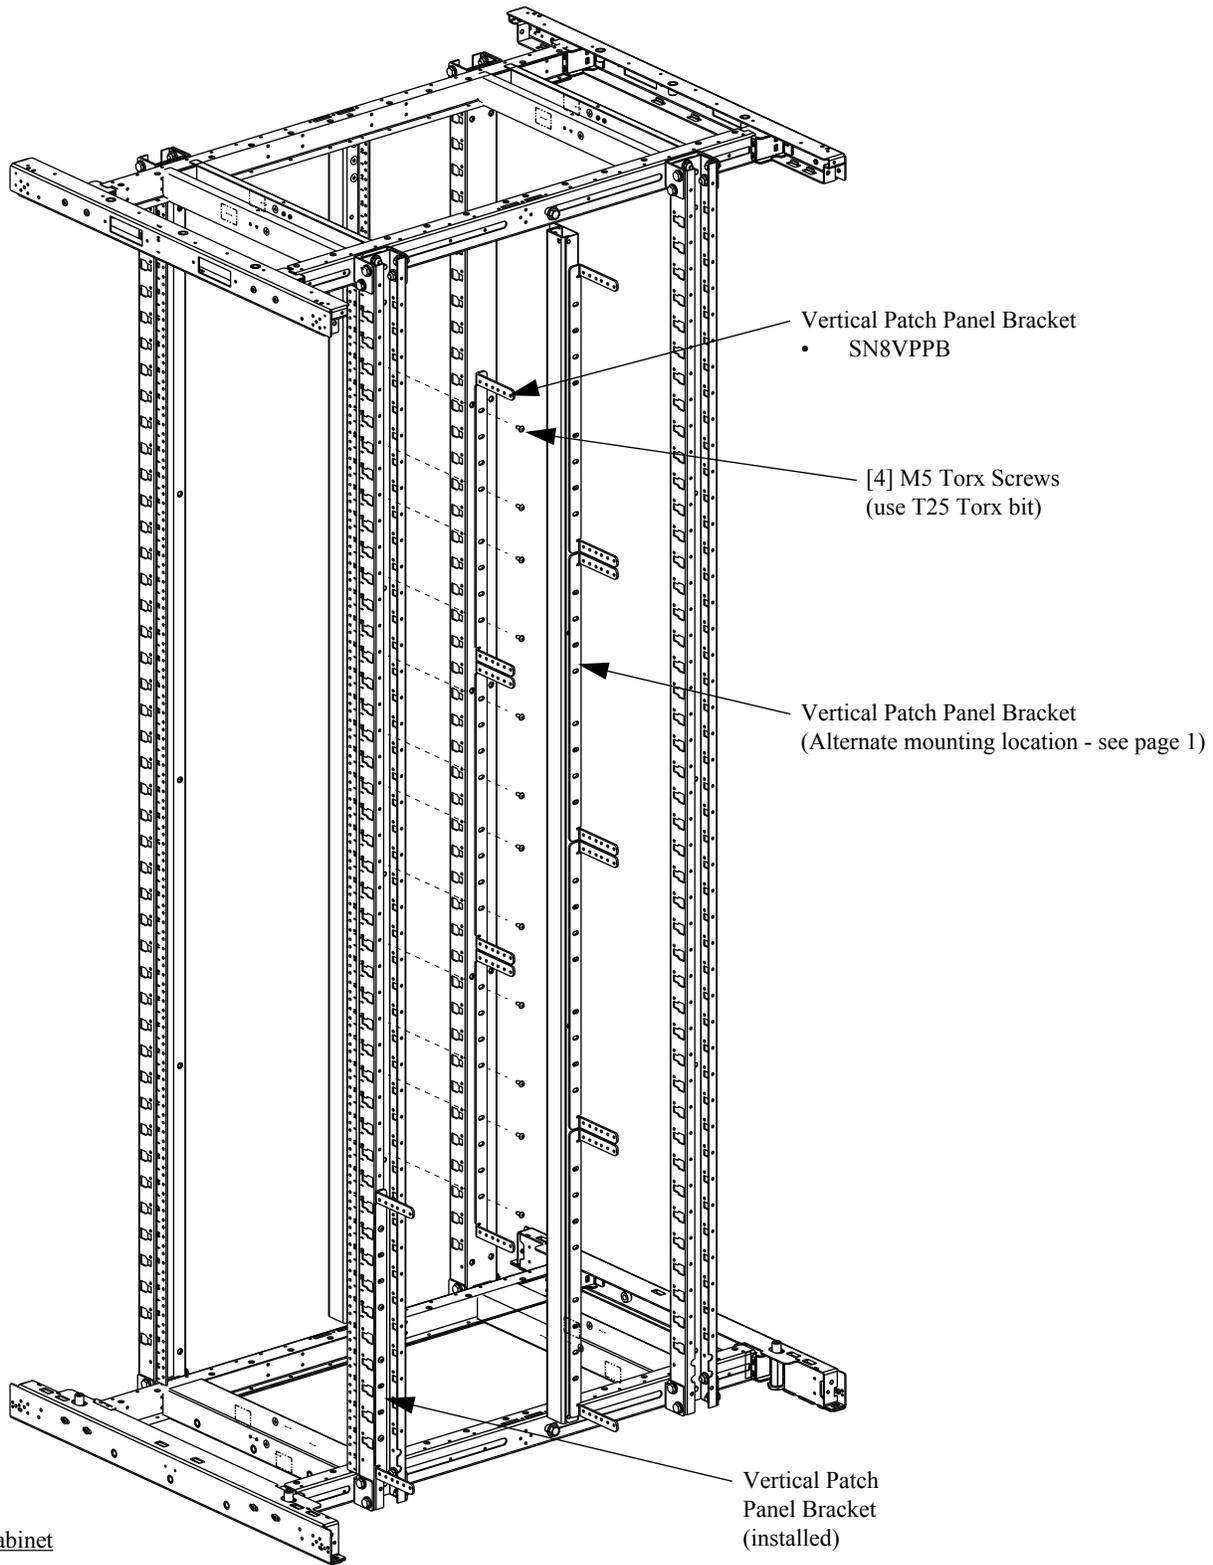

For Instructions in Local Languages  
and Technical Support:

[www.panduit.com/resources/install\\_maintain.asp](http://www.panduit.com/resources/install_maintain.asp)

**PANDUIT**<sup>®</sup>  
www.panduit.com

E-mail: [techsupport@panduit.com](mailto:techsupport@panduit.com)  
Phone: 866-405-6654