



CAT.6 Plug Assembly Instruction

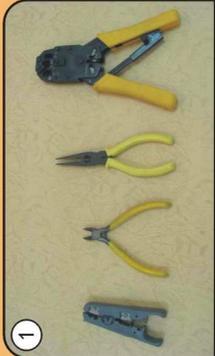


1 Tools :
Stripper, Cutter , Pliers, and Crimping Tool

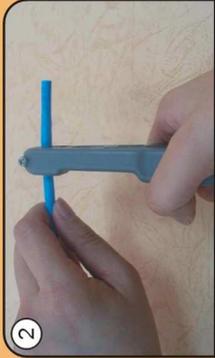


2 To strip the PVC Jacket in 3cm




3 To remove the jacket

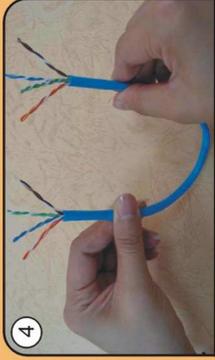


4 To check the cable

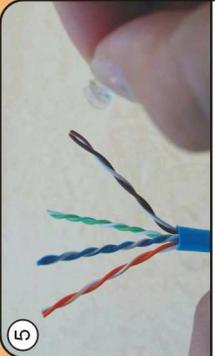

5 To Get H_Divider

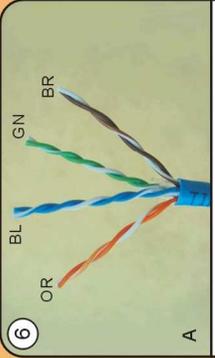


6 To put H_divider into the conductors (blue pair and green pair are in opposite direction)

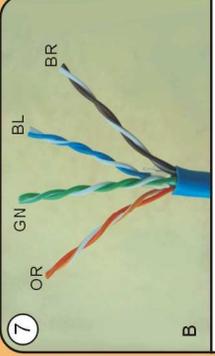

B




8 To Straighten the conductors

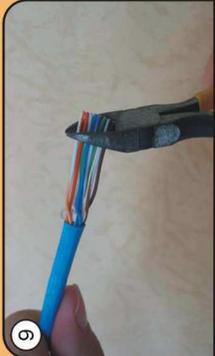


9 To cut off conductors neatly




10 To arrange manage tool
The blue arrange manage tool is optional

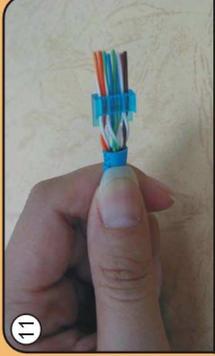

11 To put manage tool into straighten conductors

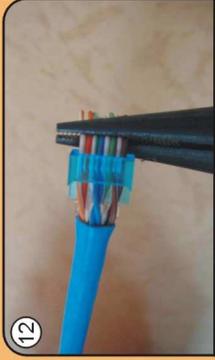

12 To pull the conductors lean gently against the fulcrum by pliers until the manage tool flush with H Divider

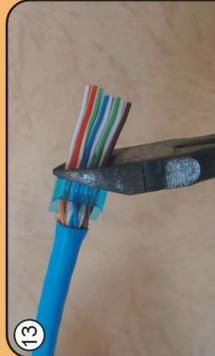


13 To cut the conductors neatly.




14 To see after cutting the conductors




15 To take off the manage tool

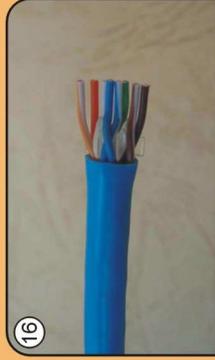


16 To see after taking off the manage tool

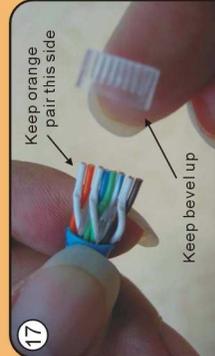

17 To arrange the insert

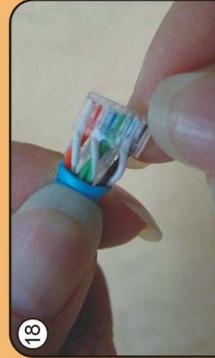

18 To put the insert into the conductors neatly.

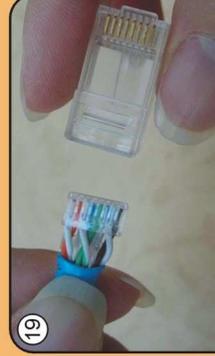


19 To arrange the plug body



20 To put the plug body into the insert/cable



21 To use the crimping tool to crimp the plug body.

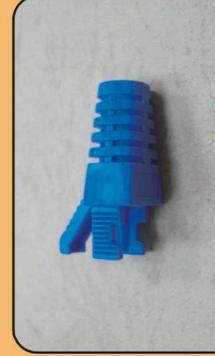

Assembly Boot (Optional)
We also available this boot



Finished

