

## QUICK START GUIDE

### 1] PRODUCT PRESENTATION

CDVI's RH-RV range of strikes is reversible, fail secure, standard or memory and fail safe. The strikes are surface mount (horizontal or vertical).

| Specificities | Description                                                                                                                                 |
|---------------|---------------------------------------------------------------------------------------------------------------------------------------------|
| Material      | Zamak                                                                                                                                       |
| Power Supply  | 12V AC/DC                                                                                                                                   |
| Consumption   | <ul style="list-style-type: none"> <li>Fail secure: 12V AC : 500 mA</li> <li>12V DC : 600 mA</li> <li>Fail safe: 12V DC : 250 mA</li> </ul> |
| Dimensions    | <ul style="list-style-type: none"> <li>RH: 90 x 50 x 56 mm</li> <li>RV: 120 x 50 x 56 mm</li> </ul>                                         |



IP33



WEEE & RoHS



CE Certification



-10°C to +60°C




IK10





UKCA Certification

### 2] ELECTRICAL CONNECTIONS

Find four closed holes for routing cables. Using cutting pliers, open the hole closest to the connection point.

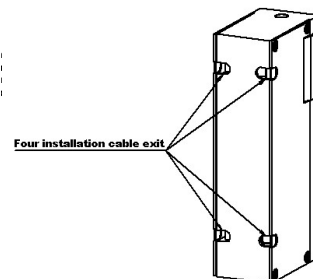


Route the cables to the exit hole closest to the connection point of the electrical installation.

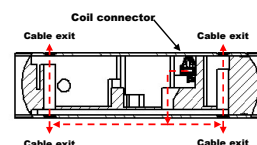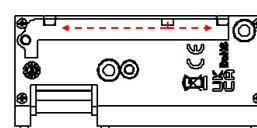


### 3] MOUNTING

1

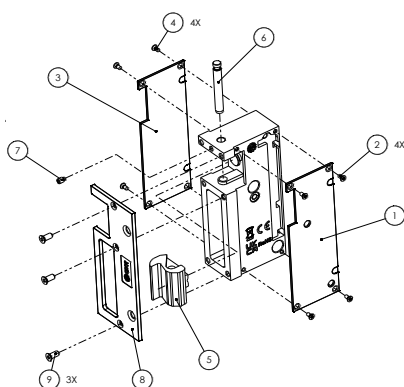


2

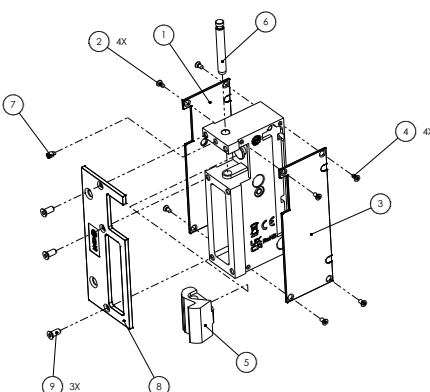

- 1- Set the pierced cover on the box.
- 2- Fix the pierced cover bolts.
- 3- Set the blind cover on the box.
- 4- Fix the blind cover bolts.
- 5- Set the latch into the box.
- 6- Insert the shaft through the box and the shaft.
- 7- Fix the hexagon socket set bolt using Allen key n°15 for holding the shaft.
- 8- Set the front plate.
- 9- Fix the front plate bolts.
- 10- Fix the 4 screws to the door frame.

**Example of door frame assembling (Right Din)**

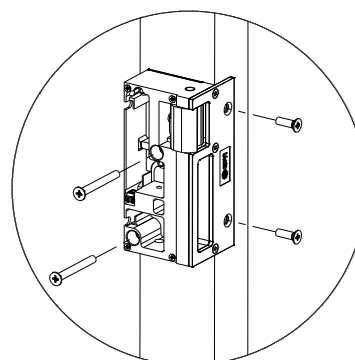

## 1] PRÉSENTATION PRODUIT

La gamme de gâches RH-RV de CDVI est réversible, à émission, 1 ou 2 temps et à rupture.

Les gâches se montent en applique (horizontal ou vertical).

| Spécificités | Description                                                                                                                              |
|--------------|------------------------------------------------------------------------------------------------------------------------------------------|
| Matériau     | Zamak                                                                                                                                    |
| Alimentation | 12V AC/DC                                                                                                                                |
| Consommation | <ul style="list-style-type: none"> <li>Emission : 12V AC : 500 mA</li> <li>12V DC : 600 mA</li> <li>Rupture : 12V DC : 250 mA</li> </ul> |
| Dimensions   | <ul style="list-style-type: none"> <li>RH : 90 x 50 x 56 mm</li> <li>RV : 120 x 50 x 56 mm</li> </ul>                                    |



IP33



WEEE & RoHS



CE Certification



-10°C à +60°C



IK10





UKCA Certification


## 2] RACCORDEMENT ÉLECTRIQUE

Pour le passage du câble, des réservations ont été prévues. À l'aide d'une pince, casser au plus proche de l'arrivée du câble.

4 points de rupture pour passage de câbles

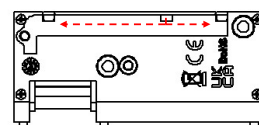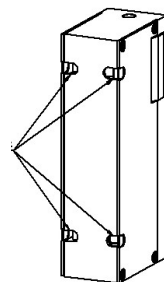


Acheminer les câbles vers le trou de sortie le plus proche du point de connexion de l'installation électrique.

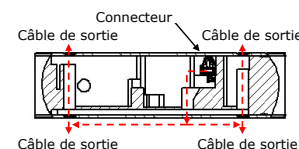


## 3] SCHÉMAS DE MONTAGE

1

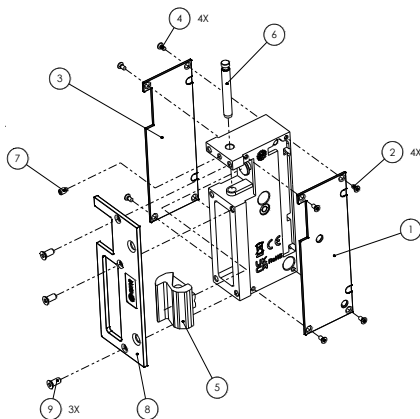

2

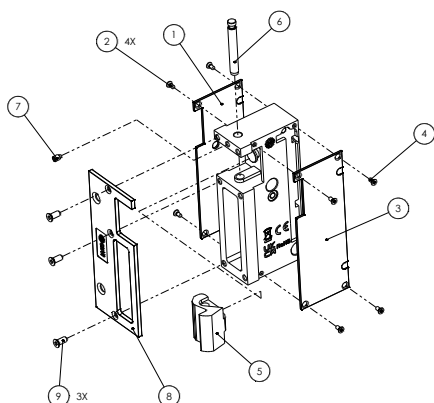

- 1- Placer le couvercle percé sur le boîtier.
- 2- Fixer les vis du couvercle percé.
- 3- Mettre en place le couvercle aveugle sur le boîtier.
- 4- Fixer les vis du couvercle aveugle.
- 5- Placer le volet dans le boîtier.
- 6- Insérer l'axe de maintien du volet dans son logement.
- 7- Fixer l'axe à l'aide de la vis sans tête prévue à cet effet.
- 8- Mettre en place la plaque frontale.
- 9- Fixer la plaque avant à l'aide des vis fournies.
- 10- Fixer les 4 vis sur le dormant.

### Exemple de montage sur dormant (Din Droit)

