

BORNE

Mounting instruction

Instructions de montage

Montageanleitung

Montage instruktie

Istruzioni di montaggio

Instrucciones de montaje

Instruções de montagem

Monteringsinstruktioner

Monteringsvejledning


Kokoonpano- ja kiinnitysohjeet
Montaj yönergesi

Οδηγίες συναρμολόγησης

Instrukcja montazu

Szerelési utasítások
Návod k montáži

Монтажная инструкция

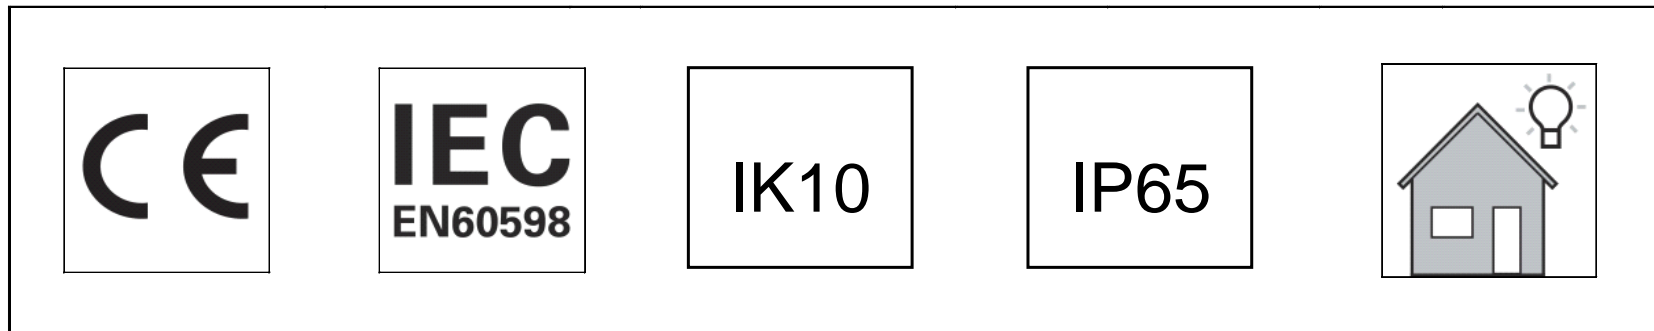

		W			
H16A03 - 01 1000 mm	LED	20	•	4.2	+35°C -20°C
H16A03 - 21 500 mm	LED	20	•	2.7	+35°C -20°C

