

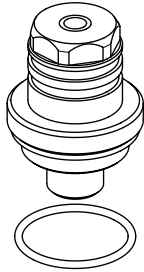
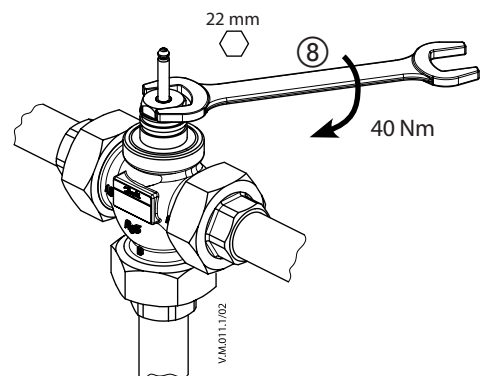
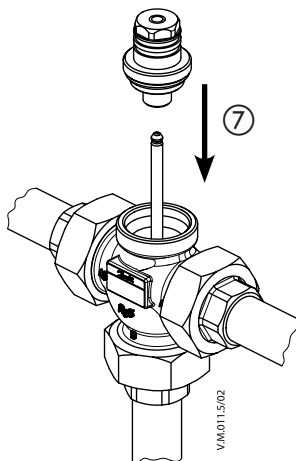
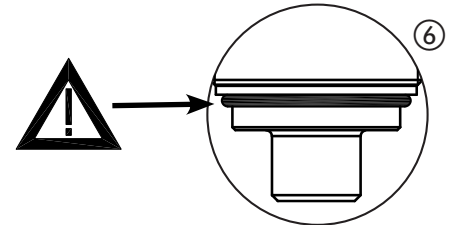
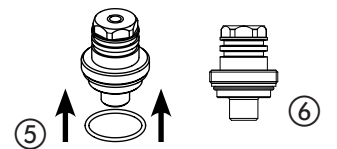
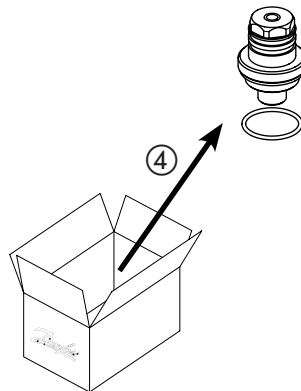
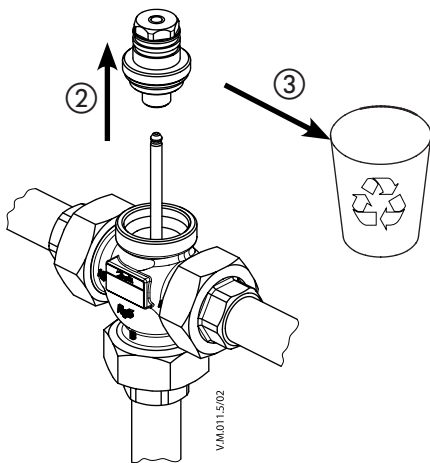



## Installation Guide

### Service kits - stuffing box for VRB, VRG, VF, VL (Gen. 2009)

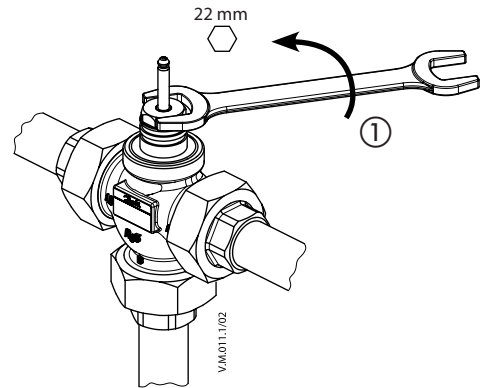


DN 15	065Z0321
DN 20	065Z0322
DN 25	065Z0323
DN 32	065Z0324




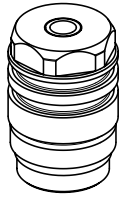


DN 40-50	065Z0325
DN 65-80	065Z0327



22 mm




36 mm




48 mm





36 mm (DN 40-50)  
48 mm (DN 65-80)

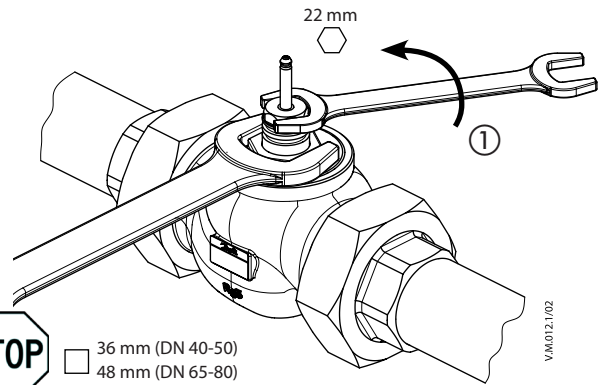


VM012/02

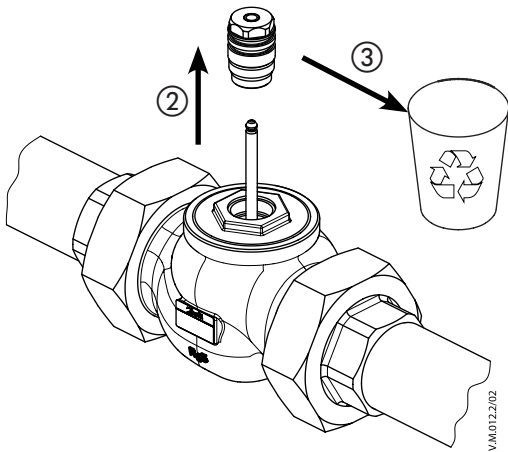

VM012/02

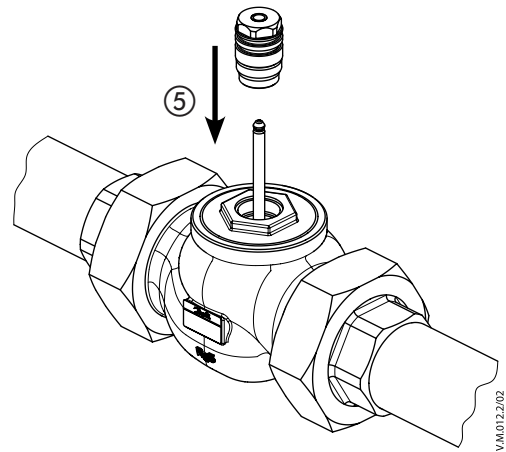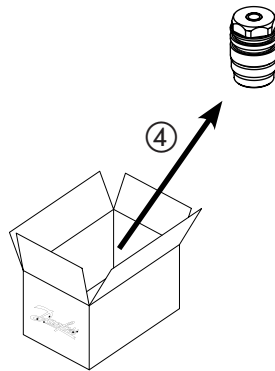

VM012/02

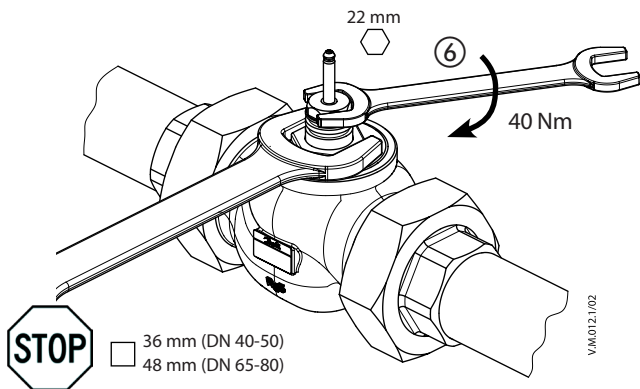

36 mm (DN 40-50)  
48 mm (DN 65-80)

VM012/02