Perforated Curved Front Door for NetShelter™ SX Cabinets AR70XXB2 Models

Inventory

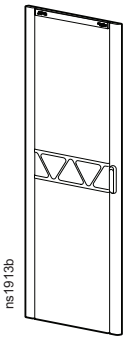

Perforated Front Door (1)

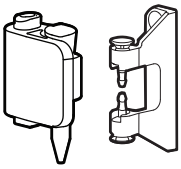

Assembly Hinge (2)

M6 X 12 Flat Screw (4)



M6 X 12 Pan Screw (1)

Washer (1)

Tool required (provided)

Installation

NOTE: The door can be installed on either the left or right side.

NOTE: Smaller cabinets may look different than the illustration.

Install the door

❶

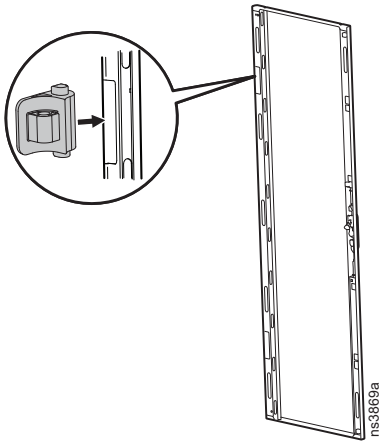

❷

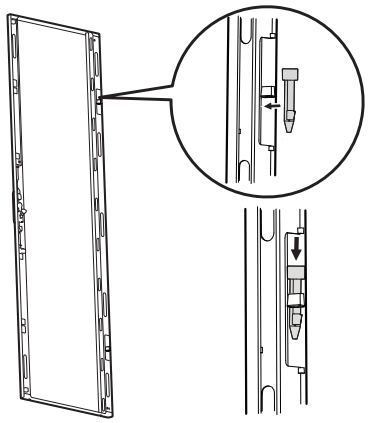

❸

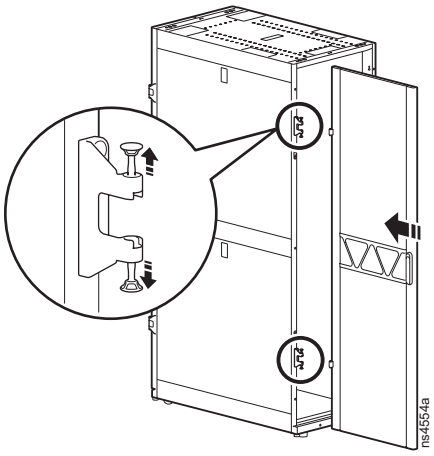

❹

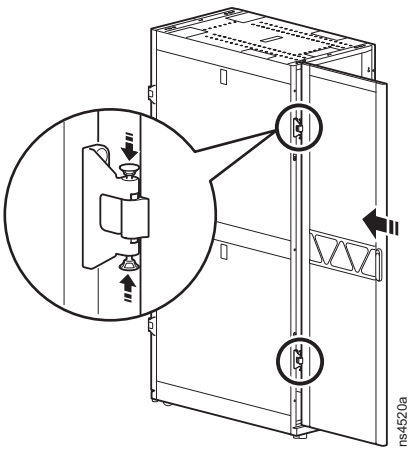

❺

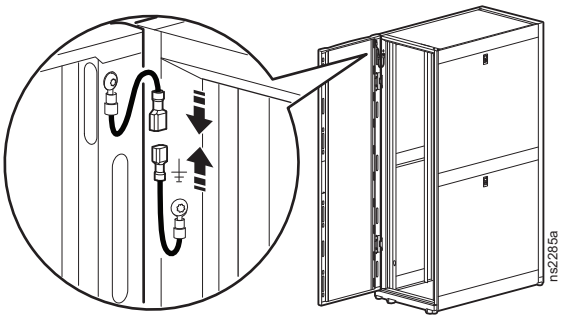

Reverse the door

❶

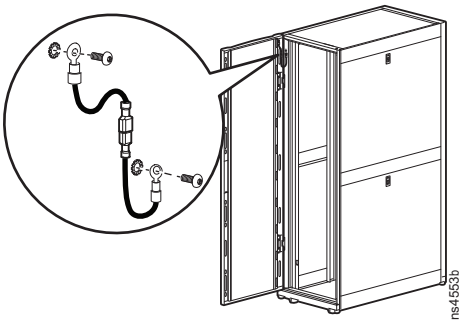

❷

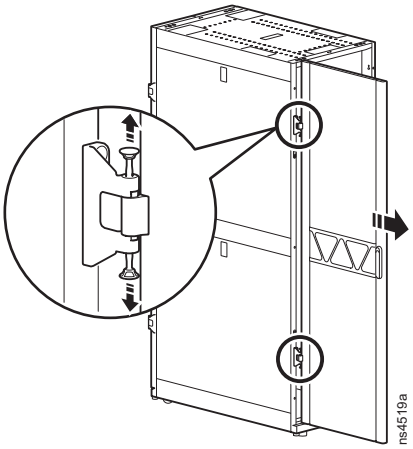

❸

❹

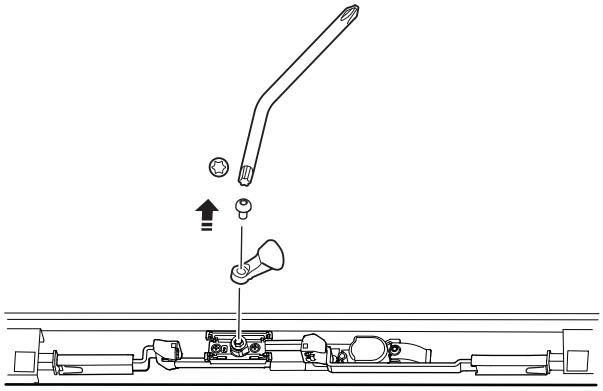

❺

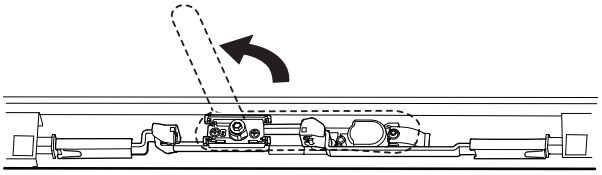

❻

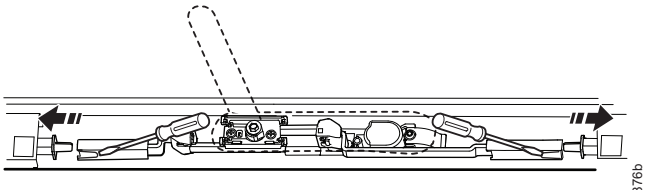

❼

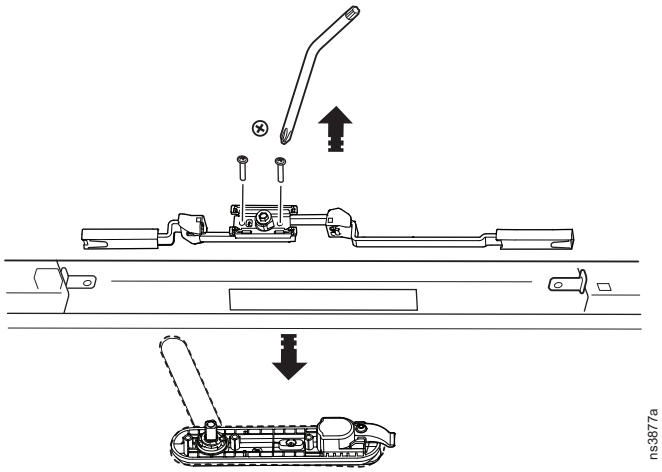

❽

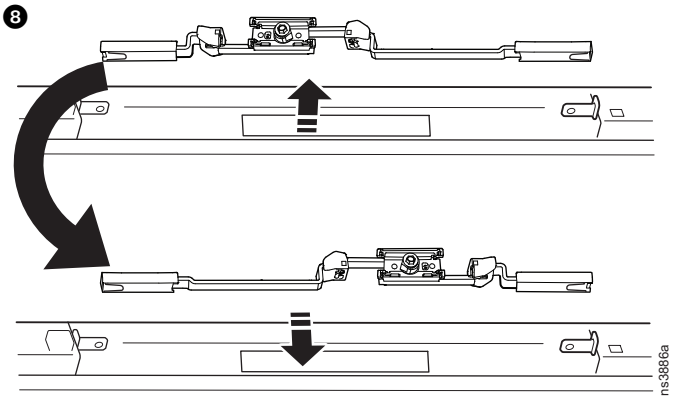

❾



❿

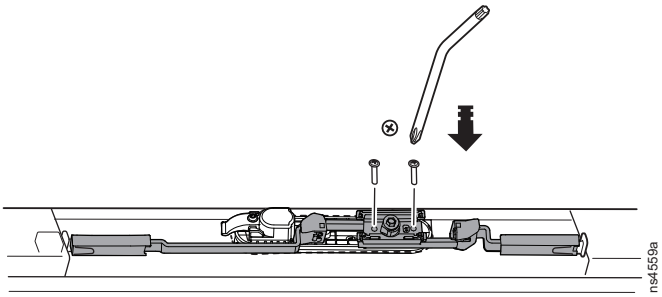

⓫

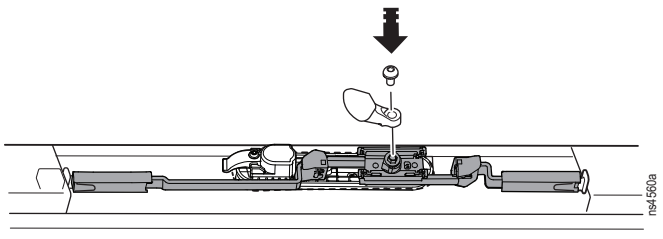

⓬

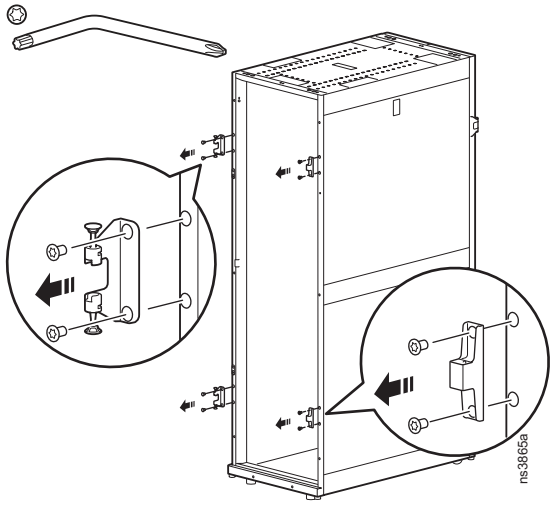

⓭

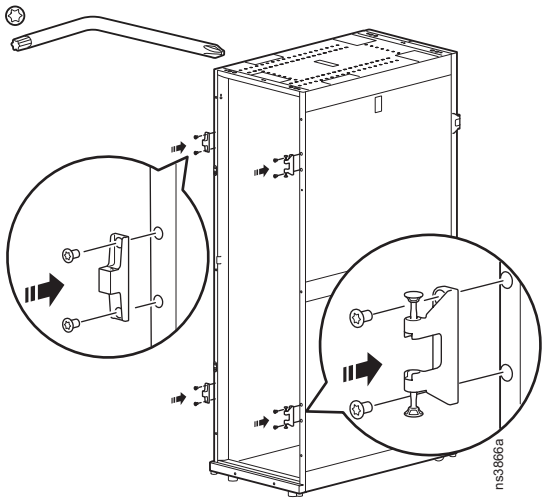

⓮

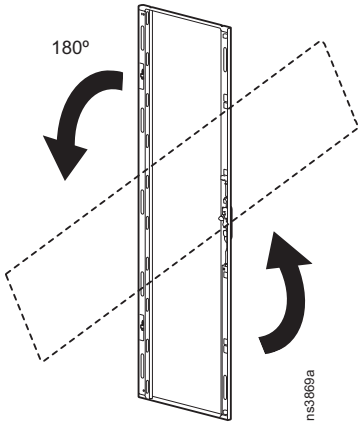

⓯

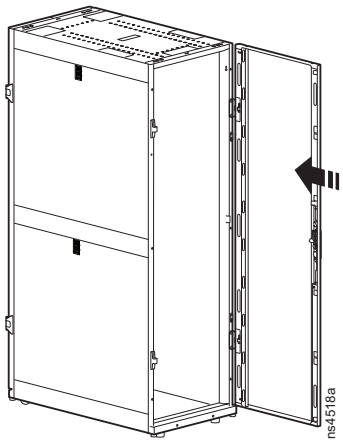

⓰

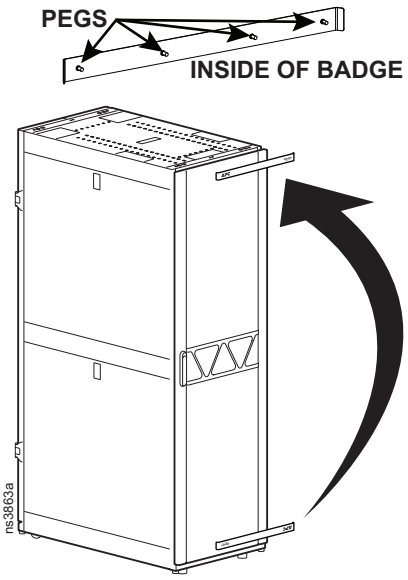

Customer support and warranty information is available at **www.apc.com**.
© 2025 APC by Schneider Electric. All Rights Reserved.

TME67743
1/2025