

# Modicon M241 Logic Controller Hardware Guide

03/2018



EIO0000001456.07

[www.schneider-electric.com](http://www.schneider-electric.com)

**Schneider**  
Electric

---

The information provided in this documentation contains general descriptions and/or technical characteristics of the performance of the products contained herein. This documentation is not intended as a substitute for and is not to be used for determining suitability or reliability of these products for specific user applications. It is the duty of any such user or integrator to perform the appropriate and complete risk analysis, evaluation and testing of the products with respect to the relevant specific application or use thereof. Neither Schneider Electric nor any of its affiliates or subsidiaries shall be responsible or liable for misuse of the information contained herein. If you have any suggestions for improvements or amendments or have found errors in this publication, please notify us.

You agree not to reproduce, other than for your own personal, noncommercial use, all or part of this document on any medium whatsoever without permission of Schneider Electric, given in writing. You also agree not to establish any hypertext links to this document or its content. Schneider Electric does not grant any right or license for the personal and noncommercial use of the document or its content, except for a non-exclusive license to consult it on an "as is" basis, at your own risk. All other rights are reserved.

All pertinent state, regional, and local safety regulations must be observed when installing and using this product. For reasons of safety and to help ensure compliance with documented system data, only the manufacturer should perform repairs to components.

When devices are used for applications with technical safety requirements, the relevant instructions must be followed.

Failure to use Schneider Electric software or approved software with our hardware products may result in injury, harm, or improper operating results.

Failure to observe this information can result in injury or equipment damage.

© 2018 Schneider Electric. All Rights Reserved.

---

# Table of Contents

---



	<b>Safety Information</b> . . . . .	<b>7</b>
	<b>About the Book</b> . . . . .	<b>9</b>
<b>Part I</b>	<b>Modicon M241 Logic Controller Introduction</b> . . . . .	<b>15</b>
<b>Chapter 1</b>	<b>M241 General Overview</b> . . . . .	<b>17</b>
	M241 Logic Controller Description . . . . .	<b>18</b>
	Maximum Hardware Configuration . . . . .	<b>23</b>
	TMC4 Cartridges . . . . .	<b>26</b>
	TM4 Expansion Modules . . . . .	<b>27</b>
	TM3 Expansion Modules . . . . .	<b>28</b>
	TM2 Expansion Modules . . . . .	<b>37</b>
	Accessories . . . . .	<b>41</b>
<b>Chapter 2</b>	<b>M241 Features</b> . . . . .	<b>43</b>
	Real Time Clock (RTC) . . . . .	<b>44</b>
	Input Management . . . . .	<b>48</b>
	Output Management . . . . .	<b>52</b>
	Run/Stop . . . . .	<b>57</b>
	SD Card . . . . .	<b>59</b>
<b>Chapter 3</b>	<b>M241 Installation</b> . . . . .	<b>63</b>
3.1	M241 Logic Controller General Rules for Implementing . . . . .	<b>64</b>
	Environmental Characteristics . . . . .	<b>65</b>
	Certifications and Standards . . . . .	<b>68</b>
3.2	M241 Logic Controller Installation . . . . .	<b>69</b>
	Installation and Maintenance Requirements . . . . .	<b>70</b>
	M241 Logic Controller Mounting Positions and Clearances . . . . .	<b>73</b>
	Top Hat Section Rail (DIN rail) . . . . .	<b>76</b>
	Installing and Removing the Controller with Expansions . . . . .	<b>80</b>
	Direct Mounting on a Panel Surface . . . . .	<b>82</b>
3.3	M241 Electrical Requirements . . . . .	<b>83</b>
	Wiring Best Practices . . . . .	<b>84</b>
	DC Power Supply Characteristics and Wiring . . . . .	<b>90</b>
	AC Power Supply Characteristics and Wiring . . . . .	<b>94</b>
	Grounding the M241 System . . . . .	<b>96</b>

---

<b>Part II</b>	<b>Modicon M241 Logic Controller</b>	<b>101</b>
<b>Chapter 4</b>	<b>TM241C24R</b>	<b>103</b>
	TM241C24R Presentation	103
<b>Chapter 5</b>	<b>TM241CE24R</b>	<b>109</b>
	TM241CE24R Presentation	109
<b>Chapter 6</b>	<b>TM241CEC24R</b>	<b>115</b>
	TM241CEC24R Presentation	115
<b>Chapter 7</b>	<b>TM241C24T</b>	<b>121</b>
	TM241C24T Presentation	121
<b>Chapter 8</b>	<b>TM241CE24T</b>	<b>127</b>
	TM241CE24T Presentation	127
<b>Chapter 9</b>	<b>TM241CEC24T</b>	<b>133</b>
	TM241CEC24T Presentation	133
<b>Chapter 10</b>	<b>TM241C24U</b>	<b>139</b>
	TM241C24U Presentation	139
<b>Chapter 11</b>	<b>TM241CE24U</b>	<b>145</b>
	TM241CE24U Presentation	145
<b>Chapter 12</b>	<b>TM241CEC24U</b>	<b>151</b>
	TM241CEC24U Presentation	151
<b>Chapter 13</b>	<b>TM241C40R</b>	<b>157</b>
	TM241C40R Presentation	157
<b>Chapter 14</b>	<b>TM241CE40R</b>	<b>163</b>
	TM241CE40R Presentation	163
<b>Chapter 15</b>	<b>TM241C40T</b>	<b>169</b>
	TM241C40T Presentation	169
<b>Chapter 16</b>	<b>TM241CE40T</b>	<b>175</b>
	TM241CE40T Presentation	175
<b>Chapter 17</b>	<b>TM241C40U</b>	<b>181</b>
	TM241C40U Presentation	181
<b>Chapter 18</b>	<b>TM241CE40U</b>	<b>187</b>
	TM241CE40U Presentation	187
<b>Chapter 19</b>	<b>Embedded I/O Channels</b>	<b>193</b>
	Digital Inputs	194
	Relay Outputs	202
	Regular Transistor Outputs	208
	Fast Transistor Outputs	213

---

<b>Part III</b>	<b>Modicon M241 Logic Controller Communication . . .</b>	<b>219</b>
<b>Chapter 20</b>	<b>Integrated Communication Ports . . . . .</b>	<b>221</b>
	CAN Port . . . . .	222
	Ethernet Port . . . . .	226
	USB Mini-B Programming Port . . . . .	229
	Serial Line 1 . . . . .	231
	Serial Line 2 . . . . .	234
<b>Chapter 21</b>	<b>Connecting the M241 Logic Controller to a PC . . . . .</b>	<b>237</b>
	Connecting the Controller to a PC . . . . .	237
<b>Glossary</b>	. . . . .	<b>241</b>
<b>Index</b>	. . . . .	<b>247</b>



---

# Safety Information

---



## Important Information

### NOTICE

Read these instructions carefully, and look at the equipment to become familiar with the device before trying to install, operate, service, or maintain it. The following special messages may appear throughout this documentation or on the equipment to warn of potential hazards or to call attention to information that clarifies or simplifies a procedure.



The addition of this symbol to a “Danger” or “Warning” safety label indicates that an electrical hazard exists which will result in personal injury if the instructions are not followed.



This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.

## **DANGER**

**DANGER** indicates a hazardous situation which, if not avoided, **will result in** death or serious injury.

## **WARNING**

**WARNING** indicates a hazardous situation which, if not avoided, **could result in** death or serious injury.

## **CAUTION**

**CAUTION** indicates a hazardous situation which, if not avoided, **could result in** minor or moderate injury.

## **NOTICE**

**NOTICE** is used to address practices not related to physical injury.

---

## PLEASE NOTE

Electrical equipment should be installed, operated, serviced, and maintained only by qualified personnel. No responsibility is assumed by Schneider Electric for any consequences arising out of the use of this material.

A qualified person is one who has skills and knowledge related to the construction and operation of electrical equipment and its installation, and has received safety training to recognize and avoid the hazards involved.

## QUALIFICATION OF PERSONNEL

Only appropriately trained persons who are familiar with and understand the contents of this manual and all other pertinent product documentation are authorized to work on and with this product.

The qualified person must be able to detect possible hazards that may arise from parameterization, modifying parameter values and generally from mechanical, electrical, or electronic equipment. The qualified person must be familiar with the standards, provisions, and regulations for the prevention of industrial accidents, which they must observe when designing and implementing the system.

## INTENDED USE

The products described or affected by this document, together with software, accessories, and options, are programmable logic controllers (referred to herein as “logic controllers”), intended for industrial use according to the instructions, directions, examples, and safety information contained in the present document and other supporting documentation.

The product may only be used in compliance with all applicable safety regulations and directives, the specified requirements, and the technical data.

Prior to using the product, you must perform a risk assessment in view of the planned application. Based on the results, the appropriate safety-related measures must be implemented.

Since the product is used as a component in an overall machine or process, you must ensure the safety of persons by means of the design of this overall system.

Operate the product only with the specified cables and accessories. Use only genuine accessories and spare parts.

Any use other than the use explicitly permitted is prohibited and can result in unanticipated hazards.

---

# About the Book

---



## At a Glance

### Document Scope

Use this document to:

- Install and operate your M241 Logic Controller.
- Connect the M241 Logic Controller to a programming device equipped with SoMachine software.
- Interface the M241 Logic Controller with I/O expansion modules, HMI, and other devices.
- Familiarize yourself with the M241 Logic Controller features.

**NOTE:** Read and understand this document and all related documents (*see page 9*) before installing, operating, or maintaining your controller.

### Validity Note

This document has been updated for the release of TM3TI4D Add-on for SoMachine V4.3.

For product compliance and environmental information (RoHS, REACH, PEP, EOL, etc.), go to [www.schneider-electric.com/green-premium](http://www.schneider-electric.com/green-premium).

The technical characteristics of the devices described in this manual also appear online.

The characteristics that are presented in this manual should be the same as those characteristics that appear online. In line with our policy of constant improvement, we may revise content over time to improve clarity and accuracy. If you see a difference between the manual and online information, use the online information as your reference.

### Related Documents

Title of Documentation	Reference Number
Modicon M241 Logic Controller - Programming Guide	<a href="#">EIO0000001456 (ENG)</a> <a href="#">EIO0000001457 (FRE)</a> <a href="#">EIO0000001458 (GER)</a> <a href="#">EIO0000001459 (SPA)</a> <a href="#">EIO0000001460 (ITA)</a> <a href="#">EIO0000001461 (CHS)</a>
Modicon TMC4 Cartridges - Hardware Guide	<a href="#">EIO0000001776 (ENG)</a> <a href="#">EIO0000001777 (FRE)</a> <a href="#">EIO0000001778 (GER)</a> <a href="#">EIO0000001779 (SPA)</a> <a href="#">EIO0000001780 (ITA)</a> <a href="#">EIO0000001781 (CHS)</a>

Title of Documentation	Reference Number
Modicon TM4 Expansion Modules - Hardware Guide	<a href="#">EIO0000001796 (ENG)</a> <a href="#">EIO0000001797 (FRE)</a> <a href="#">EIO0000001798 (GER)</a> <a href="#">EIO0000001799 (SPA)</a> <a href="#">EIO0000001800 (ITA)</a> <a href="#">EIO0000001801 (CHS)</a>
Modicon TM3 Digital I/O Modules - Hardware Guide	<a href="#">EIO0000001408 (ENG)</a> <a href="#">EIO0000001409 (FRE)</a> <a href="#">EIO0000001410 (GER)</a> <a href="#">EIO0000001411 (SPA)</a> <a href="#">EIO0000001412 (ITA)</a> <a href="#">EIO0000001413 (CHS)</a> <a href="#">EIO0000001375 (TUR)</a> <a href="#">EIO0000001374 (POR)</a>
Modicon TM3 Analog I/O Modules - Hardware Guide	<a href="#">EIO0000001414 (ENG)</a> <a href="#">EIO0000001415 (FRE)</a> <a href="#">EIO0000001416 (GER)</a> <a href="#">EIO0000001417 (SPA)</a> <a href="#">EIO0000001418 (ITA)</a> <a href="#">EIO0000001419 (CHS)</a> <a href="#">EIO0000001379 (TUR)</a> <a href="#">EIO0000001378 (POR)</a>
Modicon TM3 Expert I/O Modules - Hardware Guide	<a href="#">EIO0000001420 (ENG)</a> <a href="#">EIO0000001421 (FRE)</a> <a href="#">EIO0000001422 (GER)</a> <a href="#">EIO0000001423 (SPA)</a> <a href="#">EIO0000001424 (ITA)</a> <a href="#">EIO0000001425 (CHS)</a> <a href="#">EIO0000001381 (TUR)</a> <a href="#">EIO0000001380 (POR)</a>
Modicon TM3 Safety Modules - Hardware Guide	<a href="#">EIO0000001831 (ENG)</a> <a href="#">EIO0000001832 (FRE)</a> <a href="#">EIO0000001833 (GER)</a> <a href="#">EIO0000001834 (SPA)</a> <a href="#">EIO0000001835 (ITA)</a> <a href="#">EIO0000001836 (CHS)</a> <a href="#">EIO0000001837 (POR)</a> <a href="#">EIO0000001838 (TUR)</a>

Title of Documentation	Reference Number
Modicon TM3 Transmitter and Receiver Modules - Hardware Guide	<a href="#">EIO0000001426 (ENG)</a> <a href="#">EIO0000001427 (FRE)</a> <a href="#">EIO0000001428 (GER)</a> <a href="#">EIO0000001429 (SPA)</a> <a href="#">EIO0000001430 (ITA)</a> <a href="#">EIO0000001431 (CHS)</a> <a href="#">EIO0000001383 (TUR)</a> <a href="#">EIO0000001382 (POR)</a>
M241 DC Logic Controller - Instruction Sheet	<a href="#">HRB59603</a>
M241 AC Logic Controller - Instruction Sheet	<a href="#">EAV48551</a>

You can download these technical publications and other technical information from our website at <https://www.schneider-electric.com/en/download>

## Product Related Information


**DANGER**

**HAZARD OF ELECTRIC SHOCK, EXPLOSION OR ARC FLASH**

- Disconnect all power from all equipment including connected devices prior to removing any covers or doors, or installing or removing any accessories, hardware, cables, or wires except under the specific conditions specified in the appropriate hardware guide for this equipment.
- Always use a properly rated voltage sensing device to confirm the power is off where and when indicated.
- Replace and secure all covers, accessories, hardware, cables, and wires and confirm that a proper ground connection exists before applying power to the unit.
- Use only the specified voltage when operating this equipment and any associated products.

**Failure to follow these instructions will result in death or serious injury.**


**DANGER**

**POTENTIAL FOR EXPLOSION**

- Only use this equipment in non-hazardous locations, or in locations that comply with Class I, Division 2, Groups A, B, C and D.
- Do not substitute components which would impair compliance to Class I, Division 2.
- Do not connect or disconnect equipment unless power has been removed or the location is known to be non-hazardous.
- Do not use the USB port(s), if so equipped, unless the location is known to be non-hazardous.

**Failure to follow these instructions will result in death or serious injury.**

## WARNING

### LOSS OF CONTROL

- The designer of any control scheme must consider the potential failure modes of control paths and, for certain critical control functions, provide a means to achieve a safe state during and after a path failure. Examples of critical control functions are emergency stop and overtravel stop, power outage and restart.
- Separate or redundant control paths must be provided for critical control functions.
- System control paths may include communication links. Consideration must be given to the implications of unanticipated transmission delays or failures of the link.
- Observe all accident prevention regulations and local safety guidelines.<sup>1</sup>
- Each implementation of this equipment must be individually and thoroughly tested for proper operation before being placed into service.

**Failure to follow these instructions can result in death, serious injury, or equipment damage.**

<sup>1</sup> For additional information, refer to NEMA ICS 1.1 (latest edition), "Safety Guidelines for the Application, Installation, and Maintenance of Solid State Control" and to NEMA ICS 7.1 (latest edition), "Safety Standards for Construction and Guide for Selection, Installation and Operation of Adjustable-Speed Drive Systems" or their equivalent governing your particular location.

## WARNING

### UNINTENDED EQUIPMENT OPERATION

- Only use software approved by Schneider Electric for use with this equipment.
- Update your application program every time you change the physical hardware configuration.

**Failure to follow these instructions can result in death, serious injury, or equipment damage.**

### Terminology Derived from Standards

The technical terms, terminology, symbols and the corresponding descriptions in this manual, or that appear in or on the products themselves, are generally derived from the terms or definitions of international standards.

In the area of functional safety systems, drives and general automation, this may include, but is not limited to, terms such as *safety*, *safety function*, *safe state*, *fault*, *fault reset*, *malfunction*, *failure*, *error*, *error message*, *dangerous*, etc.

Among others, these standards include:

Standard	Description
EN 61131-2:2007	Programmable controllers, part 2: Equipment requirements and tests.
ISO 13849-1:2008	Safety of machinery: Safety related parts of control systems. General principles for design.

Standard	Description
EN 61496-1:2013	Safety of machinery: Electro-sensitive protective equipment. Part 1: General requirements and tests.
ISO 12100:2010	Safety of machinery - General principles for design - Risk assessment and risk reduction
EN 60204-1:2006	Safety of machinery - Electrical equipment of machines - Part 1: General requirements
EN 1088:2008 ISO 14119:2013	Safety of machinery - Interlocking devices associated with guards - Principles for design and selection
ISO 13850:2006	Safety of machinery - Emergency stop - Principles for design
EN/IEC 62061:2005	Safety of machinery - Functional safety of safety-related electrical, electronic, and electronic programmable control systems
IEC 61508-1:2010	Functional safety of electrical/electronic/programmable electronic safety-related systems: General requirements.
IEC 61508-2:2010	Functional safety of electrical/electronic/programmable electronic safety-related systems: Requirements for electrical/electronic/programmable electronic safety-related systems.
IEC 61508-3:2010	Functional safety of electrical/electronic/programmable electronic safety-related systems: Software requirements.
IEC 61784-3:2008	Digital data communication for measurement and control: Functional safety field buses.
2006/42/EC	Machinery Directive
2014/30/EU	Electromagnetic Compatibility Directive
2014/35/EU	Low Voltage Directive

In addition, terms used in the present document may tangentially be used as they are derived from other standards such as:

Standard	Description
IEC 60034 series	Rotating electrical machines
IEC 61800 series	Adjustable speed electrical power drive systems
IEC 61158 series	Digital data communications for measurement and control – Fieldbus for use in industrial control systems

Finally, the term *zone of operation* may be used in conjunction with the description of specific hazards, and is defined as it is for a *hazard zone* or *danger zone* in the *Machinery Directive (2006/42/EC)* and *ISO 12100:2010*.

**NOTE:** The aforementioned standards may or may not apply to the specific products cited in the present documentation. For more information concerning the individual standards applicable to the products described herein, see the characteristics tables for those product references.



---

# Part I

## Modicon M241 Logic Controller Introduction

---

### What Is in This Part?

This part contains the following chapters:

Chapter	Chapter Name	Page
1	M241 General Overview	17
2	M241 Features	43
3	M241 Installation	63



---

# Chapter 1

## M241 General Overview

---

### Overview

This chapter provides general information about the M241 Logic Controller system architecture and its components.

### What Is in This Chapter?

This chapter contains the following topics:

Topic	Page
M241 Logic Controller Description	18
Maximum Hardware Configuration	23
TMC4 Cartridges	26
TM4 Expansion Modules	27
TM3 Expansion Modules	28
TM2 Expansion Modules	37
Accessories	41

---

## M241 Logic Controller Description

### Overview

The M241 Logic Controller has various powerful features and can service a wide range of applications.

Software configuration, programming, and commissioning is accomplished with the SoMachine software described in the SoMachine Programming Guide (*see SoMachine, Programming Guide*) and the M241 Logic Controller Programming Guide.

### Programming Languages

The M241 Logic Controller is configured and programmed with the SoMachine software, which supports the following IEC 61131-3 programming languages:

- IL: Instruction List
- ST: Structured Text
- FBD: Function Block Diagram
- SFC: Sequential Function Chart
- LD: Ladder Diagram

SoMachine software can also be used to program these controllers using CFC (Continuous Function Chart) language.

### Power Supply

The power supply of the M241 Logic Controller is 24 Vdc (*see page 90*) or 100...240 Vac (*see page 94*).

### Real Time Clock

The M241 Logic Controller includes a Real Time Clock (RTC) system (*see page 44*).

### Run/Stop

The M241 Logic Controller can be operated externally by the following:

- a hardware Run/Stop switch (*see page 57*)
- a Run/Stop (*see page 48*) operation by a dedicated digital input, defined in the software configuration. For more information, refer to Configuration of Digital Inputs (*see Modicon M241 Logic Controller, Programming Guide*).
- a SoMachine software command

## Memory

This table describes the different types of memory:

Memory Type	Size	Used to
RAM	64 Mbytes, of which 8 Mbytes available for the application	execute the application.
Non-volatile	128 Mbytes	save the program and data in case of a power interruption.

## Embedded Inputs/Outputs

The following embedded I/O types are available, depending on the controller reference:

- Regular inputs
- Fast inputs associated with counters
- Regular sink/source transistor outputs
- Fast sink/source transistor outputs associated with pulse generators
- Relay outputs

## Removable Storage

The M241 Logic Controllers include an embedded SD card slot (*see page 59*).

The main uses of the SD card are:

- Initializing the controller with a new application
- Updating the controller firmware
- Applying post configuration files to the controller
- Applying recipes
- Receiving data logging files

## Embedded Communication Features

The following types of communication ports are available depending on the controller reference:

- CANopen Master (*see page 222*)
- Ethernet (*see page 226*)
- USB Mini-B (*see page 229*)
- Serial Line 1 (*see page 231*)
- Serial Line 2 (*see page 234*)

## M241 Logic Controller

Reference	Digital Inputs	Digital Outputs	Communication Ports	Terminal Type	Power supply
TM241C24R <i>(see page 103)</i>	6 regular inputs <sup>(1)</sup> 8 fast inputs (counters) <sup>(2)</sup>	6 2A relay outputs 4 source fast outputs (pulse generators) <sup>(3)</sup>	2 serial line ports 1 USB programming port	Removable screw terminal blocks	100...240 Vac
TM241CE24R <i>(see page 187)</i>	6 regular inputs <sup>(1)</sup> 8 fast inputs (counters) <sup>(2)</sup>	6 2A relay outputs 4 source fast outputs (pulse generators) <sup>(3)</sup>	2 serial line ports 1 USB programming port 1 Ethernet port	Removable screw terminal blocks	100...240 Vac
TM241CEC24R <i>(see page 115)</i>	6 regular inputs <sup>(1)</sup> 8 fast inputs (counters) <sup>(2)</sup>	6 2A relay outputs 4 source fast outputs (pulse generators) <sup>(3)</sup>	2 serial line ports 1 Ethernet port 1 CANopen master port 1 USB programming port	Removable screw terminal blocks	100...240 Vac
TM241C24T <i>(see page 121)</i>	6 regular inputs <sup>(1)</sup> 8 fast inputs (counters) <sup>(2)</sup>	Source outputs 6 regular transistor outputs 4 fast outputs (pulse generators) <sup>(3)</sup>	2 serial line ports 1 USB programming port	Removable screw terminal blocks	24 Vdc
TM241CE24T <i>(see page 127)</i>	6 regular inputs <sup>(1)</sup> 8 fast inputs (counters) <sup>(2)</sup>	Source outputs 6 regular transistor outputs 4 fast outputs (pulse generators) <sup>(3)</sup>	2 serial line ports 1 USB programming port 1 Ethernet port	Removable screw terminal blocks	24 Vdc
TM241CEC24T <i>(see page 133)</i>	6 regular inputs <sup>(1)</sup> 8 fast inputs (counters) <sup>(2)</sup>	Source outputs 6 regular transistor outputs 4 fast outputs (pulse generators) <sup>(3)</sup>	2 serial line ports 1 USB programming port 1 Ethernet port 1 CANopen master port	Removable screw terminal blocks	24 Vdc
TM241C24U <i>(see page 139)</i>	6 regular inputs <sup>(1)</sup> 8 fast inputs (counters) <sup>(2)</sup>	Sink outputs 6 regular transistor outputs 4 fast outputs (pulse generators) <sup>(3)</sup>	2 serial line ports 1 USB programming port	Removable screw terminal blocks	24 Vdc

(1) The regular inputs have a maximum frequency of 1 kHz.  
(2) The fast inputs can be used either as regular inputs or as fast inputs for counting or event functions.  
(3) The fast transistor outputs can be used either as regular transistor outputs, as reflex outputs for counting function (HSC), or as fast transistor outputs for pulse generator functions (FreqGen / PTO / PWM).


Reference	Digital Inputs	Digital Outputs	Communication Ports	Terminal Type	Power supply
TM241CE24U <i>(see page 145)</i>	6 regular inputs <sup>(1)</sup> 8 fast inputs (counters) <sup>(2)</sup>	Sink outputs 6 regular transistor outputs 4 fast outputs (pulse generators) <sup>(3)</sup>	2 serial line ports 1 USB programming port 1 Ethernet port	Removable screw terminal blocks	24 Vdc
TM241CEC24U <i>(see page 151)</i>	6 regular inputs <sup>(1)</sup> 8 fast inputs (counters) <sup>(2)</sup>	Sink outputs 6 regular transistor outputs 4 fast outputs (pulse generators) <sup>(3)</sup>	2 serial line ports 1 USB programming port 1 Ethernet port 1 CANopen master port	Removable screw terminal blocks	24 Vdc
TM241C40R <i>(see page 157)</i>	16 regular inputs <sup>(1)</sup> 8 fast inputs (counters) <sup>(2)</sup>	12 2A relay outputs 4 source fast outputs (pulse generators) <sup>(3)</sup>	2 serial line ports 1 USB programming port	Removable screw terminal blocks	100...240 Vac
TM241CE40R <i>(see page 163)</i>	16 regular inputs <sup>(1)</sup> 8 fast inputs (counters) <sup>(2)</sup>	12 2A relay outputs 4 source fast outputs (pulse generators) <sup>(3)</sup>	2 serial line ports 1 USB programming port 1 Ethernet port	Removable screw terminal blocks	100...240 Vac
TM241C40T <i>(see page 169)</i>	16 regular inputs <sup>(1)</sup> 8 fast inputs (counters) <sup>(2)</sup>	Source outputs 12 regular transistor outputs 4 fast outputs (pulse generators) <sup>(3)</sup>	2 serial line ports 1 USB programming port	Removable screw terminal blocks	24 Vdc
TM241CE40T <i>(see page 175)</i>	16 regular inputs <sup>(1)</sup> 8 fast inputs (counters) <sup>(2)</sup>	Source outputs 12 regular transistor outputs 4 fast outputs (pulse generators) <sup>(3)</sup>	2 serial line ports 1 USB programming port 1 Ethernet port	Removable screw terminal blocks	24 Vdc
<p><b>(1)</b> The regular inputs have a maximum frequency of 1 kHz.</p> <p><b>(2)</b> The fast inputs can be used either as regular inputs or as fast inputs for counting or event functions.</p> <p><b>(3)</b> The fast transistor outputs can be used either as regular transistor outputs, as reflex outputs for counting function (HSC), or as fast transistor outputs for pulse generator functions (FreqGen / PTO / PWM).</p>					

Reference	Digital Inputs	Digital Outputs	Communication Ports	Terminal Type	Power supply
TM241C40U <i>(see page 181)</i>	16 regular inputs <sup>(1)</sup> 8 fast inputs (counters) <sup>(2)</sup>	Sink outputs 12 regular transistor outputs 4 fast outputs (pulse generators) <sup>(3)</sup>	2 serial line ports 1 USB programming port	Removable screw terminal blocks	24 Vdc
TM241CE40U <i>(see page 187)</i>	16 regular inputs <sup>(1)</sup> 8 fast inputs (counters) <sup>(2)</sup>	Sink outputs 12 regular transistor outputs 4 fast outputs (pulse generators) <sup>(3)</sup>	2 serial line ports 1 USB programming port 1 Ethernet port	Removable screw terminal blocks	24 Vdc

(1) The regular inputs have a maximum frequency of 1 kHz.  
(2) The fast inputs can be used either as regular inputs or as fast inputs for counting or event functions.  
(3) The fast transistor outputs can be used either as regular transistor outputs, as reflex outputs for counting function (HSC), or as fast transistor outputs for pulse generator functions (FreqGen / PTO / PWM).

### Delivery Content

The following figure presents the content of the delivery for a M241 Logic Controller:

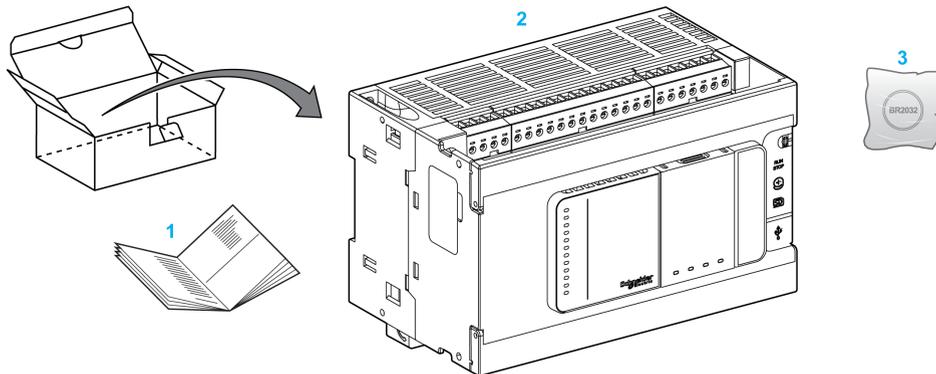

- 1 M241 Logic Controller Instruction Sheet
- 2 M241 Logic Controller
- 3 Lithium carbon monofluoride battery, type Panasonic BR2032.


## Maximum Hardware Configuration

### Introduction

The M241 Logic Controller is a control system that offers an all-in-one solution with optimized configurations and an expandable architecture.

### Local and Remote Configuration Principle

The following figure defines the local and remote configurations:

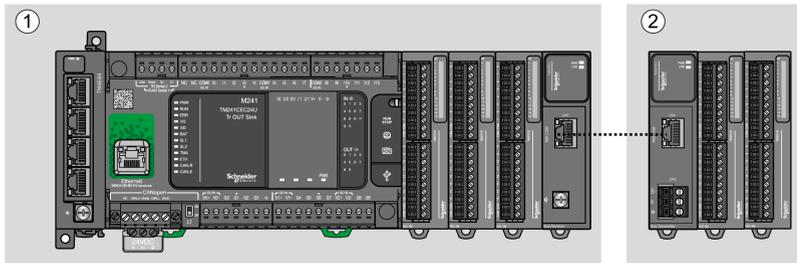

- (1) Local configuration
- (2) Remote configuration


### M241 Logic Controller Local Configuration Architecture

Optimized local configuration and flexibility are provided by the association of:

- TM4 expansion modules
- M241 Logic Controller
- TM3 expansion modules
- TM2 expansion modules


Application requirements determine the architecture of your M241 Logic Controller configuration.

The following figure represents the components of a local configuration:

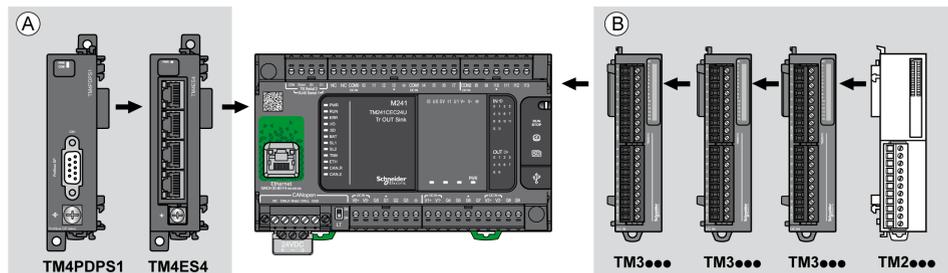

- (A) Expansion modules (3 maximum)
- (B) Expansion modules (7 maximum)

**NOTE:** It is prohibited to mount a TM2 module before any TM3 module as indicated in the following figure:

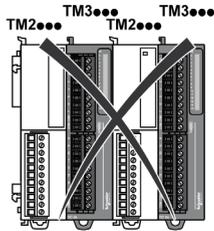

### M241 Logic Controller Remote Configuration Architecture


Optimized remote configuration and flexibility are provided by the association of:

- TM4 expansion modules
- M241 Logic Controller
- TM3 expansion modules
- TM3 transmitter and receiver modules

Application requirements determine the architecture of your M241 Logic Controller configuration.

**NOTE:** You cannot use TM2 modules in configurations that include the TM3 transmitter and receiver modules.

The following figure represents the components of a remote configuration:

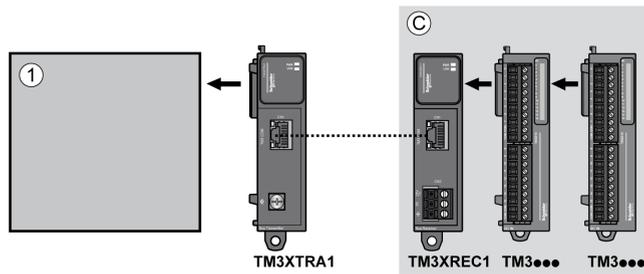

- (1) Logic controller and modules  
(C) Expansion modules (7 maximum)

## Maximum Number of Modules

The following table shows the maximum configuration supported:

References	Maximum	Type of Configuration
TM241****	7 TM3 / TM2 expansion modules	Local
TM241****	3 TM4 expansion modules	Local
TM3XREC1	7 TM3 expansion modules	Remote
<b>NOTE:</b> TM3 transmitter and receiver modules are not included in a count of the maximum number of expansion modules.		

**NOTE:** The configuration with its TM4, TM3, and TM2 expansion modules is validated by SoMachine software in the **Configuration** window.

**NOTE:** In some environments, the maximum configuration populated by high consumption modules, coupled with the maximum distance allowable between the TM3 transmitter and receiver modules, may present bus communication issues although the SoMachine software allowed for the configuration. In such a case you will need to analyze the consumption of the modules chosen for your configuration, as well as the minimum cable distance required by your application, and possibly seek to optimize your choices.

## TMC4 Cartridges

### Overview

You can expand the number of I/Os of your Modicon M241 Logic Controller by adding TMC4 cartridges.

For more information, refer to the TMC4 Cartridges Hardware Guide.

### TMC4 Standard Cartridges

The following table presents the general-purpose TMC4 cartridges with the corresponding channel type, voltage/current range, and terminal type:

Reference	Channels	Channel Type	Voltage Current	Terminal Type
TMC4AI2	2	Analog inputs (voltage or current)	0...10 Vdc 0...20 mA or 4...20 mA	3.81 mm (0.15 in.) pitch, removable spring terminal block
TMC4TI2	2	Analog temperature inputs	Thermocouple type K, J, R, S, B, E, T, N,C 3 wires RTD type Pt100, Pt1000, Ni100, Ni1000	3.81 mm (0.15 in.) pitch, removable spring terminal block
TMC4AQ2	2	Analog outputs (voltage or current)	0...10 Vdc 4...20 mA	3.81 mm (0.15 in.) pitch, removable spring terminal block

### TMC4 Application Cartridges

The following table presents the applicative TMC4 cartridges with the corresponding channel type, voltage/current range, and terminal type:

Reference	Channels	Channel Type	Voltage Current	Terminal Type
TMC4HOIS01	2	Analog inputs (voltage or current)	0...10 Vdc 0...20 mA or 4...20 mA	3.81 mm (0.15 in.) pitch, removable spring terminal block
TMC4PACK01	2	Analog inputs (voltage or current)	0...10 Vdc 0...20 mA or 4...20 mA	3.81 mm (0.15 in.) pitch, removable spring terminal block

## TM4 Expansion Modules

### Introduction

The range of TM4 expansion modules includes communication modules.

For more information, refer to the TM4 Expansion Modules Hardware Guide.

### TM4 Expansion Modules

The following table shows the TM4 expansion module features:

Module reference	Type	Terminal type
TM4ES4	Ethernet communication	4 RJ45 connectors 1 screw for functional ground connection
TM4PDPS1	PROFIBUS DP slave communication	1 SUB-D 9 pins female connector 1 screw for functional ground connection
<b>NOTE:</b> The TM4ES4 module has two applications: expansion or standalone. For more information, refer to TM4 Compatibility.		

## TM3 Expansion Modules

### Introduction

The range of TM3 expansion modules includes:

- Digital modules, classified as follows:
  - Input modules (*see page 28*)
  - Output modules (*see page 29*)
  - Mixed input/output modules (*see page 31*)
- Analog modules, classified as follows:
  - Input modules (*see page 32*)
  - Output modules (*see page 33*)
  - Mixed input/output modules (*see page 34*)
- Expert modules (*see page 34*)
- Safety modules (*see page 35*)
- Transmitter and Receiver modules (*see page 36*)

For more information, refer to the following documents:

- TM3 Digital I/O Modules Hardware Guide
- TM3 Analog I/O Modules Hardware Guide
- TM3 Expert I/O Modules Hardware Guide
- TM3 Safety Modules Hardware Guide
- TM3 Transmitter and Receiver Modules Hardware Guide

### TM3 Digital Input Modules

The following table shows the TM3 digital input expansion modules, with corresponding channel type, nominal voltage/current, and terminal type:

Reference	Channels	Channel Type	Voltage Current	Terminal Type / Pitch
TM3DI8A	8	Regular inputs	120 Vac 7.5 mA	Removable screw terminal block / 5.08 mm
TM3DI8	8	Regular inputs	24 Vdc 7 mA	Removable screw terminal block / 5.08 mm
TM3DI8G	8	Regular inputs	24 Vdc 7 mA	Removable spring terminal block / 5.08 mm
TM3DI16	16	Regular inputs	24 Vdc 7 mA	Removable screw terminal blocks / 3.81 mm

Reference	Channels	Channel Type	Voltage Current	Terminal Type / Pitch
TM3DI16G	16	Regular inputs	24 Vdc 7 mA	Removable spring terminal blocks / 3.81 mm
TM3DI16K	16	Regular inputs	24 Vdc 5 mA	HE10 (MIL 20) connector
TM3DI32K	32	Regular inputs	24 Vdc 5 mA	HE10 (MIL 20) connector

### TM3 Digital Output Modules

The following table shows the TM3 digital output expansion modules, with corresponding channel type, nominal voltage/current, and terminal type:

Reference	Channels	Channel Type	Voltage Current	Terminal Type / Pitch
TM3DQ8R	8	Relay outputs	24 Vdc / 240 Vac 7 A maximum per common line / 2 A maximum per output	Removable screw terminal block / 5.08 mm
TM3DQ8RG	8	Relay outputs	24 Vdc / 240 Vac 7 A maximum per common line / 2 A maximum per output	Removable spring terminal block / 5.08 mm
TM3DQ8T	8	Regular transistor outputs (source)	24 Vdc 4 A maximum per common line/0.5 A maximum per output	Removable screw terminal block / 5.08 mm
TM3DQ8TG	8	Regular transistor outputs (source)	24 Vdc 4 A maximum per common line/0.5 A maximum per output	Removable spring terminal block / 5.08 mm
TM3DQ8U	8	Regular transistor outputs (sink)	24 Vdc 4 A maximum per common line/0.5 A maximum per output	Removable screw terminal block / 5.08 mm
TM3DQ8UG	8	Regular transistor outputs (sink)	24 Vdc 4 A maximum per common line/0.5 A maximum per output	Removable spring terminal block / 5.08 mm
TM3DQ16R	16	Relay outputs	24 Vdc / 240 Vac 8 A maximum per common line / 2 A maximum per output	Removable screw terminal blocks / 3.81 mm

Reference	Channels	Channel Type	Voltage Current	Terminal Type / Pitch
TM3DQ16RG	16	Relay outputs	24 Vdc / 240 Vac 8 A maximum per common line / 2 A maximum per output	Removable spring terminal blocks / 3.81 mm
TM3DQ16T	16	Regular transistor outputs (source)	24 Vdc 8 A maximum per common line / 0.5 A maximum per output	Removable screw terminal blocks / 3.81 mm
TM3DQ16TG	16	Regular transistor outputs (source)	24 Vdc 8 A maximum per common line / 0.5 A maximum per output	Removable spring terminal blocks / 3.81 mm
TM3DQ16U	16	Regular transistor outputs (sink)	24 Vdc 8 A maximum per common line / 0.5 A maximum per output	Removable screw terminal blocks / 3.81 mm
TM3DQ16UG	16	Regular transistor outputs (sink)	24 Vdc 8 A maximum per common line / 0.5 A maximum per output	Removable spring terminal blocks / 3.81 mm
TM3DQ16TK	16	Regular transistor outputs (source)	24 Vdc 2 A maximum per common line / 0.1 A maximum per output	HE10 (MIL 20) connector
TM3DQ16UK	16	Regular transistor outputs (sink)	24 Vdc 2 A maximum per common line / 0.1 A maximum per output	HE10 (MIL 20) connector
TM3DQ32TK	32	Regular transistor outputs (source)	24 Vdc 2 A maximum per common line / 0.1 A maximum per output	HE10 (MIL 20) connectors
TM3DQ32UK	32	Regular transistor outputs (sink)	24 Vdc 2 A maximum per common line / 0.1 A maximum per output	HE10 (MIL 20) connectors

### TM3 Digital Mixed Input/Output Modules

The following table shows the TM3 mixed I/O modules, with corresponding channel type, nominal voltage/current, and terminal type:

Reference	Channels	Channel Type	Voltage Current	Terminal Type / Pitch
TM3DM8R	4	Regular inputs	24 Vdc 7 mA	Removable screw terminal block / 5.08 mm
	4	Relay outputs	24 Vdc / 240 Vac 7 A maximum per common line / 2 A maximum per output	
TM3DM8RG	4	Regular inputs	24 Vdc 7 mA	Removable spring terminal block / 5.08 mm
	4	Relay outputs	24 Vdc / 240 Vac 7 A maximum per common line / 2 A maximum per output	
TM3DM24R	16	Regular inputs	24 Vdc 7 mA	Removable screw terminal blocks / 3.81 mm
	8	Relay outputs	24 Vdc / 240 Vac 7 A maximum per common line / 2 A maximum per output	
TM3DM24RG	16	Regular inputs	24 Vdc 7 mA	Removable spring terminal blocks / 3.81 mm
	8	Relay outputs	24 Vdc / 240 Vac 7 A maximum per common line / 2 A maximum per output	

### TM3 Analog Input Modules

The following table shows the TM3 analog input expansion modules, with corresponding resolution, channel type, nominal voltage/current, and terminal type:

Reference	Resolution	Channels	Channel Type	Mode	Terminal Type / Pitch
TM3AI2H	16 bit, or 15 bit + sign	2	inputs	0...10 Vdc -10...+10 Vdc 0...20 mA 4...20 mA	Removable screw terminal block / 5.08 mm
TM3AI2HG	16 bit, or 15 bit + sign	2	inputs	0...10 Vdc -10...+10 Vdc 0...20 mA 4...20 mA	Removable spring terminal block / 5.08 mm
TM3AI4	12 bit, or 11 bit + sign	4	inputs	0...10 Vdc -10...+10 Vdc 0...20 mA 4...20 mA	Removable screw terminal block / 3.81 mm
TM3AI4G	12 bit, or 11 bit + sign	4	inputs	0...10 Vdc -10...+10 Vdc 0...20 mA 4...20 mA	Removable spring terminal blocks / 3.81 mm
TM3AI8	12 bit, or 11 bit + sign	8	inputs	0...10 Vdc -10...+10 Vdc 0...20 mA 4...20 mA 0...20 mA extended 4...20 mA extended	Removable screw terminal block / 3.81 mm
TM3AI8G	12 bit, or 11 bit + sign	8	inputs	0...10 Vdc -10...+10 Vdc 0...20 mA 4...20 mA 0...20 mA extended 4...20 mA extended	Removable spring terminal blocks / 3.81 mm
TM3TI4	16 bit, or 15 bit + sign	4	inputs	0...10 Vdc -10...+10 Vdc 0...20 mA 4...20 mA Thermocouple PT100/1000 NI100/1000	Removable screw terminal block / 3.81 mm

Reference	Resolution	Channels	Channel Type	Mode	Terminal Type / Pitch
TM3TI4G	16 bit, or 15 bit + sign	4	inputs	0...10 Vdc -10...+10 Vdc 0...20 mA 4...20 mA Thermocouple PT100/1000 NI100/1000	Removable spring terminal blocks / 3.81 mm
TM3TI4D	16 bit, or 15 bit + sign	4	inputs	Thermocouple	Removable screw terminal block / 3.81 mm
TM3TI4DG	16 bit, or 15 bit + sign	4	inputs	Thermocouple	Removable spring terminal blocks / 3.81 mm
TM3TI8T	16 bit, or 15 bit + sign	8	inputs	Thermocouple NTC/PTC Ohmmeter	Removable screw terminal block / 3.81 mm
TM3TI8TG	16 bit, or 15 bit + sign	8	inputs	Thermocouple NTC/PTC Ohmmeter	Removable spring terminal blocks / 3.81 mm

### TM3 Analog Output Modules

The following table shows the TM3 analog output modules, with corresponding resolution, channel type, nominal voltage/current, and terminal type:

Reference	Resolution	Channels	Channel Type	Mode	Terminal Type / Pitch
TM3AQ2	12 bit, or 11 bit + sign	2	outputs	0...10 Vdc -10...+10 Vdc 0...20 mA 4...20 mA	Removable screw terminal block / 5.08 mm
TM3AQ2G	12 bit, or 11 bit + sign	2	outputs	0...10 Vdc -10...+10 Vdc 0...20 mA 4...20 mA	Removable spring terminal block / 5.08 mm
TM3AQ4	12 bit, or 11 bit + sign	4	outputs	0...10 Vdc -10...+10 Vdc 0...20 mA 4...20 mA	Removable screw terminal block / 5.08 mm
TM3AQ4G	12 bit, or 11 bit + sign	4	outputs	0...10 Vdc -10...+10 Vdc 0...20 mA 4...20 mA	Removable spring terminal block / 5.08 mm

### TM3 Analog Mixed Input/Output Modules

This following table shows the TM3 analog mixed I/O modules, with corresponding resolution, channel type, nominal voltage/current, and terminal type:

Reference	Resolution	Channels	Channel Type	Mode	Terminal Type / Pitch
TM3AM6	12 bit, or 11 bit + sign	4	inputs	0...10 Vdc -10...+10 Vdc 0...20 mA 4...20 mA	Removable screw terminal block / 3.81 mm
		2	outputs		
TM3AM6G	12 bit, or 11 bit + sign	4	inputs	0...10 Vdc -10...+10 Vdc 0...20 mA 4...20 mA	Removable spring terminal block / 3.81 mm
		2	outputs		
TM3TM3	16 bit, or 15 bit + sign	2	inputs	0...10 Vdc -10...+10 Vdc 0...20 mA 4...20 mA Thermocouple PT100/1000 NI100/1000	Removable screw terminal block / 5.08 mm
			1	outputs	
TM3TM3G	16 bit, or 15 bit + sign	2	inputs	0...10 Vdc -10...+10 Vdc 0...20 mA 4...20 mA Thermocouple PT100/1000 NI100/1000	Removable spring terminal block / 5.08 mm
			1	outputs	

### TM3 Expert Module

The following table shows the TM3 expert expansion module, with corresponding terminal type:

Reference	Description	Terminal Type / Pitch
TM3XTYS4	TeSys module	4 front connectors RJ-45 1 power supply connector / 5.08 mm

### TM3 Safety Modules

This table contains the TM3 safety modules, with the corresponding channel type, nominal voltage/current, and terminal type:

Reference	Function Category	Channels	Channel type	Voltage Current	Terminal type
TM3SAC5R	1 function, up to category 3	1 or 2 <sup>(1)</sup>	Safety input	24 Vdc 100 mA maximum	3.81 mm (0.15 in.) and 5.08 mm (0.20 in.), removable screw terminal block
		Start <sup>(2)</sup>	Input		
		3 in parallel	Relay outputs Normally open	24 Vdc / 230 Vac 6 A maximum per output	
TM3SAC5RG	1 function, up to category 3	1 or 2 <sup>(1)</sup>	Safety input	24 Vdc 100 mA maximum	3.81 mm (0.15 in.) and 5.08 mm (0.20 in.), removable spring terminal block
		Start <sup>(2)</sup>	Input		
		3 in parallel	Relay outputs Normally open	24 Vdc / 230 Vac 6 A maximum per output	
TM3SAF5R	1 function, up to category 4	2 <sup>(1)</sup>	Safety inputs	24 Vdc 100 mA maximum	3.81 mm (0.15 in.) and 5.08 mm (0.20 in.), removable screw terminal block
		Start	Input		
		3 in parallel	Relay outputs Normally open	24 Vdc / 230 Vac 6 A maximum per output	
TM3SAF5RG	1 function, up to category 4	2 <sup>(1)</sup>	Safety inputs	24 Vdc 100 mA maximum	3.81 mm (0.15 in.) and 5.08 mm (0.20 in.), removable spring terminal block
		Start	Input		
		3 in parallel	Relay outputs Normally open	24 Vdc / 230 Vac 6 A maximum per output	
TM3SAFL5R	2 functions, up to category 3	2 <sup>(1)</sup>	Safety inputs	24 Vdc 100 mA maximum	3.81 mm (0.15 in.) and 5.08 mm (0.20 in.), removable screw terminal block
		Start	Input		
		3 in parallel	Relay outputs Normally open	24 Vdc / 230 Vac 6 A maximum per output	
TM3SAFL5RG	2 functions, up to category 3	2 <sup>(1)</sup>	Safety inputs	24 Vdc 100 mA maximum	3.81 mm (0.15 in.) and 5.08 mm (0.20 in.), removable spring terminal block
		Start	Input		
		3 in parallel	Relay outputs Normally open	24 Vdc / 230 Vac 6 A maximum per output	
<sup>(1)</sup> Depending on external wiring <sup>(2)</sup> Non-monitored start					

Reference	Function Category	Channels	Channel type	Voltage Current	Terminal type
TM3SAK6R	3 functions, up to category 4	1 or 2 <sup>(1)</sup>	Safety inputs	24 Vdc 100 mA maximum	3.81 mm (0.15 in.) and 5.08 mm (0.20 in.), removable screw terminal block
		Start	Input		
		3 in parallel	Relay outputs Normally open	24 Vdc / 230 Vac 6 A maximum per output	
TM3SAK6RG	3 functions, up to category 4	1 or 2 <sup>(1)</sup>	Safety inputs	24 Vdc 100 mA maximum	3.81 mm (0.15 in.) and 5.08 mm (0.20 in.), removable spring terminal block
		Start	Input		
		3 in parallel	Relay outputs Normally open	24 Vdc / 230 Vac 6 A maximum per output	
<p>(1) Depending on external wiring</p> <p>(2) Non-monitored start</p>					

### TM3 Transmitter and Receiver Modules

The following table shows the TM3 transmitter and receiver expansion modules:

Reference	Description	Terminal Type / Pitch
TM3XTRA1	Data transmitter module for remote I/O	1 front connector RJ-45 1 screw for functional ground connection
TM3XREC1	Data receiver module for remote I/O	1 front connector RJ-45 Power supply connector / 5.08 mm

## TM2 Expansion Modules

### Overview

You can expand the number of I/Os of your M241 Logic Controller by adding TM2 I/O expansion modules.

The following types of electronic modules are supported:

- TM2 digital I/O expansion modules
- TM2 analog I/O expansion modules

For more information, refer to the following documents:

- TM2 Digital I/O Expansion Modules Hardware Guide
- TM2 Analog I/O Expansion Modules Hardware Guide

**NOTE:** TM2 modules can only be used in the local configuration, and only if there is no TM3 transmitter and receiver modules present in the configuration.

**NOTE:** It is prohibited to mount a TM2 module before any TM3 module. The TM2 modules must be mounted and configured at the end of the local configuration.

### TM2 Digital Input Expansion Modules

The following table shows the compatible TM2 digital input expansion modules with the corresponding channel type, nominal voltage/current, and terminal type:

Reference	Channels	Channel Type	Voltage Current	Terminal Type
TM2DAI8DT	8	Regular inputs	120 Vac 7.5 mA	Removable screw terminal block
TM2DDI8DT	8	Regular inputs	24 Vdc 7 mA	Removable screw terminal block
TM2DDI16DT	16	Regular inputs	24 Vdc 7 mA	Removable screw terminal block
TM2DDI16DK	16	Regular inputs	24 Vdc 5 mA	HE10 (MIL 20) connector
TM2DDI32DK	32	Regular inputs	24 Vdc 5 mA	HE10 (MIL 20) connector

## TM2 Digital Output Expansion Modules

The following table shows the compatible TM2 digital output expansion modules with the corresponding channel type, nominal voltage/current, and terminal type:

Reference	Channels	Channel type	Voltage Current	Terminal type
TM2DRA8RT	8	Relay outputs	30 Vdc / 240 Vac 2 A max	Removable screw terminal block
TM2DRA16RT	16	Relay outputs	30 Vdc / 240 Vac 2 A max	Removable screw terminal block
TM2DDO8UT	8	Regular transistor outputs (sink)	24 Vdc 0.3 A max per output	Removable screw terminal block
TM2DDO8TT	8	Regular transistor outputs (source)	24 Vdc 0.5 A max per output	Removable screw terminal block
TM2DDO16UK	16	Regular transistor outputs (sink)	24 Vdc 0.1 A max per output	HE10 (MIL 20) connector
TM2DDO16TK	16	Regular transistor outputs (source)	24 Vdc 0.4 A max per output	HE10 (MIL 20) connector
TM2DDO32UK	32	Regular transistor outputs (sink)	24 Vdc 0.1 A max per output	HE10 (MIL 20) connector
TM2DDO32TK	32	Regular transistor outputs (source)	24 Vdc 0.4 A max per output	HE10 (MIL 20) connector

## TM2 Digital Mixed Input/Output Expansion Modules

The following table shows the compatible TM2 digital mixed I/O expansion modules with the corresponding channel type, nominal voltage/current, and terminal type:

Reference	Channels	Channel type	Voltage Current	Terminal type
TM2DMM8DRT	4	Regular inputs	24 Vdc 7 mA	Removable screw terminal block
	4	Relay outputs	24 Vdc / 240 Vac 7 A maximum per common line / 2 A maximum per output	
TM2DMM24DRF	16	Regular inputs	24 Vdc 7 mA	Non-removable spring terminal block
	8	Relay outputs	24 Vdc / 240 Vac 7 A maximum per common line / 2 A maximum per output	

### TM2 Analog Input Expansion Modules

The following table shows the compatible TM2 analog input expansion modules with the corresponding channel type, nominal voltage/current, and terminal type:

Reference	Channels	Channel type	Voltage Current	Terminal Type
TM2AMI2HT	2	High-level inputs	0...10 Vdc 4...20 mA	Removable screw terminal block
TM2AMI2LT	2	Low-level inputs	Thermocouple type J,K,T	Removable screw terminal block
TM2AMI4LT	4	Analog inputs	0...10 Vdc 0...20 mA PT100/1000 Ni100/1000	Removable screw terminal block
TM2AMI8HT	8	Analog inputs	0...20 mA 0...10 Vdc	Removable screw terminal block
TM2ARI8HT	8	Analog inputs	NTC / PTC	Removable screw terminal block
TM2ARI8LRJ	8	Analog inputs	PT100/1000	RJ11 connector
TM2ARI8LT	8	Analog inputs	PT100/1000	Removable screw terminal block

### TM2 Analog Output Expansion Modules

The following table shows the compatible TM2 analog output expansion modules with the corresponding channel type, nominal voltage/current, and terminal type:

Reference	Channels	Channel type	Voltage Current	Terminal Type
TM2AMO1HT	1	Analog outputs	0...10 Vdc 4...20 mA	Removable screw terminal block
TM2AVO2HT	2	Analog outputs	+/- 10 Vdc	Removable screw terminal block

### TM2 Analog Mixed Input/Output Expansion Modules

The following table shows the compatible TM2 analog mixed I/O expansion modules with the corresponding channel type, nominal voltage/current, and terminal type:

Reference	Channels	Channel type	Voltage Current	Terminal Type
TM2AMM3HT	2	Analog inputs	0...10 Vdc 4...20 mA	Removable screw terminal block
	1	Analog outputs	0...10 Vdc 4...20 mA	
TM2AMM6HT	4	Analog inputs	0...10 Vdc 4...20 mA	Removable screw terminal block
	2	Analog outputs	0...10 Vdc 4...20 mA	
TM2ALM3LT	2	Low-level inputs	Thermo J,K,T, PT100	Removable screw terminal block
	1	Analog outputs	0...10 Vdc 4...20 mA	

## Accessories

### Overview

This section describes the accessories and cables.

### Accessories

Reference	Description	Use	Quantity
TMASD1	SD Card <i>(see page 59)</i>	Use to update the controller firmware, initialize a controller with a new application or clone a controller, manage user files.	1
TMAT2CSET	Set of 5 removable screw terminal block	Connects M241 Logic Controller embedded I/Os.	1
TMAT2PSET	Set of 5 removable screw terminal block	Connects 24 Vdc power supply.	1
AB1AB8P35	End brackets	Help secure the logic controller or receiver module and their expansion modules on a top hat section rail (DIN rail).	1
TM2XMTGB	Grounding Bar	Connects the cable shield and the module to the functional ground.	1
TM200RSRCMC	Shielding take-up clip	Mounts and connects the ground to the cable shielding.	25 pack

## Cables

Reference	Description	Details	Length
TCSXCNAMUM3P	Terminal port/USB port cordset	From the USB mini-B port on the M241 Logic Controller to USB port on the PC terminal.	3 m (10 ft)
BMXXCAUSBH018	Terminal port/USB port cordset	From the USB mini-B port on the M241 Logic Controller to USB port on the PC terminal. <b>NOTE:</b> Grounded and shielded, this USB cable is suitable for long duration connections.	1.8 m (5.9 ft)
490NTW000**	Ethernet shielded cable for DTE connections	Standard cable, equipped with RJ45 connectors at each end for DTE. CE compliant	2,5,12,40, or 80 m (6.56,16.4, 39.37, 131.23, or 262.47 ft)
490NTW000**U		Standard cable, equipped with RJ45 connectors at each end for DTE. UL compliant	2,5,12,40, or 80 m (6.56,16.4, 39.37, 131.23, or 262.47 ft)
TCSECE3M3M**S4		Cable for harsh environment,, equipped with RJ45 connectors at each end. CE compliant	1, 2, 3, 5, or 10 m (3.28, 6.56, 9.84, 16.4, 32.81 ft)
TCSECU3M3M**S4		Cable for harsh environment, equipped with RJ45 connectors at each end. UL compliant	1, 2, 3, 5, or 10 m (3.28, 6.56, 9.84, 16.4, 32.81 ft)

---

# Chapter 2

## M241 Features

---

### Overview

This chapter describes the Modicon M241 Logic Controller features.

### What Is in This Chapter?

This chapter contains the following topics:

Topic	Page
Real Time Clock (RTC)	44
Input Management	48
Output Management	52
Run/Stop	57
SD Card	59

## Real Time Clock (RTC)

### Overview

The M241 Logic Controller includes an RTC to provide system date and time information, and to support related functions requiring a real-time clock. To continue keeping time when power is off, a non-rechargeable battery is required (see reference below). A battery LED on the front panel of the controller indicates if the battery is depleted or absent.

This table shows how RTC drift is managed:

RTC Characteristics	Description
RTC drift	Less than 60 seconds per month without any user calibration at 25 °C (77 °F)

### Battery

The controller has one battery.

In the event of a power interruption, the backup battery maintains the RTC for the controller.

This table shows the characteristics of the battery:

Characteristics	Description
<b>Use</b>	In the event of a transient power outage, the battery powers the RTC.
<b>Backup life</b>	At least 2 years at 25 °C maximum (77 °F). At higher temperatures, the time is reduced.
<b>Battery monitoring</b>	Yes
<b>Replaceable</b>	Yes
<b>Controller battery type</b>	Lithium carbon monofluoride, type Panasonic BR2032

## Installing and Replacing the Battery

While lithium batteries are preferred due to their slow discharge and long life, they can present hazards to personnel, equipment and the environment and must be handled properly.


### **⚠ DANGER**




#### **EXPLOSION, FIRE, OR CHEMICAL BURNS**



- Replace with identical battery type.
- Follow all the instructions of the battery manufacturer.
- Remove all replaceable batteries before discarding unit.
- Recycle or properly dispose of used batteries.
- Protect battery from any potential short-circuit.
- Do not recharge, disassemble, heat above 100 °C (212 °F), or incinerate.
- Use your hands or insulated tools to remove or replace the battery.
- Maintain proper polarity when inserting and connecting a new battery.

**Failure to follow these instructions will result in death or serious injury.**

To install or replace the battery, follow these steps:

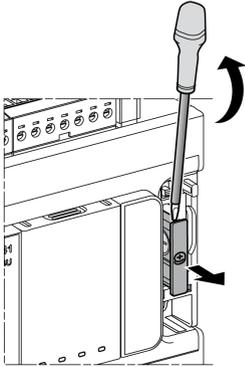Step	Action
1	Remove power from your controller.
2	Use an insulated screw-driver to pull out the battery holder. 

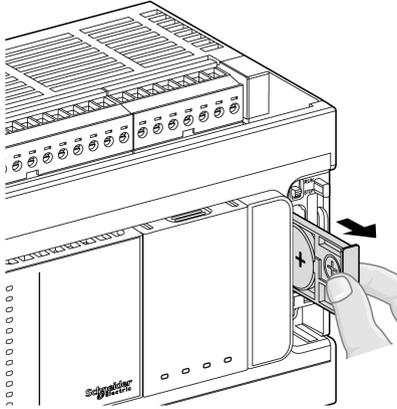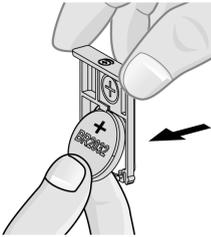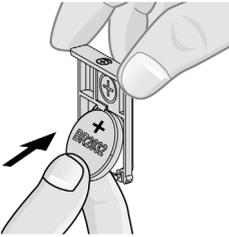Step	Action
3	<p data-bbox="296 204 710 228">Slide out the battery holder of the controller.</p> 
4	<p data-bbox="296 716 710 740">Remove the battery from the battery holder.</p> 
5	<p data-bbox="296 1052 1167 1101">Insert the new battery into the battery holder in accordance with the polarity markings on the battery.</p> 

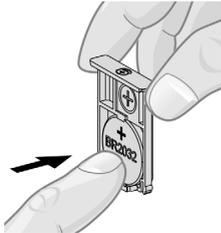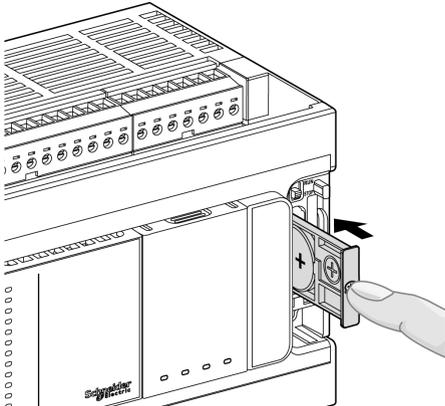Step	Action
6	Replace the battery holder on the controller and verify that the latch clicks into place. 
7	Slide in the battery holder of the controller. 
8	Power up your M241 Logic Controller.
9	Set the internal clock. For further details on the internal clock, refer to Programming Guide (see <i>Modicon M241 Logic Controller, Programming Guide</i> ).

**NOTE:** Replacement of the battery in the controllers other than with the type specified in this documentation may present a risk of fire or explosion.

## WARNING

### IMPROPER BATTERY CAN PROVOKE FIRE OR EXPLOSION

Replace battery only with identical type: Panasonic Type BR2032.

**Failure to follow these instructions can result in death, serious injury, or equipment damage.**

## Input Management

### Overview

The M241 Logic Controller features digital inputs, including 8 fast inputs.

The following functions are configurable:

- Filters (depends on the function associated with the input).
- All inputs can be used for the Run/Stop function.
- 8 fast inputs can be either latched or used for events (rising edge, falling edge, or both) and thus be linked to an external task.

**NOTE:** All inputs can be used as regular inputs.

### Input Management Functions Availability

Embedded digital inputs can be configured as functions (Run/Stop, events, HSC).

Inputs not configured as functions are used as regular inputs.


The following table shows the possible usage of the M241 Logic Controller digital inputs:

Function	Input Function				HSC
	None	RUN/STOP	Latch	Event	
Filter type	Integrator	Integrator	Bounce	Bounce	
Fast inputs <sup>1</sup>	I0...I7				
Regular inputs	I8...I13 <sup>2</sup> I8...I23 <sup>3</sup>	I8...I13 <sup>2</sup> I8...I23 <sup>3</sup>	–	–	I8...I13 <sup>2,4</sup> I8...I15 <sup>3,4</sup>
– No					
<sup>1</sup> Can also be used as regular inputs					
<sup>2</sup> For M241 with 24 I/O channels					
<sup>3</sup> For M241 with 40 I/O channels					
<sup>4</sup> Limited to 1 kHz					

### Integrator Filter Principle

The integrator filter is designed to reduce the effect of noise. Setting a filter value allows the logic controller to ignore some sudden changes of input levels caused by noise.

The following timing diagram illustrates the integrator filter effects for a value of 4 ms:

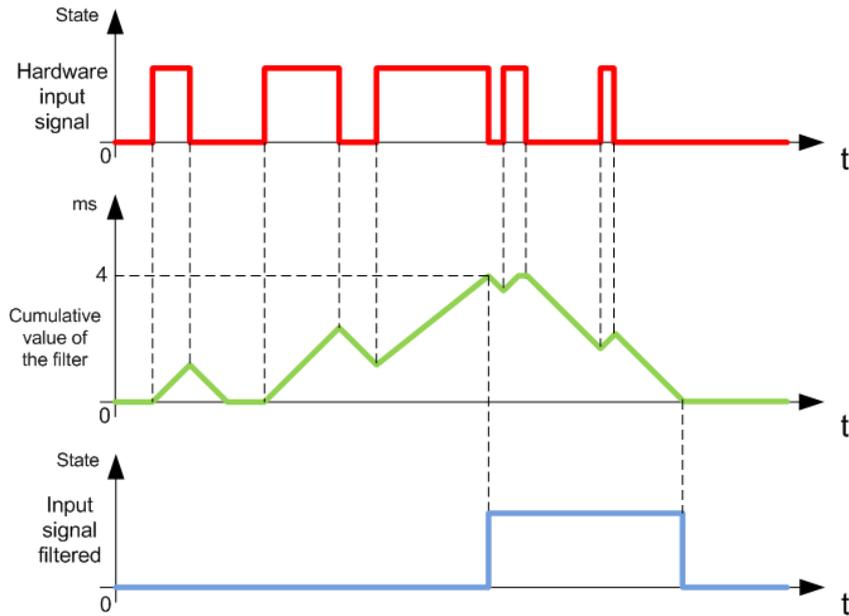


**NOTE:** The value selected for the filter's time parameter specifies the cumulative time in ms that must elapse before the input can be 1.

## Bounce Filter Principle

The bounce filter is designed to reduce the bouncing effect at the inputs. Setting a bounce filter value allows the controller to ignore some sudden changes of input levels caused by electrical noise. The bounce filter is only available on the fast inputs.

The following timing diagram illustrates the anti-bounce filter effects:

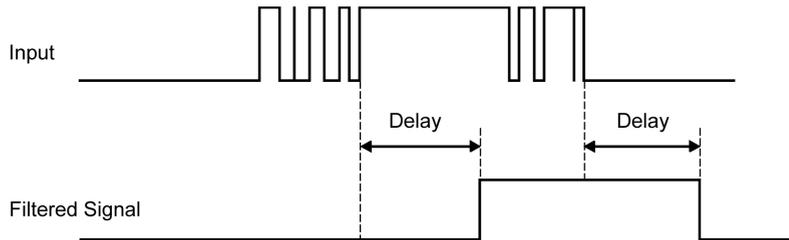

## Bounce Filter Availability


The bounce filter can be used on a fast input when:

- Using a latch or event
- HSC is enabled

## Latching

Latching is a function that can be assigned to the M241 Logic Controller fast inputs. This function is used to memorize (or latch) any pulse with a duration that is less than the M241 Logic Controller scan time. When a pulse is shorter than one scan, the controller latches the pulse, which is then updated in the next scan. This latching mechanism only recognizes rising edges. Falling edges cannot be latched. Assigning inputs to be latched is done in the **I/O Configuration** tab in SoMachine.

The following timing diagram illustrates the latching effects:

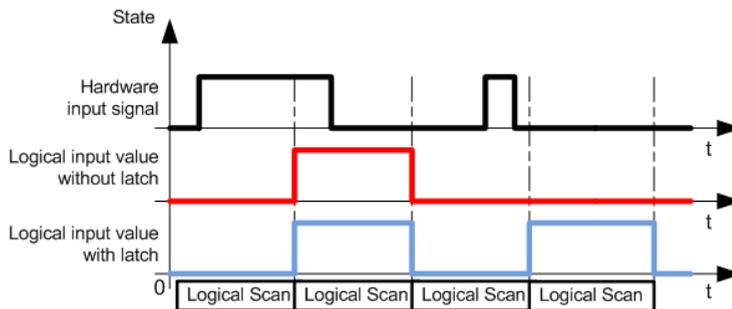

## Event

An input configured for Event can be associated with an External Task.

## Run/Stop

The Run/Stop function is used to start or stop an application program using an input. In addition to the embedded Run/Stop switch, it is allowed to configure one (and only one) input as an additional Run/Stop command.

For more information, refer to the Run/Stop (*see page 57*).

### **WARNING**

#### **UNINTENDED MACHINE OR PROCESS START-UP**

- Verify the state of security of your machine or process environment before applying power to the Run/Stop input.
- Use the Run/Stop input to help prevent the unintentional start-up from a remote location.

**Failure to follow these instructions can result in death, serious injury, or equipment damage.**

### **WARNING**

#### **UNINTENDED EQUIPMENT OPERATION**

Use the sensor and actuator power supply only for supplying power to sensors or actuators connected to the module.

**Failure to follow these instructions can result in death, serious injury, or equipment damage.**

## Output Management

### Introduction

The M241 Logic Controller features both regular and fast transistor outputs (PTO / PWM / FreqGen).

The following output functions are configurable on the transistor outputs:

- Alarm output
- HSC (reflex features on HSC threshold)
- PTO
- PWM
- FreqGen

**NOTE:** All outputs can be used as regular outputs.

### Output Management Availability

The following table shows the possible usage of the M241 Logic Controller digital outputs on references with transistor outputs:

Reference		Function	Alarm Output	HSC	FreqGen	PWM	PTO	
TM241C*40T / TM241C*40U	TM241C**24U	Fast output	Q0	X	Reflex output 0 or 1	Output A	Output A	Output A or B
			Q1	X	Reflex output 0 or 1	Output A	Output A	Output A or B
			Q2	X	Reflex output 0 or 1	Output A	Output A	Output A or B
			Q3	X	Reflex output 0 or 1	Output A	Output A	Output A or B
	TM241C**24T / TM241C**24U	Regular output	Q4	X	Reflex output 0 or 1	Output A	Output A	Output A or B
			Q5	X	Reflex output 0 or 1	Output A	Output A	Output A or B
			Q6	X	Reflex output 0 or 1	Output A	Output A	Output A or B
			Q7	X	Reflex output 0 or 1	Output A	Output A	Output A or B
			Q8	X	–	–	–	–
			Q9	X	–	–	–	–
			Q10	X	–	–	–	–
			Q11	X	–	–	–	–
			Q12	X	–	–	–	–
			Q13	X	–	–	–	–
			Q14	X	–	–	–	–
Q15	X	–	–	–	–			

The following table shows the possible usage of the M241 Logic Controller on references with relay outputs:

Reference		Function	Alarm Output	HSC	FreqGen	PWM	PTO	
TM241C-40R	TM241C-24R	Fast output	Q0	X	Reflex output 0 or 1	Output A	Output A	Output A or B
			Q1	X	Reflex output 0 or 1	Output A	Output A	Output A or B
			Q2	X	Reflex output 0 or 1	Output A	Output A	Output A or B
			Q3	X	Reflex output 0 or 1	Output A	Output A	Output A or B
		Regular output	Q4	X	Reflex output 0 or 1	-	-	-
			Q5	X	Reflex output 0 or 1	-	-	-
			Q6	X	Reflex output 0 or 1	-	-	-
	Q7		X	Reflex output 0 or 1	-	-	-	
	Q8		X	-	-	-	-	
	Q9		X	-	-	-	-	
	Q10		X	-	-	-	-	
	Q11		X	-	-	-	-	
		Q12	X	-	-	-	-	
		Q13	X	-	-	-	-	
		Q14	X	-	-	-	-	
Q15		X	-	-	-	-		

### Fallback Modes (Behavior for Outputs in Stop)

When the controller enters the STOPPED or one of the exception states for any reason, the local (embedded and expansion) outputs are set to **Default Value** defined in the application.

In case of PTO outputs, the fallback values are forced to 0 logic (0 Vdc) and these values cannot be modified.

### Short-circuit or Over-current on Source Transistor Outputs

Outputs are clustered in packs of 4 outputs maximum (less when the total number of outputs of the controller is not a multiple of 4):

- Q0...Q3
- Q4...Q7
- Q8...Q11
- Q12...Q15

When a short-circuit or overload is detected, the cluster of 4 outputs is set to 0. An automatic rearming is done periodically (about 1 s).

The following table describes the actions taken on short-circuits or overload of transistor outputs from Q0 to Q3:

if...	then...
If you have short-circuit at 0 V on transistor outputs	Transistor outputs automatically go into over-current protection or thermal protection mode. For more information, refer to transistor output wiring diagrams.
If you have short-circuit at 24 V on transistor outputs	Transistor outputs automatically go into over-current protection mode. For more information, refer to transistor output wiring diagrams.

The following table describes the actions taken on short-circuits or overload of transistor outputs from Q4 to Q15:

if...	then...
If you have short-circuit at 0 V on transistor outputs	Transistor outputs automatically go into thermal protection mode. For more information, refer to transistor output wiring diagrams.
If you have short-circuit at 24 V on transistor outputs	No action is taken and no error is detectable. A short-circuit or overvoltage over 24 V may result in equipment damage.

In the case of a short-circuit or current overload, the common group of outputs automatically enters into thermal protection mode (all outputs in the group are set to 0), and are then periodically rearmed (each second) to test the connection state. However, you must be aware of the effect of this rearming on the machine or process being controlled.

## WARNING

### UNINTENDED MACHINE START-UP

Inhibit the automatic rearming of outputs if this feature is an undesirable behavior for your machine or process.

**Failure to follow these instructions can result in death, serious injury, or equipment damage.**

**NOTE:** The automatic rearming feature can be inhibited. Refer to the Programming Guide of your controller for more information.

### Short-circuit or Over-Current on Sink Transistor Outputs

Sink transistor outputs are not internally protected against overloads or short-circuits.

The following table describes the actions taken on overloads or short-circuits on sink transistor outputs from Q0 to Q3:

If...	then...
If you have short-circuit at 0 V on transistor outputs	Transistor outputs automatically go into over-current protection or thermal protection mode. For more information, refer to transistor output wiring diagrams.
If you have short-circuit at 24 V on transistor outputs	Transistor outputs automatically go into over-current protection mode. For more information, refer to transistor output wiring diagrams.

The following table describes the actions taken on overloads or short-circuits on sink transistor outputs from Q4 to Q15:

If...	then...
If you have short-circuit at 0 V on transistor outputs	no action is taken and no error is detectable. A short-circuit or undervoltage less than 0 V may result in equipment damage.
If you have short-circuit at 24 V on transistor outputs	Transistor outputs automatically go into thermal protection mode. For more information, refer to transistor output wiring diagrams.

### Short-circuit or Over-Current on Relay Outputs

Relay outputs are not internally protected against overloads or short-circuits.

The following table describes the actions taken on overloads or short-circuits on relay outputs:

If...	then...
If you have short-circuit or overload at 0 V or 24 V on relay outputs	No action is taken and no error is detectable. For more information, refer to relay output wiring diagrams.

Relay outputs are electromechanical switches capable of carrying significant levels of current and voltage. All electromechanical devices have a limited operational life and must be installed so as to minimize the potential for unintended consequences.

## WARNING

### INOPERABLE OUTPUTS

Use appropriate, external safety interlocks on outputs where personnel and/or equipment hazards exist.

**Failure to follow these instructions can result in death, serious injury, or equipment damage.**


## Run/Stop

### Run/Stop

The M241 Logic Controller can be operated externally by the following:

- a hardware Run/Stop switch
- a Run/Stop operation by a dedicated digital input, defined in the software configuration (For more information, refer to Embedded I/Os Configuration.)
- a SoMachine software command.

The M241 Logic Controller has a Run/Stop hardware switch, which puts the controller in a RUN or STOP state.

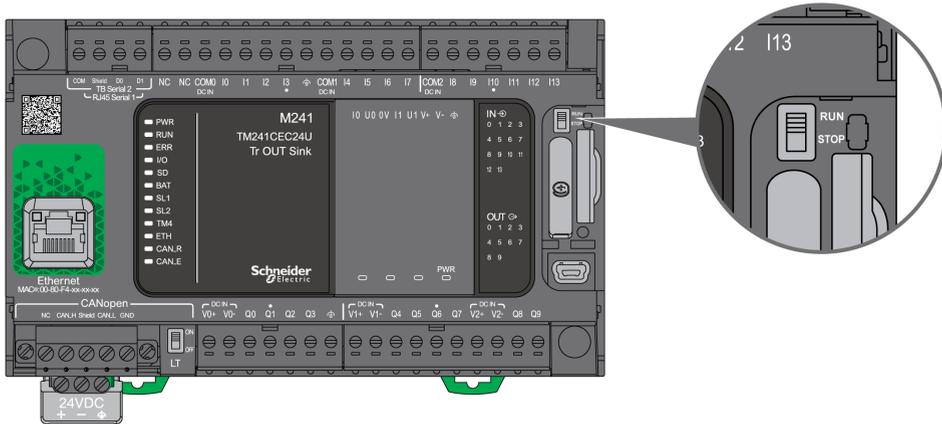

The interaction of the 2 external operators on the controller state behavior is summarized in the table below:

		Embedded hardware Run/Stop switch		
		Switch on Stop	Stop to Run transition	Switch on Run
Software configurable Run/Stop digital input	None	STOP Ignores external Run/Stop commands.	Commands a transition to RUN state <sup>1</sup> .	Allows external Run/Stop commands.
	State 0	STOP Ignores external Run/Stop commands.	STOP Ignores external Run/Stop commands.	STOP Ignores external Run/Stop commands.
	Rising edge	STOP Ignores external Run/Stop commands.	Commands a transition to RUN state <sup>1</sup> .	Commands a transition to RUN state.
	State 1	STOP Ignores external Run/Stop commands.	Commands a transition to RUN state <sup>1</sup> .	Allows external Run/Stop commands.

<sup>1</sup> For more information, refer to the Controller States and Behaviors (*see Modicon M241 Logic Controller, Programming Guide*).

## WARNING

### UNINTENDED MACHINE OR PROCESS START-UP

- Verify the state of security of your machine or process environment before applying power to the Run/Stop input or engaging the Run/Stop switch.
- Use the Run/Stop input to help prevent the unintentional start-up from a remote location, or from accidentally engaging the Run/Stop switch.

**Failure to follow these instructions can result in death, serious injury, or equipment damage.**

## SD Card

### Overview

When handling the SD card, follow the instructions below to help prevent internal data on the SD card from being corrupted or lost or a SD card malfunction from occurring:

### ***NOTICE***

#### **LOSS OF APPLICATION DATA**

- Do not store the SD card where there is static electricity or probable electromagnetic fields.
- Do not store the SD card in direct sunlight, near a heater, or other locations where high temperatures can occur.
- Do not bend the SD card.
- Do not drop or strike the SD card against another object.
- Keep the SD card dry.
- Do not touch the SD card connectors.
- Do not disassemble or modify the SD card.
- Use only SD cards formatted using FAT or FAT32.

**Failure to follow these instructions can result in equipment damage.**

The M241 Logic Controller does not recognize NTFS formatted SD cards. Format the SD card on your computer using FAT or FAT32.

When using the M241 Logic Controller and a SD card, observe the following to avoid losing valuable data:

- Accidental data loss can occur at any time. Once data is lost it cannot be recovered.
- If you forcibly extract the SD card, data on the SD card may become corrupted.
- Removing an SD card that is being accessed could damage the SD card, or corrupt its data.
- If the SD card is not positioned correctly when inserted into the controller, the data on the card and the controller could become damaged.


### ***NOTICE***

#### **LOSS OF APPLICATION DATA**


- Backup SD card data regularly.
- Do not remove power or reset the controller, and do not insert or remove the SD card while it is being accessed.



**Failure to follow these instructions can result in equipment damage.**

The following figure shows the SD card slot:

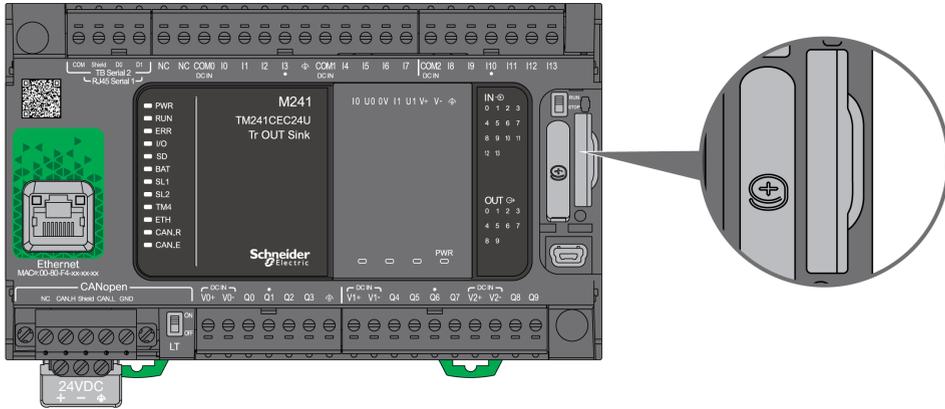

It is possible to set the Write-Control Tab to prevent write operations to the SD card. Push the tab up, as shown in the example on the right-hand side, to release the lock and enable writing to the SD card. Before using an SD card, read the manufacturer's instructions.

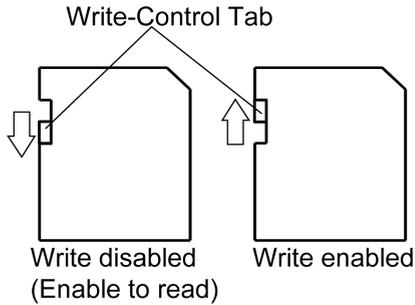

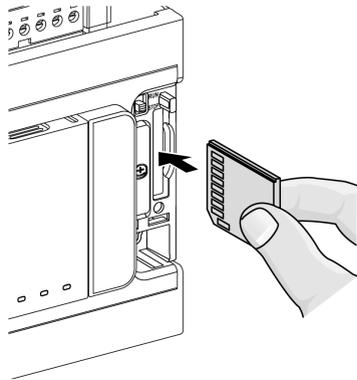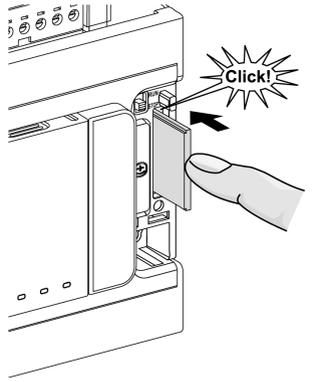Step	Action
1	Insert the SD card into the SD card slot: 
2	Push until you hear it "click": 

### SD Card Slot Characteristics

Topic	Characteristics	Description
Supported type	Standard Capacity	SD (SDSC)
	High Capacity	SDHC
Global memory	Size	32 GB max.

## TMASD1 Characteristics

Characteristics	Description
Card removal durability	Minimum 1000 times
File retention time	10 years @ 25 °C (77 °F)
Flash type	SLC NAND
Memory size	256 MB
Ambient operation temperature	-10 ... +85°C (14...185 °F)
Storage temperature	-25 ... +85°C (-13...185 °F)
Relative humidity	95% max. non-condensing
Write/Erase cycles	3,000,000 (approximately)

**NOTE:** The TMASD1 has been rigorously tested in association with the logic controller. For other commercially available cards, consult your local sales representative.

**NOTE:** The SD card can be used directly on your PC.

## Status LED

The following figure shows the status LEDs:



The following table describes the SD card status LED:

Label	Description	LED		
		Color	Status	Description
SD	SD card	Green	On	Indicates that the SD card is being accessed.
			Off	Indicates no access.

---

# Chapter 3

## M241 Installation

---

### Overview

This chapter provides installation safety guidelines, device dimensions, mounting instructions, and environmental specifications.

### What Is in This Chapter?

This chapter contains the following sections:

Section	Topic	Page
3.1	M241 Logic Controller General Rules for Implementing	64
3.2	M241 Logic Controller Installation	69
3.3	M241 Electrical Requirements	83

# Section 3.1

## M241 Logic Controller General Rules for Implementing

---

### What Is in This Section?

This section contains the following topics:

Topic	Page
Environmental Characteristics	65
Certifications and Standards	68

## Environmental Characteristics

### Enclosure Requirements

M241 Logic Controller system components are designed as Zone B, Class A industrial equipment according to IEC/CISPR Publication 11. If they are used in environments other than those described in the standard, or in environments that do not meet the specifications in this manual, the ability to meet electromagnetic compatibility requirements in the presence of conducted and/or radiated interference may be reduced.

All M241 Logic Controller system components meet European Community (CE) requirements for open equipment as defined by IEC/EN 61131-2. You must install them in an enclosure designed for the specific environmental conditions and to minimize the possibility of unintended contact with hazardous voltages. Use metal enclosures to improve the electromagnetic immunity of your M241 Logic Controller system. Use enclosures with a keyed locking mechanism to minimize unauthorized access.

### Environmental Characteristics

All the M241 Logic Controller module components are electrically isolated between the internal electronic circuit and the input/output channels within the limits set forth and described by these environmental characteristics. For more information on electrical isolation, see the technical specifications of your particular controller found later in the current document. This equipment meets CE requirements as indicated in the table below. This equipment is intended for use in a Pollution Degree 2 industrial environment.

 <b>WARNING</b>
<b>UNINTENDED EQUIPMENT OPERATION</b>
Do not exceed any of the rated values specified in the environmental and electrical characteristics tables.
<b>Failure to follow these instructions can result in death, serious injury, or equipment damage.</b>

The following table shows the general environmental characteristics:

Characteristic		Specification
Standard compliance	IEC/EN 61131-2 IEC/EN 61010-2-201	
Ambient operating temperature	Horizontal installation	-10...55 °C (14...131 °F)
	Vertical installation	-10...50 °C (14...122 °F)
Storage temperature	-25...70 °C (-13...158 °F)	
Relative humidity	Transport and storage	10...95 % (non-condensing)
	Operation	10...95 % (non-condensing)

Characteristic		Specification
Degree of pollution	IEC/EN 60664-1	2
Degree of protection	IEC/EN 61131-2	IP20 with protective covers in place
Machine Safety conformance	IEC/EN 61010-2-201	Yes
Corrosion immunity		Atmosphere free from corrosive gases
Operating altitude		0...2000 m (0...6560 ft)
Storage altitude		0...3000 m (0...9843 ft)
Vibration resistance	IEC/EN 61131-2 Panel mounting or mounted on a top hat section rail (DIN rail)	3.5 mm (0.13 in) fixed amplitude from 5...8.5 Hz 29.4 m/s <sup>2</sup> or 96.45 ft/s <sup>2</sup> (3 g <sub>n</sub> ) fixed acceleration from 8.7...150 Hz
Mechanical shock resistance		147 m/s <sup>2</sup> or 482.28 ft/s <sup>2</sup> (15 g <sub>n</sub> ) for a duration of 11 ms

### Electromagnetic Susceptibility

The M241 Logic Controller system meets electromagnetic susceptibility specifications as indicated in the following table:

Characteristic	Designed to specification	Range	
Electrostatic discharge	IEC/EN 61000-4-2	8 kV (air discharge) 4 kV (contact discharge)	
Radiated electromagnetic field	IEC/EN 61000-4-3	10 V/m (80...1000 MHz) 3 V/m (1.4...2 GHz) 1 V/m (2...3 GHz)	
Magnetic field	IEC/EN 61000-4-8	30 A/m 50 Hz, 60 Hz	
Fast transients burst	IEC/EN 61000-4-4	–	CM <sup>1</sup> and DM <sup>2</sup>
		AC/DC Power lines	2 kV
		Relay Outputs	2 kV
		24 Vdc I/Os	1 kV
		Analog I/Os	1 kV
		Communication line	1 kV

Characteristic	Designed to specification	Range		
Surge immunity	IEC/EN 61000-4-5 IEC/EN 61131-2	–	CM <sup>1</sup>	DM <sup>2</sup>
		DC Power lines	1 kV	0.5 kV
		AC Power lines	2 kV	1 kV
		Relay Outputs	2 kV	1 kV
		24 Vdc I/Os	1 kV	–
		Shielded cable (between shield and ground)	1 kV	–
Induced electromagnetic field	IEC/EN 61000-4-6	10 Vrms (0.15...80 MHz)		
Conducted emission	IEC/EN 55011 (IEC/CISPR Publication 11)	AC power line:		
		<ul style="list-style-type: none"> <li>● 0.15...0.5 MHz: 79 dB<math>\mu</math>V/m QP / 66 dB<math>\mu</math>V/m AV</li> <li>● 0.5...300 MHz: 73 dB<math>\mu</math>V/m QP / 60 dB<math>\mu</math>V/m AV</li> </ul>		
Radiated emission	IEC/EN 55011 (IEC/CISPR Publication 11)	AC/DC power line:		
		<ul style="list-style-type: none"> <li>● 10...150 kHz: 120...69 dB<math>\mu</math>V/m QP</li> <li>● 150...1500 kHz: 79...63 dB<math>\mu</math>V/m QP</li> <li>● 1.5...30 MHz: 63 dB<math>\mu</math>V/m QP</li> </ul>		
		Class A, 10 m distance:		
		<ul style="list-style-type: none"> <li>● 30...230 MHz: 40 dB<math>\mu</math>V/m QP</li> <li>● 230...1000 MHz: 47 dB<math>\mu</math>V/m QP</li> </ul>		
<sup>1</sup> Common Mode <sup>2</sup> Differential Mode				

## Certifications and Standards

### Introduction

The M241 Logic Controllers are designed to conform to the main national and international standards concerning electronic industrial control devices:

- IEC/EN 61131-2
- UL 508

The M241 Logic Controllers have obtained the following conformity marks:

- CE
- cULus
- CSA

For product compliance and environmental information (RoHS, REACH, PEP, EOL, etc.), go to [www.schneider-electric.com/green-premium](http://www.schneider-electric.com/green-premium).

---

## Section 3.2

### M241 Logic Controller Installation

---

#### What Is in This Section?

This section contains the following topics:

Topic	Page
Installation and Maintenance Requirements	70
M241 Logic Controller Mounting Positions and Clearances	73
Top Hat Section Rail (DIN rail)	76
Installing and Removing the Controller with Expansions	80
Direct Mounting on a Panel Surface	82

## Installation and Maintenance Requirements

### Before Starting

Read and understand this chapter before beginning the installation of your system.

The use and application of the information contained herein require expertise in the design and programming of automated control systems. Only you, the user, machine builder or integrator, can be aware of all the conditions and factors present during installation and setup, operation, and maintenance of the machine or process, and can therefore determine the automation and associated equipment and the related safeties and interlocks which can be effectively and properly used. When selecting automation and control equipment, and any other related equipment or software, for a particular application, you must also consider any applicable local, regional or national standards and/or regulations.

Pay particular attention in conforming to any safety information, different electrical requirements, and normative standards that would apply to your machine or process in the use of this equipment.

### Disconnecting Power

All options and modules should be assembled and installed before installing the control system on a mounting rail, onto a mounting plate or in a panel. Remove the control system from its mounting rail, mounting plate or panel before disassembling the equipment.

## DANGER

### HAZARD OF ELECTRIC SHOCK, EXPLOSION OR ARC FLASH

- Disconnect all power from all equipment including connected devices prior to removing any covers or doors, or installing or removing any accessories, hardware, cables, or wires except under the specific conditions specified in the appropriate hardware guide for this equipment.
- Always use a properly rated voltage sensing device to confirm the power is off where and when indicated.
- Replace and secure all covers, accessories, hardware, cables, and wires and confirm that a proper ground connection exists before applying power to the unit.
- Use only the specified voltage when operating this equipment and any associated products.

**Failure to follow these instructions will result in death or serious injury.**

## Programming Considerations

### WARNING

#### UNINTENDED EQUIPMENT OPERATION

- Only use software approved by Schneider Electric for use with this equipment.
- Update your application program every time you change the physical hardware configuration.

**Failure to follow these instructions can result in death, serious injury, or equipment damage.**

## Operating Environment

In addition to the **Environmental Characteristics**, refer to **Product Related Information** in the beginning of the present document for important information regarding installation in hazardous locations for this specific equipment.

### WARNING

#### UNINTENDED EQUIPMENT OPERATION

Install and operate this equipment according to the conditions described in the Environmental Characteristics.

**Failure to follow these instructions can result in death, serious injury, or equipment damage.**

## Installation Considerations

### WARNING

#### UNINTENDED EQUIPMENT OPERATION

- Use appropriate safety interlocks where personnel and/or equipment hazards exist.
- Install and operate this equipment in an enclosure appropriately rated for its intended environment and secured by a keyed or tooled locking mechanism.
- Use the sensor and actuator power supplies only for supplying power to the sensors or actuators connected to the module.
- Power line and output circuits must be wired and fused in compliance with local and national regulatory requirements for the rated current and voltage of the particular equipment.
- Do not use this equipment in safety-critical machine functions unless the equipment is otherwise designated as functional safety equipment and conforming to applicable regulations and standards.
- Do not disassemble, repair, or modify this equipment.
- Do not connect any wiring to reserved, unused connections, or to connections designated as No Connection (N.C.).

**Failure to follow these instructions can result in death, serious injury, or equipment damage.**

**NOTE:** JDYX2 or JDYX8 fuse types are UL-recognized and CSA approved.

## M241 Logic Controller Mounting Positions and Clearances


### Introduction

This section describes the mounting positions for the M241 Logic Controller .

**NOTE:** Keep adequate spacing for proper ventilation and to maintain the operating temperature specified in the Environmental Characteristics (*see page 65*).


### Correct Mounting Position

Whenever possible, the M241 Logic Controller should be mounted horizontally on a vertical plane as shown in the figure below:

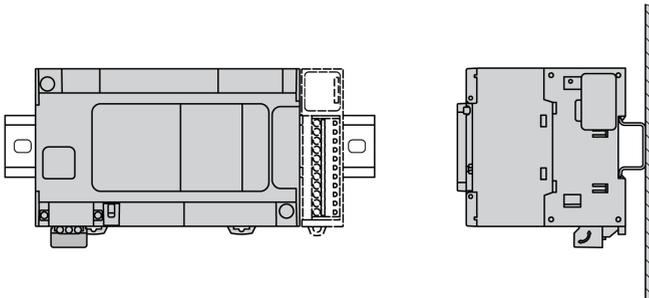

### Acceptable Mounting Positions


The M241 Logic Controller can also be mounted vertically with a temperature derating on a vertical plane as shown below.

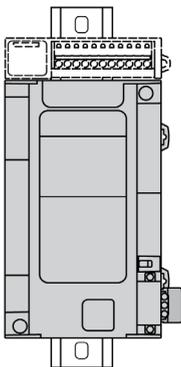

**NOTE:** Expansion modules must be mounted above the logic controller.

### Incorrect Mounting Position

The M241 Logic Controller should only be positioned as shown in Correct Mounting Position (see page 73) figure. The figures below show the incorrect mounting positions.

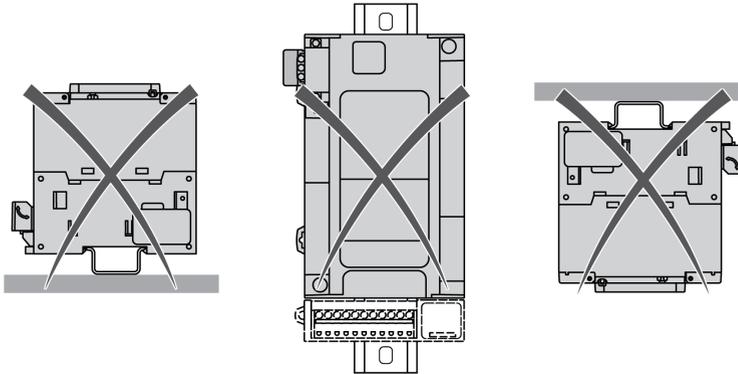

### Minimum Clearances

## ⚠ WARNING

### UNINTENDED EQUIPMENT OPERATION

- Place devices dissipating the most heat at the top of the cabinet and ensure adequate ventilation.
- Avoid placing this equipment next to or above devices that might cause overheating.
- Install the equipment in a location providing the minimum clearances from all adjacent structures and equipment as directed in this document.
- Install all equipment in accordance with the specifications in the related documentation.


**Failure to follow these instructions can result in death, serious injury, or equipment damage.**

The M241 Logic Controller has been designed as an IP20 product and must be installed in an enclosure. Clearances must be respected when installing the product.

There are 3 types of clearances between:

- The M241 Logic Controller and all sides of the cabinet (including the panel door).
- The M241 Logic Controller terminal blocks and the wiring ducts. This distance reduces electromagnetic interference between the controller and the wiring ducts.
- The M241 Logic Controller and other heat generating devices installed in the same cabinet.

The following figure shows the minimum clearances that apply to all M241 Logic Controller references:

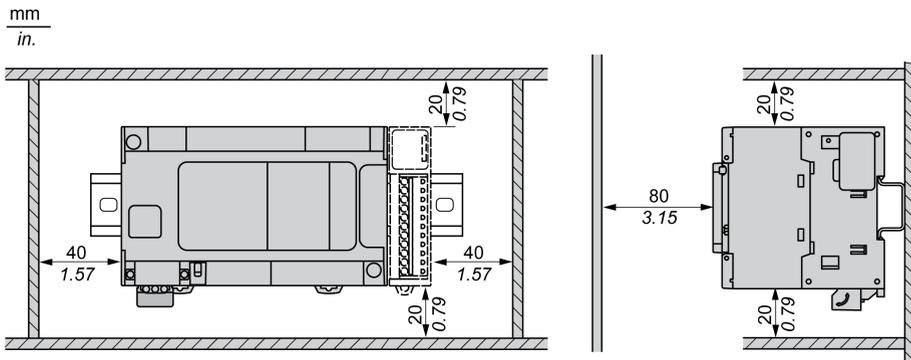


## Top Hat Section Rail (DIN rail)

### Dimensions of Top Hat Section Rail DIN Rail

You can mount the controller or receiver and its expansions on a 35 mm (1.38 in.) top hat section rail (DIN rail). It can be attached to a smooth mounting surface or suspended from a EIA rack or mounted in a NEMA cabinet.


### Symmetric Top Hat Section Rails (DIN Rail)

The following illustration and table show the references of the top hat section rails (DIN rail) for the wall-mounting range:

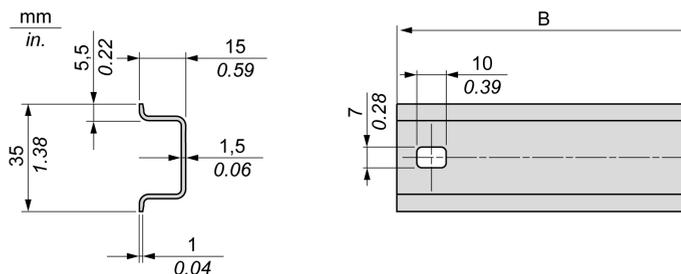


Reference	Type	Rail Length (B)
NSYS DR50A	A	450 mm (17.71 in.)
NSYS DR60A	A	550 mm (21.65 in.)
NSYS DR80A	A	750 mm (29.52 in.)
NSYS DR100A	A	950 mm (37.40 in.)

The following illustration and table show the references of the symmetric top hat section rails (DIN rail) for the metal enclosure range:

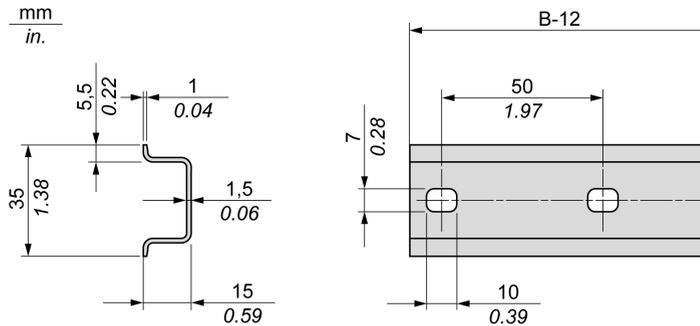

Reference	Type	Rail Length (B-12 mm)
NSYS DR60	A	588 mm (23.15 in.)
NSYS DR80	A	788 mm (31.02 in.)
NSYS DR100	A	988 mm (38.89 in.)
NSYS DR120	A	1188 mm (46.77 in.)


The following illustration and table shows the references of the symmetric top hat section rails (DIN rail) of 2000 mm (78.74 in.):

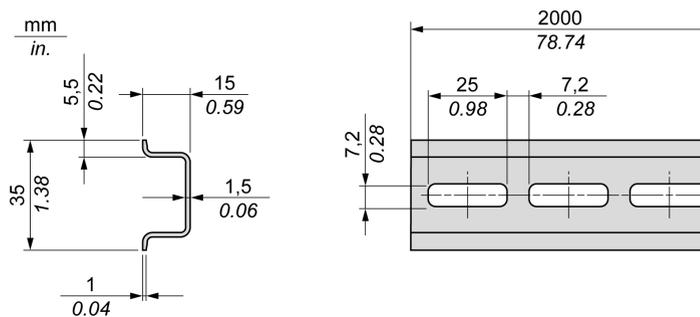

Reference	Type	Rail Length
NSYS DR200 <sup>1</sup>	A	2000 mm (78.74 in.)
NSYS DR200D <sup>2</sup>	A	
<sup>1</sup> Unperforated galvanized steel <sup>2</sup> Perforated galvanized steel		


### Double-Profile Top Hat Section Rails (DIN rail)

The following illustration and table show the references of the double-profile top hat section rails (DIN rails) for the wall-mounting range:

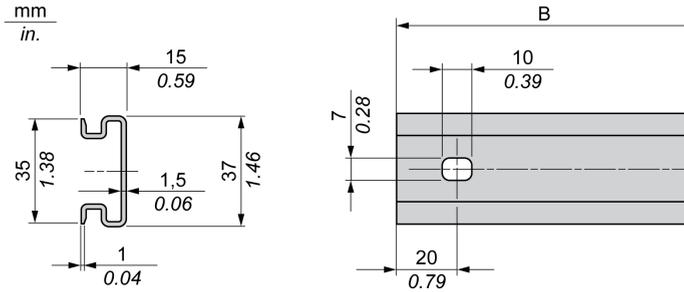

Reference	Type	Rail Length (B)
NSYDPR25	W	250 mm (9.84 in.)
NSYDPR35	W	350 mm (13.77 in.)
NSYDPR45	W	450 mm (17.71 in.)
NSYDPR55	W	550 mm (21.65 in.)
NSYDPR65	W	650 mm (25.60 in.)
NSYDPR75	W	750 mm (29.52 in.)

The following illustration and table show the references of the double-profile top hat section rails (DIN rail) for the floor-standing range:

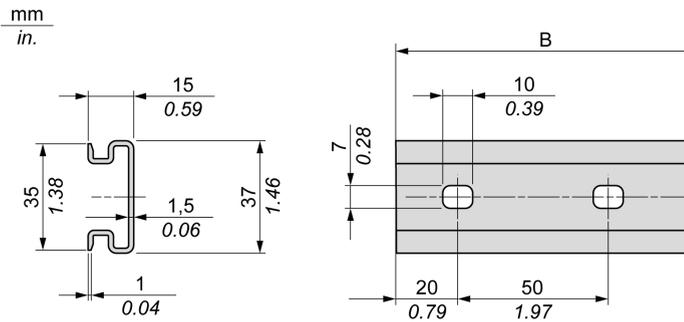

Reference	Type	Rail Length (B)
NSYDPR60	F	588 mm (23.15 in.)
NSYDPR80	F	788 mm (31.02 in.)
NSYDPR100	F	988 mm (38.89 in.)
NSYDPR120	F	1188 mm (46.77 in.)

## Installing and Removing the Controller with Expansions


### Overview


This section describes how to install and remove the controller with its expansion modules from a top hat section rail (DIN rail).

To assemble expansion modules to a controller or receiver module, or to other modules, refer to the respective expansion modules hardware guide(s).

### Installing a Controller with its Expansions on a DIN Rail


The following procedure describes how to install a controller with its expansion modules on a top hat section rail (DIN rail):

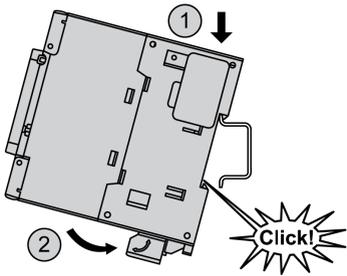Step	Action
1	Fasten the top hat section rail (DIN rail) to a panel surface using screws.
2	Position the top groove of the controller and its expansion modules on the top edge of the DIN rail and press the assembly against the top hat section rail (DIN rail) until you hear the top hat section rail (DIN rail) clip snap into place. 

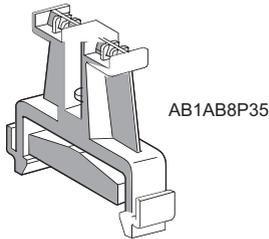Step	Action
3	<p>Place 2 terminal block end clamps on both sides of the controller and expansion module assembly.</p>  <p>AB1AB8P35</p> <p><b>NOTE:</b> Type ABB8P35 or equivalent terminal block end clamps help minimize sideways movement and improve the shock and vibration characteristics of the controller and expansion module assembly.</p>

### Removing a Controller with its Expansions from a Top Hat Section Rail (DIN Rail)

The following procedure describes how to remove a controller with its expansion modules from a top hat section rail (DIN rail):

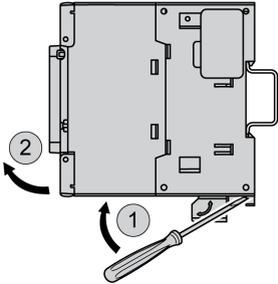Step	Action
1	Remove all power from your controller and expansion modules.
2	<p>Insert a flat screwdriver into the slot of the top hat section rail (DIN rail) clip.</p> 
3	Pull down the DIN rail clip.
4	Pull the controller and its expansion modules from the top hat section rail (DIN rail) from the bottom.


## Direct Mounting on a Panel Surface

### Mounting Hole Layout

The following diagram shows the mounting hole layout for M241 Logic Controller with 24 I/O channels:

$\frac{\text{mm}}{\text{in.}}$


M4 x 6/8 mm  
0.24/0.31 in.

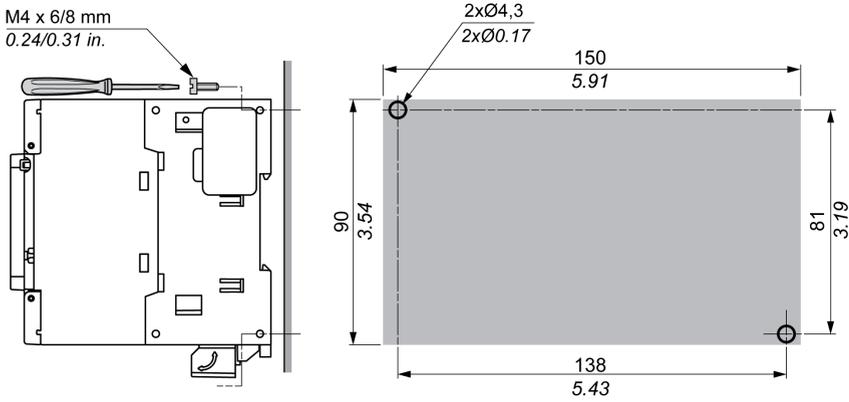

The following diagram shows the mounting hole layout for M241 Logic Controller with 40 I/O channels:

$\frac{\text{mm}}{\text{in.}}$

M4 x 6/8 mm  
0.24/0.31 in.

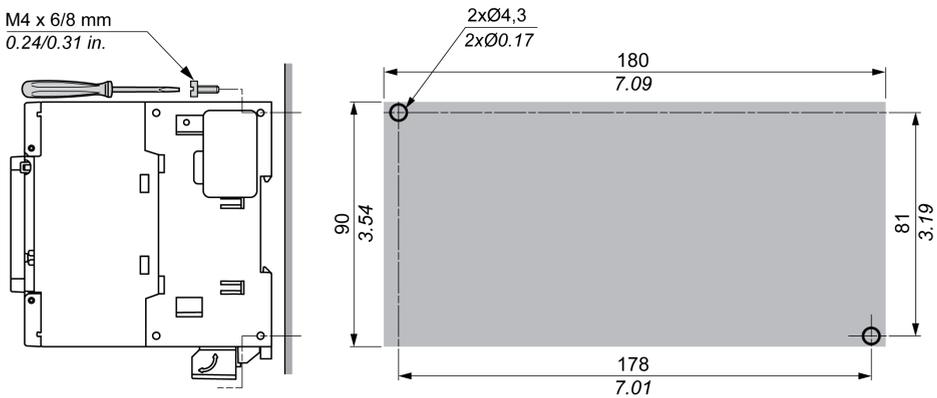

---

## Section 3.3

### M241 Electrical Requirements

---

#### What Is in This Section?

This section contains the following topics:

Topic	Page
Wiring Best Practices	84
DC Power Supply Characteristics and Wiring	90
AC Power Supply Characteristics and Wiring	94
Grounding the M241 System	96

## Wiring Best Practices

### Overview

This section describes the wiring guidelines and associated best practices to be respected when using the M241 Logic Controller system.

### DANGER

#### HAZARD OF ELECTRIC SHOCK, EXPLOSION OR ARC FLASH

- Disconnect all power from all equipment including connected devices prior to removing any covers or doors, or installing or removing any accessories, hardware, cables, or wires except under the specific conditions specified in the appropriate hardware guide for this equipment.
- Always use a properly rated voltage sensing device to confirm the power is off where and when indicated.
- Replace and secure all covers, accessories, hardware, cables, and wires and confirm that a proper ground connection exists before applying power to the unit.
- Use only the specified voltage when operating this equipment and any associated products.

**Failure to follow these instructions will result in death or serious injury.**

### WARNING

#### LOSS OF CONTROL

- The designer of any control scheme must consider the potential failure modes of control paths and, for certain critical control functions, provide a means to achieve a safe state during and after a path failure. Examples of critical control functions are emergency stop and overtravel stop, power outage and restart.
- Separate or redundant control paths must be provided for critical control functions.
- System control paths may include communication links. Consideration must be given to the implications of unanticipated transmission delays or failures of the link.
- Observe all accident prevention regulations and local safety guidelines.<sup>1</sup>
- Each implementation of this equipment must be individually and thoroughly tested for proper operation before being placed into service.

**Failure to follow these instructions can result in death, serious injury, or equipment damage.**

<sup>1</sup> For additional information, refer to NEMA ICS 1.1 (latest edition), "Safety Guidelines for the Application, Installation, and Maintenance of Solid State Control" and to NEMA ICS 7.1 (latest edition), "Safety Standards for Construction and Guide for Selection, Installation and Operation of Adjustable-Speed Drive Systems" or their equivalent governing your particular location.

## Wiring Guidelines

The following rules must be applied when wiring a M241 Logic Controller system:

- I/O and communication wiring must be kept separate from the power wiring. Route these 2 types of wiring in separate cable ducting.
- Verify that the operating conditions and environment are within the specification values.
- Use proper wire sizes to meet voltage and current requirements.
- Use copper conductors (required).
- Use twisted pair, shielded cables for analog, and/or fast I/O.
- Use twisted pair, shielded cables for networks, and fieldbus.

Use shielded, properly grounded cables for all analog and high-speed inputs or outputs and communication connections. If you do not use shielded cable for these connections, electromagnetic interference can cause signal degradation. Degraded signals can cause the controller or attached modules and equipment to perform in an unintended manner.

### WARNING

#### UNINTENDED EQUIPMENT OPERATION

- Use shielded cables for all fast I/O, analog I/O and communication signals.
- Ground cable shields for all analog I/O, fast I/O and communication signals at a single point<sup>1</sup>.
- Route communication and I/O cables separately from power cables.

**Failure to follow these instructions can result in death, serious injury, or equipment damage.**


<sup>1</sup>Multipoint grounding is permissible if connections are made to an equipotential ground plane dimensioned to help avoid cable shield damage in the event of power system short-circuit currents.

For more details, refer to Grounding Shielded Cables ([see page 96](#)).

**NOTE:** Surface temperatures may exceed 60 °C (140 °F). To conform to IEC 61010 standards, route primary wiring (wires connected to power mains) separately and apart from secondary wiring (extra low voltage wiring coming from intervening power sources). If that is not possible, double insulation is required such as conduit or cable gains.

## Rules for Removable Screw Terminal Block

The following tables show the cable types and wire sizes for a **5.08 pitch** removable screw terminal block (I/Os and power supply):

								
mm <sup>2</sup>	0.2...2.5	0.2...2.5	0.25...2.5	0.25...2.5	2 x 0.2...1	2 x 0.2...1.5	2 x 0.25...1	2 x 0.5...1.5
AWG	24...14	24...14	23...14	23...14	2 x 24...17	2 x 24...16	2 x 23...17	2 x 20...16
 Ø 3,5 mm (0.14 in.)		N•m		0.5...0.6				
		lb-in		4.42...5.31				

The use of copper conductors is required.

**⚡ ⚠ DANGER**

**LOOSE WIRING CAUSES ELECTRIC SHOCK**

- Tighten connections in conformance with the torque specifications.
- Do not insert more than one wire per connector of the terminal block unless using the cable ends (ferrules) specified above.

**Failure to follow these instructions will result in death or serious injury.**

**⚠ DANGER**


**FIRE HAZARD**



- Use only the correct wire sizes for the current capacity of the I/O channels and power supplies.
- For relay output (2 A) wiring, use conductors of at least 0.5 mm<sup>2</sup> (AWG 20) with a temperature rating of at least 80 °C (176 °F).
- For common conductors of relay output wiring (7 A), or relay output wiring greater than 2 A, use conductors of at least 1.0 mm<sup>2</sup> (AWG 16) with a temperature rating of at least 80 °C (176 °F).

**Failure to follow these instructions will result in death or serious injury.**

### Removing the I/O Terminal Block

The following figure shows the removal of the I/O terminal block from the M241 Logic Controller:

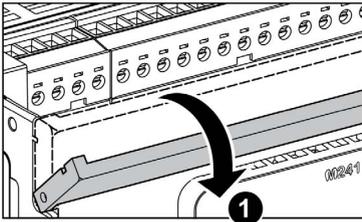Step	Action
1	Remove power from your controller.
2	Pull down the protective cache: 

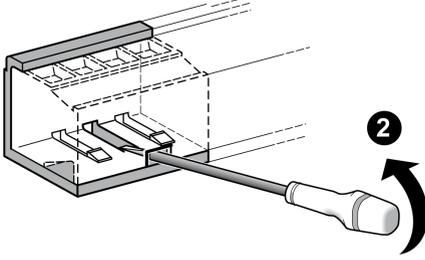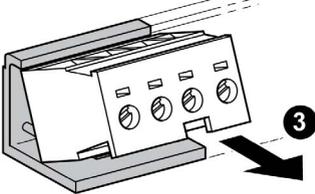Step	Action
3	Press with a screwdriver through the terminal block front hole: 
4	Remove the terminal block: 

### Protecting Outputs from Inductive Load Damage

Depending on the load, a protection circuit may be needed for the outputs on the controllers and certain modules. Inductive loads using DC voltages may create voltage reflections resulting in overshoot that will damage or shorten the life of output devices.

## CAUTION

### OUTPUT CIRCUIT DAMAGE DUE TO INDUCTIVE LOADS

Use an appropriate external protective circuit or device to reduce the risk of inductive direct current load damage.

**Failure to follow these instructions can result in injury or equipment damage.**

If your controller or module contains relay outputs, these types of outputs can support up to 240 Vac. Inductive damage to these types of outputs can result in welded contacts and loss of control. Each inductive load must include a protection device such as a peak limiter, RC circuit or flyback diode. Capacitive loads are not supported by these relays.

## ⚠ WARNING

### RELAY OUTPUTS WELDED CLOSED

- Always protect relay outputs from inductive alternating current load damage using an appropriate external protective circuit or device.
- Do not connect relay outputs to capacitive loads.

**Failure to follow these instructions can result in death, serious injury, or equipment damage.**

AC-driven contactor coils are, under certain circumstances, inductive loads that generate pronounced high-frequency interference and electrical transients when the contactor coil is de-energized. This interference may cause the logic controller to detect an I/O bus error.


## ⚠ WARNING

### CONSEQUENTIAL LOSS OF CONTROL

Install an RC surge suppressor or similar means, such as an interposing relay, on each TM3 expansion module relay output when connecting to AC-driven contactors or other forms of inductive loads.

**Failure to follow these instructions can result in death, serious injury, or equipment damage.**


**Protective circuit A:** this protection circuit can be used for both AC and DC load power circuits.

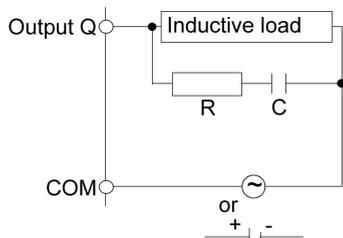

**C** Value from 0.1 to 1  $\mu\text{F}$

**R** Resistor of approximately the same resistance value as the load


**Protective circuit B:** this protection circuit can be used for DC load power circuits.

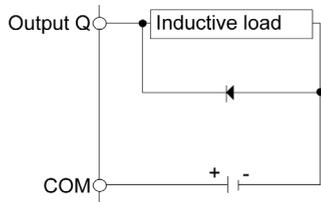

Use a diode with the following ratings:

- Reverse withstand voltage: power voltage of the load circuit x 10.
- Forward current: more than the load current.

**Protective circuit C:** this protection circuit can be used for both AC and DC load power circuits.

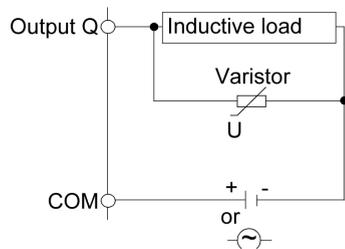

In applications where the inductive load is switched on and off frequently and/or rapidly, ensure that the continuous energy rating (J) of the varistor exceeds the peak load energy by 20 % or more.

## DC Power Supply Characteristics and Wiring

### Overview

This section provides the characteristics and the wiring diagrams of the DC power supply.

### DC Power Supply Voltage Range

If the specified voltage range is not maintained, outputs may not switch as expected. Use appropriate safety interlocks and voltage monitoring circuits.

## DANGER

### FIRE HAZARD

- Use only the correct wire sizes for the current capacity of the I/O channels and power supplies.
- For relay output (2 A) wiring, use conductors of at least 0.5 mm<sup>2</sup> (AWG 20) with a temperature rating of at least 80 °C (176 °F).
- For common conductors of relay output wiring (7 A), or relay output wiring greater than 2 A, use conductors of at least 1.0 mm<sup>2</sup> (AWG 16) with a temperature rating of at least 80 °C (176 °F).

**Failure to follow these instructions will result in death or serious injury.**

## WARNING

### UNINTENDED EQUIPMENT OPERATION

Do not exceed any of the rated values specified in the environmental and electrical characteristics tables.

**Failure to follow these instructions can result in death, serious injury, or equipment damage.**

## DC Power Supply Requirements

The M241 Logic Controller and associated I/O (TM2, TM3 and embedded I/O) require power supplies with a nominal voltage of 24 Vdc. The 24 Vdc power supplies must be rated Safety Extra Low Voltage (SELV) or Protective Extra Low Voltage (PELV) according to IEC 61140. These power supplies are isolated between the electrical input and output circuits of the power supply.

### WARNING

#### POTENTIAL OF OVERHEATING AND FIRE

- Do not connect the equipment directly to line voltage.
- Use only isolating PELV or SELV power supplies to supply power to the equipment<sup>1</sup>.

**Failure to follow these instructions can result in death, serious injury, or equipment damage.**

<sup>1</sup>For compliance to UL (Underwriters Laboratories) requirements, the power supply must also be of a type Class 2 with a maximum power output availability of less than 100 VA (approximately 4 A at nominal voltage). A Class 2 circuit requires dry indoor use only in non-hazardous locations, and must be grounded. You must separate Class 2 circuits from other circuits. If a non-Class 2 power source is used, either power supply or transformer, you must impose a current limiting device such as a fuse or a circuit breaker with a maximum rating of 4 A, but never exceeding the limits indicated in the electric characteristics and wiring diagrams for this equipment. If the indicated rating of the electrical characteristics or wiring diagrams are greater than 4 A, multiple Class 2 power supplies may be used.

## Controller DC Characteristics

The following table shows the DC power supply characteristics required for the controller:

Characteristic		Value
Rated voltage		24 Vdc
Power supply voltage range		20.4...28.8 Vdc
Power interruption time		1 ms at 24 Vdc
Maximum inrush current		50 A
Power consumption		32.6 W   max. 40.4 W
Isolation	between DC power supply and internal logic	Not isolated
	between DC power supply and protective earth ground (PE)	500 Vac

### Power interruption

The TM241C••24T / TM241C•40T / TM241C••24U and TM241C•40U must be supplied by an external 24 V power supply equipment. During power interruptions, the M241 Logic Controller, associated to the suitable power supply, is able to continue normal operation for a minimum of 10 ms as specified by IEC standards.

When planning the management of the power supplied to the controller, you must consider the power interruption duration due to the fast cycle time of the controller.

There could potentially be many scans of the logic and consequential updates to the I/O image table during the power interruption, while there is no external power supplied to the inputs, the outputs or both depending on the power system architecture and power interruption circumstances.

## WARNING


### UNINTENDED EQUIPMENT OPERATION

- Individually monitor each source of power used in the controller system including input power supplies, output power supplies and the power supply to the controller to allow appropriate system shutdown during power system interruptions.
- The inputs monitoring each of the power supply sources must be unfiltered inputs.


**Failure to follow these instructions can result in death, serious injury, or equipment damage.**

## DC Power Supply Wiring Diagram

The following figure shows the power supply terminal block removal procedure:

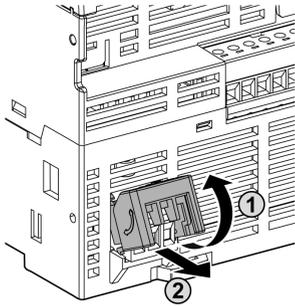

The following figure shows the wiring of the DC power supply:

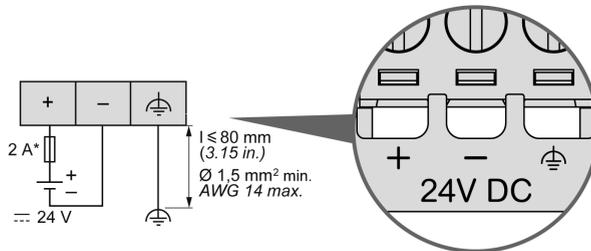

\* Type T fuse

For more information, refer to the 5.08 pitch Rules for Removable Screw Terminal block ([see page 85](#)).

## AC Power Supply Characteristics and Wiring

### Overview

This section provides the wiring diagrams and the characteristics of the AC power supply.

### AC Power Supply Voltage Range

If the specified voltage range is not maintained, outputs may not switch as expected. Use appropriate safety interlocks and voltage monitoring circuits.

## DANGER

### FIRE HAZARD

- Use only the correct wire sizes for the current capacity of the I/O channels and power supplies.
- For relay output (2 A) wiring, use conductors of at least 0.5 mm<sup>2</sup> (AWG 20) with a temperature rating of at least 80 °C (176 °F).
- For common conductors of relay output wiring (7 A), or relay output wiring greater than 2 A, use conductors of at least 1.0 mm<sup>2</sup> (AWG 16) with a temperature rating of at least 80 °C (176 °F).

**Failure to follow these instructions will result in death or serious injury.**

## WARNING

### UNINTENDED EQUIPMENT OPERATION

Do not exceed any of the rated values specified in the environmental and electrical characteristics tables.

**Failure to follow these instructions can result in death, serious injury, or equipment damage.**

### Controller AC Characteristics

The following table shows the AC power supply characteristics:

Characteristic		Value
Voltage	rated	100...240 Vac
	limit (including ripple)	85...264 Vac
Frequency		50/60 Hz
Power interruption time	at 100 Vac	10 ms
Maximum inrush current	at 240 Vac	42.5 A

Characteristic		Value
Typical power consumption	at 100 Vac	78 VA
	at 240 Vac	98.4 VA
Isolation	between AC power supply and internal logic	1780 Vac
	between AC power supply and protective earth ground (PE)	2500 Vdc

### Power interruption

The duration of power interruptions where the M241 Logic Controller is able to continue normal operation varies depending upon the load to the power supply of the controller, but generally a minimum of 10 ms is maintained as specified by IEC standards.

If there is a minimum load on the controller power supply, the interruption can be as long as 400 ms.

When planning the management of the power supplied to the controller, you must consider the duration due to the fast cycle time.

There could potentially be many scans of the logic and consequential updates to the I/O image table during the power interruption, while there is no external power supplied to the inputs, the outputs or both depending on the power system architecture and power interruption circumstances.

## ⚠ WARNING


### UNINTENDED EQUIPMENT OPERATION

- Individually monitor each source of power used in the Modicon M241 Logic Controller system including input power supplies, output power supplies and the power supply to the controller to allow appropriate system shutdown during power system interruptions.
- The inputs monitoring each of the power supply sources must be unfiltered inputs.

**Failure to follow these instructions can result in death, serious injury, or equipment damage.**

### AC Power Supply Wiring Diagram

The following figure shows the wiring of the AC power supply:

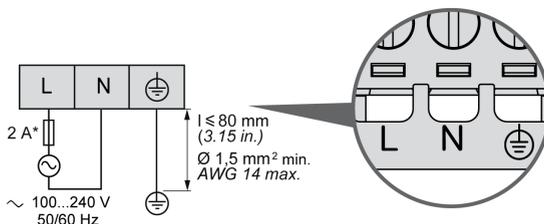

- \* Use an external, slow-blow, type T fuse.

## Grounding the M241 System

### Overview

To help minimize the effects of electromagnetic interference, cables carrying the fast I/O, analog I/O, and field bus communication signals must be shielded.

### WARNING

#### UNINTENDED EQUIPMENT OPERATION

- Use shielded cables for all fast I/O, analog I/O, and communication signals.
- Ground cable shields for all fast I/O, analog I/O, and communication signals at a single point<sup>1</sup>.
- Route communications and I/O cables separately from power cables.

**Failure to follow these instructions can result in death, serious injury, or equipment damage.**

<sup>1</sup>Multipoint grounding is permissible if connections are made to an equipotential ground plane dimensioned to help avoid cable shield damage in the event of power system short-circuit currents.

The use of shielded cables requires compliance with the following wiring rules:

- For protective ground connections (PE), metal conduit or ducting can be used for part of the shielding length, provided there is no break in the continuity of the ground connections. For functional ground (FE), the shielding is intended to attenuate electromagnetic interference and the shielding must be continuous for the length of the cable. If the purpose is both functional and protective, as is often the case for communication cables, the cable must have continuous shielding.
- Wherever possible, keep cables carrying one type of signal separate from the cables carrying other types of signals or power.

### Protective Ground (PE) on the Backplane

The protective ground (PE) should be connected to the conductive backplane by a heavy-duty wire, usually a braided copper cable with the maximum allowable cable section.

## Shielded Cables Connections

Cables carrying the fast I/O, analog I/O, and field bus communication signals must be shielded. The shielding must be securely connected to ground. The fast I/O and analog I/O shields may be connected either to the functional ground (FE) or to the protective ground (PE) of your M241 Logic Controller. The field bus communication cable shields must be connected to the protective ground (PE) with a connecting clamp secured to the conductive backplane of your installation.

### **WARNING**

#### **ACCIDENTAL DISCONNECTION FROM PROTECTIVE GROUND (PE)**

- Do not use the TM2XMTGB Grounding Plate to provide a protective ground (PE).
- Use the TM2XMTGB Grounding Plate only to provide a functional ground (FE).

**Failure to follow these instructions can result in death, serious injury, or equipment damage.**

The shielding of the Modbus cable must be connected to the protective ground (PE).

### **DANGER**



#### **HAZARD OF ELECTRIC SHOCK**

- The grounding terminal connection (PE) must be used to provide a protective ground at all times.
- Make sure that an appropriate, braided ground cable is attached to the PE/PG ground terminal before connecting or disconnecting the network cable to the equipment.

**Failure to follow these instructions will result in death or serious injury.**

### Protective Ground (PE) Cable Shielding




To ground the shield of a cable through a grounding clamp:

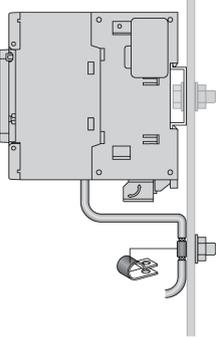Step	Description	
1	Strip the shielding for a length of 15 mm (0.59 in.)	
2	Attach the cable to the conductive backplane plate by attaching the grounding clamp to the stripped part of the shielding as close as possible to the M241 Logic Controller system base.	

**NOTE:** The shielding must be clamped securely to the conductive backplane to ensure a good contact.

### Functional Ground (FE) Cable Shielding

To connect the shield of a cable through the Grounding Bar:

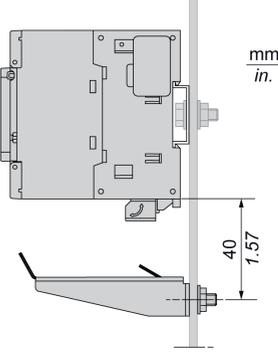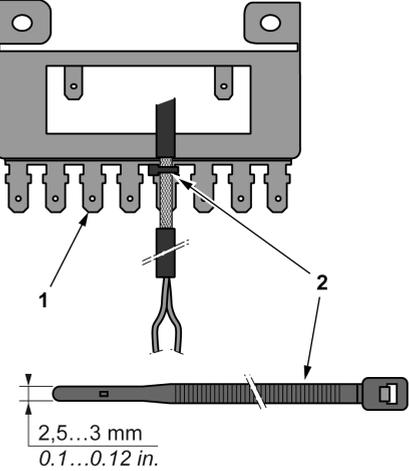Step	Description	
1	Install the Grounding Bar ( <i>see Modicon TM2, Digital I/O Modules, Hardware Guide</i> ) directly on the conductive backplane below the M241 Logic Controller system as illustrated.	
2	Strip the shielding for a length of 15 mm (0.59 in.).	
3	Tightly clamp on the blade connector (1) using nylon fastener (2) (width 2.5...3 mm (0.1...0.12 in.)) and appropriate tool.	

**NOTE:** Use the TM2XMTGB Grounding Bar for Functional Ground (FE) connections.



---

## Part II

### Modicon M241 Logic Controller

---

#### What Is in This Part?

This part contains the following chapters:

Chapter	Chapter Name	Page
4	TM241C24R	103
5	TM241CE24R	109
6	TM241CEC24R	115
7	TM241C24T	121
8	TM241CE24T	127
9	TM241CEC24T	133
10	TM241C24U	139
11	TM241CE24U	145
12	TM241CEC24U	151
13	TM241C40R	157
14	TM241CE40R	163
15	TM241C40T	169
16	TM241CE40T	175
17	TM241C40U	181
18	TM241CE40U	187
19	Embedded I/O Channels	193



# Chapter 4

## TM241C24R

### TM241C24R Presentation


#### Overview

TM241C24R logic controller:

- 14 digital inputs
  - 8 fast inputs
  - 6 regular inputs
- 10 digital outputs
  - 4 fast outputs
  - 6 relay outputs (2 A)
- Communication port
  - 2 serial line ports
  - 1 USB mini-B programming port

#### Description


The following figure shows the different components of the TM241C24R logic controller:

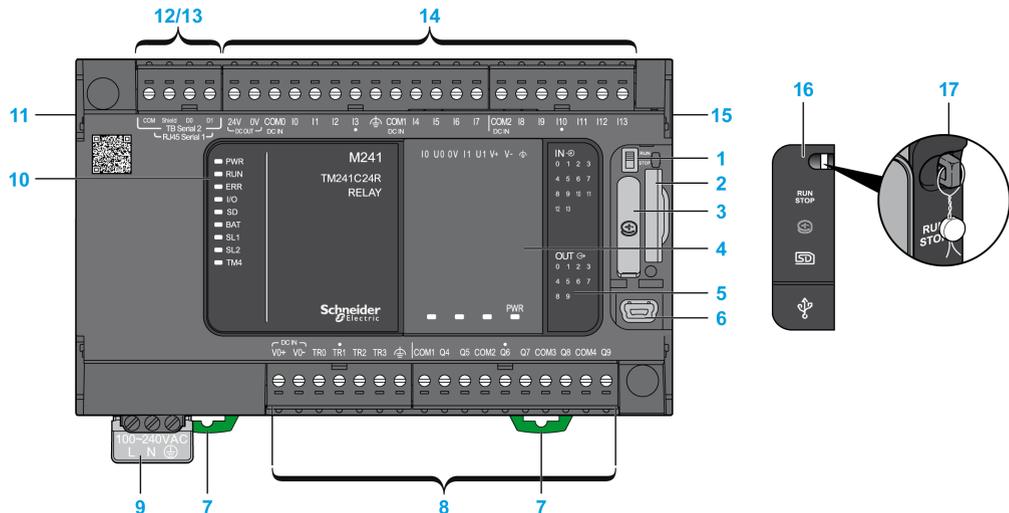

N°	Description	Refer to
1	Run/Stop switch	Run/Stop ( <i>see page 57</i> )
2	SD card slot	SD Card ( <i>see page 59</i> )
3	Battery holder	Real Time Clock (RTC) ( <i>see page 44</i> )
4	Cartridge slot	–
5	LEDs for indicating I/O states	Digital Inputs Status LEDs ( <i>see page 195</i> )
		Relay Outputs Status LEDs ( <i>see page 203</i> )
		Fast Outputs Status LEDs ( <i>see page 214</i> )
6	USB mini-B programming port / For terminal connection to a programming PC (SoMachine)	USB Mini-B Programming Port ( <i>see page 229</i> )
7	Clip-on lock for 35 mm (1.38 in.) top hat section rail (DIN-rail)	Top Hat Section Rail ( <i>see page 76</i> )
8	Embedded relay outputs	Relay Outputs ( <i>see page 202</i> )
	Embedded fast transistor outputs	Fast Transistor Outputs ( <i>see page 213</i> )
	Output removable terminal block	Rules for Removable Screw Terminal Block ( <i>see page 85</i> )
9	100...240 Vac 50/60 Hz power supply	AC Power Supply Characteristics and Wiring ( <i>see page 94</i> )
10	Status LEDs	–
11	TM4 bus connector	TM4 Expansion Modules ( <i>see page 27</i> )
12	Serial line port 1 / Type RJ45 (RS-232 or RS-485)	Serial Line 1 ( <i>see page 231</i> )
13	Serial line port 2 / Screw terminal block type (RS-485)	Serial Line 2 ( <i>see page 234</i> )
14	Embedded digital inputs	Embedded Digital Inputs ( <i>see page 194</i> )
	Input removable terminal block	Rules for Removable Screw Terminal Block ( <i>see page 85</i> )
15	TM3/TM2 bus connector	TM3 Expansion Modules ( <i>see page 28</i> )
16	Protective cover (SD card slot, Run/Stop switch, and USB mini-B programming port)	–
17	Locking hook (Hook not included)	–

## Status LEDs

The following figure shows the status LEDs:

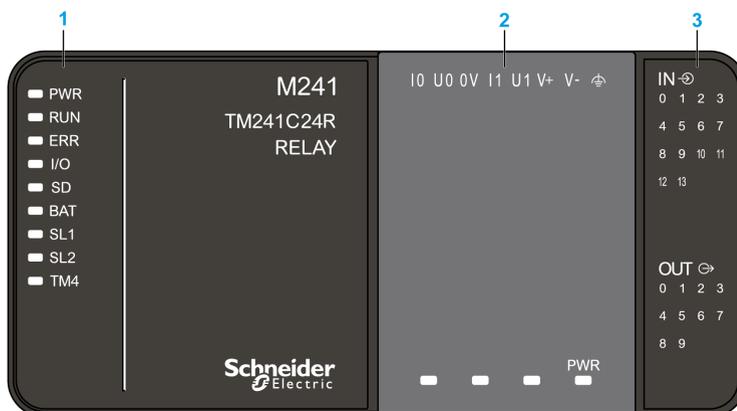

- 1 System status LEDs
- 2 Cartridge status LEDs (optional)
- 3 I/Os status LEDs

The following table describes the system status LEDs:


Label	Function Type	Color	Status	Description		
				Controller States <sup>1</sup>	Prg Port Communication	Application Execution
PWR	Power	Green	On	Indicates that power is applied.		
			Off	Indicates that power is removed.		
RUN	Machine status	Green	On	Indicates that the controller is running a valid application.		
			Flashing	Indicates that the controller has a valid application that is stopped.		
			1 flash	Indicates that the controller has paused at BREAKPOINT.		
			Off	Indicates that the controller is not programmed	-	-

Label	Function Type	Color	Status	Description		
				Controller States <sup>1</sup>	Prg Port Communication	Application Execution
ERR	Error	Red	On	Indicates that an operating system error has been detected.	Restricted	No
			Fast flashing	Indicates that the controller has detected an internal error.	Restricted	No
			Slow flashing	Indicates either that a minor error has been detected, if the RUN LED is illuminated, or that no application has been detected.	Yes	No
I/O	I/O error	Red	On	Indicates device errors on the embedded I/Os, serial line 1 or 2, SD card, cartridge, TM4 bus, TM3 bus.		
SD	SD card access	Green	On	Indicates that the SD card is being accessed		
BAT	Battery	Red	On	Indicates that the battery needs to be replaced.		
			Flashing	Indicates that the battery charge is low.		
SL1	Serial line 1	Green	On	Indicates the status of serial line 1 ( <i>see page 233</i> )		
			Off	Indicates no serial communication		
SL2	Serial line 2	Green	On	Indicates the status of serial line 2 ( <i>see page 235</i> )		
			Off	Indicates no serial communication		
TM4	Error on TM4 bus	Red	On	Indicates that an error has been detected on the TM4 bus		
			Off	Indicates that no error has been detected on the TM4 bus		

<sup>1</sup> For more information about the controller state description, refer to the M241 Logic Controller - Programming Guide.

## Dimensions

The following figure shows the external dimensions of the logic controller:

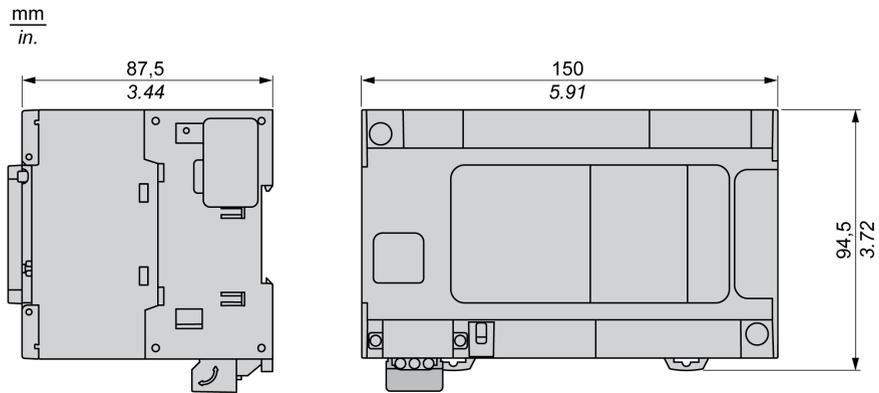



# Chapter 5

## TM241CE24R

### TM241CE24R Presentation


#### Overview

TM241CE24R logic controller:

- 14 digital inputs
  - 8 fast inputs
  - 6 regular inputs
- 10 digital outputs
  - 4 fast outputs
  - 6 relay outputs (2 A)
- Communication port
  - 2 serial line ports
  - 1 Ethernet port
  - 1 USB mini-B programming port

#### Description


The following figure shows the different components of the TM241CE24R logic controller:

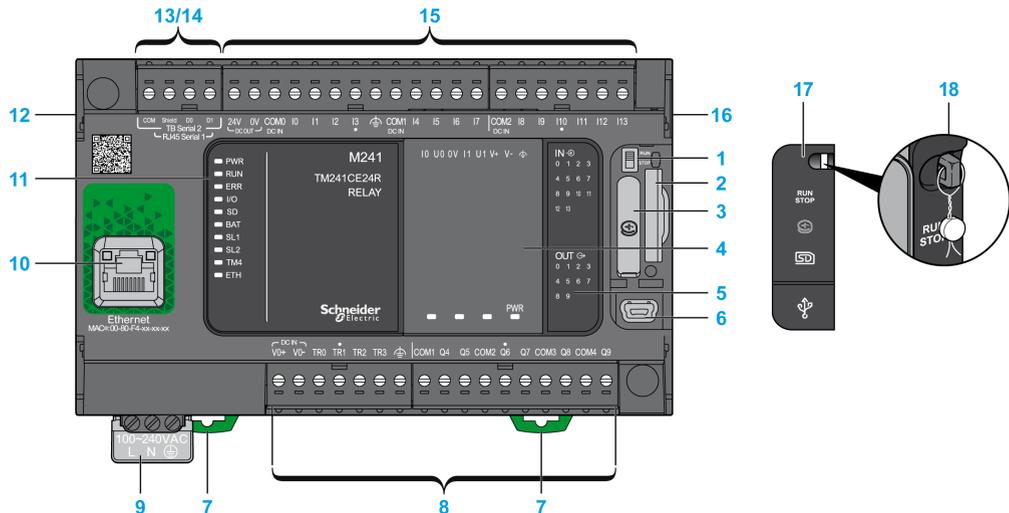

N°	Description	Refer to
1	Run/Stop switch	Run/Stop ( <i>see page 57</i> )
2	SD card slot	SD Card ( <i>see page 59</i> )
3	Battery holder	Real Time Clock (RTC) ( <i>see page 44</i> )
4	Cartridge slot	–
5	LEDs for indicating I/O states	Digital Inputs Status LEDs ( <i>see page 195</i> )
		Relay Outputs Status LEDs ( <i>see page 203</i> )
		Fast Outputs Status LEDs ( <i>see page 214</i> )
6	USB mini-B programming port / For terminal connection to a programming PC (SoMachine)	USB Mini-B Programming Port ( <i>see page 229</i> )
7	Clip-on lock for 35 mm (1.38 in.) top hat section rail (DIN-rail)	Top Hat Section Rail ( <i>see page 76</i> )
8	Embedded relay outputs	Relay Outputs ( <i>see page 202</i> )
	Embedded fast transistor outputs	Fast Transistor Outputs ( <i>see page 213</i> )
	Output removable terminal block	Rules for Removable Screw Terminal Block ( <i>see page 85</i> )
9	100...240 Vac 50/60 Hz power supply	AC Power Supply Characteristics and Wiring ( <i>see page 94</i> )
10	Ethernet port / Type RJ45 (RS-232 or RS-485)	Ethernet Port ( <i>see page 226</i> )
11	Status LEDs	–
12	TM4 bus connector	TM4 Expansion Modules ( <i>see page 27</i> )
13	Serial line port 1 / Type RJ45 (RS-232 or RS-485)	Serial Line 1 ( <i>see page 231</i> )
14	Serial line port 2 / Screw terminal block type (RS-485)	Serial Line 2 ( <i>see page 234</i> )
15	Embedded digital inputs	Embedded Digital Inputs ( <i>see page 194</i> )
	Input removable terminal block	Rules for Removable Screw Terminal Block ( <i>see page 85</i> )
16	TM3/TM2 bus connector	TM3 Expansion Modules ( <i>see page 28</i> )
17	Protective cover (SD card slot, Run/Stop switch, and USB mini-B programming port)	–
18	Locking hook (Hook not included)	–

### Status LEDs

The following figure shows the status LEDs:

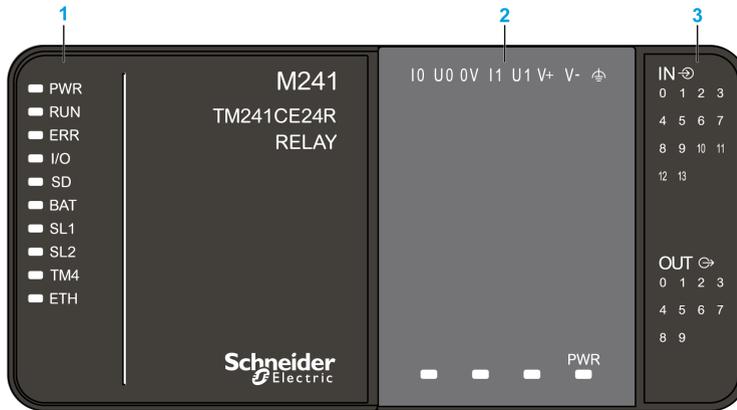

- 1 System status LEDs
- 2 Cartridge status LEDs (optional)
- 3 I/Os status LEDs

The following table describes the system status LEDs:


Label	Function Type	Color	Status	Description		
				Controller States <sup>1</sup>	Prg Port Communication	Application Execution
PWR	Power	Green	On	Indicates that power is applied.		
			Off	Indicates that power is removed.		
RUN	Machine status	Green	On	Indicates that the controller is running a valid application.		
			Flashing	Indicates that the controller has a valid application that is stopped.		
			1 flash	Indicates that the controller has paused at BREAKPOINT.		
			Off	Indicates that the controller is not programmed	-	-

Label	Function Type	Color	Status	Description		
				Controller States <sup>1</sup>	Prg Port Communication	Application Execution
ERR	Error	Red	On	An operating system error has been detected.	Restricted	No
			Fast flashing	The controller has detected an internal error.	Restricted	No
			Slow flashing	Indicates either that a minor error has been detected, if the RUN LED is illuminated, or that no application has been detected.	Yes	No
I/O	I/O error	Red	On	Indicates device errors on the embedded I/Os, serial line 1 or 2, SD card, cartridge, TM4 bus, TM3 bus, or Ethernet port.		
SD	SD card access	Green	On	Indicates that the SD card is being accessed		
BAT	Battery	Red	On	Indicates that the battery needs to be replaced.		
			Flashing	Indicates that the battery charge is low.		
SL1	Serial line 1	Green	On	Indicates the status of serial line 1 ( <i>see page 233</i> )		
			Off	Indicates no serial communication		
SL2	Serial line 2	Green	On	Indicates the status of serial line 2 ( <i>see page 235</i> )		
			Off	Indicates no serial communication		
TM4	Error on TM4 bus	Red	On	Indicates that an error has been detected on the TM4 bus		
			Off	Indicates that no error has been detected on the TM4 bus		
ETH	Ethernet port status	Green	On	Indicates that the ethernet port is connected and the IP address is defined.		
			3 flashes	Indicates that the ethernet port is not connected.		
			4 flashes	Indicates that the IP address is already in used.		
			5 flashes	Indicates that the module is waiting for BOOTP or DHCP sequence.		
			6 flashes	Indicates that the configured IP address is not valid.		

<sup>1</sup> For more information about the controller state description, refer to the M241 Logic Controller - Programming Guide.

## Dimensions

The following figure shows the external dimensions of the logic controller:

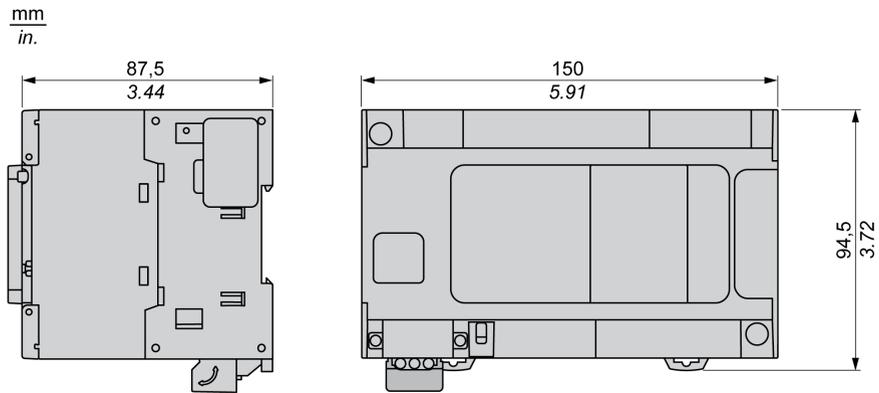



# Chapter 6

## TM241CEC24R

### TM241CEC24R Presentation


#### Overview

TM241CEC24R logic controller has:

- 14 digital inputs
  - 8 fast inputs
  - 6 regular inputs
- 10 digital outputs
  - 4 fast outputs
  - 6 relay outputs (2 A)
- Communication port
  - 2 serial line ports
  - 1 Ethernet port
  - 1 CANopen port
  - 1 USB mini-B programming port

#### Description


The following figure shows the different components of the TM241CEC24R logic controller:

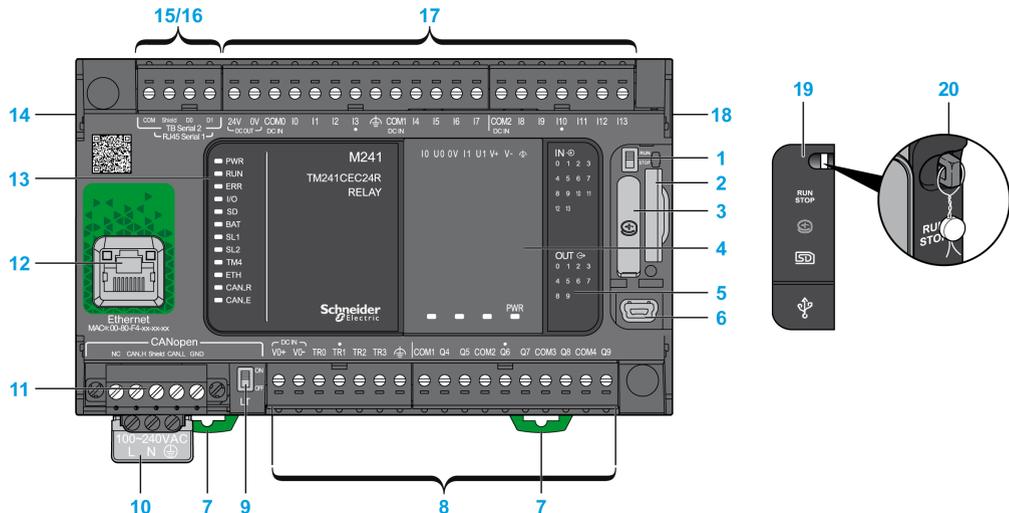

N°	Description	Refer to
1	Run/Stop switch	Run/Stop ( <i>see page 57</i> )
2	SD card slot	SD Card ( <i>see page 59</i> )
3	Battery holder	Real Time Clock (RTC) ( <i>see page 44</i> )
4	Cartridge slot	–
5	LEDs for indicating I/O states	Digital Inputs Status LEDs ( <i>see page 195</i> )
		Relay Outputs Status LEDs ( <i>see page 203</i> )
		Fast Outputs Status LEDs ( <i>see page 214</i> )
6	USB mini-B programming port / For terminal connection to a programming PC (SoMachine)	USB Mini-B Programming Port ( <i>see page 229</i> )
7	Clip-on lock for 35 mm (1.38 in.) top hat section rail (DIN-rail)	Top Hat Section Rail ( <i>see page 76</i> )
8	Embedded relay outputs	Relay Outputs ( <i>see page 202</i> )
	Embedded fast transistor outputs	Fast Transistor Outputs ( <i>see page 213</i> )
	Output removable terminal block	Rules for Removable Screw Terminal Block ( <i>see page 85</i> )
9	CANopen Line termination switch	CANopen Port ( <i>see page 222</i> )
10	100...240 Vac 50/60 Hz power supply	AC Power Supply Characteristics and Wiring ( <i>see page 94</i> )
11	CANopen port / Screw terminal block type	–
12	Ethernet port / Type RJ45 (RS-232 or RS-485)	Ethernet Port ( <i>see page 226</i> )
13	Status LEDs	–
14	TM4 bus connector	–
15	Serial line port 1 / Type RJ45 (RS-232 or RS-485)	Serial Line 1 ( <i>see page 231</i> )
16	Serial line port 2 / Screw terminal block type (RS-485)	Serial Line 2 ( <i>see page 234</i> )
17	Embedded digital inputs	Embedded Digital Inputs ( <i>see page 194</i> )
	Input removable terminal block	Rules for Removable Screw Terminal Block ( <i>see page 85</i> )
18	TM3/TM2 bus connector	TM3 Expansion Modules ( <i>see page 28</i> )
19	Protective cover (SD card slot, Run/Stop switch, and USB mini-B programming port)	–
20	Locking hook (Hook not included)	–

## Status LEDs

The following figure shows the status LEDs:

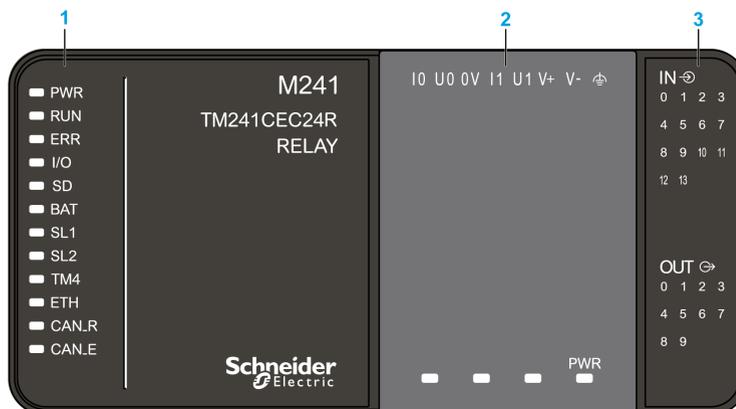

- 1 System status LEDs
- 2 Cartridge status LEDs (optional)
- 3 I/Os status LEDs

The following table describes the system status LEDs:

Label	Function Type	Color	Status	Description		
				Controller States <sup>1</sup>	Prg Port Communication	Application Execution
PWR	Power	Green	On	Indicates that power is applied.		
			Off	Indicates that power is removed.		
RUN	Machine status	Green	On	Indicates that the controller is running a valid application.		
			Flashing	Indicates that the controller has a valid application that is stopped.		
			1 flash	Indicates that the controller has paused at BREAKPOINT.		
			Off	Indicates that the controller is not programmed	-	-


Label	Function Type	Color	Status	Description		
				Controller States <sup>1</sup>	Prg Port Communication	Application Execution
ERR	Error	Red	On	An operating system error has been detected.	Restricted	No
			Fast flashing	The controller has detected an internal error.	Restricted	No
			Slow flashing	Indicates either that a minor error has been detected, if the RUN LED is illuminated, or that no application has been detected.	Yes	No
I/O	I/O error	Red	On	Indicates device errors on the embedded I/Os, serial line 1 or 2, SD card, cartridge, TM4 bus, TM3 bus, Ethernet port or CANopen port.		
SD	SD card access	Green	On	Indicates that the SD card is being accessed		
BAT	Battery	Red	On	Indicates that the battery needs to be replaced.		
			Flashing	Indicates that the battery charge is low.		
SL1	Serial line 1	Green	On	Indicates the status of serial line 1 ( <i>see page 233</i> )		
			Off	Indicates no serial communication		
SL2	Serial line 2	Green	On	Indicates the status of serial line 2 ( <i>see page 235</i> )		
			Off	Indicates no serial communication		
TM4	Error on TM4 bus	Red	On	Indicates that an error has been detected on the TM4 bus		
			Off	Indicates that no error has been detected on the TM4 bus		
ETH	Ethernet port status	Green	On	Indicates that the ethernet port is connected and the IP address is defined.		
			3 flashes	Indicates that the ethernet port is not connected.		
			4 flashes	Indicates that the IP address is already in used.		
			5 flashes	Indicates that the module is waiting for BOOTP or DHCP sequence.		
			6 flashes	Indicates that the configured IP address is not valid.		

Label	Function Type	Color	Status	Description		
				Controller States <sup>1</sup>	Prg Port Communication	Application Execution
CAN R	CANopen running status	Green	On	Indicates that the CANopen bus is operational.		
			Off	Indicates that the CANopen master is configured.		
			Flashing	Indicates that the CANopen bus is being initialized.		
			1 flash per second	Indicates that the CANopen bus is stopped.		
CAN E	CANopen error	Red	On	Indicates that the CANopen bus is stopped (BUS OFF).		
			Off	Indicates no CANopen detected error.		
			Flashing	Indicates that the CANopen bus is not valid.		
			1 flash per second	Indicates that the controller has detected that the maximum number of error frames has been reached or exceeded.		
			2 flashes per second	Indicates that the controller has detected either a Node Guarding or a Heartbeat event.		

<sup>1</sup> For more information about the controller state description, refer to the M241 Logic Controller - Programming Guide.

### Dimensions

The following figure shows the external dimensions of the logic controller:

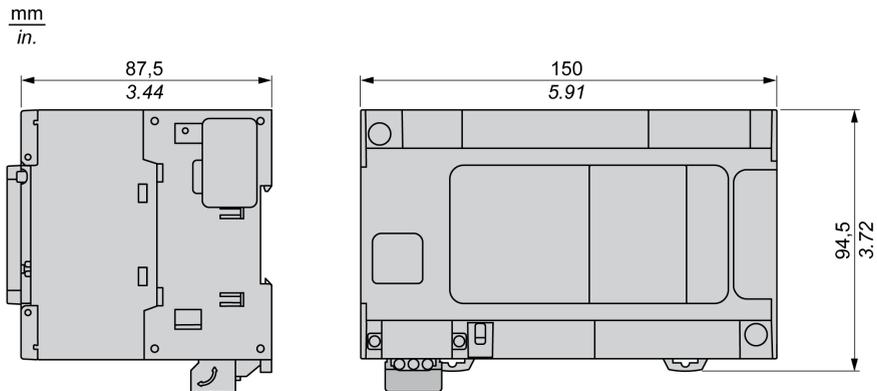



# Chapter 7

## TM241C24T

### TM241C24T Presentation


#### Overview

TM241C24T logic controller:

- 14 digital inputs
  - 8 fast inputs
  - 6 regular inputs
- 10 digital outputs
  - 4 fast outputs
  - 6 regular outputs
- Communication port
  - 2 serial line ports
  - 1 USB mini-B programming port

#### Description


The following figure shows the different components of the TM241C24T logic controller:

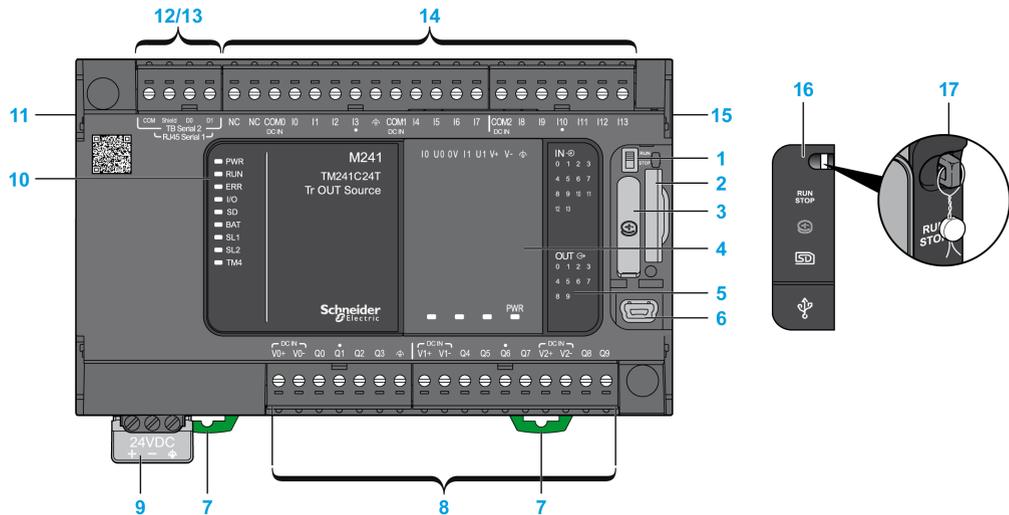

N°	Description	Refer to
1	Run/Stop switch	Run/Stop ( <i>see page 57</i> )
2	SD card slot	SD Card ( <i>see page 59</i> )
3	Battery holder	Real Time Clock (RTC) ( <i>see page 44</i> )
4	Cartridge slot	–
5	LEDs for indicating I/O states	Digital Inputs Status LEDs ( <i>see page 195</i> )
		Transistor Outputs Status LEDs ( <i>see page 209</i> )
		Fast Outputs Status LEDs ( <i>see page 214</i> )
6	USB mini-B programming port / For terminal connection to a programming PC (SoMachine)	USB Mini-B Programming Port ( <i>see page 229</i> )
7	Clip-on lock for 35 mm (1.38 in.) top hat section rail (DIN-rail)	Top Hat Section Rail ( <i>see page 76</i> )
8	Embedded regular transistor outputs	Regular Transistor Outputs ( <i>see page 208</i> )
	Embedded fast transistor outputs	Fast Transistor Outputs ( <i>see page 213</i> )
	Output removable terminal block	Rules for Removable Screw Terminal Block ( <i>see page 85</i> )
9	24 Vdc power supply	DC Power supply Characteristics and Wiring ( <i>see page 90</i> )
10	Status LEDs	–
11	TM4 bus connector	TM4 Expansion Modules ( <i>see page 27</i> )
12	Serial line port 1 / Type RJ45 (RS-232 or RS-485)	Serial Line 1 ( <i>see page 231</i> )
13	Serial line port 2 / Screw terminal block type (RS-485)	Serial Line 2 ( <i>see page 234</i> )
14	Embedded digital inputs	Embedded Digital Inputs ( <i>see page 194</i> )
	Input removable terminal block	Rules for Removable Screw Terminal Block ( <i>see page 85</i> )
15	TM3/TM2 bus connector	TM3 Expansion Modules ( <i>see page 28</i> )
16	Protective cover (SD card slot, Run/Stop switch, and USB mini-B programming port)	–
17	Locking hook (Hook not included)	–

## Status LEDs

The following figure shows the status LEDs:

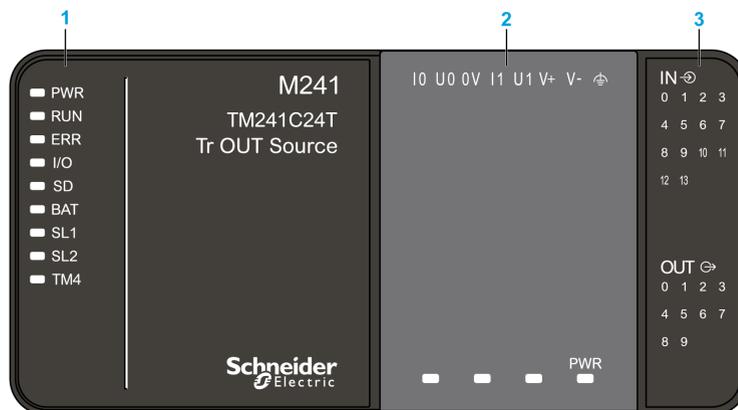

- 1 System status LEDs
- 2 Cartridge status LEDs (optional)
- 3 I/Os status LEDs

The following table describes the system status LEDs:


Label	Function Type	Color	Status	Description		
				Controller States <sup>1</sup>	Prg Port Communication	Application Execution
PWR	Power	Green	On	Indicates that power is applied.		
			Off	Indicates that power is removed.		
RUN	Machine status	Green	On	Indicates that the controller is running a valid application.		
			Flashing	Indicates that the controller has a valid application that is stopped.		
			1 flash	Indicates that the controller has paused at BREAKPOINT.		
			Off	Indicates that the controller is not programmed	-	-

Label	Function Type	Color	Status	Description		
				Controller States <sup>1</sup>	Prg Port Communication	Application Execution
ERR	Error	Red	On	Indicates that an operating system error has been detected.	Restricted	No
			Fast flashing	Indicates that the controller has detected an internal error.	Restricted	No
			Slow flashing	Indicates either that a minor error has been detected, if the RUN LED is illuminated, or that no application has been detected.	Yes	No
I/O	I/O error	Red	On	Indicates device errors on the embedded I/Os, serial line 1 or 2, SD card, cartridge, TM4 bus, TM3 bus.		
SD	SD card access	Green	On	Indicates that the SD card is being accessed		
BAT	Battery	Red	On	Indicates that the battery needs to be replaced.		
			Flashing	Indicates that the battery charge is low.		
SL1	Serial line 1	Green	On	Indicates the status of serial line 1 ( <i>see page 233</i> )		
			Off	Indicates no serial communication		
SL2	Serial line 2	Green	On	Indicates the status of serial line 2 ( <i>see page 235</i> )		
			Off	Indicates no serial communication		
TM4	Error on TM4 bus	Red	On	Indicates that an error has been detected on the TM4 bus		
			Off	Indicates that no error has been detected on the TM4 bus		

<sup>1</sup> For more information about the controller state description, refer to the M241 Logic Controller - Programming Guide.

## Dimensions

The following figure shows the external dimensions of the logic controller:

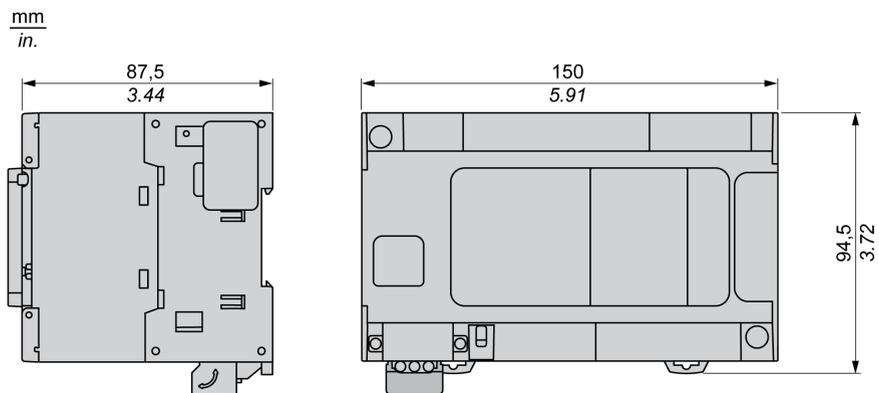



# Chapter 8

## TM241CE24T

### TM241CE24T Presentation


#### Overview

TM241CE24T logic controller:

- 14 digital inputs
  - 8 fast inputs
  - 6 regular inputs
- 10 digital outputs
  - 4 fast outputs
  - 6 regular outputs
- Communication port
  - 2 serial line ports
  - 1 Ethernet port
  - 1 USB mini-B programming port

#### Description


The following figure shows the different components of the TM241CE24T logic controller:

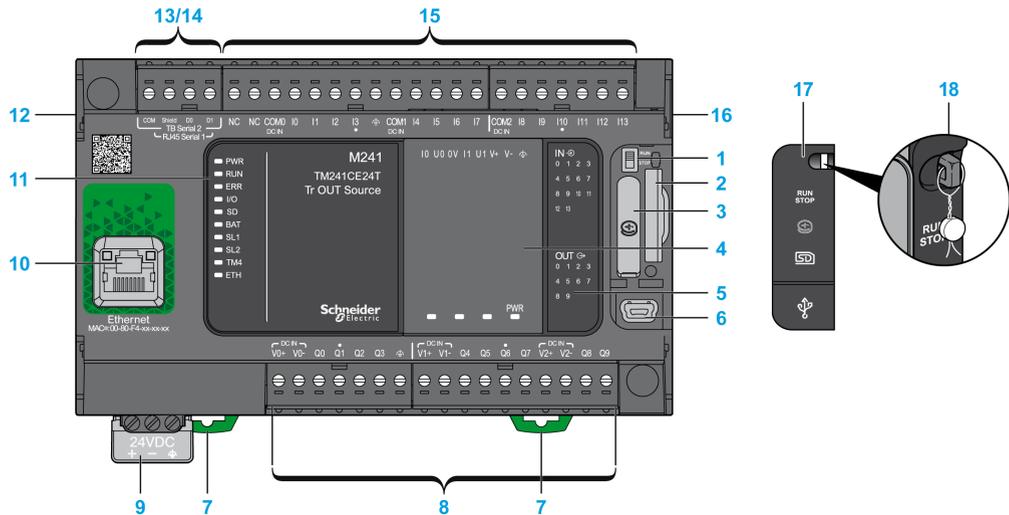

N°	Description	Refer to
1	Run/Stop switch	Run/Stop ( <i>see page 57</i> )
2	SD card slot	SD Card ( <i>see page 59</i> )
3	Battery holder	Real Time Clock (RTC) ( <i>see page 44</i> )
4	Cartridge slot	–
5	LEDs for indicating I/O states	Digital Inputs Status LEDs ( <i>see page 195</i> )
		Transistor Outputs Status LEDs ( <i>see page 209</i> )
		Fast Outputs Status LEDs ( <i>see page 214</i> )
6	USB mini-B programming port / For terminal connection to a programming PC (SoMachine)	USB Mini-B Programming Port ( <i>see page 229</i> )
7	Clip-on lock for 35 mm (1.38 in.) top hat section rail (DIN-rail)	Top Hat Section Rail ( <i>see page 76</i> )
8	Embedded regular transistor outputs	Regular Transistor Outputs ( <i>see page 208</i> )
	Embedded fast transistor outputs	Fast Transistor Outputs ( <i>see page 213</i> )
	Output removable terminal block	Rules for Removable Screw Terminal Block ( <i>see page 85</i> )
9	24 Vdc power supply	DC Power supply Characteristics and Wiring ( <i>see page 90</i> )
10	Ethernet port / Type RJ45 (RS-232 or RS-485)	Ethernet Port ( <i>see page 226</i> )
11	Status LEDs	–
12	TM4 bus connector	TM4 Expansion Modules ( <i>see page 27</i> )
13	Serial line port 1 / Type RJ45 (RS-232 or RS-485)	Serial Line 1 ( <i>see page 231</i> )
14	Serial line port 2 / Screw terminal block type (RS-485)	Serial Line 2 ( <i>see page 234</i> )
15	Embedded digital inputs	Embedded Digital Inputs ( <i>see page 194</i> )
	Input removable terminal block	Rules for Removable Screw Terminal Block ( <i>see page 85</i> )
16	TM3/TM2 bus connector	TM3 Expansion Modules ( <i>see page 28</i> )
17	Protective cover (SD card slot, Run/Stop switch, and USB mini-B programming port)	–
18	Locking hook (Hook not included)	–

## Status LEDs

The following figure shows the status LEDs:

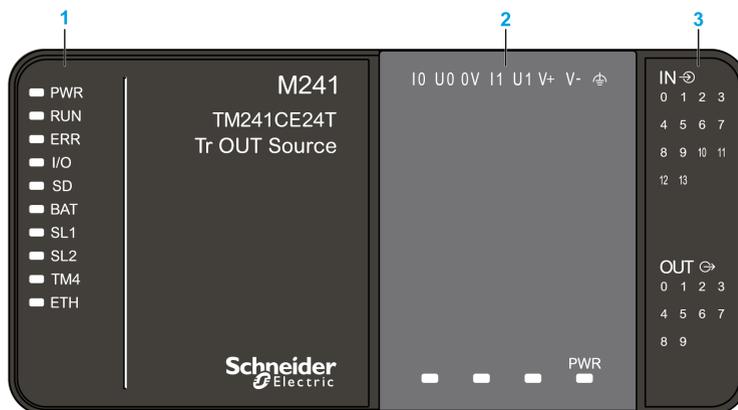

- 1 System status LEDs
- 2 Cartridge status LEDs (optional)
- 3 I/Os status LEDs

The following table describes the system status LEDs:


Label	Function Type	Color	Status	Description		
				Controller States <sup>1</sup>	Prg Port Communication	Application Execution
PWR	Power	Green	On	Indicates that power is applied.		
			Off	Indicates that power is removed.		
RUN	Machine status	Green	On	Indicates that the controller is running a valid application.		
			Flashing	Indicates that the controller has a valid application that is stopped.		
			1 flash	Indicates that the controller has paused at BREAKPOINT.		
			Off	Indicates that the controller is not programmed	-	-

Label	Function Type	Color	Status	Description		
				Controller States <sup>1</sup>	Prg Port Communication	Application Execution
ERR	Error	Red	On	An operating system error has been detected.	Restricted	No
			Fast flashing	The controller has detected an internal error.	Restricted	No
			Slow flashing	Indicates either that a minor error has been detected, if the RUN LED is illuminated, or that no application has been detected.	Yes	No
I/O	I/O error	Red	On	Indicates device errors on the embedded I/Os, serial line 1 or 2, SD card, cartridge, TM4 bus, TM3 bus, or Ethernet port.		
SD	SD card access	Green	On	Indicates that the SD card is being accessed		
BAT	Battery	Red	On	Indicates that the battery needs to be replaced.		
			Flashing	Indicates that the battery charge is low.		
SL1	Serial line 1	Green	On	Indicates the status of serial line 1 ( <i>see page 233</i> )		
			Off	Indicates no serial communication		
SL2	Serial line 2	Green	On	Indicates the status of serial line 2 ( <i>see page 235</i> )		
			Off	Indicates no serial communication		
TM4	Error on TM4 bus	Red	On	Indicates that an error has been detected on the TM4 bus		
			Off	Indicates that no error has been detected on the TM4 bus		
ETH	Ethernet port status	Green	On	Indicates that the ethernet port is connected and the IP address is defined.		
			3 flashes	Indicates that the ethernet port is not connected.		
			4 flashes	Indicates that the IP address is already in used.		
			5 flashes	Indicates that the module is waiting for BOOTP or DHCP sequence.		
			6 flashes	Indicates that the configured IP address is not valid.		

<sup>1</sup> For more information about the controller state description, refer to the M241 Logic Controller - Programming Guide.

## Dimensions

The following figure shows the external dimensions of the logic controller:

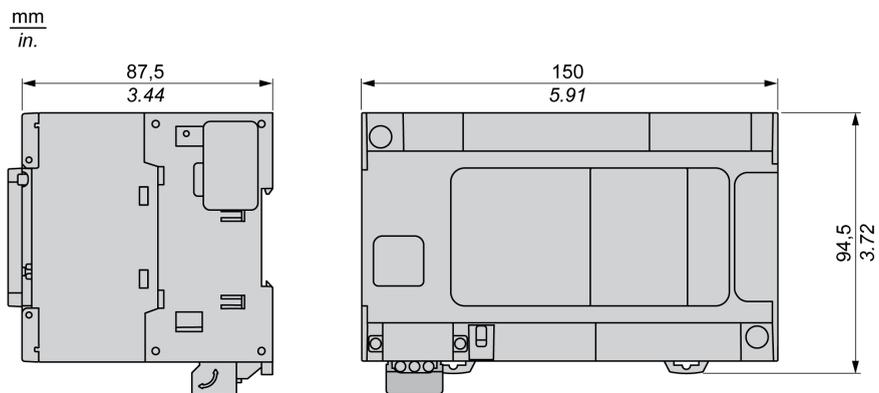



# Chapter 9

## TM241CEC24T

### TM241CEC24T Presentation


#### Overview

TM241CEC24T logic controller:

- 14 digital inputs
  - 8 fast inputs
  - 6 regular inputs
- 10 digital outputs
  - 4 fast outputs
  - 6 regular outputs
- Communication port
  - 2 serial line ports
  - 1 Ethernet port
  - 1 CANopen port
  - 1 USB mini-B programming port

#### Description


The following figure shows the different components of the TM241CEC24T logic controller:

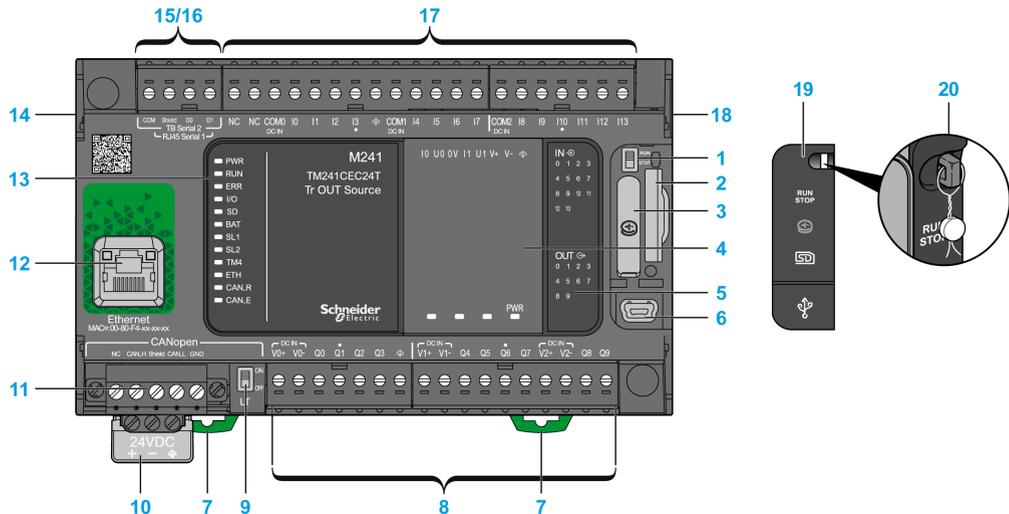

N°	Description	Refer to
1	Run/Stop switch	Run/Stop ( <i>see page 57</i> )
2	SD card slot	SD Card ( <i>see page 59</i> )
3	Battery holder	Real Time Clock (RTC) ( <i>see page 44</i> )
4	Cartridge slot	–
5	LEDs for indicating I/O states	Digital Inputs Status LEDs ( <i>see page 195</i> )
		Transistor Outputs Status LEDs ( <i>see page 209</i> )
		Fast Outputs Status LEDs ( <i>see page 214</i> )
6	USB mini-B programming port / For terminal connection to a programming PC (SoMachine)	USB Mini-B Programming Port ( <i>see page 229</i> )
7	Clip-on lock for 35 mm (1.38 in.) top hat section rail (DIN-rail)	Top Hat Section Rail ( <i>see page 76</i> )
8	Embedded regular transistor outputs	Regular Transistor Outputs ( <i>see page 208</i> )
	Embedded fast transistor outputs	Fast Transistor Outputs ( <i>see page 213</i> )
	Output removable terminal block	Rules for Removable Screw Terminal Block ( <i>see page 85</i> )
9	CANopen Line termination switch	CANopen Port ( <i>see page 222</i> )
10	24 Vdc power supply	DC Power supply Characteristics and Wiring ( <i>see page 90</i> )
11	CANopen port / Screw terminal block type	–
12	Ethernet port / Type RJ45 (RS-232 or RS-485)	Ethernet Port ( <i>see page 226</i> )
13	Status LEDs	–
14	TM4 bus connector	TM4 Expansion Modules ( <i>see page 27</i> )
15	Serial line port 1 / Type RJ45 (RS-232 or RS-485)	Serial Line 1 ( <i>see page 231</i> )
16	Serial line port 2 / Screw terminal block type (RS-485)	Serial Line 2 ( <i>see page 234</i> )
17	Embedded digital inputs	Embedded Digital Inputs ( <i>see page 194</i> )
	Input removable terminal block	Rules for Removable Screw Terminal Block ( <i>see page 85</i> )
18	TM3/TM2 bus connector	TM3 Expansion Modules ( <i>see page 28</i> )
19	Protective cover (SD card slot, Run/Stop switch, and USB mini-B programming port)	–
20	Locking hook (Hook not included)	–

### Status LEDs

The following figure shows the status LEDs:

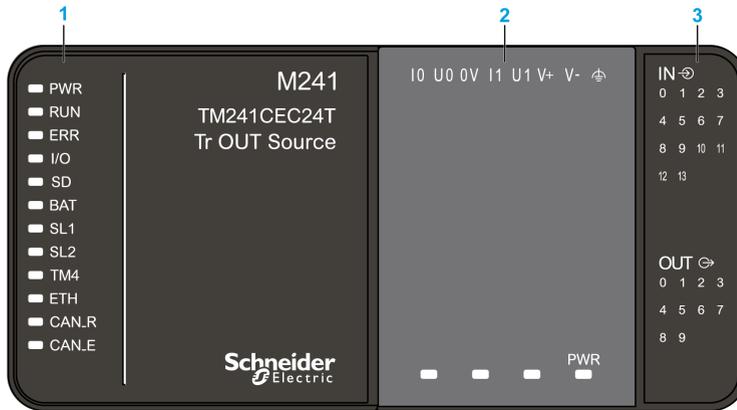

- 1 System status LEDs
- 2 Cartridge status LEDs (optional)
- 3 I/Os status LEDs

The following table describes the system status LEDs:

Label	Function Type	Color	Status	Description		
				Controller States <sup>1</sup>	Prg Port Communication	Application Execution
PWR	Power	Green	On	Indicates that power is applied.		
			Off	Indicates that power is removed.		
RUN	Machine status	Green	On	Indicates that the controller is running a valid application.		
			Flashing	Indicates that the controller has a valid application that is stopped.		
			1 flash	Indicates that the controller has paused at BREAKPOINT.		
			Off	Indicates that the controller is not programmed	-	-


Label	Function Type	Color	Status	Description		
				Controller States <sup>1</sup>	Prg Port Communication	Application Execution
ERR	Error	Red	On	An operating system error has been detected.	Restricted	No
			Fast flashing	The controller has detected an internal error.	Restricted	No
			Slow flashing	Indicates either that a minor error has been detected, if the RUN LED is illuminated, or that no application has been detected.	Yes	No
I/O	I/O error	Red	On	Indicates device errors on the embedded I/Os, serial line 1 or 2, SD card, cartridge, TM4 bus, TM3 bus, Ethernet port or CANopen port.		
SD	SD card access	Green	On	Indicates that the SD card is being accessed		
BAT	Battery	Red	On	Indicates that the battery needs to be replaced.		
			Flashing	Indicates that the battery charge is low.		
SL1	Serial line 1	Green	On	Indicates the status of serial line 1 ( <i>see page 233</i> )		
			Off	Indicates no serial communication		
SL2	Serial line 2	Green	On	Indicates the status of serial line 2 ( <i>see page 235</i> )		
			Off	Indicates no serial communication		
TM4	Error on TM4 bus	Red	On	Indicates that an error has been detected on the TM4 bus		
			Off	Indicates that no error has been detected on the TM4 bus		
ETH	Ethernet port status	Green	On	Indicates that the ethernet port is connected and the IP address is defined.		
			3 flashes	Indicates that the ethernet port is not connected.		
			4 flashes	Indicates that the IP address is already in used.		
			5 flashes	Indicates that the module is waiting for BOOTP or DHCP sequence.		
			6 flashes	Indicates that the configured IP address is not valid.		

Label	Function Type	Color	Status	Description		
				Controller States <sup>1</sup>	Prg Port Communication	Application Execution
CAN R	CANopen running status	Green	On	Indicates that the CANopen bus is operational.		
			Off	Indicates that the CANopen master is configured.		
			Flashing	Indicates that the CANopen bus is being initialized.		
			1 flash per second	Indicates that the CANopen bus is stopped.		
CAN E	CANopen error	Red	On	Indicates that the CANopen bus is stopped (BUS OFF).		
			Off	Indicates no CANopen detected error.		
			Flashing	Indicates that the CANopen bus is not valid.		
			1 flash per second	Indicates that the controller has detected that the maximum number of error frames has been reached or exceeded.		
			2 flashes per second	Indicates that the controller has detected either a Node Guarding or a Heartbeat event.		

<sup>1</sup> For more information about the controller state description, refer to the M241 Logic Controller - Programming Guide.

### Dimensions

The following figure shows the external dimensions of the logic controller:

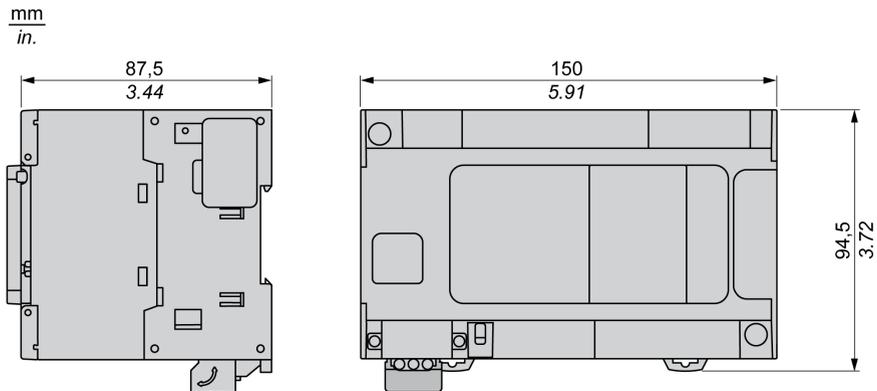



# Chapter 10

## TM241C24U

### TM241C24U Presentation


#### Overview

TM241C24U logic controller:

- 14 digital inputs
  - 8 fast inputs
  - 6 regular inputs
- 10 digital outputs
  - 4 fast outputs
  - 6 regular outputs
- Communication port
  - 2 serial line ports
  - 1 USB mini-B programming port

#### Description


The following figure shows the different components of the TM241C24U logic controller:

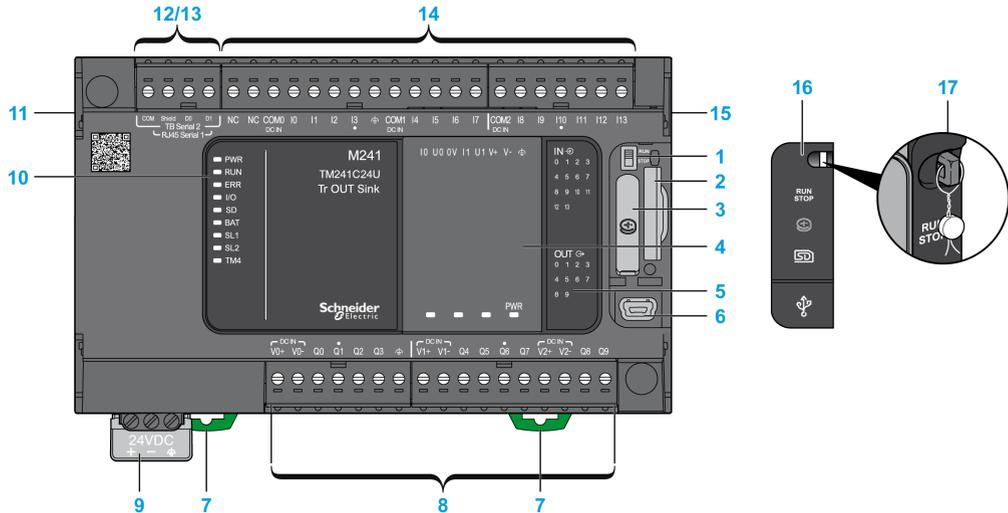

N°	Description	Refer to
1	Run/Stop switch	Run/Stop ( <i>see page 57</i> )
2	SD card slot	SD Card ( <i>see page 59</i> )
3	Battery holder	Real Time Clock (RTC) ( <i>see page 44</i> )
4	Cartridge slot	–
5	LEDs for indicating I/O states	Digital Inputs Status LEDs ( <i>see page 195</i> )
		Transistor Outputs Status LEDs ( <i>see page 209</i> )
		Fast Outputs Status LEDs ( <i>see page 214</i> )
6	USB mini-B programming port / For terminal connection to a programming PC (SoMachine)	USB Mini-B Programming Port ( <i>see page 229</i> )
7	Clip-on lock for 35 mm (1.38 in.) top hat section rail (DIN-rail)	Top Hat Section Rail ( <i>see page 76</i> )
8	Embedded regular transistor outputs	Regular Transistor Outputs ( <i>see page 208</i> )
	Embedded fast transistor outputs	Fast Transistor Outputs ( <i>see page 213</i> )
	Output removable terminal block	Rules for Removable Screw Terminal Block ( <i>see page 85</i> )
9	24 Vdc power supply	DC Power supply Characteristics and Wiring ( <i>see page 90</i> )
10	Status LEDs	–
11	TM4 bus connector	TM4 Expansion Modules ( <i>see page 27</i> )
12	Serial line port 1 / Type RJ45 (RS-232 or RS-485)	Serial Line 1 ( <i>see page 231</i> )
13	Serial line port 2 / Screw terminal block type (RS-485)	Serial Line 2 ( <i>see page 234</i> )
14	Embedded digital inputs	Embedded Digital Inputs ( <i>see page 194</i> )
	Input removable terminal block	Rules for Removable Screw Terminal Block ( <i>see page 85</i> )
15	TM3/TM2 bus connector	TM3 Expansion Modules ( <i>see page 28</i> )
16	Protective cover (SD card slot, Run/Stop switch, and USB mini-B programming port)	–
17	Locking hook (Hook not included)	–

## Status LEDs

The following figure shows the status LEDs:

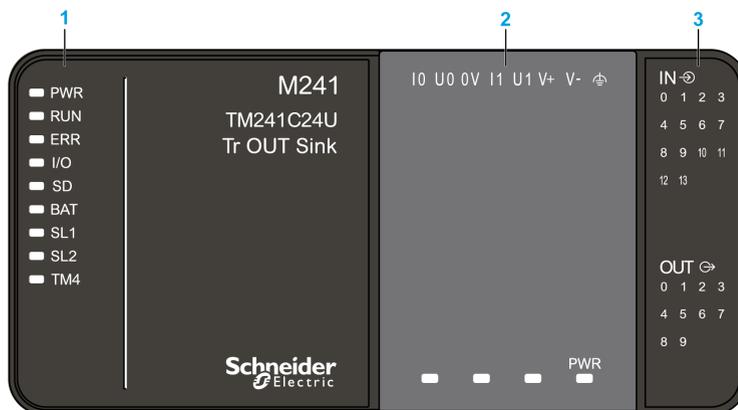

- 1 System status LEDs
- 2 Cartridge status LEDs (optional)
- 3 I/Os status LEDs

The following table describes the system status LEDs:


Label	Function Type	Color	Status	Description		
				Controller States <sup>1</sup>	Prg Port Communication	Application Execution
PWR	Power	Green	On	Indicates that power is applied.		
			Off	Indicates that power is removed.		
RUN	Machine status	Green	On	Indicates that the controller is running a valid application.		
			Flashing	Indicates that the controller has a valid application that is stopped.		
			1 flash	Indicates that the controller has paused at BREAKPOINT.		
			Off	Indicates that the controller is not programmed	-	-

Label	Function Type	Color	Status	Description		
				Controller States <sup>1</sup>	Prg Port Communication	Application Execution
ERR	Error	Red	On	Indicates that an operating system error has been detected.	Restricted	No
			Fast flashing	Indicates that the controller has detected an internal error.	Restricted	No
			Slow flashing	Indicates either that a minor error has been detected, if the RUN LED is illuminated, or that no application has been detected.	Yes	No
I/O	I/O error	Red	On	Indicates device errors on the embedded I/Os, serial line 1 or 2, SD card, cartridge, TM4 bus, TM3 bus.		
SD	SD card access	Green	On	Indicates that the SD card is being accessed		
BAT	Battery	Red	On	Indicates that the battery needs to be replaced.		
			Flashing	Indicates that the battery charge is low.		
SL1	Serial line 1	Green	On	Indicates the status of serial line 1 ( <i>see page 233</i> )		
			Off	Indicates no serial communication		
SL2	Serial line 2	Green	On	Indicates the status of serial line 2 ( <i>see page 235</i> )		
			Off	Indicates no serial communication		
TM4	Error on TM4 bus	Red	On	Indicates that an error has been detected on the TM4 bus		
			Off	Indicates that no error has been detected on the TM4 bus		

<sup>1</sup> For more information about the controller state description, refer to the M241 Logic Controller - Programming Guide.

## Dimensions

The following figure shows the external dimensions of the logic controller:

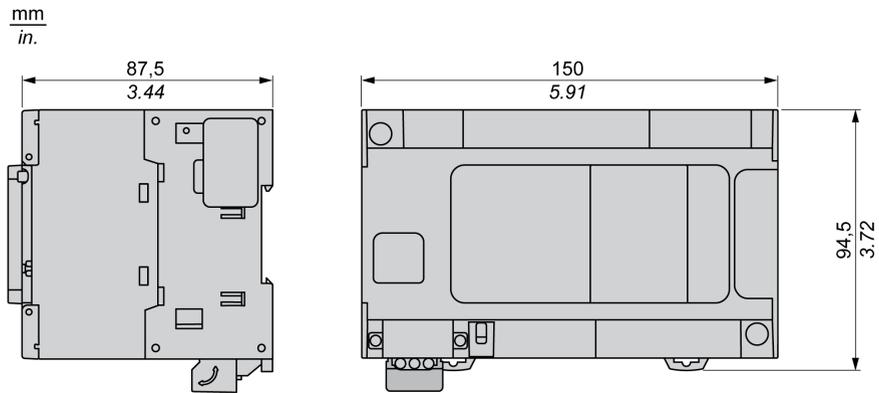



# Chapter 11

## TM241CE24U

### TM241CE24U Presentation


#### Overview

TM241CE24U logic controller:

- 14 digital inputs
  - 8 fast inputs
  - 6 regular inputs
- 10 digital outputs
  - 4 fast outputs
  - 6 regular outputs
- Communication port
  - 2 serial line ports
  - 1 Ethernet port
  - 1 USB mini-B programming port

#### Description


The following figure shows the different components of the TM241CE24U logic controller:

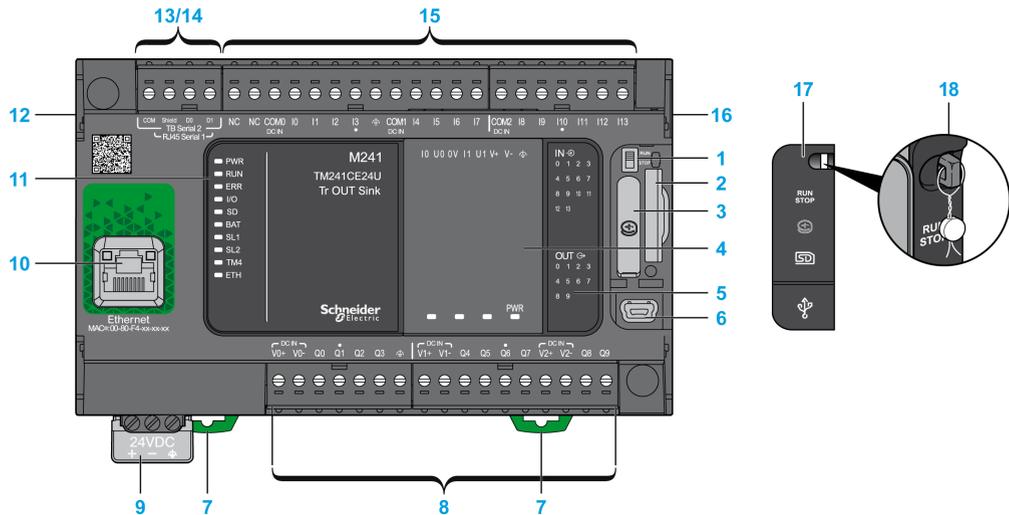

N°	Description	Refer to
1	Run/Stop switch	Run/Stop ( <i>see page 57</i> )
2	SD card slot	SD Card ( <i>see page 59</i> )
3	Battery holder	Real Time Clock (RTC) ( <i>see page 44</i> )
4	Cartridge slot	–
5	LEDs for indicating I/O states	Digital Inputs Status LEDs ( <i>see page 195</i> )
		Transistor Outputs Status LEDs ( <i>see page 209</i> )
		Fast Outputs Status LEDs ( <i>see page 214</i> )
6	USB mini-B programming port / For terminal connection to a programming PC (SoMachine)	USB Mini-B Programming Port ( <i>see page 229</i> )
7	Clip-on lock for 35 mm (1.38 in.) top hat section rail (DIN-rail)	Top Hat Section Rail ( <i>see page 76</i> )
8	Embedded regular transistor outputs	Regular Transistor Outputs ( <i>see page 208</i> )
	Embedded fast transistor outputs	Fast Transistor Outputs ( <i>see page 213</i> )
	Output removable terminal block	Rules for Removable Screw Terminal Block ( <i>see page 85</i> )
9	24 Vdc power supply	DC Power supply Characteristics and Wiring ( <i>see page 90</i> )
10	Ethernet port / Type RJ45 (RS-232 or RS-485)	Ethernet Port ( <i>see page 226</i> )
11	Status LEDs	–
12	TM4 bus connector	TM4 Expansion Modules ( <i>see page 27</i> )
13	Serial line port 1 / Type RJ45 (RS-232 or RS-485)	Serial Line 1 ( <i>see page 231</i> )
14	Serial line port 2 / Screw terminal block type (RS-485)	Serial Line 2 ( <i>see page 234</i> )
15	Embedded digital inputs	Embedded Digital Inputs ( <i>see page 194</i> )
	Input removable terminal block	Rules for Removable Screw Terminal Block ( <i>see page 85</i> )
16	TM3/TM2 bus connector	TM3 Expansion Modules ( <i>see page 28</i> )
17	Protective cover (SD card slot, Run/Stop switch, and USB mini-B programming port)	–
18	Locking hook (Hook not included)	–

### Status LEDs

The following figure shows the status LEDs:

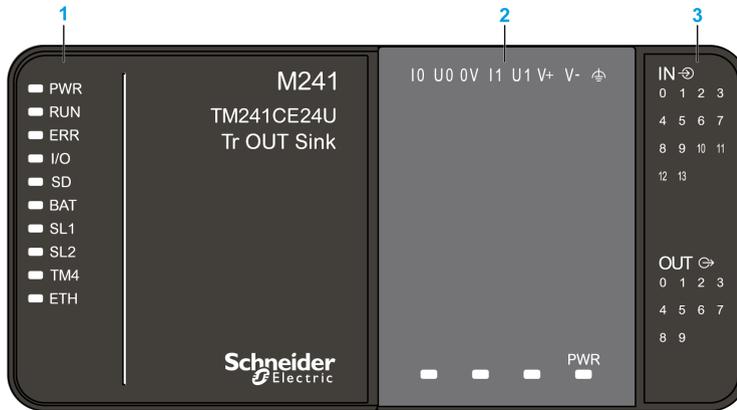

- 1 System status LEDs
- 2 Cartridge status LEDs (optional)
- 3 I/Os status LEDs

The following table describes the system status LEDs:

Label	Function Type	Color	Status	Description		
				Controller States <sup>1</sup>	Prg Port Communication	Application Execution
PWR	Power	Green	On	Indicates that power is applied.		
			Off	Indicates that power is removed.		
RUN	Machine status	Green	On	Indicates that the controller is running a valid application.		
			Flashing	Indicates that the controller has a valid application that is stopped.		
			1 flash	Indicates that the controller has paused at BREAKPOINT.		
			Off	Indicates that the controller is not programmed	-	-


Label	Function Type	Color	Status	Description		
				Controller States <sup>1</sup>	Prg Port Communication	Application Execution
ERR	Error	Red	On	An operating system error has been detected.	Restricted	No
			Fast flashing	The controller has detected an internal error.	Restricted	No
			Slow flashing	Indicates either that a minor error has been detected, if the RUN LED is illuminated, or that no application has been detected.	Yes	No
I/O	I/O error	Red	On	Indicates device errors on the embedded I/Os, serial line 1 or 2, SD card, cartridge, TM4 bus, TM3 bus, Ethernet port or CANopen port.		
SD	SD card access	Green	On	Indicates that the SD card is being accessed		
BAT	Battery	Red	On	Indicates that the battery needs to be replaced.		
			Flashing	Indicates that the battery charge is low.		
SL1	Serial line 1	Green	On	Indicates the status of serial line 1 ( <i>see page 233</i> )		
			Off	Indicates no serial communication		
SL2	Serial line 2	Green	On	Indicates the status of serial line 2 ( <i>see page 235</i> )		
			Off	Indicates no serial communication		
TM4	Error on TM4 bus	Red	On	Indicates that an error has been detected on the TM4 bus		
			Off	Indicates that no error has been detected on the TM4 bus		
ETH	Ethernet port status	Green	On	Indicates that the ethernet port is connected and the IP address is defined.		
			3 flashes	Indicates that the ethernet port is not connected.		
			4 flashes	Indicates that the IP address is already in used.		
			5 flashes	Indicates that the module is waiting for BOOTP or DHCP sequence.		
			6 flashes	Indicates that the configured IP address is not valid.		

Label	Function Type	Color	Status	Description		
				Controller States <sup>1</sup>	Prg Port Communication	Application Execution
CAN R	CANopen running status	Green	On	Indicates that the CANopen bus is operational.		
			Off	Indicates that the CANopen master is configured.		
			Flashing	Indicates that the CANopen bus is being initialized.		
			1 flash per second	Indicates that the CANopen bus is stopped.		
CAN E	CANopen error	Red	On	Indicates that the CANopen bus is stopped (BUS OFF).		
			Off	Indicates no CANopen detected error.		
			Flashing	Indicates that the CANopen bus is not valid.		
			1 flash per second	Indicates that the controller has detected that the maximum number of error frames has been reached or exceeded.		
			2 flashes per second	Indicates that the controller has detected either a Node Guarding or a Heartbeat event.		

<sup>1</sup> For more information about the controller state description, refer to the M241 Logic Controller - Programming Guide.

### Dimensions

The following figure shows the external dimensions of the logic controller:

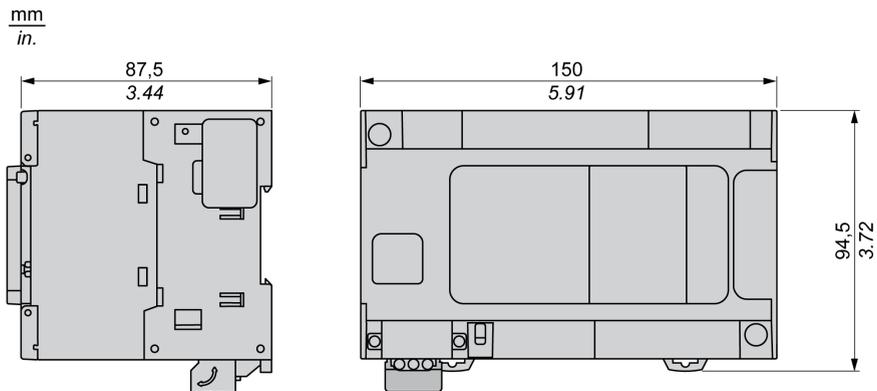



# Chapter 12

## TM241CEC24U

### TM241CEC24U Presentation


#### Overview

TM241CEC24U logic controller:

- 14 digital inputs
  - 8 fast inputs
  - 6 regular inputs
- 10 digital outputs
  - 4 fast outputs
  - 6 regular outputs
- Communication port
  - 2 serial line ports
  - 1 Ethernet port
  - 1 CANopen port
  - 1 USB mini-B programming port

#### Description


The following figure shows the different components of the TM241CEC24U logic controller:

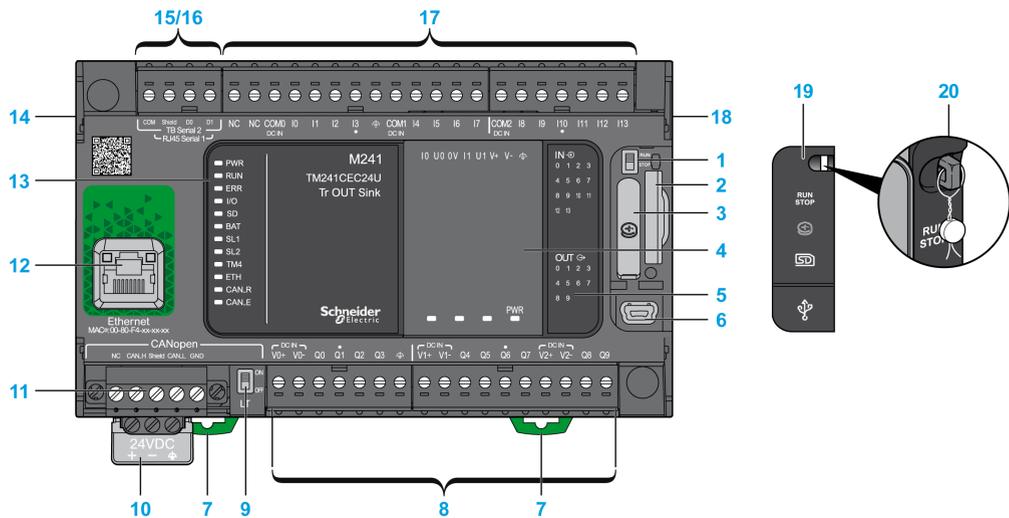

N°	Description	Refer to
1	Run/Stop switch	Run/Stop ( <i>see page 57</i> )
2	SD card slot	SD Card ( <i>see page 59</i> )
3	Battery holder	Real Time Clock (RTC) ( <i>see page 44</i> )
4	Cartridge slot	–
5	LEDs for indicating I/O states	Digital Inputs Status LEDs ( <i>see page 195</i> )
		Transistor Outputs Status LEDs ( <i>see page 209</i> )
		Fast Outputs Status LEDs ( <i>see page 214</i> )
6	USB mini-B programming port / For terminal connection to a programming PC (SoMachine)	USB Mini-B Programming Port ( <i>see page 229</i> )
7	Clip-on lock for 35 mm (1.38 in.) top hat section rail (DIN-rail)	Top Hat Section Rail ( <i>see page 76</i> )
8	Embedded regular transistor outputs	Regular Transistor Outputs ( <i>see page 208</i> )
	Embedded fast transistor outputs	Fast Transistor Outputs ( <i>see page 213</i> )
	Output removable terminal block	Rules for Removable Screw Terminal Block ( <i>see page 85</i> )
9	CANopen Line termination switch	CANopen Port ( <i>see page 222</i> )
10	24 Vdc power supply	DC Power supply Characteristics and Wiring ( <i>see page 90</i> )
11	CANopen port / Screw terminal block type	–
12	Ethernet port / Type RJ45 (RS-232 or RS-485)	Ethernet Port ( <i>see page 226</i> )
13	Status LEDs	–
14	TM4 bus connector	TM4 Expansion Modules ( <i>see page 27</i> )
15	Serial line port 1 / Type RJ45 (RS-232 or RS-485)	Serial Line 1 ( <i>see page 231</i> )
16	Serial line port 2 / Screw terminal block type (RS-485)	Serial Line 2 ( <i>see page 234</i> )
17	Embedded digital inputs	Embedded Digital Inputs ( <i>see page 194</i> )
	Input removable terminal block	Rules for Removable Screw Terminal Block ( <i>see page 85</i> )
18	TM3/TM2 bus connector	TM3 Expansion Modules ( <i>see page 28</i> )
19	Protective cover (SD card slot, Run/Stop switch, and USB mini-B programming port)	–
20	Locking hook (Hook not included)	–

### Status LEDs

The following figure shows the status LEDs:

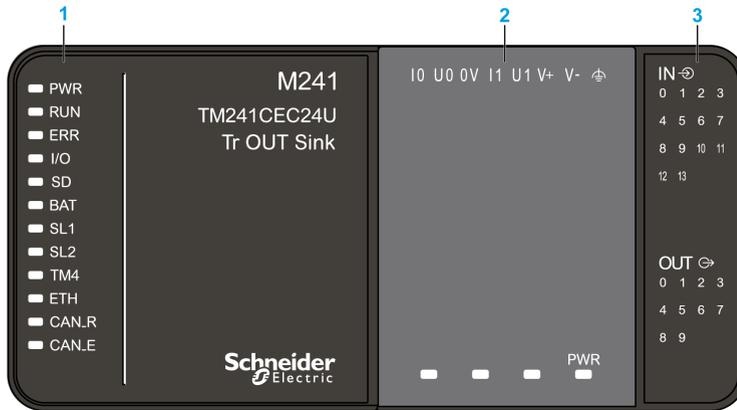

- 1 System status LEDs
- 2 Cartridge status LEDs (optional)
- 3 I/Os status LEDs

The following table describes the system status LEDs:

Label	Function Type	Color	Status	Description		
				Controller States <sup>1</sup>	Prg Port Communication	Application Execution
PWR	Power	Green	On	Indicates that power is applied.		
			Off	Indicates that power is removed.		
RUN	Machine status	Green	On	Indicates that the controller is running a valid application.		
			Flashing	Indicates that the controller has a valid application that is stopped.		
			1 flash	Indicates that the controller has paused at BREAKPOINT.		
			Off	Indicates that the controller is not programmed	-	-


Label	Function Type	Color	Status	Description		
				Controller States <sup>1</sup>	Prg Port Communication	Application Execution
ERR	Error	Red	On	An operating system error has been detected.	Restricted	No
			Fast flashing	The controller has detected an internal error.	Restricted	No
			Slow flashing	Indicates either that a minor error has been detected, if the RUN LED is illuminated, or that no application has been detected.	Yes	No
I/O	I/O error	Red	On	Indicates device errors on the embedded I/Os, serial line 1 or 2, SD card, cartridge, TM4 bus, TM3 bus, Ethernet port or CANopen port.		
SD	SD card access	Green	On	Indicates that the SD card is being accessed		
BAT	Battery	Red	On	Indicates that the battery needs to be replaced.		
			Flashing	Indicates that the battery charge is low.		
SL1	Serial line 1	Green	On	Indicates the status of serial line 1 ( <i>see page 233</i> )		
			Off	Indicates no serial communication		
SL2	Serial line 2	Green	On	Indicates the status of serial line 2 ( <i>see page 235</i> )		
			Off	Indicates no serial communication		
TM4	Error on TM4 bus	Red	On	Indicates that an error has been detected on the TM4 bus		
			Off	Indicates that no error has been detected on the TM4 bus		
ETH	Ethernet port status	Green	On	Indicates that the ethernet port is connected and the IP address is defined.		
			3 flashes	Indicates that the ethernet port is not connected.		
			4 flashes	Indicates that the IP address is already in used.		
			5 flashes	Indicates that the module is waiting for BOOTP or DHCP sequence.		
			6 flashes	Indicates that the configured IP address is not valid.		

Label	Function Type	Color	Status	Description		
				Controller States <sup>1</sup>	Prg Port Communication	Application Execution
CAN R	CANopen running status	Green	On	Indicates that the CANopen bus is operational.		
			Off	Indicates that the CANopen master is configured.		
			Flashing	Indicates that the CANopen bus is being initialized.		
			1 flash per second	Indicates that the CANopen bus is stopped.		
CAN E	CANopen error	Red	On	Indicates that the CANopen bus is stopped (BUS OFF).		
			Off	Indicates no CANopen detected error.		
			Flashing	Indicates that the CANopen bus is not valid.		
			1 flash per second	Indicates that the controller has detected that the maximum number of error frames has been reached or exceeded.		
			2 flashes per second	Indicates that the controller has detected either a Node Guarding or a Heartbeat event.		

<sup>1</sup> For more information about the controller state description, refer to the M241 Logic Controller - Programming Guide.

### Dimensions

The following figure shows the external dimensions of the logic controller:

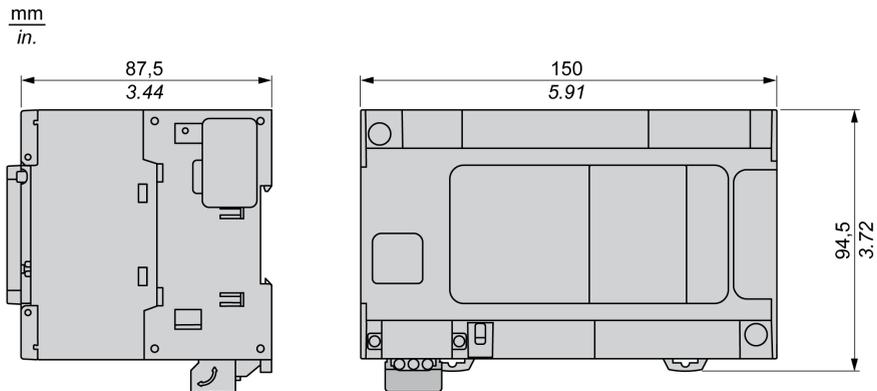



# Chapter 13

## TM241C40R

### TM241C40R Presentation


#### Overview

TM241C40R logic controller:

- 24 digital inputs
  - 8 fast inputs
  - 16 regular inputs
- 16 digital outputs
  - 4 fast outputs
  - 12 relay outputs (2 A)
- Communication port
  - 2 serial line ports
  - 1 USB mini-B programming port

#### Description


The following figure shows the different components of the TM241C40R logic controller:

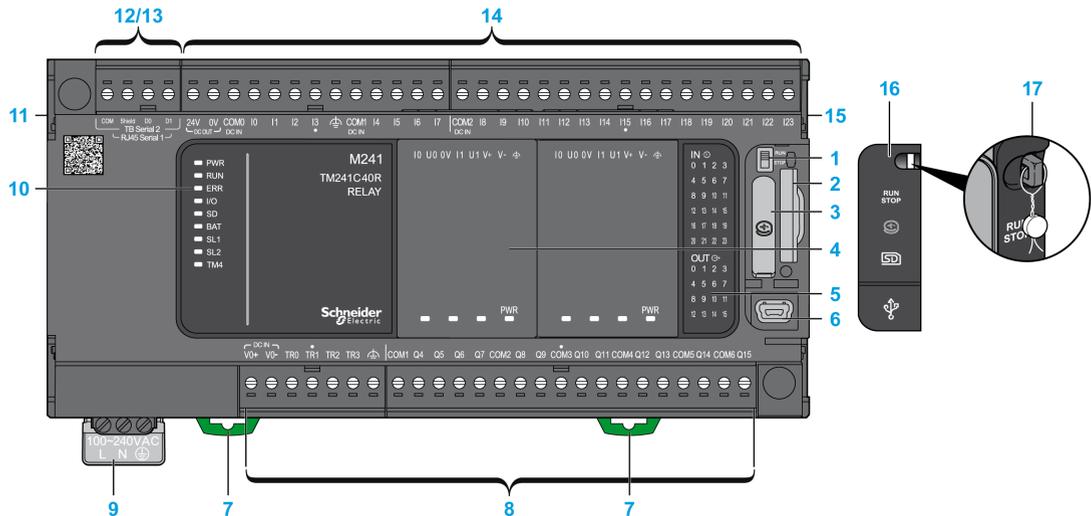

N°	Description	Refer to
1	Run/Stop switch	Run/Stop ( <i>see page 57</i> )
2	SD card slot	SD Card ( <i>see page 59</i> )
3	Battery holder	Real Time Clock (RTC) ( <i>see page 44</i> )
4	Cartridge slot	–
5	LEDs for indicating I/O states	Digital Inputs Status LEDs ( <i>see page 195</i> )
		Relay Outputs Status LEDs ( <i>see page 203</i> )
		Fast Outputs Status LEDs ( <i>see page 214</i> )
6	USB mini-B programming port / For terminal connection to a programming PC (SoMachine)	USB Mini-B Programming Port ( <i>see page 229</i> )
7	Clip-on lock for 35 mm (1.38 in.) top hat section rail (DIN-rail)	Top Hat Section Rail ( <i>see page 76</i> )
8	Embedded relay outputs	Relay Outputs ( <i>see page 202</i> )
	Embedded fast transistor outputs	Fast Transistor Outputs ( <i>see page 213</i> )
	Output removable terminal block	Rules for Removable Screw Terminal Block ( <i>see page 85</i> )
9	100...240 Vac 50/60 Hz power supply	AC Power Supply Characteristics and Wiring ( <i>see page 94</i> )
10	Status LEDs	–
11	TM4 bus connector	TM4 Expansion Modules ( <i>see page 27</i> )
12	Serial line port 1 / Type RJ45 (RS-232 or RS-485)	Serial Line 1 ( <i>see page 231</i> )
13	Serial line port 2 / Screw terminal block type (RS-485)	Serial Line 2 ( <i>see page 234</i> )
14	Embedded digital inputs	Embedded Digital Inputs ( <i>see page 194</i> )
	Input removable terminal block	Rules for Removable Screw Terminal Block ( <i>see page 85</i> )
15	TM3/TM2 bus connector	TM3 Expansion Modules ( <i>see page 28</i> )
16	Protective cover (SD card slot, Run/Stop switch, and USB mini-B programming port)	–
17	Locking hook (Hook not included)	–

## Status LEDs

The following figure shows the status LEDs:

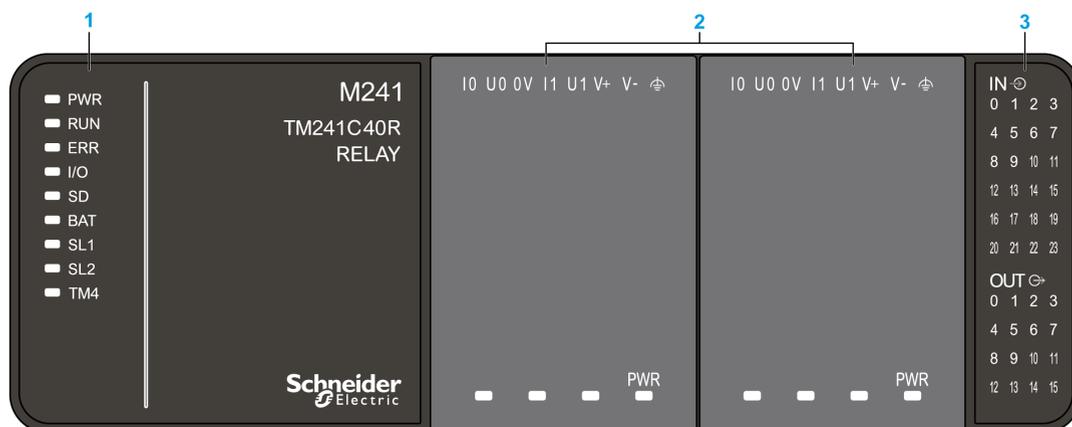

- 1 System status LEDs
- 2 Cartridge status LEDs (optional)
- 3 I/Os status LEDs

The following table describes the system status LEDs:


Label	Function Type	Color	Status	Description		
				Controller States <sup>1</sup>	Prg Port Communication	Application Execution
PWR	Power	Green	On	Indicates that power is applied.		
			Off	Indicates that power is removed.		
RUN	Machine status	Green	On	Indicates that the controller is running a valid application.		
			Flashing	Indicates that the controller has a valid application that is stopped.		
			1 flash	Indicates that the controller has paused at BREAKPOINT.		
			Off	Indicates that the controller is not programmed	-	-

Label	Function Type	Color	Status	Description		
				Controller States <sup>1</sup>	Prg Port Communication	Application Execution
ERR	Error	Red	On	Indicates that an operating system error has been detected.	Restricted	No
			Fast flashing	Indicates that the controller has detected an internal error.	Restricted	No
			Slow flashing	Indicates either that a minor error has been detected, if the RUN LED is illuminated, or that no application has been detected.	Yes	No
I/O	I/O error	Red	On	Indicates device errors on the embedded I/Os, serial line 1 or 2, SD card, cartridge, TM4 bus, TM3 bus.		
SD	SD card access	Green	On	Indicates that the SD card is being accessed		
BAT	Battery	Red	On	Indicates that the battery needs to be replaced.		
			Flashing	Indicates that the battery charge is low.		
SL1	Serial line 1	Green	On	Indicates the status of serial line 1 ( <i>see page 233</i> )		
			Off	Indicates no serial communication		
SL2	Serial line 2	Green	On	Indicates the status of serial line 2 ( <i>see page 235</i> )		
			Off	Indicates no serial communication		
TM4	Error on TM4 bus	Red	On	Indicates that an error has been detected on the TM4 bus		
			Off	Indicates that no error has been detected on the TM4 bus		

<sup>1</sup> For more information about the controller state description, refer to the M241 Logic Controller - Programming Guide.

## Dimensions

The following figure shows the external dimensions of the logic controller:

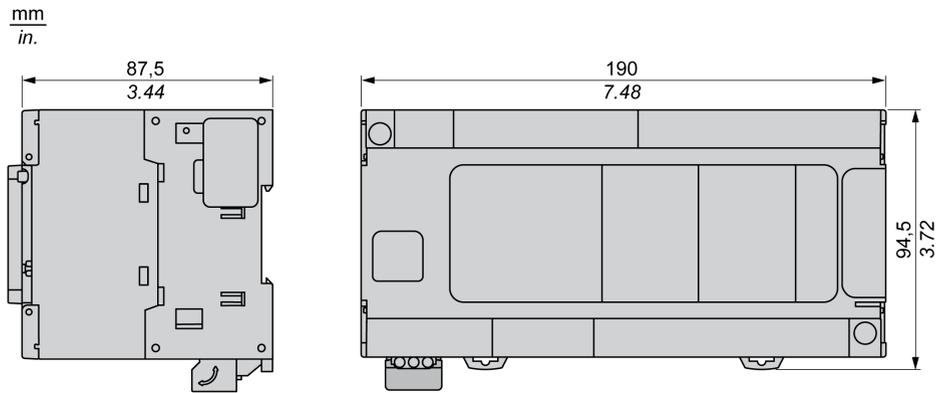



# Chapter 14

## TM241CE40R

### TM241CE40R Presentation


#### Overview

TM241CE40R logic controller:

- 24 digital inputs
  - 8 fast inputs
  - 16 regular inputs
- 16 digital outputs
  - 4 fast outputs
  - 12 relay outputs (2 A)
- Communication port
  - 2 serial line ports
  - 1 Ethernet port
  - 1 USB mini-B programming port

#### Description


The following figure shows the different components of the TM241CE40R logic controller:

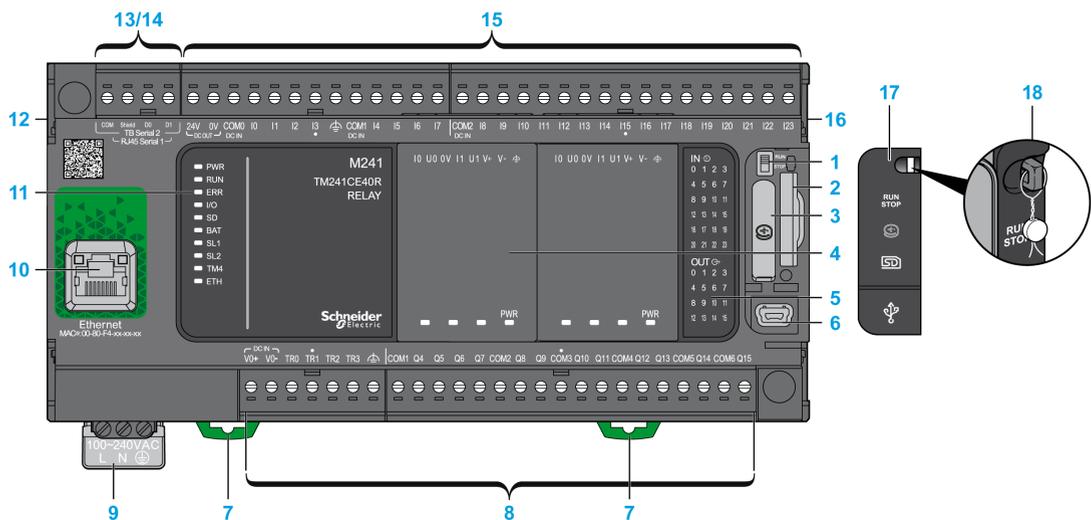

N°	Description	Refer to
1	Run/Stop switch	Run/Stop ( <i>see page 57</i> )
2	SD card slot	SD Card ( <i>see page 59</i> )
3	Battery holder	Real Time Clock (RTC) ( <i>see page 44</i> )
4	Cartridge slot	–
5	LEDs for indicating I/O states	Digital Inputs Status LEDs ( <i>see page 195</i> )
		Relay Outputs Status LEDs ( <i>see page 203</i> )
		Fast Outputs Status LEDs ( <i>see page 214</i> )
6	USB mini-B programming port / For terminal connection to a programming PC (SoMachine)	USB Mini-B Programming Port ( <i>see page 229</i> )
7	Clip-on lock for 35 mm (1.38 in.) top hat section rail (DIN-rail)	Top Hat Section Rail ( <i>see page 76</i> )
8	Embedded relay outputs	Relay Outputs ( <i>see page 202</i> )
	Embedded fast transistor outputs	Fast Transistor Outputs ( <i>see page 213</i> )
	Output removable terminal block	Rules for Removable Screw Terminal Block ( <i>see page 85</i> )
9	100...240 Vac 50/60 Hz power supply	AC Power Supply Characteristics and Wiring ( <i>see page 94</i> )
10	Ethernet port / Type RJ45 (RS-232 or RS-485)	Ethernet Port ( <i>see page 226</i> )
11	Status LEDs	–
12	TM4 bus connector	TM4 Expansion Modules ( <i>see page 27</i> )
13	Serial line port 1 / Type RJ45 (RS-232 or RS-485)	Serial Line 1 ( <i>see page 231</i> )
14	Serial line port 2 / Screw terminal block type (RS-485)	Serial Line 2 ( <i>see page 234</i> )
15	Embedded digital inputs	Embedded Digital Inputs ( <i>see page 194</i> )
	Input removable terminal block	Rules for Removable Screw Terminal Block ( <i>see page 85</i> )
16	TM3/TM2 bus connector	TM3 Expansion Modules ( <i>see page 28</i> )
17	Protective cover (SD card slot, Run/Stop switch, and USB mini-B programming port)	–
18	Locking hook (Hook not included)	–

## Status LEDs

The following figure shows the status LEDs:

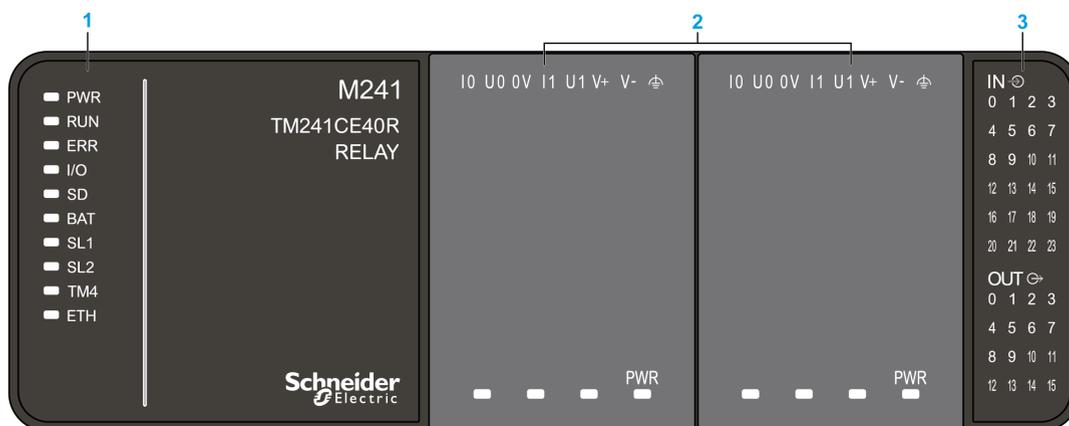

- 1 System status LEDs
- 2 Cartridge status LEDs (optional)
- 3 I/Os status LEDs

The following table describes the system status LEDs:


Label	Function Type	Color	Status	Description		
				Controller States <sup>1</sup>	Prg Port Communication	Application Execution
PWR	Power	Green	On	Indicates that power is applied.		
			Off	Indicates that power is removed.		
RUN	Machine status	Green	On	Indicates that the controller is running a valid application.		
			Flashing	Indicates that the controller has a valid application that is stopped.		
			1 flash	Indicates that the controller has paused at BREAKPOINT.		
			Off	Indicates that the controller is not programmed	-	-

Label	Function Type	Color	Status	Description		
				Controller States <sup>1</sup>	Prg Port Communication	Application Execution
ERR	Error	Red	On	An operating system error has been detected.	Restricted	No
			Fast flashing	The controller has detected an internal error.	Restricted	No
			Slow flashing	Indicates either that a minor error has been detected, if the RUN LED is illuminated, or that no application has been detected.	Yes	No
I/O	I/O error	Red	On	Indicates device errors on the embedded I/Os, serial line 1 or 2, SD card, cartridge, TM4 bus, TM3 bus, or Ethernet port.		
SD	SD card access	Green	On	Indicates that the SD card is being accessed		
BAT	Battery	Red	On	Indicates that the battery needs to be replaced.		
			Flashing	Indicates that the battery charge is low.		
SL1	Serial line 1	Green	On	Indicates the status of serial line 1 ( <i>see page 233</i> )		
			Off	Indicates no serial communication		
SL2	Serial line 2	Green	On	Indicates the status of serial line 2 ( <i>see page 235</i> )		
			Off	Indicates no serial communication		
TM4	Error on TM4 bus	Red	On	Indicates that an error has been detected on the TM4 bus		
			Off	Indicates that no error has been detected on the TM4 bus		
ETH	Ethernet port status	Green	On	Indicates that the ethernet port is connected and the IP address is defined.		
			3 flashes	Indicates that the ethernet port is not connected.		
			4 flashes	Indicates that the IP address is already in used.		
			5 flashes	Indicates that the module is waiting for BOOTP or DHCP sequence.		
			6 flashes	Indicates that the configured IP address is not valid.		

<sup>1</sup> For more information about the controller state description, refer to the M241 Logic Controller - Programming Guide.

## Dimensions

The following figure shows the external dimensions of the logic controller:

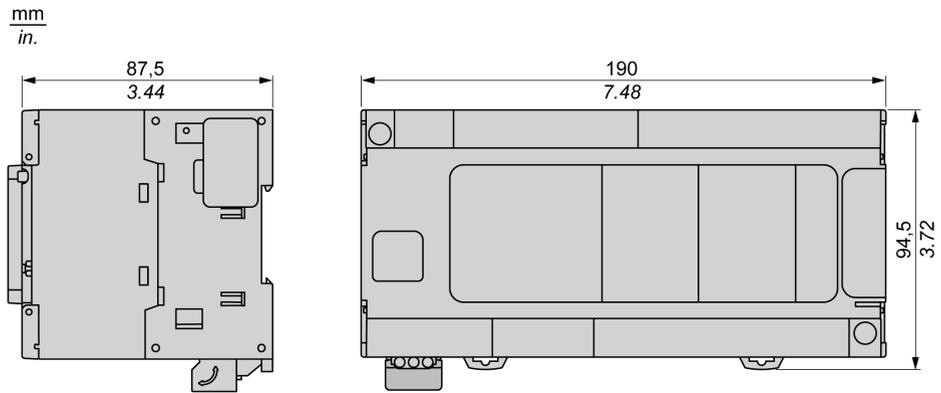



# Chapter 15

## TM241C40T

### TM241C40T Presentation


#### Overview

TM241C40T logic controller:

- 24 digital inputs
  - 8 fast inputs
  - 16 regular inputs
- 16 digital outputs
  - 4 fast outputs
  - 12 regular outputs
- Communication port
  - 2 serial line ports
  - 1 USB mini-B programming port

#### Description


The following figure shows the different components of the TM241C40T logic controller:

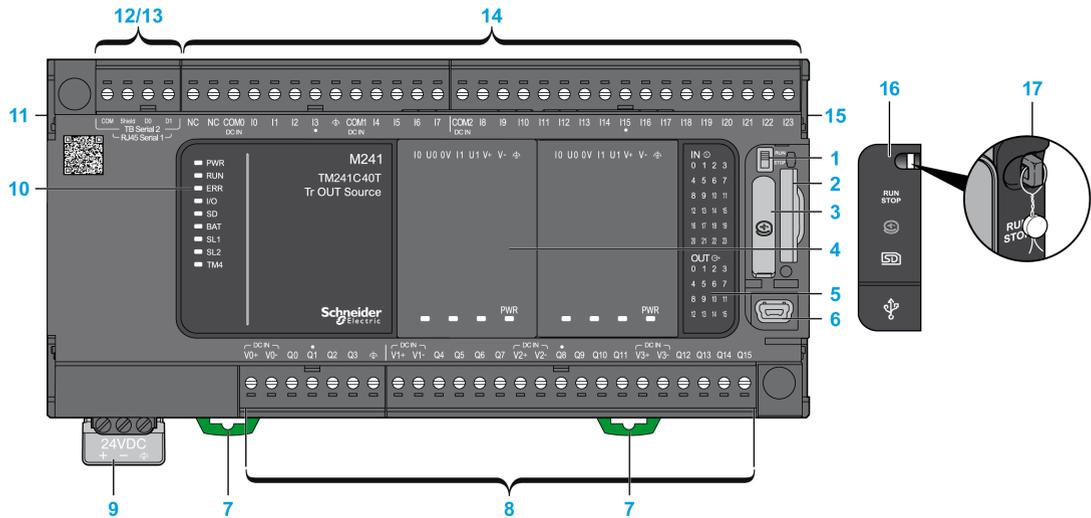

N°	Description	Refer to
1	Run/Stop switch	Run/Stop ( <i>see page 57</i> )
2	SD card slot	SD Card ( <i>see page 59</i> )
3	Battery holder	Real Time Clock (RTC) ( <i>see page 44</i> )
4	Cartridge slot	–
5	LEDs for indicating I/O states	Digital Inputs Status LEDs ( <i>see page 195</i> )
		Transistor Outputs Status LEDs ( <i>see page 209</i> )
		Fast Outputs Status LEDs ( <i>see page 214</i> )
6	USB mini-B programming port / For terminal connection to a programming PC (SoMachine)	USB Mini-B Programming Port ( <i>see page 229</i> )
7	Clip-on lock for 35 mm (1.38 in.) top hat section rail (DIN-rail)	Top Hat Section Rail ( <i>see page 76</i> )
8	Embedded regular transistor outputs	Regular Transistor Outputs ( <i>see page 208</i> )
	Embedded fast transistor outputs	Fast Transistor Outputs ( <i>see page 213</i> )
	Output removable terminal block	Rules for Removable Screw Terminal Block ( <i>see page 85</i> )
9	24 Vdc power supply	DC Power supply Characteristics and Wiring ( <i>see page 90</i> )
10	Status LEDs	–
11	TM4 bus connector	TM4 Expansion Modules ( <i>see page 27</i> )
12	Serial line port 1 / Type RJ45 (RS-232 or RS-485)	Serial Line 1 ( <i>see page 231</i> )
13	Serial line port 2 / Screw terminal block type (RS-485)	Serial Line 2 ( <i>see page 234</i> )
14	Embedded digital inputs	Embedded Digital Inputs ( <i>see page 194</i> )
	Input removable terminal block	Rules for Removable Screw Terminal Block ( <i>see page 85</i> )
15	TM3/TM2 bus connector	TM3 Expansion Modules ( <i>see page 28</i> )
16	Protective cover (SD card slot, Run/Stop switch, and USB mini-B programming port)	–
17	Locking hook (Hook not included)	–

## Status LEDs

The following figure shows the status LEDs:

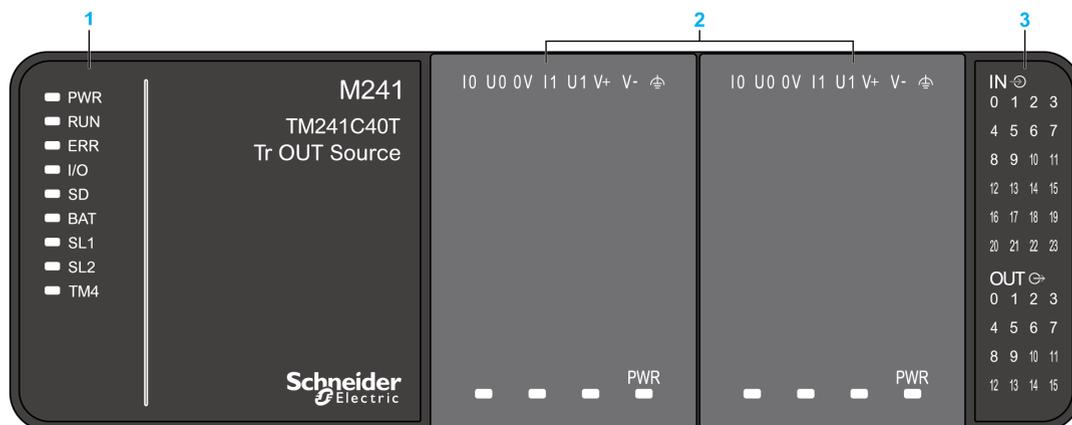

- 1 System status LEDs
- 2 Cartridge status LEDs (optional)
- 3 I/Os status LEDs

The following table describes the system status LEDs:


Label	Function Type	Color	Status	Description		
				Controller States <sup>1</sup>	Prg Port Communication	Application Execution
PWR	Power	Green	On	Indicates that power is applied.		
			Off	Indicates that power is removed.		
RUN	Machine status	Green	On	Indicates that the controller is running a valid application.		
			Flashing	Indicates that the controller has a valid application that is stopped.		
			1 flash	Indicates that the controller has paused at BREAKPOINT.		
			Off	Indicates that the controller is not programmed	-	-

Label	Function Type	Color	Status	Description		
				Controller States <sup>1</sup>	Prg Port Communication	Application Execution
ERR	Error	Red	On	Indicates that an operating system error has been detected.	Restricted	No
			Fast flashing	Indicates that the controller has detected an internal error.	Restricted	No
			Slow flashing	Indicates either that a minor error has been detected, if the RUN LED is illuminated, or that no application has been detected.	Yes	No
I/O	I/O error	Red	On	Indicates device errors on the embedded I/Os, serial line 1 or 2, SD card, cartridge, TM4 bus, TM3 bus.		
SD	SD card access	Green	On	Indicates that the SD card is being accessed		
BAT	Battery	Red	On	Indicates that the battery needs to be replaced.		
			Flashing	Indicates that the battery charge is low.		
SL1	Serial line 1	Green	On	Indicates the status of serial line 1 ( <i>see page 233</i> )		
			Off	Indicates no serial communication		
SL2	Serial line 2	Green	On	Indicates the status of serial line 2 ( <i>see page 235</i> )		
			Off	Indicates no serial communication		
TM4	Error on TM4 bus	Red	On	Indicates that an error has been detected on the TM4 bus		
			Off	Indicates that no error has been detected on the TM4 bus		

<sup>1</sup> For more information about the controller state description, refer to the M241 Logic Controller - Programming Guide.

## Dimensions

The following figure shows the external dimensions of the logic controller:

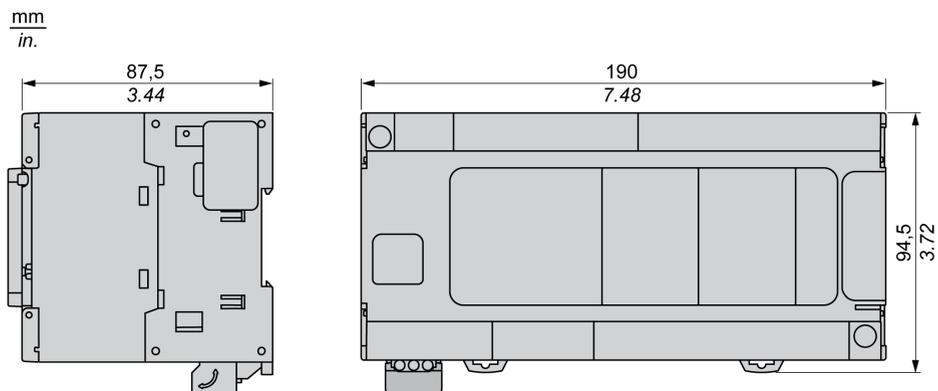



# Chapter 16

## TM241CE40T

### TM241CE40T Presentation


#### Overview

TM241CE40T logic controller:

- 24 digital inputs
  - 8 fast inputs
  - 16 regular inputs
- 16 digital outputs
  - 4 fast outputs
  - 12 regular outputs
- Communication port
  - 2 serial line ports
  - 1 Ethernet port
  - 1 USB mini-B programming port

#### Description


The following figure shows the different components of the TM241CE40T logic controller:

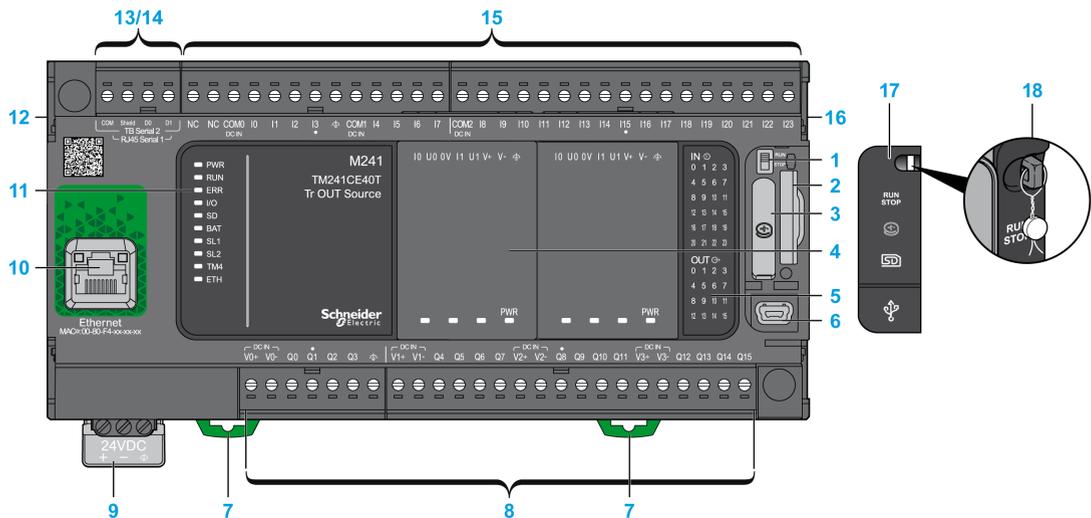

N°	Description	Refer to
1	Run/Stop switch	Run/Stop ( <i>see page 57</i> )
2	SD card slot	SD Card ( <i>see page 59</i> )
3	Battery holder	Real Time Clock (RTC) ( <i>see page 44</i> )
4	Cartridge slot	–
5	LEDs for indicating I/O states	Digital Inputs Status LEDs ( <i>see page 195</i> )
		Transistor Outputs Status LEDs ( <i>see page 209</i> )
		Fast Outputs Status LEDs ( <i>see page 214</i> )
6	USB mini-B programming port / For terminal connection to a programming PC (SoMachine)	USB Mini-B Programming Port ( <i>see page 229</i> )
7	Clip-on lock for 35 mm (1.38 in.) top hat section rail (DIN-rail)	Top Hat Section Rail ( <i>see page 76</i> )
8	Embedded regular transistor outputs	Regular Transistor Outputs ( <i>see page 208</i> )
	Embedded fast transistor outputs	Fast Transistor Outputs ( <i>see page 213</i> )
	Output removable terminal block	Rules for Removable Screw Terminal Block ( <i>see page 85</i> )
9	24 Vdc power supply	DC Power supply Characteristics and Wiring ( <i>see page 90</i> )
10	Ethernet port / Type RJ45 (RS-232 or RS-485)	Ethernet Port ( <i>see page 226</i> )
11	Status LEDs	–
12	TM4 bus connector	TM4 Expansion Modules ( <i>see page 27</i> )
13	Serial line port 1 / Type RJ45 (RS-232 or RS-485)	Serial Line 1 ( <i>see page 231</i> )
14	Serial line port 2 / Screw terminal block type (RS-485)	Serial Line 2 ( <i>see page 234</i> )
15	Embedded digital inputs	Embedded Digital Inputs ( <i>see page 194</i> )
	Input removable terminal block	Rules for Removable Screw Terminal Block ( <i>see page 85</i> )
16	TM3/TM2 bus connector	TM3 Expansion Modules ( <i>see page 28</i> )
17	Protective cover (SD card slot, Run/Stop switch, and USB mini-B programming port)	–
18	Locking hook (Hook not included)	–

## Status LEDs

The following figure shows the status LEDs:

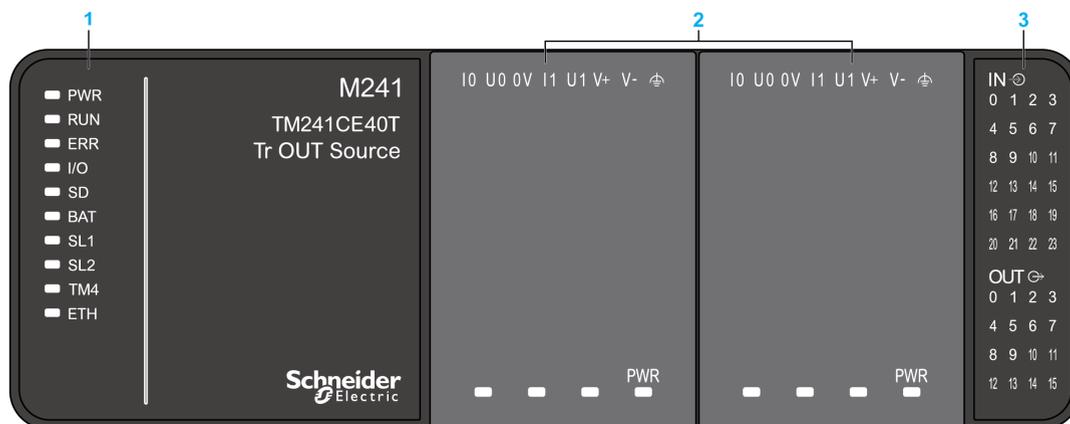

- 1 System status LEDs
- 2 Cartridge status LEDs (optional)
- 3 I/Os status LEDs

The following table describes the system status LEDs:


Label	Function Type	Color	Status	Description		
				Controller States <sup>1</sup>	Prg Port Communication	Application Execution
PWR	Power	Green	On	Indicates that power is applied.		
			Off	Indicates that power is removed.		
RUN	Machine status	Green	On	Indicates that the controller is running a valid application.		
			Flashing	Indicates that the controller has a valid application that is stopped.		
			1 flash	Indicates that the controller has paused at BREAKPOINT.		
			Off	Indicates that the controller is not programmed	-	-

Label	Function Type	Color	Status	Description		
				Controller States <sup>1</sup>	Prg Port Communication	Application Execution
ERR	Error	Red	On	An operating system error has been detected.	Restricted	No
			Fast flashing	The controller has detected an internal error.	Restricted	No
			Slow flashing	Indicates either that a minor error has been detected, if the RUN LED is illuminated, or that no application has been detected.	Yes	No
I/O	I/O error	Red	On	Indicates device errors on the embedded I/Os, serial line 1 or 2, SD card, cartridge, TM4 bus, TM3 bus, or Ethernet port.		
SD	SD card access	Green	On	Indicates that the SD card is being accessed		
BAT	Battery	Red	On	Indicates that the battery needs to be replaced.		
			Flashing	Indicates that the battery charge is low.		
SL1	Serial line 1	Green	On	Indicates the status of serial line 1 ( <i>see page 233</i> )		
			Off	Indicates no serial communication		
SL2	Serial line 2	Green	On	Indicates the status of serial line 2 ( <i>see page 235</i> )		
			Off	Indicates no serial communication		
TM4	Error on TM4 bus	Red	On	Indicates that an error has been detected on the TM4 bus		
			Off	Indicates that no error has been detected on the TM4 bus		
ETH	Ethernet port status	Green	On	Indicates that the ethernet port is connected and the IP address is defined.		
			3 flashes	Indicates that the ethernet port is not connected.		
			4 flashes	Indicates that the IP address is already in used.		
			5 flashes	Indicates that the module is waiting for BOOTP or DHCP sequence.		
			6 flashes	Indicates that the configured IP address is not valid.		

<sup>1</sup> For more information about the controller state description, refer to the M241 Logic Controller - Programming Guide.

**Dimensions**

The following figure shows the external dimensions of the logic controller:

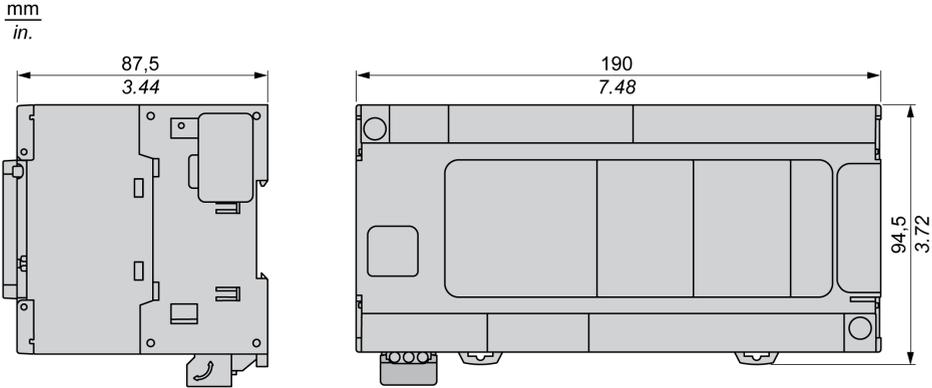



# Chapter 17

## TM241C40U

### TM241C40U Presentation


#### Overview

TM241C24U logic controller:

- 24 digital inputs
  - 8 fast inputs
  - 16 regular inputs
- 16 digital outputs
  - 4 fast outputs
  - 12 regular outputs
- Communication port
  - 2 serial line ports
  - 1 USB mini-B programming port

#### Description


The following figure shows the different components of the TM241C40U logic controller:

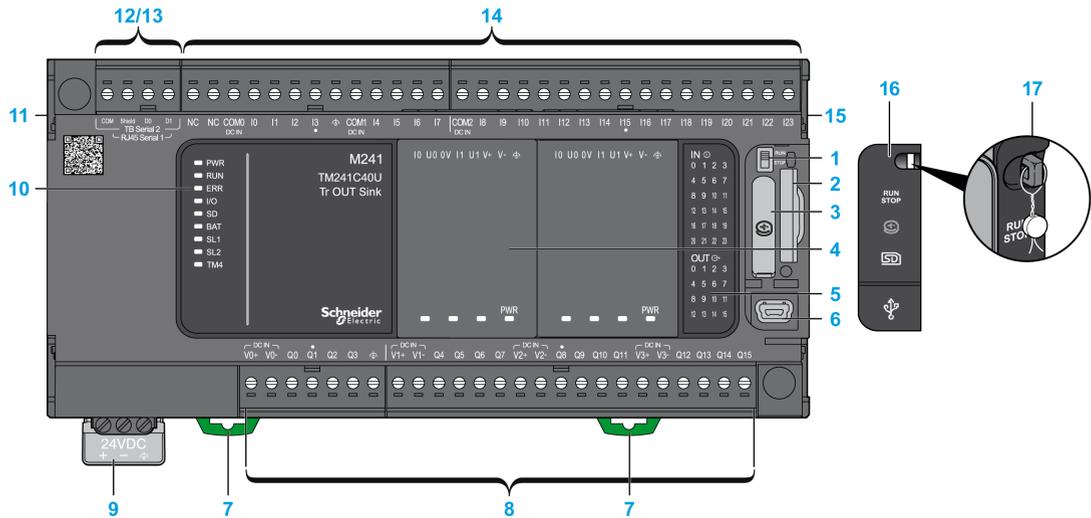

N°	Description	Refer to
1	Run/Stop switch	Run/Stop ( <i>see page 57</i> )
2	SD card slot	SD Card ( <i>see page 59</i> )
3	Battery holder	Real Time Clock (RTC) ( <i>see page 44</i> )
4	Cartridge slot	–
5	LEDs for indicating I/O states	Digital Inputs Status LEDs ( <i>see page 195</i> )
		Transistor Outputs Status LEDs ( <i>see page 209</i> )
		Fast Outputs Status LEDs ( <i>see page 214</i> )
6	USB mini-B programming port / For terminal connection to a programming PC (SoMachine)	USB Mini-B Programming Port ( <i>see page 229</i> )
7	Clip-on lock for 35 mm (1.38 in.) top hat section rail (DIN-rail)	Top Hat Section Rail ( <i>see page 76</i> )
8	Embedded regular transistor outputs	Regular Transistor Outputs ( <i>see page 208</i> )
	Embedded fast transistor outputs	Fast Transistor Outputs ( <i>see page 213</i> )
	Output removable terminal block	Rules for Removable Screw Terminal Block ( <i>see page 85</i> )
9	24 Vdc power supply	DC Power supply Characteristics and Wiring ( <i>see page 90</i> )
10	Status LEDs	–
11	TM4 bus connector	TM4 Expansion Modules ( <i>see page 27</i> )
12	Serial line port 1 / Type RJ45 (RS-232 or RS-485)	Serial Line 1 ( <i>see page 231</i> )
13	Serial line port 2 / Screw terminal block type (RS-485)	Serial Line 2 ( <i>see page 234</i> )
14	Embedded digital inputs	Embedded Digital Inputs ( <i>see page 194</i> )
	Input removable terminal block	Rules for Removable Screw Terminal Block ( <i>see page 85</i> )
15	TM3/TM2 bus connector	TM3 Expansion Modules ( <i>see page 28</i> )
16	Protective cover (SD card slot, Run/Stop switch, and USB mini-B programming port)	–
17	Locking hook (Hook not included)	–

## Status LEDs

The following figure shows the status LEDs:

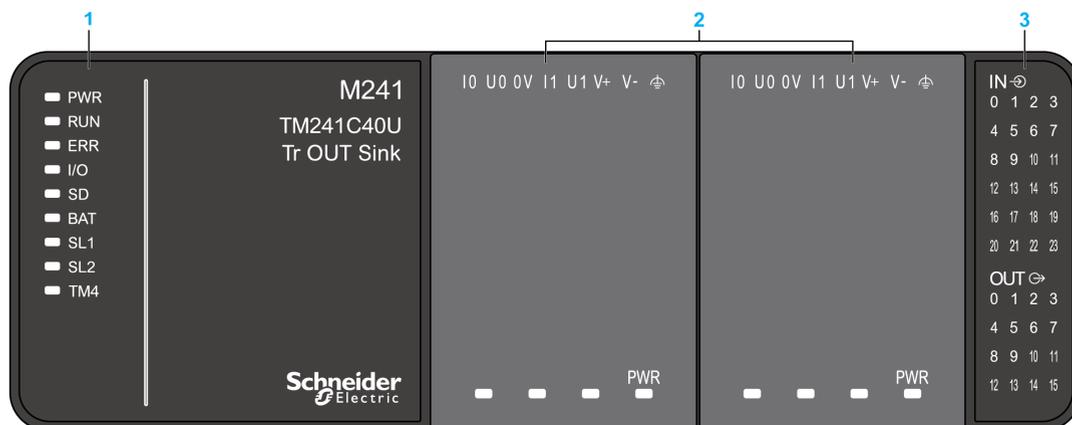

- 1 System status LEDs
- 2 Cartridge status LEDs (optional)
- 3 I/Os status LEDs

The following table describes the system status LEDs:


Label	Function Type	Color	Status	Description		
				Controller States <sup>1</sup>	Prg Port Communication	Application Execution
PWR	Power	Green	On	Indicates that power is applied.		
			Off	Indicates that power is removed.		
RUN	Machine status	Green	On	Indicates that the controller is running a valid application.		
			Flashing	Indicates that the controller has a valid application that is stopped.		
			1 flash	Indicates that the controller has paused at BREAKPOINT.		
			Off	Indicates that the controller is not programmed	-	-

Label	Function Type	Color	Status	Description		
				Controller States <sup>1</sup>	Prg Port Communication	Application Execution
ERR	Error	Red	On	Indicates that an operating system error has been detected.	Restricted	No
			Fast flashing	Indicates that the controller has detected an internal error.	Restricted	No
			Slow flashing	Indicates either that a minor error has been detected, if the RUN LED is illuminated, or that no application has been detected.	Yes	No
I/O	I/O error	Red	On	Indicates device errors on the embedded I/Os, serial line 1 or 2, SD card, cartridge, TM4 bus, TM3 bus.		
SD	SD card access	Green	On	Indicates that the SD card is being accessed		
BAT	Battery	Red	On	Indicates that the battery needs to be replaced.		
			Flashing	Indicates that the battery charge is low.		
SL1	Serial line 1	Green	On	Indicates the status of serial line 1 ( <i>see page 233</i> )		
			Off	Indicates no serial communication		
SL2	Serial line 2	Green	On	Indicates the status of serial line 2 ( <i>see page 235</i> )		
			Off	Indicates no serial communication		
TM4	Error on TM4 bus	Red	On	Indicates that an error has been detected on the TM4 bus		
			Off	Indicates that no error has been detected on the TM4 bus		

<sup>1</sup> For more information about the controller state description, refer to the M241 Logic Controller - Programming Guide.

## Dimensions

The following figure shows the external dimensions of the logic controller:

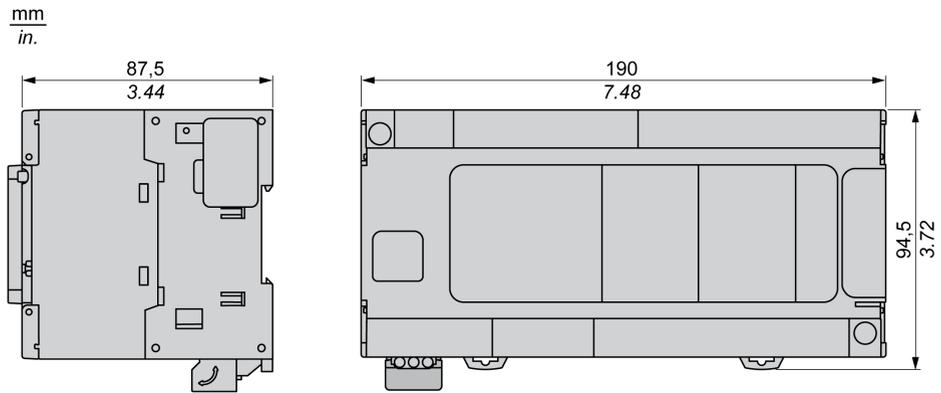



# Chapter 18

## TM241CE40U

### TM241CE40U Presentation


#### Overview

TM241CE40U logic controllers:

- 24 digital inputs
  - 8 fast inputs
  - 16 regular inputs
- 16 digital outputs
  - 4 fast outputs
  - 12 regular outputs
- Communication port
  - 2 serial line ports
  - 1 Ethernet port
  - 1 USB mini-B programming port

#### Description


The following figure shows the different components of the TM241CE40U logic controller:

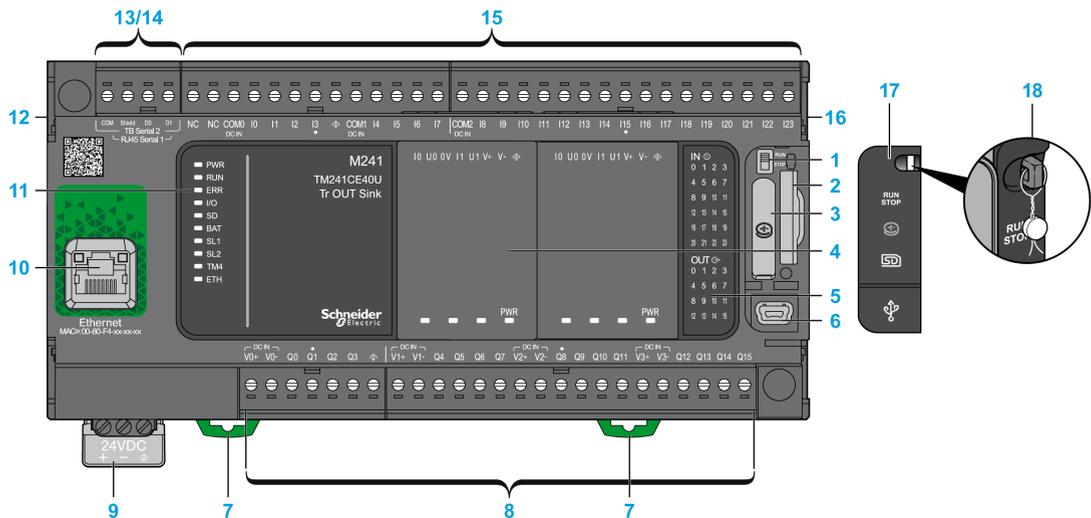

N°	Description	Refer to
1	Run/Stop switch	Run/Stop ( <i>see page 57</i> )
2	SD card slot	SD Card ( <i>see page 59</i> )
3	Battery holder	Real Time Clock (RTC) ( <i>see page 44</i> )
4	Cartridge slot	–
5	LEDs for indicating I/O states	Digital Inputs Status LEDs ( <i>see page 195</i> )
		Transistor Outputs Status LEDs ( <i>see page 209</i> )
		Fast Outputs Status LEDs ( <i>see page 214</i> )
6	USB mini-B programming port / For terminal connection to a programming PC (SoMachine)	USB Mini-B Programming Port ( <i>see page 229</i> )
7	Clip-on lock for 35 mm (1.38 in.) top hat section rail (DIN-rail)	Top Hat Section Rail ( <i>see page 76</i> )
8	Embedded regular transistor outputs	Regular Transistor Outputs ( <i>see page 208</i> )
	Embedded fast transistor outputs	Fast Transistor Outputs ( <i>see page 213</i> )
	Output removable terminal block	Rules for Removable Screw Terminal Block ( <i>see page 85</i> )
9	24 Vdc power supply	DC Power supply Characteristics and Wiring ( <i>see page 90</i> )
10	Ethernet port / Type RJ45 (RS-232 or RS-485)	Ethernet Port ( <i>see page 226</i> )
11	Status LEDs	–
12	TM4 bus connector	TM4 Expansion Modules ( <i>see page 27</i> )
13	Serial line port 1 / Type RJ45 (RS-232 or RS-485)	Serial Line 1 ( <i>see page 231</i> )
14	Serial line port 2 / Screw terminal block type (RS-485)	Serial Line 2 ( <i>see page 234</i> )
15	Embedded digital inputs	Embedded Digital Inputs ( <i>see page 194</i> )
	Input removable terminal block	Rules for Removable Screw Terminal Block ( <i>see page 85</i> )
16	TM3/TM2 bus connector	TM3 Expansion Modules ( <i>see page 28</i> )
17	Protective cover (SD card slot, Run/Stop switch, and USB mini-B programming port)	–
18	Locking hook (Hook not included)	–

### Status LEDs

The following figure shows the status LEDs:

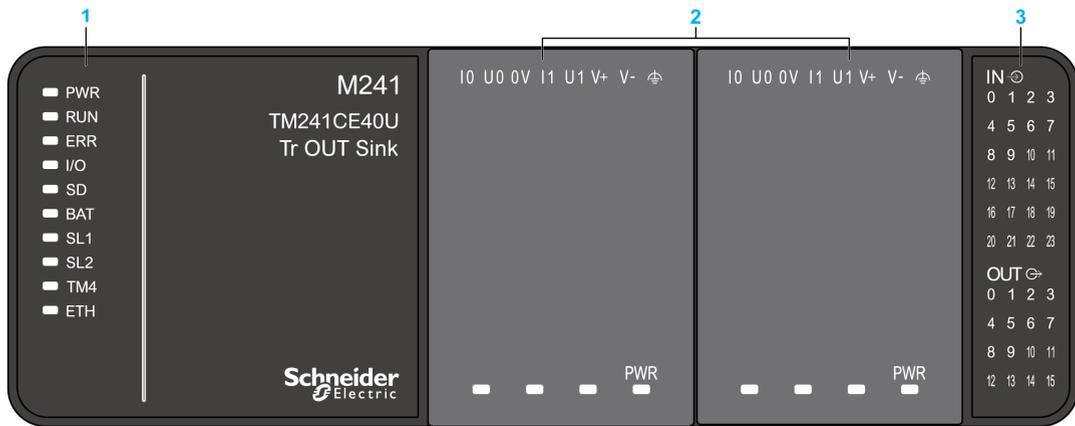

- 1 System status LEDs
- 2 Cartridge status LEDs (optional)
- 3 I/Os status LEDs

The following table describes the system status LEDs:


Label	Function Type	Color	Status	Description		
				Controller States <sup>1</sup>	Prg Port Communication	Application Execution
PWR	Power	Green	On	Indicates that power is applied.		
			Off	Indicates that power is removed.		
RUN	Machine status	Green	On	Indicates that the controller is running a valid application.		
			Flashing	Indicates that the controller has a valid application that is stopped.		
			1 flash	Indicates that the controller has paused at BREAKPOINT.		
			Off	Indicates that the controller is not programmed	-	-

Label	Function Type	Color	Status	Description		
				Controller States <sup>1</sup>	Prg Port Communication	Application Execution
ERR	Error	Red	On	An operating system error has been detected.	Restricted	No
			Fast flashing	The controller has detected an internal error.	Restricted	No
			Slow flashing	Indicates either that a minor error has been detected, if the RUN LED is illuminated, or that no application has been detected.	Yes	No
I/O	I/O error	Red	On	Indicates device errors on the embedded I/Os, serial line 1 or 2, SD card, cartridge, TM4 bus, TM3 bus, or Ethernet port.		
SD	SD card access	Green	On	Indicates that the SD card is being accessed		
BAT	Battery	Red	On	Indicates that the battery needs to be replaced.		
			Flashing	Indicates that the battery charge is low.		
SL1	Serial line 1	Green	On	Indicates the status of serial line 1 ( <i>see page 233</i> )		
			Off	Indicates no serial communication		
SL2	Serial line 2	Green	On	Indicates the status of serial line 2 ( <i>see page 235</i> )		
			Off	Indicates no serial communication		
TM4	Error on TM4 bus	Red	On	Indicates that an error has been detected on the TM4 bus		
			Off	Indicates that no error has been detected on the TM4 bus		
ETH	Ethernet port status	Green	On	Indicates that the ethernet port is connected and the IP address is defined.		
			3 flashes	Indicates that the ethernet port is not connected.		
			4 flashes	Indicates that the IP address is already in used.		
			5 flashes	Indicates that the module is waiting for BOOTP or DHCP sequence.		
			6 flashes	Indicates that the configured IP address is not valid.		

<sup>1</sup> For more information about the controller state description, refer to the M241 Logic Controller - Programming Guide.

## Dimensions

The following figure shows the external dimensions of the logic controller:

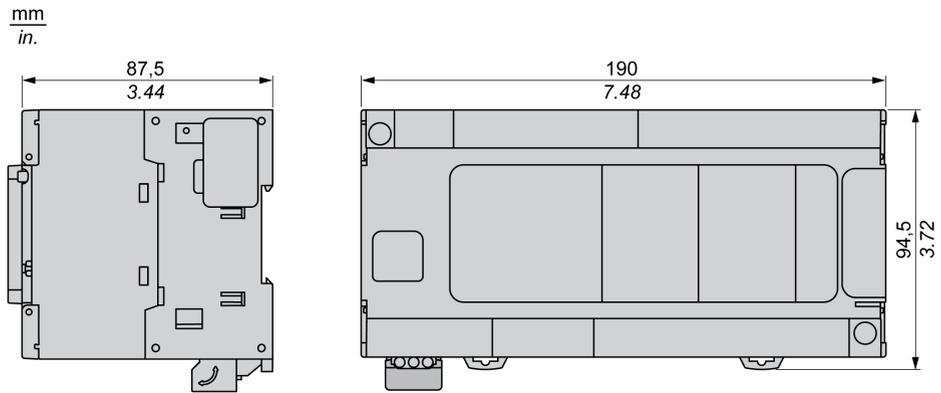



---

# Chapter 19

## Embedded I/O Channels

---

### Overview

This chapter describes the embedded I/O channels.

### What Is in This Chapter?

This chapter contains the following topics:

Topic	Page
Digital Inputs	194
Relay Outputs	202
Regular Transistor Outputs	208
Fast Transistor Outputs	213

## Digital Inputs

### Overview

The Modicon M241 Logic Controller has digital inputs embedded:

Reference	Total number of digital inputs	Fast inputs which can be used as 200 kHz HSC inputs	Total number of regular inputs	Regular inputs which can be used as 1 kHz HSC inputs
TM241C••24R TM241C••24T TM241C••24U	14	8	6	6
TM241C•40R TM241C•40T TM241C•40U	24	8	16	8

For more information, refer to Input Management (*see page 48*).

## DANGER

### FIRE HAZARD

- Use only the correct wire sizes for the current capacity of the I/O channels and power supplies.
- For relay output (2 A) wiring, use conductors of at least 0.5 mm<sup>2</sup> (AWG 20) with a temperature rating of at least 80 °C (176 °F).
- For common conductors of relay output wiring (7 A), or relay output wiring greater than 2 A, use conductors of at least 1.0 mm<sup>2</sup> (AWG 16) with a temperature rating of at least 80 °C (176 °F).

**Failure to follow these instructions will result in death or serious injury.**

## WARNING

### UNINTENDED EQUIPMENT OPERATION

Do not exceed any of the rated values specified in the environmental and electrical characteristics tables.

**Failure to follow these instructions can result in death, serious injury, or equipment damage.**

### Digital Input Status LEDs

The following figure shows the status LEDs for the TM241C••24• controller (the TM241C•40• controllers are similar with 40 LEDs):



LED	Color	Status	Description
0...13	Green	On	The input channel is activated
		Off	The input channel is deactivated

### Regular Input Characteristics

The table below describes the characteristics of the M241 Logic Controller with regular inputs:

Characteristic	Values	
	TM241C••24•	TM241C•40•
Number of regular inputs	6 inputs (I8...I13)	16 inputs (I8...I23)
Number of channel groups	1 common line for I8...I13	1 common line for I8...I23
Input type	Type 1 (IEC 61131-2 Edition 3)	
Logic type	Sink/Source	
Input voltage range	24 Vdc	
Rated input voltage	0...28.8 Vdc	
Rated input current	5 mA	7 mA
Input impedance	4.7 kΩ	
Input limit values	Voltage at state 1	> 15 Vdc (15...28.8 Vdc)
	Voltage at state 0	< 5 Vdc (0...5 Vdc)
	Current at state 1	> 2.5 mA
	Current at state 0	< 1.0 mA
Derating	No derating	
<sup>1</sup> For more information, refer to Integrator Filter Principle ( <a href="#">see page 49</a> )		

Characteristic		Values	
		TM241C••24•	TM241C•40•
Turn on time		50 µs + filter value <sup>1</sup>	
Turn off time		50 µs + filter value <sup>1</sup>	
Isolation	Between input and internal logic	500 Vac	
	Between input terminals	Not Isolated	
Connection type		Removable screw terminal block	
Connector insertion/removal durability		Over 100 times	
Cable	Type	Unshielded	
	Length	Maximum 50 m (164 ft)	
<sup>1</sup> For more information, refer to Integrator Filter Principle ( <a href="#">see page 49</a> )			

### Fast Input Characteristics

The table below describes the characteristics of the M241 Logic Controller with fast inputs:

Characteristic		Value
Number of fast transistor inputs		8 inputs (I0...I7)
Number of channel groups		1 common line for I0...I3 1 common line for I4...I7
Input type		Type 1 (IEC 61131-2 Edition 3)
Logic type		Sink/Source
Rated input voltage		24 Vdc
Input voltage range		0...28.8 Vdc
Rated input current		10.7 mA
Input impedance		2.81 kΩ
Input limit values	Voltage at state 1	> 15 Vdc (15...28.8 Vdc)
	Voltage at state 0	< 5 Vdc (0...5 Vdc)
	Current at state 1	> 5 mA
	Current at state 0	< 1.5 mA
Derating		No derating
Turn on time		2 µs + filter value <sup>1</sup>
Turn off time		2 µs + filter value <sup>1</sup>
HSC maximum frequency	A/B phase	100 kHz
	Pulse/Direction	200 kHz
	Single phase	200 kHz
<sup>1</sup> For more information, refer to Integrator Filter Principle ( <a href="#">see page 49</a> )		


Characteristic		Value
HSC supported operation mode		<ul style="list-style-type: none"> <li>• A/B phase counter</li> <li>• Pulse/Direction counter</li> <li>• Single/Dual phase counter</li> </ul>
Isolation	Between input and internal logic	500 Vac
	Between input terminals	Not isolated
Connection type		Removable screw terminal block
Connector insertion/removal durability		Over 100 times
Cable	Type	Shielded, including the 24 Vdc power supply
	Length	Maximum 10 m (32.8 ft)
<p><sup>1</sup> For more information, refer to Integrator Filter Principle (<a href="#">see page 49</a>)</p>		

### Removing Terminal Block

Refer to Removing Terminal Block ([see page 86](#)).

### TM241C••24R Wiring Diagrams


The following figure shows the sink wiring (positive logic) of the controller digital inputs:

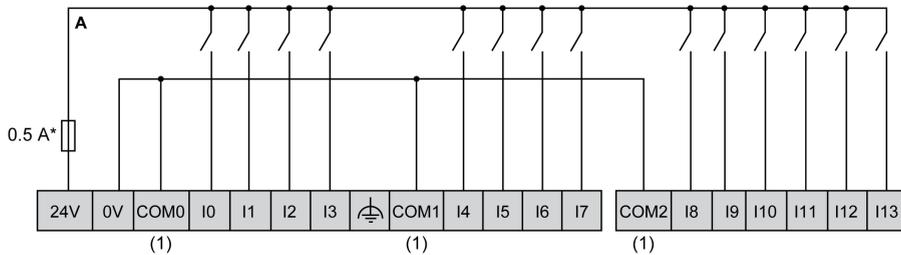

\* Type T fuse

(1) The COM0, COM1 and COM2 terminals are **not** connected internally.


The following figure shows the source wiring (negative logic) of the controller digital inputs:

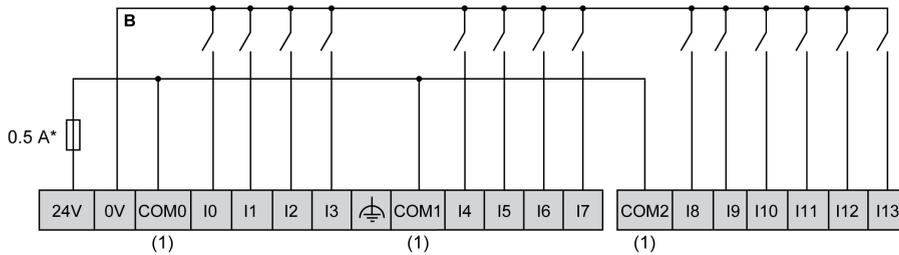

\* Type T fuse


(1) The COM0, COM1 and COM2 terminals are **not** connected internally.

Fast input wiring for I0... I7:



### TM241C•40R Wiring Diagrams


The following figure shows the sink wiring (positive logic) of the controller digital inputs:

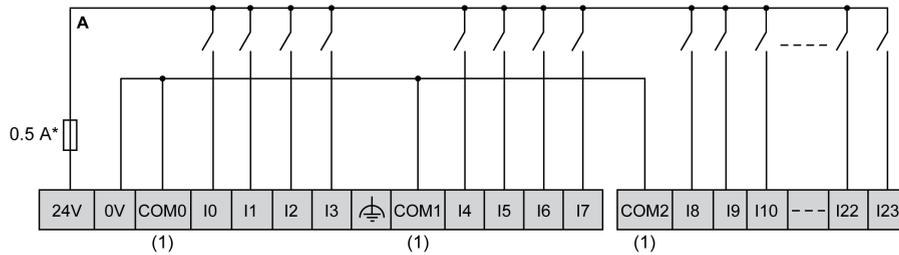

\* Type T fuse

(1) The COM0, COM1 and COM2 terminals are **not** connected internally.


The following figure shows the source wiring (negative logic) of the controller digital inputs:

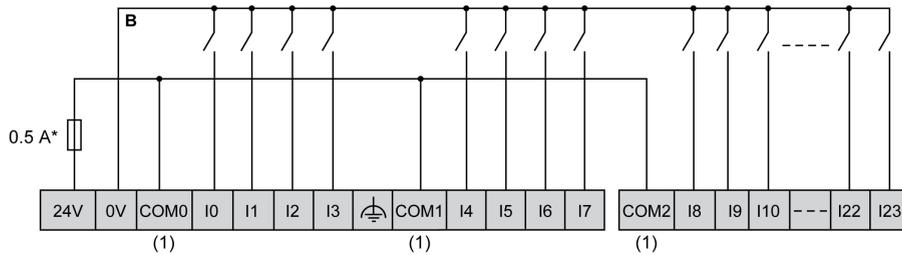

\* Type T fuse



(1) The COM0, COM1 and COM2 terminals are **not** connected internally.

Fast input wiring for I0... I7:



### TM241C••24T / TM241C••24U Wiring Diagrams

The following figure shows the connection of the controller digital inputs:

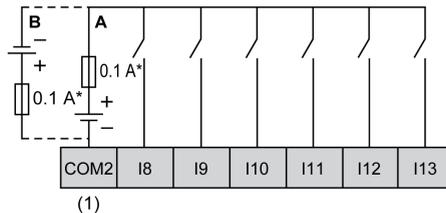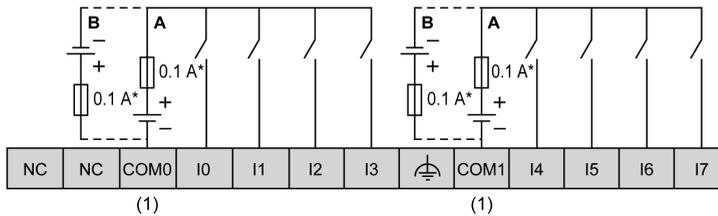


\* Type T fuse

(1) The COM0, COM1 and COM2 terminals are **not** connected internally.

**A** Sink wiring (positive logic).

**B** Source wiring (negative logic).

Fast input wiring for I0... I7:





## ⚠ WARNING

### UNINTENDED EQUIPMENT OPERATION

Do not connect wires to unused terminals and/or terminals indicated as “No Connection (N.C.)”.  
**Failure to follow these instructions can result in death, serious injury, or equipment damage.**


### TM241C•40T / TM241C•40U Wiring Diagrams

The following figure shows the connection of the controller digital inputs:

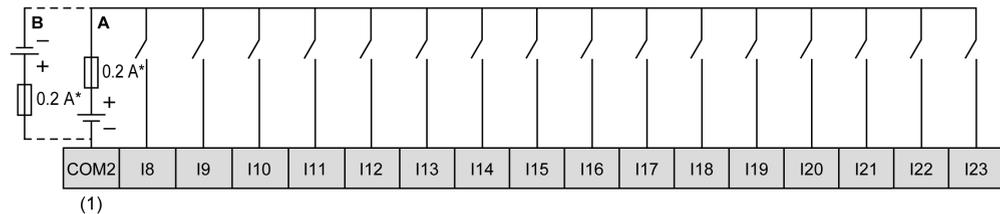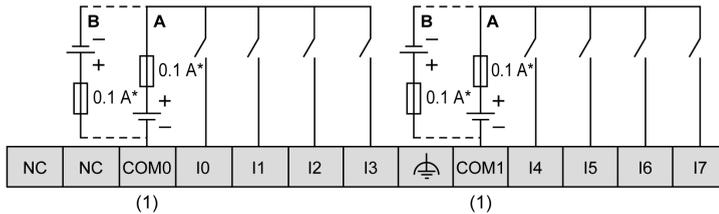

- \* Type T fuse
- (1) The COM0, COM1 and COM2 terminals are **not** connected internally.
- A** Sink wiring (positive logic).
- B** Source wiring (negative logic).

Fast input wiring for I0... I7:



## WARNING

### UNINTENDED EQUIPMENT OPERATION

Do not connect wires to unused terminals and/or terminals indicated as “No Connection (N.C.)”.

**Failure to follow these instructions can result in death, serious injury, or equipment damage.**

## Relay Outputs

### Overview

The Modicon M241 Logic Controller has digital outputs embedded:

Reference	Total number of digital outputs	Fast transistor outputs ( <i>see page 214</i> ) <sup>(1)</sup>	Relay outputs ( <i>see page 203</i> )	Regular transistor outputs ( <i>see page 209</i> )
TM241C••24R	10	4	6	0
TM241C••24T TM241C••24U	10	4	0	6
TM241C•40R	16	4	12	0
TM241C•40T TM241C•40U	16	4	0	12

(1) Fast transistor outputs which can be used as 100 kHz PTO outputs

For more information, refer to Output Management (*see page 52*).

## DANGER

### FIRE HAZARD

- Use only the correct wire sizes for the current capacity of the I/O channels and power supplies.
- For relay output (2 A) wiring, use conductors of at least 0.5 mm<sup>2</sup> (AWG 20) with a temperature rating of at least 80 °C (176 °F).
- For common conductors of relay output wiring (7 A), or relay output wiring greater than 2 A, use conductors of at least 1.0 mm<sup>2</sup> (AWG 16) with a temperature rating of at least 80 °C (176 °F).

**Failure to follow these instructions will result in death or serious injury.**

## WARNING

### UNINTENDED EQUIPMENT OPERATION

Do not exceed any of the rated values specified in the environmental and electrical characteristics tables.

**Failure to follow these instructions can result in death, serious injury, or equipment damage.**

### Relay Outputs Status LEDs

The following figure shows the status LEDs for the TM241C••24• controller (the TM241C•40• controllers are similar with 40 LEDs):



LED	Color	Status	Description
0...9	Green	On	The output channel is activated
		Off	The output channel is deactivated

### Relay Outputs Characteristics

The following table describes the characteristics of the M241 Logic Controller relay outputs:

Characteristic	Value	
	TM241C••24R	TM241C•40R
Number of relay output channels	6 outputs (Q4...Q9)	12 outputs (Q4...Q15)
Number of channel groups	1 common line for Q4, Q5 1 common line for Q6, Q7 1 line for Q8 1 line for Q9	1 common line for Q4...Q7 1 common line for Q8, Q9 1 common line for Q10, Q11 1 common line for Q12, Q13 1 line for Q14 1 line for Q15
Output type	Relay	
Contact type	NO (Normally Open)	
Rated output voltage	24 Vdc, 240 Vac	
Maximum voltage	30 Vdc, 264 Vac	
<ol style="list-style-type: none"> <li>1 Refer to Protecting Outputs from Inductive Load Damage (<a href="#">see page 87</a>) for additional information concerning output protection.</li> <li>2 When Q4, Q5, Q6 and Q7 are on the same common line (max output current 4 A), those 4 outputs used simultaneously have a derating of 50%.</li> <li>3 Outputs Q4 and Q6 used as PTO/PWM/FG can result in a premature wear of those relay outputs.</li> </ol>		

Characteristic		Value	
		TM241C••24R	TM241C•40R
Minimum switching load		5 Vdc at 10 mA	
Derating		No derating	Derating on Q4...Q7, refer to the note 2.
Rated output current		2 A	
Maximum output current		2 A per output	
		4 A per common	
Maximum output frequency with maximum load		20 operations per minute	
Turn on time		Max. 10 ms	
Turn off time		Max. 10 ms	
Contact resistance		30 mΩ max	
Mechanical life		20 million operations	
Electrical life	Under resistive load	See power limitation	
	Under inductive load		
Protection against short circuit		No	
Isolation	Between output and internal logic	500 Vac	
	Between channel groups	1500 Vac	
Connection type		Removable screw terminal blocks	
Connector insertion/removal durability		Over 100 times	
Cable	Type	Unshielded	
	Length	Max. 30 m (98 ft)	
<p>1 Refer to Protecting Outputs from Inductive Load Damage (<i>see page 87</i>) for additional information concerning output protection.</p> <p>2 When Q4, Q5, Q6 and Q7 are on the same common line (max output current 4 A), those 4 outputs used simultaneously have a derating of 50%.</p> <p>3 Outputs Q4 and Q6 used as PTO/PWM/FG can result in a premature wear of those relay outputs.</p>			

### Power Limitation

The following table describes the power limitation of the relay outputs depending on the voltage, the type of load, and the number of operations required.

These controllers do not support capacitive loads.

<b> WARNING</b>
<b>RELAY OUTPUTS WELDED CLOSED</b>
<ul style="list-style-type: none"> <li>● Always protect relay outputs from inductive alternating current load damage using an appropriate external protective circuit or device.</li> <li>● Do not connect relay outputs to capacitive loads.</li> </ul>
<b>Failure to follow these instructions can result in death, serious injury, or equipment damage.</b>


Power Limitations				
Voltage	24 Vdc	120 Vac	240 Vac	Number of operations
Power of resistive loads AC-12	–	240 VA 80 VA	480 VA 160 VA	100,000 300,000
Power of inductive loads AC-15 (cos $\phi$ = 0.35)	–	60 VA 18 VA	120 VA 36 VA	100,000 300,000
Power of inductive loads AC-14 (cos $\phi$ = 0.7)	–	120 VA 36 VA	240 VA 72 VA	100,000 300,000
Power of resistive loads DC-12	48 W 16 W	–	–	100,000 300,000
Power of inductive loads DC-13 L/R = 7 ms	24 W 7.2 W	–	–	100,000 300,000

### Removing Terminal Block

Refer to Removing Terminal Block ([see page 86](#)).

### TM241C••24R Relay Outputs Wiring Diagrams

The following figure shows the wiring of the outputs:

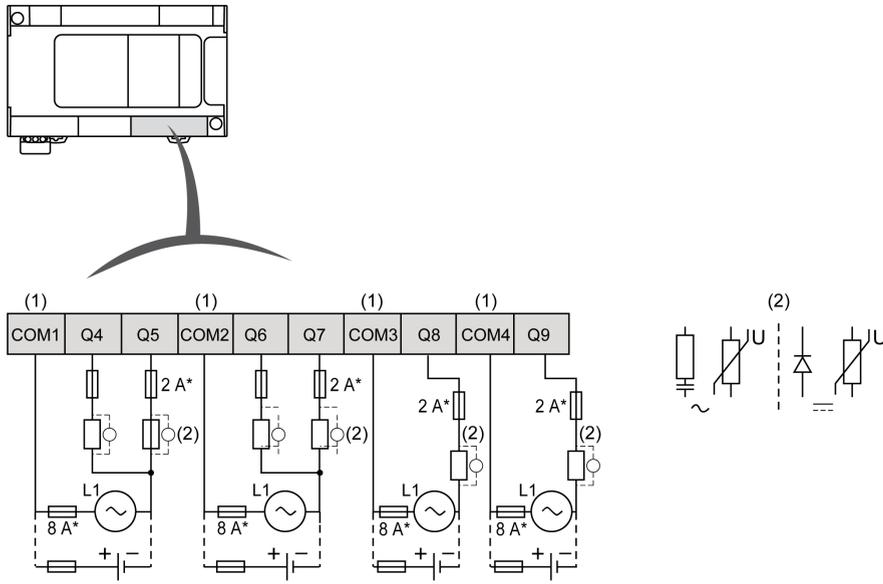

\* Type T fuse


- (1) The terminals COM1 to COM4 are **not** connected internally.
- (2) To improve the life time of the contacts, and to protect from potential inductive load damage, you must connect a free wheeling diode in parallel to each inductive DC load or an RC snubber in parallel of each inductive AC load

Refer to Protecting Outputs from Inductive Load Damage (*see page 87*) for additional information concerning output protection.

**NOTE:** The assigned fuse values have been specified for the maximum current characteristics of the controller I/O and associated commons. You may have other considerations that are applicable based on the unique types of input and output devices you connect, and you should size your fuses accordingly.

**TM241C•40R Relay Outputs Wiring Diagrams**

The following figure shows the wiring of the outputs:

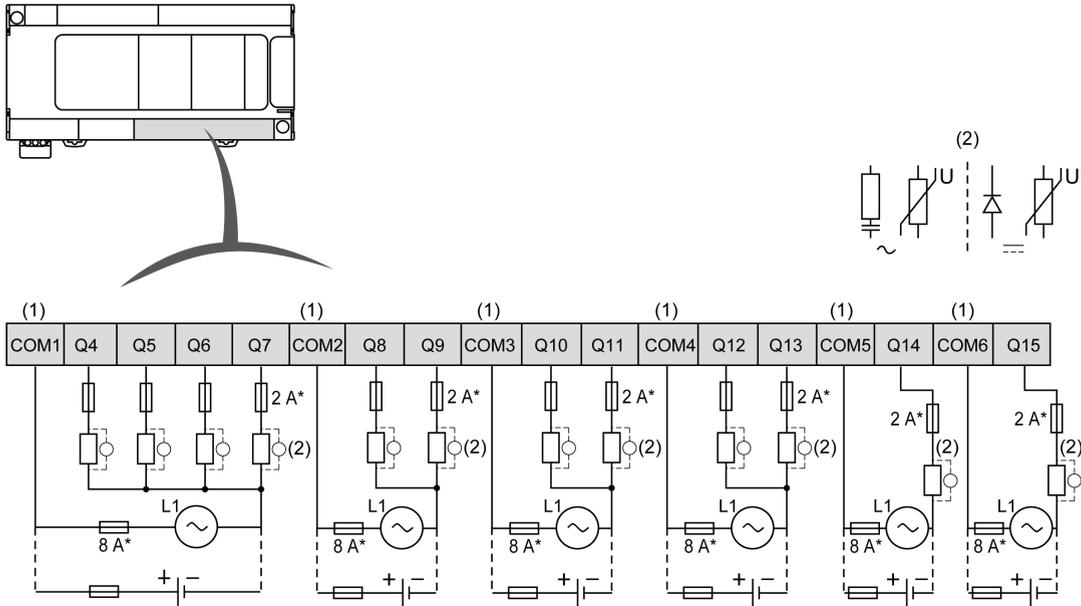

- \* Type T fuse
- (1) The terminals COM1 to COM6 are **not** connected internally.
- (2) To improve the life time of the contacts, and to protect from potential inductive load damage, you must connect a free wheeling diode in parallel to each inductive DC load or an RC snubber in parallel of each inductive AC load

Refer to Protecting Outputs from Inductive Load Damage ([see page 87](#)) for additional information concerning output protection.

**NOTE:** The assigned fuse values have been specified for the maximum current characteristics of the controller I/O and associated commons. You may have other considerations that are applicable based on the unique types of input and output devices you connect, and you should size your fuses accordingly.

## Regular Transistor Outputs

### Overview

The Modicon M241 Logic Controller has digital outputs embedded:

Reference	Total number of digital outputs	Fast transistor outputs ( <i>see page 214</i> ) <sup>(1)</sup>	Relay outputs ( <i>see page 203</i> )	Regular transistor outputs ( <i>see page 209</i> )
TM241C••24R	10	4	6	0
TM241C••24T TM241C••24U	10	4	0	6
TM241C•40R	16	4	12	0
TM241C•40T TM241C•40U	16	4	0	12

(1) Fast transistor outputs which can be used as 100 kHz PTO outputs

For more information, refer to Output Management (*see page 52*).

## DANGER

### FIRE HAZARD

- Use only the correct wire sizes for the current capacity of the I/O channels and power supplies.
- For relay output (2 A) wiring, use conductors of at least 0.5 mm<sup>2</sup> (AWG 20) with a temperature rating of at least 80 °C (176 °F).
- For common conductors of relay output wiring (7 A), or relay output wiring greater than 2 A, use conductors of at least 1.0 mm<sup>2</sup> (AWG 16) with a temperature rating of at least 80 °C (176 °F).

**Failure to follow these instructions will result in death or serious injury.**

## WARNING

### UNINTENDED EQUIPMENT OPERATION

Do not exceed any of the rated values specified in the environmental and electrical characteristics tables.

**Failure to follow these instructions can result in death, serious injury, or equipment damage.**

### Regular Transistor Outputs Status LEDs

The following figure shows the status LEDs for the TM241C••24• controller (the TM241C•40• controllers are similar with 40 LEDs):



LED	Color	Status	Description
0...9	Green	On	The output channel is activated
		Off	The output channel is deactivated

### Regular Transistor Outputs Characteristics

The following table describes the characteristics of the M241 Logic Controller regular transistor outputs:

Characteristic	TM241C••24T	TM241C••24U	TM241C•40T	TM241C•40U
Number of regular transistor outputs	6 outputs (Q4...Q9)		12 outputs (Q4...Q15)	
Number of channel groups	1 common line for Q4...Q7 common line for Q8, Q9		1 common line for Q4...Q7 common line for Q8...Q11 common line for Q12...Q15	
Output type	Transistor			
Logic type	Source	Sink	Source	Sink
Rated output voltage	24 Vdc			
Output voltage range	19.2...28.8 Vdc			
Rated output current	0.5 A			
Total output current per group	0.5A x number of outputs of the group			
Voltage drop	1 Vdc max			
Leakage current when switched off	< 5 µA			
Maximum power of filament lamp	2.4 W max			
Derating	No derating			


Characteristic		TM241C••24T	TM241C••24U	TM241C•40T	TM241C•40U
Turn on time		Max. 34 $\mu$ s			
Turn off time		Max. 250 $\mu$ s			
Protection against short circuit		Yes			
Short circuit output peak current		1.3 A			
Automatic rearming after short circuit or overload		Yes, every 10 ms			
Clamping voltage		Max. 39 Vdc +/- 1 Vdc			
Maximum output frequency		1 kHz			
Isolation	Between output and internal logic	500 Vac			
	Between output terminals	Not isolated			
Connection type		Removable screw terminal block			
Connector insertion/removal durability		Over 100 times			
Cable	Type	Unshielded			
	Length	Max 50 m (164 ft)			

### Removing Terminal Block

Refer to Removing Terminal Block (*see page 86*).

### TM241C••24T Regular Transistor Outputs Source Wiring Diagram

The following figure shows the source wiring (positive logic) of the outputs:

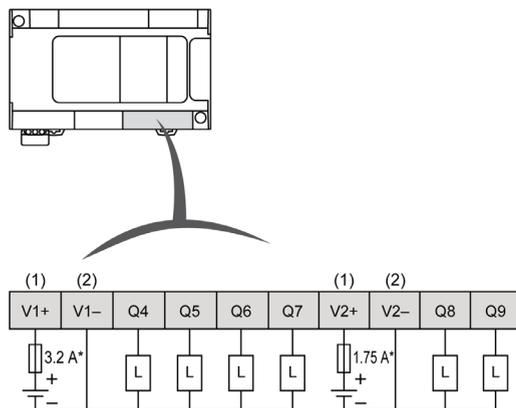


\* Type T fuse

- (1) The V1+ and V2+ terminals are **not** connected internally.
- (2) The V1- and V2- terminals are **not** connected internally.

### TM241C•40T Regular Transistor Outputs Source Wiring Diagram


The following figure shows the source wiring (positive logic) of the outputs:

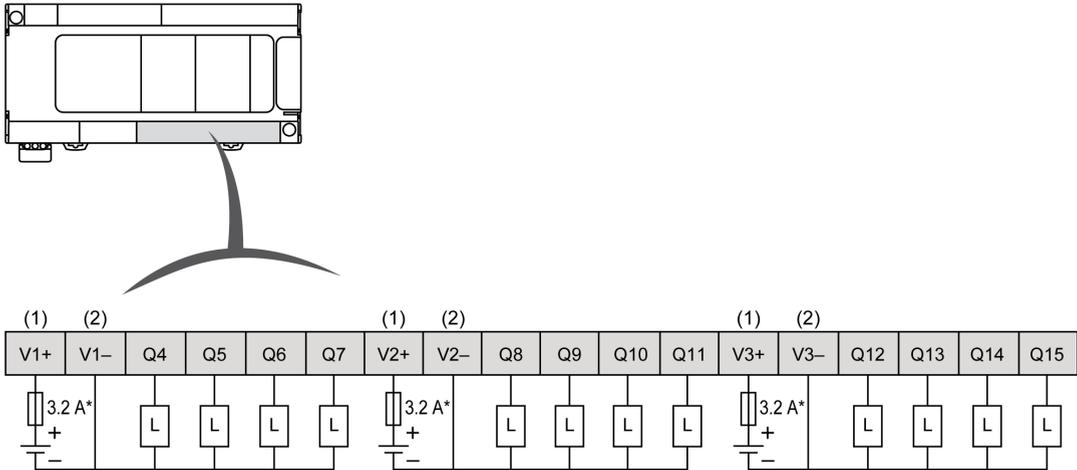

- \* Type T fuse
- (1) The V1+, V2+ and V3+ terminals are **not** connected internally.
- (2) The V1-, V2- and V3- terminals are **not** connected internally.

### TM241C••24U Regular Transistor Outputs Sink Wiring Diagrams


The following figure shows the sink wiring (negative logic) of the outputs:

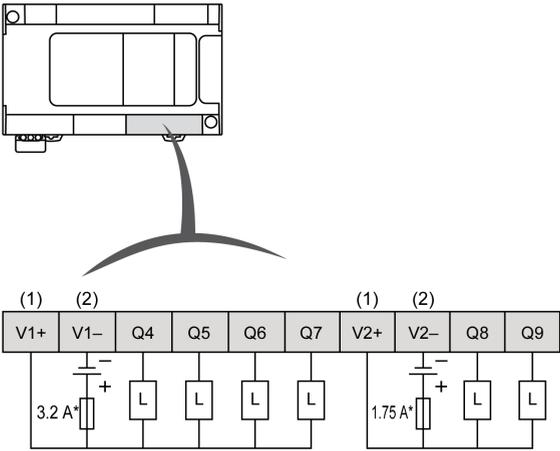

- \* Type T fuse
- (1) The V1+ and V2+ terminals are **not** connected internally.
- (2) The V1- and V2- terminals are **not** connected internally.

### TM241C•40U Regular Transistor Outputs Sink Wiring Diagrams

The following figure shows the sink wiring (negative logic) of the outputs:

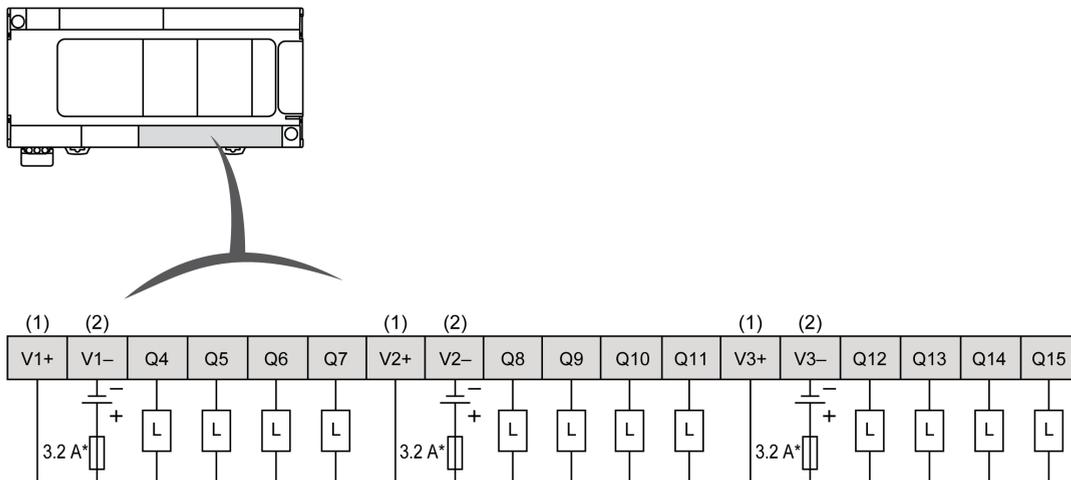

- \* Type T fuse
- (1) The V1+, V2+ and V3+ terminals are **not** connected internally.
- (2) The V1-, V2- and V3- terminals are **not** connected internally.

## Fast Transistor Outputs

### Overview

The Modicon M241 Logic Controller has digital outputs embedded:

Reference	Total number of digital outputs	Fast transistor outputs ( <i>see page 214</i> ) <sup>(1)</sup>	Relay outputs ( <i>see page 203</i> )	Regular transistor outputs ( <i>see page 209</i> )
TM241C••24R	10	4	6	0
TM241C••24T TM241C••24U	10	4	0	6
TM241C•40R	16	4	12	0
TM241C•40T TM241C•40U	16	4	0	12

(1) Fast transistor outputs which can be used as 100 kHz PTO outputs

For more information, refer to Output Management (*see page 52*).

## DANGER

### FIRE HAZARD

- Use only the correct wire sizes for the current capacity of the I/O channels and power supplies.
- For relay output (2 A) wiring, use conductors of at least 0.5 mm<sup>2</sup> (AWG 20) with a temperature rating of at least 80 °C (176 °F).
- For common conductors of relay output wiring (7 A), or relay output wiring greater than 2 A, use conductors of at least 1.0 mm<sup>2</sup> (AWG 16) with a temperature rating of at least 80 °C (176 °F).

**Failure to follow these instructions will result in death or serious injury.**

## WARNING

### UNINTENDED EQUIPMENT OPERATION

Do not exceed any of the rated values specified in the environmental and electrical characteristics tables.

**Failure to follow these instructions can result in death, serious injury, or equipment damage.**

### Fast Transistor Outputs Status LEDs

The following figure shows the status LEDs for the TM241C••24• controller (the TM241C•40• controllers are similar with 40 LEDs):



LED	Color	Status	Description
0...9	Green	On	The output channel is activated
		Off	The output channel is deactivated

### Fast Transistor Outputs Characteristics

The following table describes the characteristics of the M241 Logic Controller fast transistor outputs:

Characteristic	Value		
	TM241C••R	TM241C••T	TM241C••U
Number of fast transistor outputs	4 outputs (TR0...TR3)	4 outputs (Q0...Q3)	
Number of channel groups	1 common line for TR0...TR3	1 common line for Q0...Q3	
Output type	Transistor		
Logic type	Source	Source	Sink
Rated output voltage	24 Vdc		
Output voltage range	19.2...28.8 Vdc		
Rated output current	0.1 A when configured for a fast function		
	0.5 A when used as a regular output		
Leakage current	Source	≤ 0.3 mA	
	Sink	≤ 2 mA	
Total output current per group	2 A		


Characteristic		Value		
		TM241C...R	TM241C...T	TM241C...U
Maximum power of filament lamp		2.4 W max		
Derating		No Derating		
Turn on time		Max. 2 $\mu$ s		
Turn off time		Max. 2 $\mu$ s		
Protection against short circuit		Yes		
Short circuit output peak current		1.3 A max.		
Automatic rearming after short circuit or overload		Yes, 12 s		
Protection against reverse polarity		Yes		
Clamping voltage		Typically 39 Vdc +/- 1 Vdc		
Maximum output frequency	PTO	100 kHz		
	PWM	20 kHz		
PWM mode duty rate step		0.1% at 20...1 kHz		
Duty rate range		1...99 %		
Isolation	Between output and internal logic	500 Vac		
	Between channel groups	500 Vac		
Connection type		Removable screw terminal block		
Connector insertion/removal durability		Over 100 times		
Cable	Type	Shielded, including 24 Vdc power supply		
	Length	Maximum 3 m (9.84 ft)		

### Removing Terminal Block

Refer to Removing Terminal Block (*see page 86*).


### TM241C••24R / TM241C•40R Fast Transistor Outputs Wiring Diagrams

The following figure shows the connection of the fast transistor outputs:

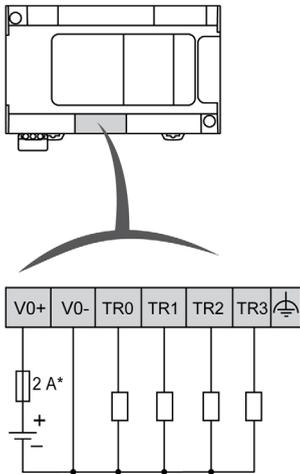


\* 2 A fast-blow fuse

Fast output wiring for TR0... TR3:

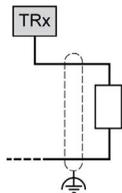


### TM241C...T Fast Transistor Outputs Wiring Diagrams

The following figure shows the connection of the fast transistor outputs:

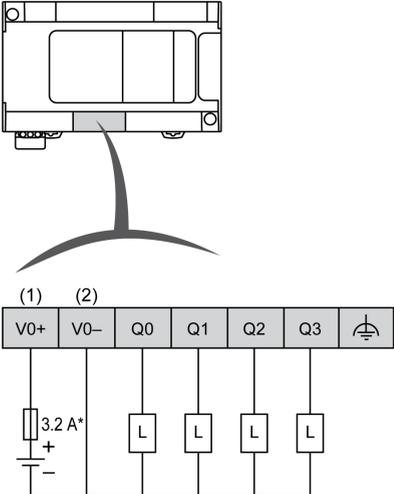


- \* Type T fuse
- (1) The V0+, V1+, V2+ and V3+ terminals are **not** connected internally.
- (2) The V0-, V1-, V2- and V3- terminals are **not** connected internally.

Fast output wiring for Q0... Q3:



### TM241C...U Fast Transistor Outputs Wiring Diagrams


The following figure shows the connection of the fast transistor outputs:

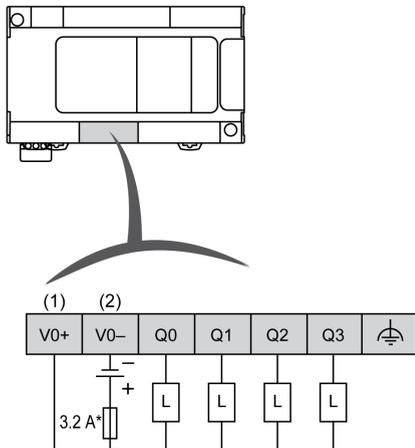

\* Type T fuse

- (1) The V0+, V1+, V2+ and V3+ terminals are **not** connected internally.
- (2) The V0-, V1-, V2- and V3- terminals are **not** connected internally.

Fast output wiring for Q0... Q3:

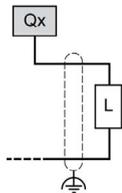

---

# Part III

## Modicon M241 Logic Controller Communication

---

### What Is in This Part?

This part contains the following chapters:

Chapter	Chapter Name	Page
20	Integrated Communication Ports	221
21	Connecting the M241 Logic Controller to a PC	237



---

# Chapter 20

## Integrated Communication Ports

---

### What Is in This Chapter?

This chapter contains the following topics:

Topic	Page
CAN Port	222
Ethernet Port	226
USB Mini-B Programming Port	229
Serial Line 1	231
Serial Line 2	234

## CAN Port

### CANopen Capabilities

The Modicon M241 Logic Controller CANopen master has the following features:

Feature	Description
Maximum number of slaves on the bus	63 CANopen slave devices
Maximum length of CANopen fieldbus cables	According to the CAN specification (see Transmission Speed and Cable Length ( <i>see page 225</i> )).
Maximum number of PDOs managed by the master	252 TPDOs + 252 RPDOs

For each additional CANopen slave:

- the application size increases by an average of 10 kbytes, which conceivably could result in exceeding memory limits.
- the configuration initialization time at the startup increases, which conceivably could result in watchdog timeout.

Although SoMachine does not restrict you from doing so, do not exceed more than 63 CANopen slave modules (and/or 252 TPDOs and 252 RPDOs) in order to have a sufficient performance tolerance and avoid any performance degradation.

### WARNING

#### UNINTENDED EQUIPMENT OPERATION

Do not connect more than 63 CANopen slave devices to the controller to avoid system overload watchdog condition.

**Failure to follow these instructions can result in death, serious injury, or equipment damage.**

### *NOTICE*

#### DEGRADATION OF PERFORMANCE

Do not exceed more than 252 TPDOs and 252 RPDOs for the Modicon M241 Logic Controller.

**Failure to follow these instructions can result in equipment damage.**

## J1939 Capabilities

**NOTE:** J1939 capabilities are available with the J1939 Add-on for SoMachine 4.3.

The Modicon M241 Logic Controller J1939 master has the following features:

Feature	Description
Maximum number of ECUs (slaves) on the bus	Limited only by the address range of 0...253 for Electronic Control Units (ECUs).
Maximum length of J1939 fieldbus cables	According to the CAN specification (see Transmission Speed and Cable Length <i>(see page 225)</i> ). For J1939, the CAN bus must be configured to run at 250 Kbps.
Maximum number of PGNs managed by the master	Given implicitly by the maximum number of input bits (%I) and output bits (%Q) available on the Modicon M241 Logic Controller: 4096 input bits and 4096 output bits. This results in a maximum of 512 single-packet PGNs (most PGNs are single-packet, containing 8 bytes of data).

For each additional ECU with approximately 10 configured (single frame) Parameter Group Numbers (PGNs):

- the application size increases by an average of 15 Kbytes. This figure includes the memory consumed by implicitly-generated variables for configured Suspected Parameter Numbers (SPNs). This application size increase could result in exceeding memory limits.
- the number of input bits (%I) used on the logic controller increases in proportion to the number and size of PGNs configured as "TX Signals" in a non-local ECU or "RX Signals" in a local ECU.
- the number of output bits (%Q) used on the logic controller increases in proportion to the number and size of PGNs configured as "TX Signals" in a local ECU.


**NOTE:** Thoroughly test your application regarding the number of configured J1939 ECUs connected to the controller, and the number of PGNs configured on each ECU, to avoid a system overload watchdog condition or performance degradation.

For more information, refer to J1939 Interface Configuration (*see Modicon M241 Logic Controller, Programming Guide*).

## Removing Terminal Block

Refer to Removing Terminal Block (*see page 86*).

### CAN Wiring Diagram

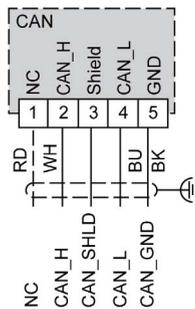

Pin	Signal	Description	Marking	Color of Cable
1	Not used	Reserved	NC	RD: red
2	CAN_H	CAN_L bus line (dominant low)	CAN_H	WH: white
3	CAN_SHLD	Optional CAN shield	Shield	-
4	CAN_L	CAN_L bus line (dominant low)	CAN_L	BU: blue
5	CAN_GND	CAN Ground	GND	BK: black

## WARNING

### UNINTENDED EQUIPMENT OPERATION

Do not connect wires to unused terminals and/or terminals indicated as “No Connection (N.C.)”.  
**Failure to follow these instructions can result in death, serious injury, or equipment damage.**

### Transmission Speed and Cable Length

Transmission speed is limited by the bus length and the type of cable used.

The following table describes the relationship between the maximum transmission speed and the bus length (on a single CAN segment without a repeater):

Maximum transmission baud rate	Bus length
1000 Kbps	20 m (65 ft)
800 Kbps	40 m (131 ft)
500 Kbps	100 m (328 ft)
250 Kbps	250 m (820 ft)
125 Kbps	500 m (1,640 ft)
50 Kbps	1000 m (3280 ft)
20 Kbps	2500 m (16,400 ft)


**NOTE:** The CAN cable must be shielded.

## Ethernet Port

### Overview

The TM241CE... are equipped with an Ethernet communications port.

The following figure shows the location of the Ethernet port on the controller:

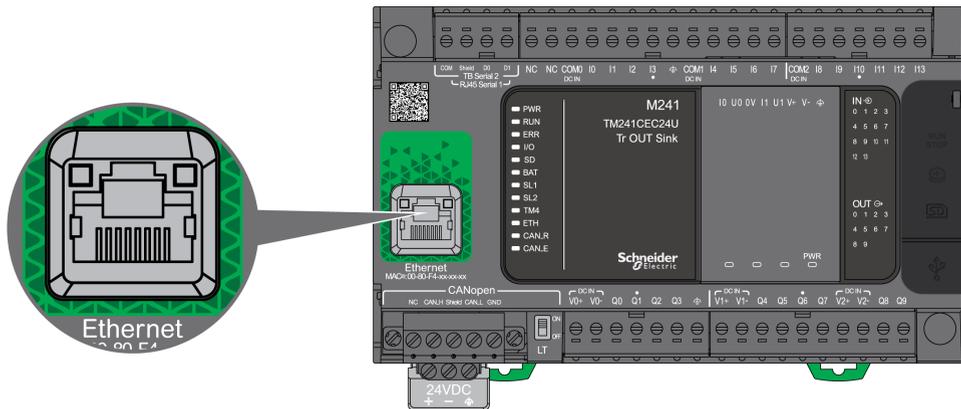


### Characteristics

The following table describes the Ethernet characteristics:

Characteristic	Description
Function	Modbus TCP/IP
Connector type	RJ45
Auto negotiation	from 10 M half duplex to 100 M full duplex
Cable type	Shielded
Automatic cross-over detection	Yes

## Pin Assignment

The following figure shows the RJ45 Ethernet connector pin assignment:

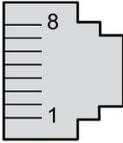

The following table describes the RJ45 Ethernet connector pins:


Pin N°	Signal
1	TD+
2	TD-
3	RD+
4	-
5	-
6	RD-
7	-
8	-

**NOTE:** The controller supports the MDI/MDIX auto-crossover cable function. It is not necessary to use special Ethernet crossover cables to connect devices directly to this port (connections without an Ethernet hub or switch).

**NOTE:** Ethernet cable disconnection is detected every second. In case of disconnection of a short duration (< 1 second), the network status may not indicate the disconnection.

### Status LED

The following figure shows the RJ45 connector status LED:

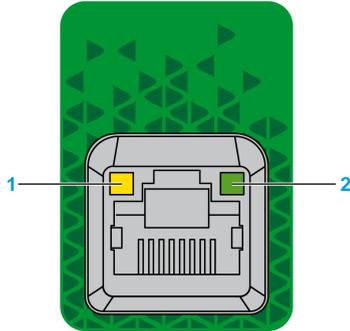

The following table describes the Ethernet status LED:

Label	Description	LED		
		Color	Status	Description
1	Ethernet Link	Green/Yellow	Off	No link
			Solid yellow	Link at 10 Mbit/s
			Solid green	Activity at 100 Mbit/s
2	Ethernet Activity	Green	Off	No activity
			On	Transmitting or receiving data

## USB Mini-B Programming Port

### Overview

The USB Mini-B Port is the programming port you can use to connect a PC with a USB host port using SoMachine software. Using a typical USB cable, this connection is suitable for quick updates of the program or short duration connections to perform maintenance and inspect data values. It is not suitable for long-term connections such as commissioning or monitoring without the use of specially adapted cables to help minimize electromagnetic interference.


### **⚠ WARNING**

#### **UNINTENDED EQUIPMENT OPERATION OR INOPERABLE EQUIPMENT**

- You must use a shielded USB cable such as a BMX XCAUSBH0\*\* secured to the functional ground (FE) of the system for any long-term connection.
- Do not connect more than one controller at a time using USB connections.
- Do not use the USB port(s), if so equipped, unless the location is known to be non-hazardous.

**Failure to follow these instructions can result in death, serious injury, or equipment damage.**

The following figure shows the location of the USB Mini-B programming port:

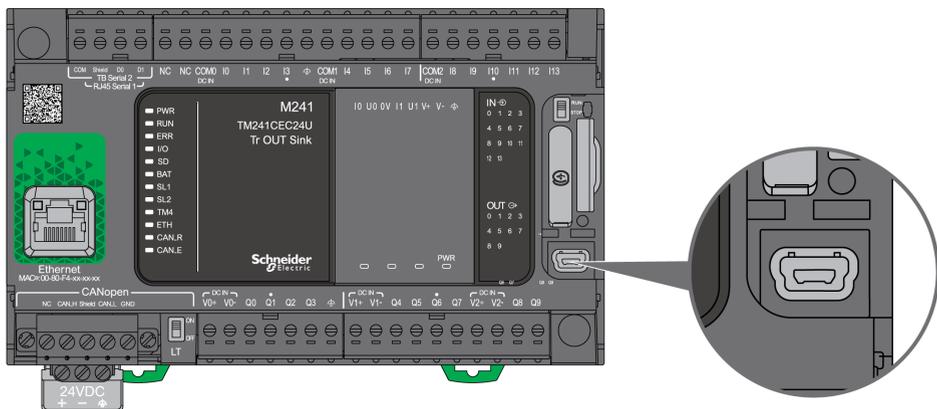

### Characteristics

This table describes the characteristics of the USB Mini-B programming port:

Parameter	USB Programming Port
Function	Compatible with USB 2.0
Connector type	Mini-B
Isolation	None
Cable type	Shielded


## Serial Line 1

### Overview

The serial line 1:

- can be used to communicate with devices supporting the Modbus protocol as either master or slave, ASCII protocol (printer, modem...) and SoMachine Protocol (HMI,...).
- provides a 5 Vdc power distribution.

The following figure shows the location of the serial line 1 port:

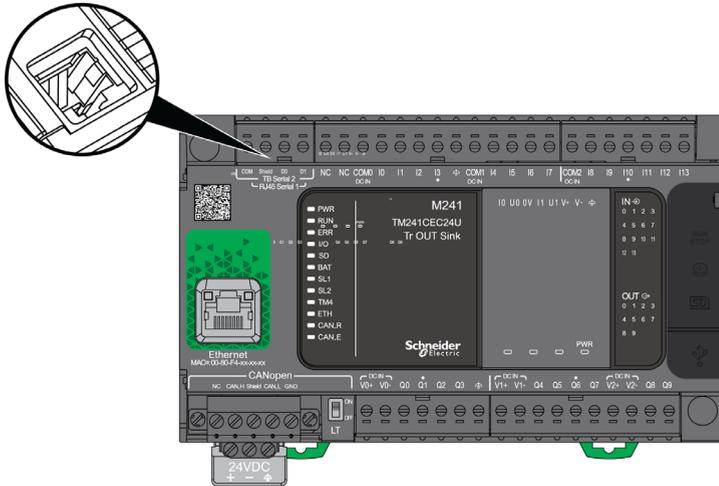

### Characteristics

Characteristic		Description
Function		RS485 or RS232 software configured
Connector type		RJ45
Isolation		Non-isolated
Maximum baud rate		1200 up to 115 200 bps
Cable	Type	Shielded
	Maximum length (between the controller and an isolated junction box)	15 m (49 ft) for RS485 3 m (9.84 ft) for RS232
Polarization		Software configuration is used to connect when the node is configured as a Master. 560 Ω resistors are optional.
5 Vdc power supply for RS485		Yes

**NOTE:** Some devices provide voltage on RS485 serial connections. Do not connect these voltage lines to your controller as they may damage the controller serial port electronics and render the serial port inoperable.

***NOTICE***


**INOPERABLE EQUIPMENT**

Use only the VW3A8306R•• serial cable to connect RS485 devices to your controller.

**Failure to follow these instructions can result in equipment damage.**

**Pin Assignment**

The following figure shows the pins of the RJ45 connector:

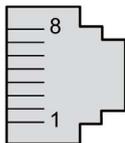

The table below describes the pin assignment of the RJ45 connector:

Pin	RS232	RS485
1	RxD	N.C.
2	TxD	N.C.
3	N.C.	N.C.
4	N.C.	D1
5	N.C.	D0
6	N.C.	N.C.
7	N.C.*	5 Vdc
8	Common	Common

\* 5 Vdc delivered by the controller. Do not connect.

N.C.: No Connection

RxD: Received Data

TxD: Transmitted Data

## ⚠ WARNING

### UNINTENDED EQUIPMENT OPERATION

Do not connect wires to unused terminals and/or terminals indicated as “No Connection (N.C.)”.

**Failure to follow these instructions can result in death, serious injury, or equipment damage.**

### Status LED

The following figure shows the status LED of the serial line 1:




The table below describes the status LED of the serial line 1:

Label	Description	LED		
		Color	Status	Description
SL1	Serial Line 1	Green	On	Indicates the activity of the serial line 1
			Off	Indicates no serial communication

## Serial Line 2

### Overview

The serial line 2 is used to communicate with devices supporting the Modbus protocol as either a master or slave and ASCII Protocol (printer, modem...) and supports RS485 only.

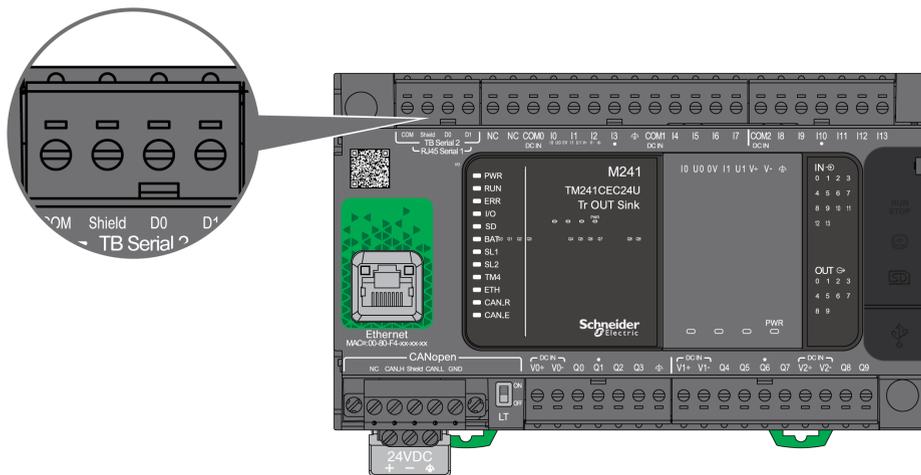


### Characteristics

Characteristic		Description
Function		RS485
Connector type		Removable screw terminal block
Isolation		Non-isolated
Maximum baud rate		1200 up to 115 200 bps
Cable	Type	Shielded
	Maximum length	15 m (49 ft) for RS485
Polarization		Software configuration is used to connect when the node is configured as a Master. 560 Ω resistors are optional.
5 Vdc power supply for RS485		No

## Pin Assignment

The following figure shows the pins of the removable terminal block:

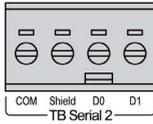

Pin	RS485
COM	0 V com.
Shield	Shield
D0	D0 (B-)
D1	D1 (A+)

Refer to Removing Terminal Block (*see page 86*).

## Status LED

The following graphic show the status LED:



The table below describes the serial line 2 status LED:

Label	Description	LED		
		Color	Status	Description
SL2	Serial Line 2	Green	On	Indicates the activity of the serial line 2.
			Off	Indicates no serial communication.



---

# Chapter 21

## Connecting the M241 Logic Controller to a PC

---

### Connecting the Controller to a PC

#### Overview

To transfer, run, and monitor the applications, connect the controller to a computer, that has SoMachine installed, using either a USB cable or an Ethernet connection (for those references that support an Ethernet port).

### ***NOTICE***

#### **INOPERABLE EQUIPMENT**

Always connect the communication cable to the PC before connecting it to the controller.

**Failure to follow these instructions can result in equipment damage.**

#### USB Powered Download

In order to execute limited operations, the M241 Logic Controller has the capability to be powered through the USB Mini-B port. A diode mechanism avoids having the logic controller both powered by USB and by the normal power supply, or to supply voltage on the USB port.

When powered only by USB, the logic controller executes the firmware and the boot project (if any) and the I/O board is not powered during boot (same duration as a normal boot). USB powered download initializes the internal flash memory with some firmware or some application and parameters when the controller is powered by USB. The preferred tool to connect to the controller is the **Controller Assistant**. Refer to the *SoMachine Controller Assistant User Guide*.

The controller packaging allows easy access to USB Mini-B port with minimum opening of the packaging. You can connect the controller to the PC with a USB cable. Long cables are not suitable for the USB powered download.

### **WARNING**

#### **INSUFFICIENT POWER FOR USB DOWNLOAD**

Do not use a USB cable longer than 3m (9.8 ft) for USB powered download.

**Failure to follow these instructions can result in death, serious injury, or equipment damage.**

**NOTE:** It is not intended that you use the USB Powered Download on an installed controller. Depending on the number of I/O expansion modules in the physical configuration of the installed controller, there may be insufficient power from your PC USB port to accomplish the download.

### USB Mini-B Port Connection

**TCSXCNAMUM3P:** This USB cable is suitable for short duration connections such as quick updates or retrieving data values.

**BMXXCAUSBH018:** Grounded and shielded, this USB cable is suitable for long duration connections.

**NOTE:** You can only connect 1 controller or any other device associated with SoMachine and its component to the PC at any one time.

The USB Mini-B Port is the programming port you can use to connect a PC with a USB host port using SoMachine software. Using a typical USB cable, this connection is suitable for quick updates of the program or short duration connections to perform maintenance and inspect data values. It is not suitable for long-term connections such as commissioning or monitoring without the use of specially adapted cables to help minimize electromagnetic interference.


## ⚠ WARNING

### UNINTENDED EQUIPMENT OPERATION OR INOPERABLE EQUIPMENT

- You must use a shielded USB cable such as a BMX XCAUSBH0\*\* secured to the functional ground (FE) of the system for any long-term connection.
- Do not connect more than one controller at a time using USB connections.
- Do not use the USB port(s), if so equipped, unless the location is known to be non-hazardous.

**Failure to follow these instructions can result in death, serious injury, or equipment damage.**

The communication cable should be connected to the PC first to minimize the possibility of electrostatic discharge affecting the controller.

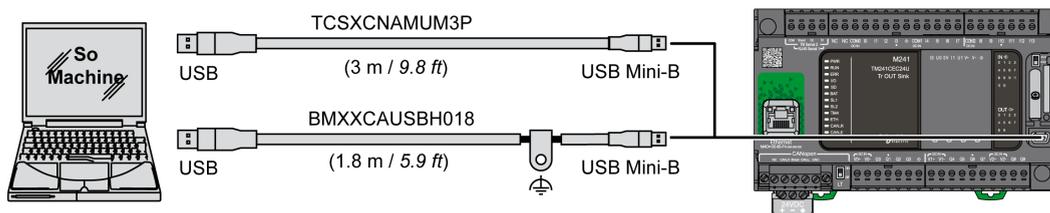


To connect the USB cable to your controller, follow the steps below:

Step	Action
1	<p><b>1a</b> If making a long-term connection using the cable BMXXCAUSBH018, or other cable with a ground shield connection, be sure to securely connect the shield connector to the functional ground (FE) or protective ground (PE) of your system before connecting the cable to your controller and your PC.</p> <p><b>1b</b> If making a short-term connection using the cable TCSXCNAMUM3P or other non-grounded USB cable, proceed to step 2.</p>

Step	Action
2	Connect your USB cable to the computer.
3	Open the hinged access cover.
4	Connect the Mini connector of your USB cable to the controller USB connector.

### Ethernet Port Connection

You can also connect the controller to a PC using an Ethernet cable.

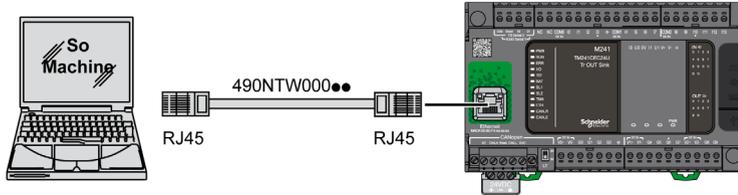

To connect the controller to the PC, do the following:

Step	Action
1	Connect the Ethernet cable to the PC.
2	Connect the Ethernet cable to the Ethernet port on the controller.





## A

### **application**

A program including configuration data, symbols, and documentation.

### **ASCII**

*(American standard code for Information Interchange)* A protocol for representing alphanumeric characters (letters, numbers, certain graphics, and control characters).

## B

### **bps**

*(bit per second)* A definition of transmission rate, also given in conjunction with multiplier kilo (kbps) and mega (mbps).

## C

### **CANopen**

An open industry-standard communication protocol and device profile specification (EN 50325-4).

### **CFC**

*(continuous function chart)* A graphical programming language (an extension of the IEC 61131-3 standard) based on the function block diagram language that works like a flowchart. However, no networks are used and free positioning of graphic elements is possible, which allows feedback loops. For each block, the inputs are on the left and the outputs on the right. You can link the block outputs to the inputs of other blocks to create complex expressions.

### **configuration**

The arrangement and interconnection of hardware components within a system and the hardware and software parameters that determine the operating characteristics of the system.

### **continuous function chart language**

A graphical programming language (an extension of the IEC61131-3 standard) based on the function block diagram language that works like a flowchart. However, no networks are used and free positioning of graphic elements is possible, which allows feedback loops. For each block, the inputs are on the left and the outputs on the right. You can link the block outputs to inputs of other blocks to create complex expressions.

### **controller**

Automates industrial processes (also known as programmable logic controller or programmable controller).

## D

### DIN

(*Deutsches Institut für Normung*) A German institution that sets engineering and dimensional standards.

## E

### EIA rack

(*electronic industries alliance rack*) A standardized (EIA 310-D, IEC 60297, and DIN 41494 SC48D) system for mounting various electronic modules in a stack or rack that is 19 inches (482.6 mm) wide.

### EN

EN identifies one of many European standards maintained by CEN (*European Committee for Standardization*), CENELEC (*European Committee for Electrotechnical Standardization*), or ETSI (*European Telecommunications Standards Institute*).

## F

### FBD

(*function block diagram*) One of 5 languages for logic or control supported by the standard IEC 61131-3 for control systems. Function block diagram is a graphically oriented programming language. It works with a list of networks, where each network contains a graphical structure of boxes and connection lines, which represents either a logical or arithmetic expression, the call of a function block, a jump, or a return instruction.

### FE

(*functional Earth*) A common grounding connection to enhance or otherwise allow normal operation of electrically sensitive equipment (also referred to as functional ground in North America).

In contrast to a protective Earth (protective ground), a functional earth connection serves a purpose other than shock protection, and may normally carry current. Examples of devices that use functional earth connections include surge suppressors and electromagnetic interference filters, certain antennas, and measurement instruments.

### FreqGen

(*frequency generator*) A function that generates a square wave signal with programmable frequency.

---

## H

**HE10**

Rectangular connector for electrical signals with frequencies below 3 MHz, complying with IEC 60807-2.

**HSC**

*(high-speed counter)* A function that counts pulses on the controller or on expansion module inputs.

## I

**I/O**

*(input/output)*

**IEC**

*(international electrotechnical commission)* A non-profit and non-governmental international standards organization that prepares and publishes international standards for electrical, electronic, and related technologies.

**IEC 61131-3**

Part 3 of a 3-part IEC standard for industrial automation equipment. IEC 61131-3 is concerned with controller programming languages and defines 2 graphical and 2 textual programming language standards. The graphical programming languages are ladder diagram and function block diagram. The textual programming languages include structured text and instruction list.

**IL**

*(instruction list)* A program written in the language that is composed of a series of text-based instructions executed sequentially by the controller. Each instruction includes a line number, an instruction code, and an operand (refer to IEC 61131-3).

**instruction list language**

A program written in the instruction list language that is composed of a series of text-based instructions executed sequentially by the controller. Each instruction includes a line number, an instruction code, and an operand (see IEC 61131-3).

**IP 20**

*(ingress protection)* The protection classification according to IEC 60529 offered by an enclosure, shown by the letter IP and 2 digits. The first digit indicates 2 factors: helping protect persons and for equipment. The second digit indicates helping protect against water. IP 20 devices help protect against electric contact of objects larger than 12.5 mm, but not against water.

## L

**ladder diagram language**

A graphical representation of the instructions of a controller program with symbols for contacts, coils, and blocks in a series of rungs executed sequentially by a controller (see IEC 61131-3).

## LD

(*ladder diagram*) A graphical representation of the instructions of a controller program with symbols for contacts, coils, and blocks in a series of rungs executed sequentially by a controller (refer to IEC 61131-3).

## M

### master/slave

The single direction of control in a network that implements the master/slave mode.

### Modbus

The protocol that allows communications between many devices connected to the same network.

## N

### NEMA

(*national electrical manufacturers association*) The standard for the performance of various classes of electrical enclosures. The NEMA standards cover corrosion resistance, ability to help protect from rain, submersion, and so on. For IEC member countries, the IEC 60529 standard classifies the ingress protection rating for enclosures.

## P

### PDO

(*process data object*) An unconfirmed broadcast message or sent from a producer device to a consumer device in a CAN-based network. The transmit PDO from the producer device has a specific identifier that corresponds to the receive PDO of the consumer devices.

### PE

(*Protective Earth*) A common grounding connection to help avoid the hazard of electric shock by keeping any exposed conductive surface of a device at earth potential. To avoid possible voltage drop, no current is allowed to flow in this conductor (also referred to as *protective ground* in North America or as an equipment grounding conductor in the US national electrical code).

### program

The component of an application that consists of compiled source code capable of being installed in the memory of a logic controller.

### PTO

(*pulse train outputs*) A fast output that oscillates between off and on in a fixed 50-50 duty cycle, producing a square wave form. PTO is especially well suited for applications such as stepper motors, frequency converters, and servo motor control, among others.

### PWM

(*pulse width modulation*) A fast output that oscillates between off and on in an adjustable duty cycle, producing a rectangular wave form (though you can adjust it to produce a square wave).

## R

### RJ45

A standard type of 8-pin connector for network cables defined for Ethernet.

### RPDO

*(receive process data object)* An unconfirmed broadcast message or sent from a producer device to a consumer device in a CAN-based network. The transmit PDO from the producer device has a specific identifier that corresponds to the receive PDO of the consumer devices.

### RS-232

A standard type of serial communication bus, based on 3 wires (also known as EIA RS-232C or V.24).

### RS-485

A standard type of serial communication bus, based on 2 wires (also known as EIA RS-485).

### RxD

The line that receives data from one source to another.

## S

### SFC

*(sequential function chart)* A language that is composed of steps with associated actions, transitions with associated logic condition, and directed links between steps and transitions. (The SFC standard is defined in IEC 848. It is IEC 61131-3 compliant.)

### ST

*(structured text)* A language that includes complex statements and nested instructions (such as iteration loops, conditional executions, or functions). ST is compliant with IEC 61131-3.

## T

### terminal block

*(terminal block)* The component that mounts in an electronic module and provides electrical connections between the controller and the field devices.

### TPDO

*(transmit process data object)* An unconfirmed broadcast message or sent from a producer device to a consumer device in a CAN-based network. The transmit PDO from the producer device has a specific identifier that corresponds to the receive PDO of the consumer devices.

### TxD

The line that sends data from one source to another.





## Symbols

Short-circuit or Over-current on Sink Transistor Outputs, *55*

## A

accessories, *41*  
analog input modules  
  specifications, *32*  
analog mixed I/O modules  
  specifications, *34*  
analog output modules  
  specifications, *33*

## C

CANopen communication, *222*  
certifications and standards, *68*  
communication  
  CANopen, *222*  
Communication Ports, *221*  
  Ethernet Port, *226*  
  Serial Line 1, *231*  
  Serial Line 2, *234*  
  USB Programming Port, *229*  
connections  
  to CANopen slaves, *222*  
  to J1939 ECUs, *223*

## D

digital I/O modules  
  specifications, *28, 29, 31, 37, 38*  
Digital I/O modules  
  Specifications, *38*

## E

ECUs, max. number of J1939, *223*

Electrical Requirements

  Installation, *83*

Electromagnetic Susceptibility, *66*

Environmental Characteristics, *65*

## F

fallback  
  configuring modes, *53*  
features  
  key features, *18*  
Filter  
  Bounce Filter, *49*

## G

Grounding, *96*

## I

inductive load, output protection  
  output protection, inductive load, *87*  
Input Management, *48*  
Installation, *63*  
  Electrical Requirements, *83*  
  Logic Controller Installation, *69*  
intended use, *8*

## J

J1939  
  capabilities, *223*

## L

Latching, *50*  
Logic Controller Installation  
  Installation, *69*

## M

### M241

- TM241C24R, *103*
- TM241C24T, *121*
- TM241C24U, *139*
- TM241C40R, *157*
- TM241C40T, *169*
- TM241C40U, *181*
- TM241CE24R, *109*
- TM241CE24T, *127*
- TM241CE24U, *145*
- TM241CE40R, *163*
- TM241CE40T, *175*
- TM241CE40U, *187*
- TM241CEC24R, *115*
- TM241CEC24T, *133*
- TM241CEC24U, *151*

mounting positions, *73*

## N

### notice

- loss of application data, *59*

## O

output management, *52*

## P

PGNs, max. number of J1939, *223*

Power Supply, *90, 94*

### presentation

- TM241C24R, *103*
- TM241C24T, *121*
- TM241C24U, *139*
- TM241C40R, *157*
- TM241C40T, *169*
- TM241C40U, *181*
- TM241CE24R, *109*
- TM241CE24T, *127*
- TM241CE24U, *145*
- TM241CE40R, *163*
- TM241CE40T, *175*
- TM241CE40U, *187*
- TM241CEC24R, *115*
- TM241CEC24T, *133*
- TM241CEC24U, *151*

### programming languages

- IL, LD, Grafcet, *18*

## Q

qualification of personnel, *8*

## R

real time clock, *44*

regular inputs, *28, 29, 31*

regular transistor outputs, *28, 29, 31*

relay outputs, *28, 29, 31*

Run/Stop, *57*

## S

SD Card, *59*

Serial Line 1

- Communication Ports, *231*

Serial Line 2

- Communication Ports, *234*

short-circuit or over-current on relay outputs, *56*

short-circuit or over-current on transistor outputs, *53*

## specifications

- analog input modules, *32*
- analog mixed I/O modules, *34*
- analog output modules, *33*
- digital I/O modules, *28, 29, 31, 37*

## Specifications

- Digital I/O modules, *38, 38*

## specifications

- modules, *34*
- transmitter and receiver modules, *36*

**T**

## Tesy modules

- specifications, *34*

## TM241CEC24R

- M241, *115*
- presentation, *115*

## TM241CEC24T

- M241, *133*
- presentation, *133*

TMC4, *26*

## transmitter and receiver modules

- specifications, *36*

**U**

## USB Programming Port

- Communication Ports, *229*

**W**wiring, *84*

