TOSHIBA

SERVICE MANUAL

AIR-CONDITIONER MULT TYPE

<High Wall Types>

MMK-UP0271HP Series MMK-UP0301HP Series MMK-UP0361HP Series



CONTENTS

PRE	ECAUTION FOR SAFETY	6
NEV	W REFRIGERANT (R410A)	11
1.	SPECIFICATIONS	14
2.	CONSTRUCTION VIEWS (EXTERNAL VIEWS)	15
3.	WIRING DIAGRAM	16
4.	PARTS RATING	17
5.	REFRIGERANTING CYCLE DIAGRAM	18
6.	CONTROL OUTLINE	19
7.	CONFIGURATION OF CONTROL CIRCUIT	25
8.	APPLIED CONTROL	33
9.	TROUBLESHOOTING	58
10.	INSTALLATION MANUAL	86
11.	HOW TO REPLACE MAIN PARTS	131
12.	REPLACEMENT OF P.C. BOARD FOR INDOOR UNIT SERVICING	140
13	EXPLODED VIEWS AND PARTS LIST	144

Original instruction

Please read carefully through these instructions that contain important information which complies with the Machinery Directive (Directive 2006/42/EC), and ensure that you understand them.

Generic Denomination: Air Conditioner

Definition of Qualified Installer or Qualified Service Person

The air conditioner must be installed, maintained, repaired and removed by a qualified installer or qualified service person.

When any of these jobs is to be done, ask a qualified installer or qualified service person to do them for you. A qualified installer or qualified service person is an agent who has the qualifications and knowledge described in the table below.

Agent	Qualifications and knowledge which the agent must have					
	The qualified installer is a person who installs, maintains, relocates and removes the air conditioners made by Toshiba Carrier Corporation.					
	He or she has been trained to install, maintain, relocate and remove the air conditioners made by Toshiba Carrier Corporation or, alternatively, he or she has been instructed in such operations by an individual or individuals who have been trained and is thus thoroughly acquainted with the knowledge related to these operations.					
Qualified installer	• The qualified installer who is allowed to do the electrical work involved in installation, relocation and removal has the qualifications pertaining to this electrical work as stipulated by the local laws and regulations, and he or she is a person who has been trained in matters relating to electrical work on the air conditioners made by Toshiba Carrier Corporation or, alternatively, he or she has been instructed in such matters by an individual or individuals who have been trained and is thus thoroughly acquainted with the knowledge related to this work.					
	• The qualified installer who is allowed to do the refrigerant handling and piping work involved in installation, relocation and removal has the qualifications pertaining to this refrigerant handling and piping work as stipulated by the local laws and regulations, and he or she is a person who has been trained in matters relating to refrigerant handling and piping work on the air conditioners made by Toshiba Carrier Corporation or, alternatively, he or she has been instructed in such matters by an individual or individuals who have been trained and is thus thoroughly acquainted with the knowledge related to this work.					
	The qualified installer who is allowed to work at heights has been trained in matters relating to working at heights with the air conditioners made by Toshiba Carrier Corporation or, alternatively, he or she has been instructed in such matters by an individual or individuals who have been trained and is thus thoroughly acquainted with the knowledge related to this work.					
	The qualified service person is a person who installs, repairs, maintains, relocates and removes the air conditioners made by Toshiba Carrier Corporation.					
	He or she has been trained to install, repair, maintain, relocate and remove the air conditioners made by Toshiba Carrier Corporation or, alternatively, he or she has been instructed in such operations by an individual or individuals who have been trained and is thus thoroughly acquainted with the knowledge related to these operations.					
Qualified service person	• The qualified service person who is allowed to do the electrical work involved in installation, repair, relocation and removal has the qualifications pertaining to this electrical work as stipulated by the local laws and regulations, and he or she is a person who has been trained in matters relating to electrical work on the air conditioners made by Toshiba Carrier Corporation or, alternatively, he or she has been instructed in such matters by an individual or individuals who have been trained and is thus thoroughly acquainted with the knowledge related to this work.					
	• The qualified service person who is allowed to do the refrigerant handling and piping work involved in installation, repair, relocation and removal has the qualifications pertaining to this refrigerant handling and piping work as stipulated by the local laws and regulations, and he or she is a person who has been trained in matters relating to refrigerant handling and piping work on the air conditioners made by Toshiba Carrier Corporation or, alternatively, he or she has been instructed in such matters by an individual or individuals who have been trained and is thus thoroughly acquainted with the knowledge related to this work.					
	The qualified service person who is allowed to work at heights has been trained in matters relating to working at heights with the air conditioners made by Toshiba Carrier Corporation or, alternatively, he or she has been instructed in such matters by an individual or individuals who have been trained and is thus thoroughly acquainted with the knowledge related to this work.					

Definition of Protective Gear

When the air conditioner is to be transported, installed, maintained, repaired or removed, wear protective gloves and 'safety' work clothing.

In addition to such normal protective gear, wear the protective gear described below when undertaking the special work detailed in the table below.

Failure to wear the proper protective gear is dangerous because you will be more susceptible to injury, burns, electric shocks and other injuries.

Work undertaken	Protective gear worn		
All types of work	Protective gloves 'Safety' working clothing		
Electrical-related work	Gloves to provide protection for electricians and from heat Insulating shoes Clothing to provide protection from electric shock		
Work done at heights (50 cm or more)	Helmets for use in industry		
Transportation of heavy objects	Shoes with additional protective toe cap		
Repair of outdoor unit	Gloves to provide protection for electricians and from heat		

The important contents concerned to the safety are described on the product itself and on this Service Manual. Please read this Service Manual after understanding the described items thoroughly in the following contents (Indications/Illustrated marks), and keep them.

[Explanation of indications]

Indication	Explanation		
<u> </u>	Indicates contents assumed that an imminent danger causing a death or serious injury of the repair engineers and the third parties when an incorrect work has been executed.		
MARNING	Indicates possibilities assumed that a danger causing a death or serious injury of the repair engineers, the third parties, and the users due to troubles of the product after work when an incorrect work has been executed.		
CAUTION	Indicates contents assumed that an injury or property damage (*) may be caused on the repair engineers, the third parties, and the users due to troubles of the product after work when an incorrect work has been executed.		

^{*} Property damage: Enlarged damage concerned to property, furniture, and domestic animal/pet

[Explanation of illustrated marks]

Mark	Explanation					
\bigcirc	Indicates prohibited items (Forbidden items to do) The sentences near an illustrated mark describe the concrete prohibited contents.					
0	Indicates mandatory items (Compulsory items to do) The sentences near an illustrated mark describe the concrete mandatory contents.					
A	Indicates cautions (Including danger/warning) The sentences or illustration near or in an illustrated mark describe the concrete cautious contents.					

Warning Indications on the Air Conditioner Unit

[Confirmation of warning label on the main unit]

Confirm that labels are indicated on the specified positions If removing the label during parts replace, stick it as the original.

	Warning indication	Description
A	WARNING ELECTRICAL SHOCK HAZARD Disconnect all remote electric power supplies before servicing.	WARNING ELECTRICAL SHOCK HAZARD Disconnect all remote electric power supplies before servicing.
	WARNING Moving parts. Do not operate unit with grille removed. Stop the unit before the servicing.	WARNING Moving parts. Do not operate unit with grille removed. Stop the unit before the servicing.
	CAUTION High temperature parts. You might get burned when removing this panel.	CAUTION High temperature parts. You might get burned when removing this panel.
	CAUTION Do not touch the aluminum fins of the unit. Doing so may result in injury.	CAUTION Do not touch the aluminum fins of the unit. Doing so may result in injury.
	CAUTION BURST HAZARD Open the service valves before the operation, otherwise there might be the burst.	CAUTION BURST HAZARD Open the service valves before the operation, otherwise there might be the burst.
	CAUTION Do not climb onto the fan guard. Doing so may result in injury.	CAUTION Do not climb onto the fan guard. Doing so may result in injury.

Precautions for Safety

The manufacturer shall not assume any liability for the damage caused by not observing the description of this manual.



M DANGER

	Before carrying out the installation, maintenance, repair or removal work, be sure to set the circuit breaker for both the indoor and outdoor units to the OFF position. Otherwise, electric shocks may result.
	Before opening the intake grille of the indoor unit or service panel of the outdoor unit, set the circuit breaker to the OFF position. Failure to set the circuit breaker to the OFF position may result in electric shocks through contact with the interior parts.
	Only a qualified installer (*1) or qualified service person (*1) is allowed to remove the intake grille of the indoor unit or service panel of the outdoor unit and do the work required.
U	Before starting to repair the outdoor unit fan or fan guard, be absolutely sure to set the circuit breaker to the OFF position, and place a "Work in progress" sign on the circuit breaker.
Turn off breaker.	When cleaning the filter or other parts of the indoor unit, set the circuit breaker to OFF without fail, and place a "Work in progress" sign near the circuit breaker before proceeding with the work.
	When you have noticed that some kind of trouble (such as when an error display has appeared, there is a smell of burning, abnormal sounds are heard, the air conditioner fails to cool or heat or water is leaking) has occurred in the air conditioner, do not touch the air conditioner yourself but set the circuit breaker to the OFF position, and contact a qualified service person. Take steps to ensure that the power will not be turned on (by marking "out of service" near the circuit
	breaker, for instance) until qualified service person arrives.
	Continuing to use the air conditioner in the trouble status may cause mechanical problems to escalate or result in electric shocks or other failure.
Electric shock hazard.	When you access inside of the service panel to repair electric parts, wait for about five minutes after turning off the breaker. Do not start repairing immediately. Otherwise you may get electric shock by touching terminals of high-voltage capacitors. Natural discharge of the capacitor takes about five minutes.
	Place a "Work in progress" sign near the circuit breaker while the installation, maintenance, repair or removal work is being carried out. There is a danger of electric shocks if the circuit breaker is set to ON by mistake.
Prohibition .	Before operating the air conditioner after having completed the work, check that the electrical parts box cover of the indoor unit and service panel of the outdoor unit are closed, and set the circuit breaker to the ON position. You may receive an electric shock if the power is turned on without first conducting these checks.
Stay on protection.	If, in the course of carrying out repairs, it becomes absolutely necessary to check out the electrical parts with the electrical parts box cover of one or more of the indoor units and the service panel of the outdoor unit removed in order to find out exactly where the trouble lies, wear insulated heat-resistant gloves, insulated boots and insulated work overalls, and take care to avoid touching any live parts. You may receive an electric shock if you fail to heed this warning. Only qualified service person (*1) is allowed to do this kind of work.

Before starting to repair the air conditioner, read carefully through the Service Manual, and repair the air conditioner by following its instructions.

Only qualified service person (*1) is allowed to repair the air conditioner.

Repair of the air conditioner by unqualified person may give rise to a fire, electric shocks, injury, water leaks and/or other problems.

Do not use any refrigerant different from the one specified for complement or replacement.

Other wise, abnormally high pressure may be generated in the refrigeration cycle, which may result in a failure or explosion of the product or an injury to your body.

Only a qualified installer (*1) or qualified service person (*1) is allowed to carry out the electrical work of the air conditioner.

Under no circumstances must this work be done by an unqualified individual since failure to carry out the work properly may result in electric shocks and/or electrical leaks.

When transporting the air conditioner, wear shoes with protective toe caps, protective gloves and other protective clothing.

When connecting the electrical wires, repairing the electrical parts or undertaking other electrical jobs, wear gloves to provide protection for electricians and from heat, insulating shoes and clothing to provide protection from electric shocks.

Failure to wear this protective gear may result in electric shocks.

Electrical wiring work shall be conducted according to law and regulation in the community and installation manual. Failure to do so may result in electrocution or short circuit.



Only a qualified installer (*1) or qualified service person (*1) is allowed to undertake work at heights using a stand of 50 cm or more or to remove the intake grille of the indoor unit to undertake work.

When working at heights, use a ladder which complies with the ISO 14122 standard, and follow the procedure in the ladder's instructions.

Also wear a helmet for use in industry as protective gear to undertake the work.

When working at heights, put a sign in place so that no-one will approach the work location, before proceeding with the work.

Parts and other objects may fall from above, possibly injuring a person below.

When executing address setting, test run, or troubleshooting through the checking window on the electric parts box, put on insulated gloves to provide protection from electric shock. Otherwise you may receive an electric shock.

Do not touch the aluminum fin of the outdoor unit.

You may injure yourself if you do so. If the fin must be touched for some reason, first put on protective gloves and safety work clothing, and then proceed.

Do not climb onto or place objects on top of the outdoor unit.

You may fall or the objects may fall off of the outdoor unit and result in injury.

When transporting the air conditioner, wear shoes with additional protective toe caps.

When transporting the air conditioner, do not take hold of the bands around the packing carton. You may injure yourself if the bands should break.

Be sure that a heavy unit (10kg or heavier) such as a compressor is carried by two persons.

This air conditioner has passed the pressure test as specified in IEC 60335-2-40 Annex EE.



Before troubleshooting or repair work, check the earth wire is connected to the earth terminals of the main unit, otherwise an electric shock is caused when a leak occurs. If the earth wire is not correctly connected, contact an electric engineer for rework.

After completing the repair or relocation work, check that the ground wires are connected properly.

Be sure to connect earth wire. (Grounding work) Incomplete grounding causes an electric shock. Do not connect ground wires to gas pipes, water pipes, and lightning rods or ground wires for telephone wires.



Do not modify the products.

Do not also disassemble or modify the parts.

It may cause a fire, electric shock or injury.

Use specified parts.	When any of the electrical parts are to be replaced, ensure that the replacement parts satisfy the specifications given in the Service Manual (or use the parts contained on the parts list in the Service Manual). Use of any parts which do not satisfy the required specifications may give rise to electric shocks, smoking and/ or a fire.
Do not bring a child close to the equipment.	Refrigerantlf, in the course of carrying out repairs, it becomes absolutely necessary to check out the electrical parts with the electrical parts box cover of one or more of the indoor units and the service panel of the outdoor unit removed in order to find out exactly where the trouble lies, put a sign in place so that no-one will approach the work location before proceeding with the work. Third-party individuals may enter the work site and receive electric shocks if this warning is not heeded.
Insulating measures	Connect the cut-off lead wires with crimp contact, etc., put the closed end side upward and then apply a watercut method, otherwise a leak or production of fire is caused at the users' side.
No fire	 When performing repairs using a gas burner, replace the refrigerant with nitrogen gas because the oil that coats the pipes may otherwise burn. When repairing the refrigerating cycle, take the following measures. 1) Be attentive to fire around the cycle. When using a gas stove, etc., be sure to put out fire before work; otherwise the oil mixed with refrigerant gas may catch fire. 2) Do not use a welder in the closed room. When using it without ventilation, carbon monoxide poisoning may be caused. 3) Do not bring inflammables close to the refrigerant cycle, otherwise fire of the welder may catch the inflammables.
	The refrigerant used by this air conditioner is the R410A. Check the used refrigerant name and use tools and materials of the parts which match with it. For the products which use R410A refrigerant, the refrigerant name is indicated at a position on the outdoor unit where is easy to see. To prevent miss-charging, the route of the service port is changed from one of the former R22.
	For an air conditioner which uses R410A, never use other refrigerant than R410A. For an air conditioner which uses other refrigerant (R22, etc.), never use R410A. If different types of refrigerant are mixed, abnormal high pressure generates in the refrigerating cycle and an injury due to breakage may be caused.
	When the air conditioner has been installed or relocated, follow the instructions in the Installation Manual and purge the air completely so that no gases other than the refrigerant will be mixed in the refrigerating cycle. Failure to purge the air completely may cause the air conditioner to malfunction.
Refrigerant	Do not charge refrigerant additionally. If charging refrigerant additionally when refrigerant gas leaks, the refrigerant composition in the refrigerating cycle changes resulted in change of air conditioner characteristics or refrigerant over the specified standard amount is charged and an abnormal high pressure is applied to the inside of the refrigerating cycle resulted in cause of breakage or injury. Therefore if the refrigerant gas leaks, recover the refrigerant in the air conditioner, execute vacuuming, and then newly recharge the specified amount of liquid refrigerant. In this time, never charge the refrigerant over the specified amount.
	When recharging the refrigerant in the refrigerating cycle, do not mix the refrigerant or air other than R410A into the specified refrigerant. If air or others is mixed with the refrigerant, abnormal high pressure generates in the refrigerating cycle resulted in cause of injury due to breakage.
	After installation work, check the refrigerant gas does not leak. If the refrigerant gas leaks in the room, poisonous gas generates when gas touches to fire such as fan heater, stove or cocking stove though the refrigerant gas itself is innocuous.
	Never recover the refrigerant into the outdoor unit. When the equipment is moved or repaired, be sure to recover the refrigerant with recovering device. The refrigerant cannot be recovered in the outdoor unit; otherwise a serious accident such as breakage or injuryis caused.
Assembly/ Wiring	After repair work, surely assemble the disassembled parts, and connect and lead the removed wires as before. Perform the work so that the cabinet or panel does not catch the inner wires. If incorrect assembly or incorrect wire connection was done, a disaster such as a leak or fire is caused at user's side.
Insulator check	After the work has finished, be sure to use an insulation tester set (500V Megger) to check the resistance is $1M\Omega$ or more between the charge section and the non-charge metal section (Earth position). If the resistance value is low, a disaster such as a leak or electric shock is caused at user's side.

Ventilation	When the refrigerant gas leaks during work, execute ventilation. If the refrigerant gas touches to a fire, poisonous gas generates. A case of leakage of the refrigerant and the closed room full with gas is dangerous because a shortage of oxygen occurs. Be sure to execute ventilation.
A	When the refrigerant gas leaks, find up the leaked position and repair it surely. If the leaked position cannot be found up and the repair work is interrupted, pump-down and tighten the service valve, otherwise the refrigerant gas may leak into the room. The poisonous gas generates when gas touches to fire such as fan heater, stove or cocking stove though the refrigerant gas itself is innocuous. When installing equipment which includes a large amount of charged refrigerant such as a multi air conditioner in a sub-room, it is necessary that the density does not the limit even if the refrigerant leaks. If the refrigerant leaks and exceeds the limit density, an accident of shortage of oxygen is caused.
Compulsion	Tighten the flare nut with a torque wrench in the specified manner. Excessive tighten of the flare nut may cause a crack in the flare nut after a long period, which may result in refrigerant leakage.
	Nitrogen gas must be used for the airtight test.
	The charge hose must be connected in such a way that it is not slack.
	For the installation/moving/reinstallation work, follow to the Installation Manual. If an incorrect installation is done, a trouble of the refrigerating cycle, water leak, electric shock or fire is caused.
	Once the repair work has been completed, check for refrigerant leaks, and check the insulation resistance and water drainage. Then perform a trial run to check that the air conditioner is running properly.
0	After repair work has finished, check there is no trouble. If check is not executed, a fire, electric shock or injury may be caused. For a check, turn off the power breaker.
Check after repair	After repair work (installation of front panel and cabinet) has finished, execute a test run to check there is no generation of smoke or abnormal sound. If check is not executed, a fire or an electric shock is caused. Before test run, install the front panel and cabinet.
	Be sure to fix the screws back which have been removed for installation or other purposes.
Do not operate the unit with the valve closed.	Check the following matters before a test run after repairing piping. • Connect the pipes surely and there is no leak of refrigerant. • The valve is opened. Running the compressor under condition that the valve closes causes an abnormal high pressure resulted in damage of the parts of the compressor and etc. and moreover if there is leak of refrigerant at connecting section of pipes, the air is sucked and causes further abnormal high pressure resulted in burst or injury.
	Only a qualified installer (*1) or qualified service person (*1) is allowed to relocate the air conditioner. It is dangerous for the air conditioner to be relocated by an unqualified individual since a fire, electric shocks, injury, water leakage, noise and/or vibration may result.
Check after reinstallation	Check the following items after reinstallation. 1) The earth wire is correctly connected. 2) The power cord is not caught in the product. 3) There is no inclination or unsteadiness and the installation is stable. If check is not executed, a fire, an electric shock or an injury is caused.
	When carrying out the pump-down work shut down the compressor before disconnecting the refrigerant pipe. Disconnecting the refrigerant pipe with the service valve left open and the compressor still operating will cause air, etc. to be sucked in, raising the pressure inside the refrigeration cycle to an abnormally high level, and possibly resulting in reputing, injury, etc.
	When the service panel of the outdoor unit is to be opened in order for the compressor or the area around this part to be repaired immediately after the air conditioner has been shut down, set the circuit breaker to the OFF position, and then wait at least 10 minutes before opening the service panel. If you fail to heed this warning, you will run the risk of burning yourself because the compressor pipes
	and other parts will be very hot to the touch. In addition, before proceeding with the repair work, wear the kind of insulated heat-resistant gloves designed to protect electricians.

When the service panel of the outdoor unit is to be opened in order for the fan motor, reactor, inverter or the areas around these parts to be repaired immediately after the air conditioner has been shut down, set the circuit breaker to the OFF position, and then wait at least 10 minutes before opening the service panel. If you fail to heed this warning, you will run the risk of burning yourself because the fan motor, reactor, inverter heat sink and other parts will be very hot to the touch. In addition, before proceeding with the repair work, wear the kind of insulated heat-resistant gloves designed to protect electricians.

check

Only a qualified installer (*1) or qualified service person (*1) is allowed to install the air conditioner. If the air conditioner is installed by an unqualified individual, a fire, electric shocks, injury, water leakage, noise and/or vibration may result.

Before starting to install the air conditioner, read carefully through the Installation Manual, and follow its instructions to install the air conditioner.

Be sure to use the company-specified products for the separately purchased parts. Use of non-specified products may result in fire, electric shock, water leakage or other failure. Have the installation performed by a qualified installer.

Do not supply power from the power terminal block equipped on the outdoor unit to another outdoor unit. Capacity overflow may occur on the terminal block and may result in fire.



Do not install the air conditioner in a location that may be subject to a risk of expire to a combustible gas. If a combustible gas leaks and becomes concentrated around the unit, a fire may occur.

Install the indoor unit at least 2.5 m above the floor level since otherwise the users may injure themselves or receive electric shocks if they poke their fingers or other objects into the indoor unit while the air conditioner is running.

Install a circuit breaker that meets the specifications in the installation manual and the stipulations in the local regulations and laws.

Install the circuit breaker where it can be easily accessed by the qualified service person (*1).

If you install the unit in a small room, take appropriate measures to prevent the refrigerant from exceeding the limit concentration even if it leaks.

Consult the dealer from whom you purchased the air conditioner when you implement the measures. Accumulation of highly concentrated refrigerant may cause an oxygen deficiency accident.

Do not place any combustion appliance in a place where it is directly exposed to the wind of air conditioner, otherwise it may cause imperfect combustion.

Explanations given to user

 If you have discovered that the fan grille is damaged, do not approach the outdoor unit but set the circuit breaker to the OFF position, and contact a qualified service person to have the repairs done.
 Do not set the circuit breaker to the ON position until the repairs are completed.

Relocation

- Only a qualified installer (*1) or qualified service person (*1) is allowed to relocate the air conditioner. It is dangerous for the air conditioner to be relocated by an unqualified individual since a fire, electric shocks, injury, water leakage, noise and/or vibration may result.
- When carrying out the pump-down work shut down the compressor before disconnecting the refrigerant pipe.
 Disconnecting the refrigerant pipe with the service valve left open and the compressor still operating will cause air, etc. to be sucked in, raising the pressure inside the refrigeration cycle to an abnormally high level, and possibly resulting in reputing, injury, etc.
- (*1) Refer to the "Definition of Qualified Installer or Qualified Service Person."

New Refrigerant (R410A)

This air conditioner adopts a new HFC type refrigerant (R410A) which does not deplete the ozone layer.

1. Safety Caution Concerned to New Refrigerant

The pressure of R410A is high 1.6 times of that of the former refrigerant (R22). Accompanied with change of refrigerant, the refrigerating oil has been also changed. Therefore, be sure that water, dust, the former refrigerant or the former refrigerating oil is not mixed into the refrigerating cycle of the air conditioner with new refrigerant during installation work or service work. If an incorrect work or incorrect service is performed, there is a possibility to cause a serious accident. Use the tools and materials exclusive to R410A to purpose a safe work.

2. Cautions on Installation/Service

- (1) Do not mix the other refrigerant or refrigerating oil.
 - For the tools exclusive to R410A, shapes of all the joints including the service port differ from those of the former refrigerant in order to prevent mixture of them.
- (2) As the use pressure of the new refrigerant is high, use material thickness of the pipe and tools which are specified for R410A.
- (3) In the installation time, use clean pipe materials and work with great attention so that water and others do not mix in because pipes are affected by impurities such as water, oxide scales, oil, etc. Use the clean pipes.
 - Be sure to brazing with flowing nitrogen gas. (Never use gas other than nitrogen gas.)
- (4) For the earth protection, use a vacuum pump for air purge.
- (5) R410A refrigerant is azeotropic mixture type refrigerant. Therefore use liquid type to charge the refrigerant. (If using gas for charging, composition of the refrigerant changes and then characteristics of the air conditioner change.)

3. Pipe Materials

For the refrigerant pipes, copper pipe and joints are mainly used. It is necessary to select the most appropriate pipes to conform to the standard. Use clean material in which impurities adhere inside of pipe or joint to a minimum.

(1) Copper pipe

<Piping>

The pipe thickness, flare finishing size, flare nut and others differ according to a refrigerant type.

When using a long copper pipe for R410A, it is recommended to select "Copper or copper-base pipe without seam" and one with bonded oil amount 40mg/10m or less. Also do not use crushed, deformed, discolored (especially inside) pipes. (Impurities cause clogging of expansion valves and capillary tubes.)

<Flare nut>

Use the flare nuts which are attached to the air conditioner unit.

(2) Joint

The flare joint and socket joint are used for joints of the copper pipe.

The joints are rarely used for installation of the air conditioner. However clear impurities when using them.

4. Tools

(1) Required Tools for R410A

Mixing of different types of oil may cause a trouble such as generation of sludge, clogging of capillary, etc. Accordingly, the tools to be used are classified into the following three types.

- 1) Tools exclusive for R410A (Those which cannot be used for conventional refrigerant (R22))
- 2) Tools exclusive for R410A, but can be also used for conventional refrigerant (R22)
- 3) Tools commonly used for R410A and for conventional refrigerant (R22)

The table below shows the tools exclusive for R410A and their interchangeability.

Tools exclusive for R410A (The following tools for R410A are required.)

Tools whose specifications are changed for R410A and their interchangeability.

				110A ner installation	Conventional air conditioner installation
No.	Used tool	Usage	Existence of new equipment for R410A	Whether conventional equipment can be used	Whether new equipment can be used with conventional refrigerant
①	Flare tool	Pipe flaring	Yes	*(Note 1)	Yes
2	Copper pipe gauge for adjusting projection margin	Flaring by conventional flare tool	Yes	*(Note 1)	*(Note 1)
3	Torque wrench	Connection of flare nut	Yes	No	No
4	Gauge manifold	Evacuating, refrigerant	Yesa	No	No
(5)	Charge hose	charge, run check, etc.	Tesa	140	NO
6	Vacuum pump adapter	Vacuum evacuating	Yes	No	Yes
7	Electronic balance for refrigerant charging	Refrigerant charge	Yes	Yes	Yes
8	Refrigerant cylinder	Refrigerant charge	Yes	No	No
9	Leakage detector	Gas leakage check	Yes	No	Yes
10	Charging cylinder	Refrigerant charge	(Note 2)	No	No

(Note 1) When flaring is carried out for R410A using the conventional flare tools, adjustment of projection margin is necessary. For this adjustment, a copper pipe gauge, etc. are necessary.

(Note 2) Charging cylinder for R410A is being currently developed.

General tools (Conventional tools can be used.)

In addition to the above exclusive tools, the following equipments which serve also for R22 are necessary as the general tools.

(1) Vacuum pump

Use vacuum pump by

attaching vacuum pump adapter.

(2) Torque wrench

(3) Pipe cutter

(4) Reamer

(5) Pipe bender

(6) Level vial

(7) Screwdriver (+, -)

(8) Spanner or Monkey wrench

(9) Hole core drill

(10) Hexagon wrench (Opposite side 4mm)

(11) Tape measure

(12) Metal saw

Also prepare the following equipments for other installation method and run check.

(1) Clamp meter

(3) Ilnsulation resistance tester

(2) Thermometer

(4) Electroscope

Specifications

Model	Sound press	Weight (kg)	
Model	Cooling	Heating	Main unit
MMK-UP0271HP-E	*	*	21
MMK-UP0301HP-E	*	*	21
MMK-UP0361HP-E	*	*	21
MMK-UP0271HP-TR	*	*	21
MMK-UP0301HP-TR	*	*	21
MMK-UP0361HP-TR	*	*	21


^{*} Under 70 dBA

1. SPECIFICATIONS


High wall type

Model name					MMK-UP0271HP-E(TR)	MMK-UP0301HP-E(TR)	MMK-UP0361HP-E(TR)
(kW)				(kW)	8.00	9.00	10.00
Cooling Capacity (Btu/h)			27300	30710	34120		
Heating Capacity				(kW)	9.00	10.00	11.20
neating Capacity				(Btu/h)	30710	34120	38210
	Power su	pply			1Ph. 230V(220V-240V) ~ 50Hz. & 1Ph. 220V(208V-230V) ~ 60Hz.		
Electrical	Running	current		(A)	0.30	0.46	0.56
characteristics	Power co	nsumption		(kW)	0.034	0.054	0.066
	Starting c	urrent		(A)	0.34	0.50	0.60
	Main unit	;				Gran White	
Appearance	Ceiling pa	nol	Model na	me		-	
	Cennig pa	illei	Panel Cold	or		-	
			Height	(mm)	348	348	348
	Main unit		Width	(mm)	1200	1200	1200
Outer diamension			Depth	(mm)	280	280	280
Outer diamension			Height	(mm)	-	-	-
	Ceiling panel		Width	(mm)	-	-	-
			Depth	(mm)	-	-	-
Total weight	Main unit (kg)		21	21	21		
Total Weight	Ceiling panel (kg)		-	-	-		
Heat exchanger					Finned tube		
	Fan		Cross flow fan				
Fan unit	Standard air flow		H/M/L	(m³/hr)	1200/1000/800	1500/1300/1100	1650/1350/1250
	Motor (W)		61	61	61		
Air filter				Standard filter attached (Long life filter)		lter)	
Controller			WH-TA09NE	WH-TA09NE	WH-TA09NE		
Sound pressure level H/M/L (dBA)		44/41/39	48/44/41	50/45/43			
Sound power level H/M/L (dBA)		59/56/54	63/59/56	65/60/58			
Gas side (mm) Connecting pipe Liquid (mm)		15.8	15.8	15.8			
		Liquid		(mm)	9.5	9.5	9.5
		Drain port	t	(mm)		-	

2. CONSTRUCTION VIEWS (EXTERNAL VIEWS)

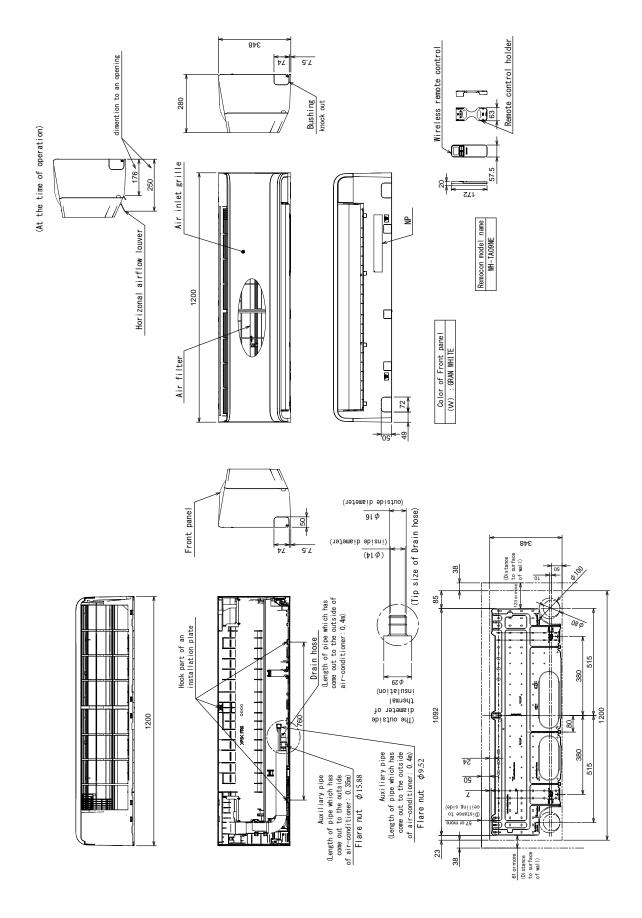

3. WIRING DIAGRAM

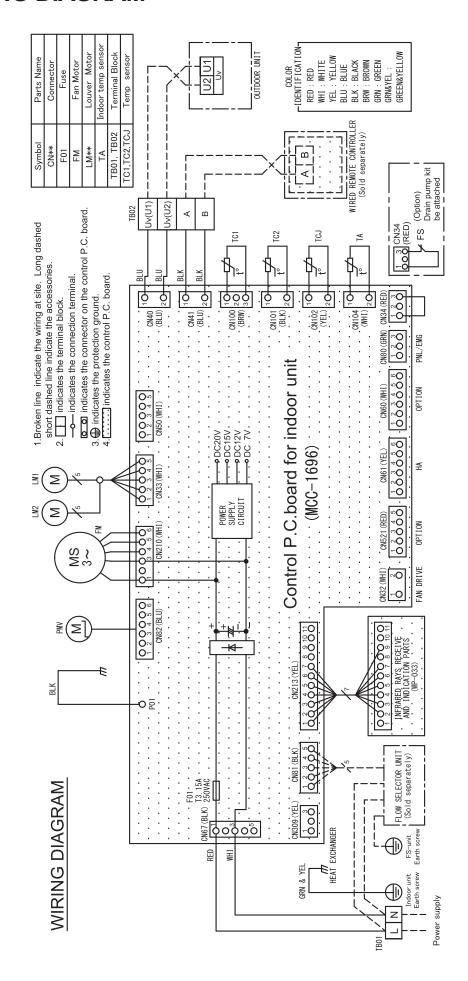


4. PARTS RATING

4-1. Parts Rating

No.	Parts Name	Туре	Specications
1	Fan motor (for indoor)	ICF-280-61-2	Output (Rated) 61W, 280V DC
2	Louver motor	MP24Z4N	4 phase, DC 12V
3	Thermo. Sensor (TA sensor)	518mm	10kΩ at 25°C
4	Heat exchanger sensor (TC sensor)	Ø6, 450mm	10kΩ at 25°C
5	Heat exchanger sensor (TCJ sensor)	Ø6, 500mm	10kΩ at 25°C


4-2. Name of Each Part

■ Name of Each Part

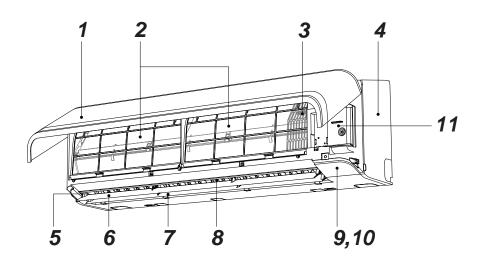

- 1. Air inlet grille
- 2. Air filter
- 3. Room temperature sensor
- 4. Front panel
- 5. Air outlet
- 6. Horizontal louver (Front)7. Horizontal louver (Back)(For change vertical air flow direction)
- Nortical louver (For change horizontal air flow direction, adjust manu-
- 8. Vertical louver (For change horizontal air flow direction, adjust manually)
- 9. Display panel
- 10.Infrared signal receiver
- 11.Earth screw (provided in the electric parts box)

5. REFRIGERANTING CYCLE DIAGRAM

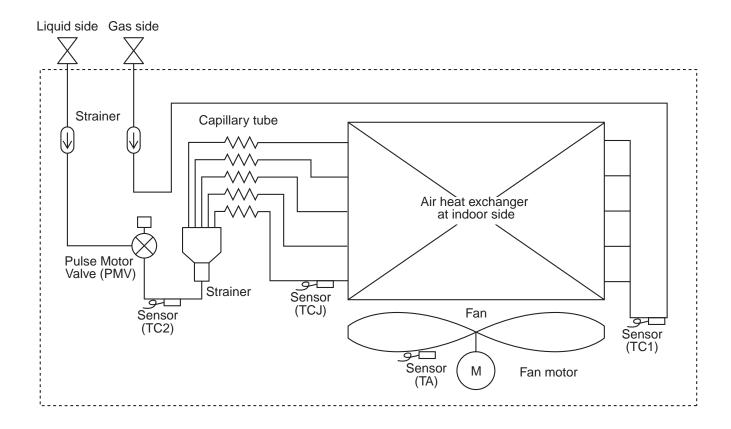

Functional part	name	Functional outline
Pulse Motor Valve	PMV	(Connector CN82 (6P): Blue) 1) Controls super heat in cooling operation 2) Controls under cool in heating operation 3) Recovers refrigerant oil in cooling operation 4) Recovers refrigerant oil in heating operation
Temp. sensor	1. TA	(Connector CN104 (2P): White) 1) Detects indoor suction temperature
	2. TC1	(Connector CN100 (3P): Brown) 1) Controls PMV super heat in cooling operation
	3. TC2	(Connector CN101 (2P): Blue) 1) Controls PMV under cool in heating operation
	4. TCJ	(Connector CN102 (2P): Yellow) 1) Controls PMV super heat in cooling operation

6. CONTROL OUTLINE

Indoor Unit Control Specifications

No.	ltem	Outline of specifications					Remarks
1	Power supply is reset.	 (1) Distinction of When the powdistinguished, distinctive res (2) Check code of When the powders. If an about after Start/Stopushed continger remote control 	 Judgment of outdoor unit Exchange of cooling-only unit Exchange of standard model with the flex model 				
2	Operation select		ne operation selected mode is se-lected		and from the	remote cor	ntroller or central controller,
		Remote contro	oller command			Control o	utline
		ST	ОР		S	tops air co	nditioner.
		F	AN			Fan oper	ation
		CC	OOL			Cooling op	eration
		D	RY			Dry oper	ation
		HE	EAT			Heating op	eration
		AL	JTO	Cooling by Ta a	or HEAT opend Ts and the	eration mode unit starts	de is automatically selected operation.
3	Room temp. control	Neither AUTO mode of the standard model nor HEAT mode selected. When a wireless remote control is used, the model Pi, Pi (Twice) and alternative flashing of "②" and "③". To release the alternative flashing, change the mode on the selection of					notified by the receiving sound
		Wired type Wireless type	17 to 30°0	_	17 to 30		
		(2) From the item operation can	code 06, the setu				
		Setup data	0	2	4	6	Heating suction temperature
		Setup temp. co	rrection +0°C	_	; +4°C	+6°C	shift
		Setup at shipr	ment				
		Setup data	2				
4	Automatic capacity control	(1) Based upon d frequency of t		tion	Ta: Room temperature Ts: Setup temperature		
5	Air volume control	frequency of the outdoor unit varies. (1) By the command from the remote controller, "HIGH (HH)", "MED (H)", or "LOW (L)" "AUTO" operation is executed. For the wireless remote controller type, "HH", "H+", "H", "L+", "L", or "AUTO" operation is executed. (2) While air speed is in AUTO mode, the air speed is changed according to the difference between Ta and Ts.					HH > H+ > H > L+ > L > LL

No.	Item	Outline of specifications	Remarks
6	Prevention of cold air discharge	(1) In heating operation, the upper limit of the fan tap is set by one with higher temperature of TC2 sensor and TCJ sensor. • When B zone has continued for 6 minutes, the operation shifts to C zone. • In defrost time, the control point is set to +6°C. A zone: OFF B zone: Over 30°C, below 32°C, UL C zone: Over 32°C, below 24°C, L D zone: Over 24°C, below 36°C, H E zone: HH	 In D and E zones, priority is given to remote controller air speed setup. In A and B zones, "*" is displayed.
7	Freeze prevention control (Low temp. release)	 (1) In cooling operation, the air conditioner operates as described below based upon temp. detected by TC1, TC2 and TCJ sensors. To prevent the heat exchanger from freezing, the operation stops. • When "J" zone is detected for 5 minutes, the forced thermo is OFF. • In "K" zone, the timer count is interrupted, and held. • When "I" zone is detected, the timer is cleared and the operation returns to the normal operation. • When the forced thermo-OFF became S0 with continuation of "J" zone, operation of the the indoor fan in LOW (L) mode until it reaches the "I" zone. It is reset when the following conditions are satisfied. Reset conditions 1) TC1 ≥ 12°C and TC2 ≥ 12°C and TCJ ≥ 12°C 2) 20 minutes passed after stop. (°C) P1	
		described below based upon temp. detected by TC2 and TCJ sensors. • When "M" zone is detected for 45 minutes, the forced thermo is OFF. • In "N" zone, the timer count is interrupted and held. • When shifting to "M" zone again, the timer count restarts and continues. • If "L" zone is detected, the timer is cleared and the operation returns to normal operation. Reset conditions 1) TC1 ≥ 12°C and TC2 ≥ 12°C and TCJ ≥ 12°C 2) 20 minutes passed after stop. (°C)	

No.	Item	Outline of specifications	Remarks
8	Cooling oil (refrigerant) recovery control	While the outdoor unit is recovering cooling oil (refrigerant), the indoor units perform the following control tasks: [common for operational (cooling thermo ON/thermo OFF/FAN), as well as nonoperational indoor units] (1) Open the indoor PMV to a certain degree. (2) Engage in recovery control for a specified period of time and return to normal cooling operation at the end of this period upon terminating the control.	Recovery operation normally takes place roughly every 2 hours. The opening position of the indoor PMV depending on the type and capacity of the indoor unit.
9	Heating refriger- ant (oil) recovery control	While the outdoor unit is recovering heating refrigerant (oil), the indoor units perform the following control tasks: (1) Open the indoor PMV to a certain degree. (2) Control the indoor fan according to the operation mode. [Indoor units operating in heating thermo ON/OFF state] Let the indoor fan continue operating, but turn it off if the temperature of the indoor heat exchanger drops. [Indoor units operating in FAN mode] Turn off the indoor fan and display "HEATING STANDBY "on the remote controller. [Non-operational indoor units] Keep the indoor fan turned off. (3) Terminate the recovery operation depending on the TC2 temperature reading. The timing of termination is determined by each indoor unit.	Recovery operation normally takes place roughly every hour. The opening position of the indoor PMV depending on the type and capacity of the indoor unit.
10	Short intermittent operation compensation control	 (1) For 5 minutes after the operation has started, the operation is continued even if entering thermostat-OFF condition. (2) However, Cooling/Heating exchange and the system protective control precede and thermostat is OFF. 	
11	Elimination of remaining heat	(1) When the air conditioner stops in the "HEAT" mode, drive the indoor fan with "LOW" mode for approx. 30 seconds.	
12	Flap control	 (1) Flap position setup (Wired type) The flap position can be set up in the following operation range. In cooling/dry operation In heating/fan operation In group operation, the flap positions can be set up collectively or individually. (2) Swing setup The swinging position can be moved in the following operation range. All modes In group operation, the swinging positions can be set up collectively or individually. (3) Fix set up (Wireless type) Keep pressing or pressing briefly the FIX button to move the flap in the desired direction. Operating angle of flap will be different during cooling, dry and heating operation. (4) When the unit stops, the flap automatically closes. (5) While the heating operation is ready, the flap automatically moves upward. 	

No.	Item				Outline of s	pecific	ations		Remarks
13	Filter sign dis (None in wirele * Provided in separately I TCB-AX21I	ess type) the aid type	 The operation time of the indoor fan is integrated and stored in memory, and the filter exchange signal is sent to the remote controller to display on the remote controller LCD after the specified time. (150H) When the filter reset signal is received form the remote controller, time of the integrated timer is cleared. In this time, if the specified time has passed, the measured time is reset and LCD display disappears. 						
14	 Operation standby Heating standby Heating standby Heating standby - Operation standby> Displayed on wired remote controller (1) When any of the DN codes listed below is displayed • "P05" - Detection of an open phase in the power supply wiring • "P10" - Detection of indoor flooding in at least one indoor unit • "L30" - Detection of an interlock alarm in at least one indoor unit • "COOL/DRY" operation is unavailable because at least one indoor unit is operating in "HEAT" mode. • "HEAT" operation is unavailable because at least one indoor unit is operating in "COOL/DRY" mode under priority cooling setting (bit 1 of SW11 on outdoor I/F P.C. board ON). (3) All indoor units not able to engage in any of the above operations stand by in thermo OFF state. (4) The indoor fan has been turned off because the system is engaged in a heat refrigerant (oil) recovery operation. - Heating standby> Displayed on wired remote controller (1) Normal thermo OFF • During heating, the indoor unit goes thermo OFF as the heating temperature setting is reached. (2) During heating, the indoor unit goes thermo OFF as the heating temperature setting is reached. (2) During heating, the fan rotates at a breeze speed					"OPERATION STANDBY "i displayed No display provided on wireless remote controller "HEATING STANDBY " displayed " "			
		indoor unit is operating in "COOL/DRY" mode under priority cooling setting (bit 1 of SW11 on outdoor I/F P.C. board ON).							
15	Selection of control mode		indoo throug (2) Settin	r unit re gh the s g detail	emote contro setting of the	ller car	be deter		• In the case of a wired remote controller, "CENTRAL CONTROL IN PROGRESS ["" is displayed (lit up) while in central control mode.
	Operation via		Opera	ation via	RBC-AMT32	E		DDC.	The display blinks when a approximation.
	TCC-Link central control	Start/stop selection	Operation mode selection	Timer setting	Temperature setting	Fan speed setting	Air flow direction setting	RBC- AMT32E display	control function inaccessible to a remote controller is chosen. • A wireless remote
	Individual	0	0	0	0	0	0		controller has the same set
	Central 1	×	0	×	0	0	0	"CENTRAL	of control functions, although there is no
	Central 2	×	×	×	×	0	0	CONTROL IN	display. When a control operation
	Central 3	0	×	0	×	0	0	PROGRESS"	is performed via a wireless
	Central 4	0	×	0	0	0	0		remote controller while in
	Central control mode, a					peep sound alert (5 times)			


No.	Item	Outline of specifications	Remarks
16	Hi POWER operation (Wireless remote control specific operations)	When you press the Hi POWER button during cooling, heating or A operation, the air conditioner will start the following operation. • Cooling operation Performs the cooling operation at 1°C lower than the setting temperature. Only when the fan speed before the Hi POWER operation is not high, the fan speed will be increased. • Heating operation Performs the heating operation at 2°C higher than the setting temperature. Only when the fan speed before the Hi POWER operation is not high, the fan speed will be increased.	
17	ECO timer operation (Wireless remote control specific operations)	When you press the ECO button during cooling, heating or A operation, the air conditioner will start the following operation. The fan speed display will indicate AUTO and low speed will be used. • Cooling operation In the operation suppression zone, where capacity is kept to the minimum, overcooling is prevented by raising the temperature setting by 1°C after 1 hour and by 2°C after 2 hours of operation. The room temperature is thus regulated between the operation suppression zone and the set temperature. • Heating operation In the operation suppression zone, where capacity is kept to the minimum, overheating is prevented by lowering the temperature setting by 1°C after 1 hour and by 2°C after 2 hours of operation. The room temperature is thus regulated between the set temperature and the operation suppression zone. Operation suppression zone Operation suppression zone Operation suppression zone Set temperature Operation suppression zone	

No.	Item	Outline of specifications	Remarks
18	PRESET operation (Wireless remote control specific operation)	To operate the air conditioner with the setting memorized. (1) Press the PRESET button. The setting memorized will be indicated and the air conditioner operates with regards to the setting. • The lamp (White) on the display panel of the indoor unit goes on, and operation starts after approximately 3 minutes. • Initial setting: MODE : AUTO Temperature : 22 (Memorized Setting) (1) Select your preferred operation (2) Press and hold PRESET PRESET button more than 3 seconds. The P make is indicated and the setting is memorized. (3) Press the PRESET button to operate the setting memorized.	PRESET TEMP. DEPT
19	DC motor	 (1) When the fan stator, positioning is performed for the starter and the rotor. (Vibrate slightly) (2) DC motor operates according to the command from the indoor controller. (Note) If the fan lock was detected, the operation of the indoor unit stops and the error is displayed. 	Check code [P12]
20	Save operation	 (1) The save operation starts when remotecontroller is turned on. (2) While the save operation is performed, segment goes on the screen of the wired remote controller. (3) The request capacity ratio is restricted to approx. 75% during save operation. (4) If the save operation was validated, the contents are held during the operation stop, the operation mode change and the resetting of power supply. Therefore the operation at the next time also will be activated with "Save operation is valid" 	RBC-AMT32E


7. CONFIGURATION OF CONTROL CIRCUIT

7-1. Indoor Controller block diagram (MCC-1696)


7-1-1. Connection of wired remote controller

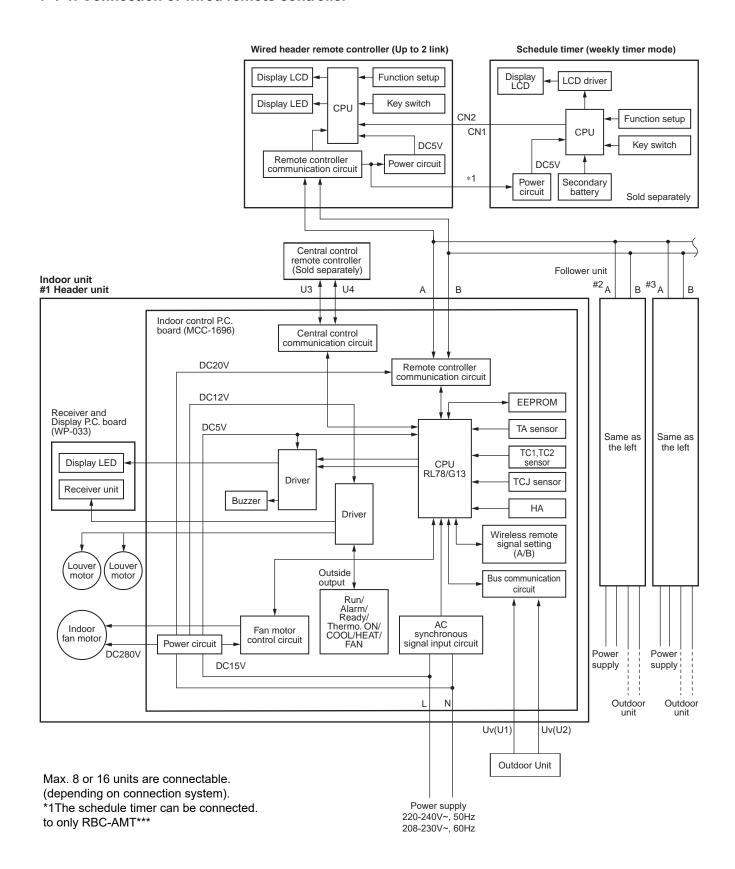

7-1-2. Connection of Wireless Remote Controller

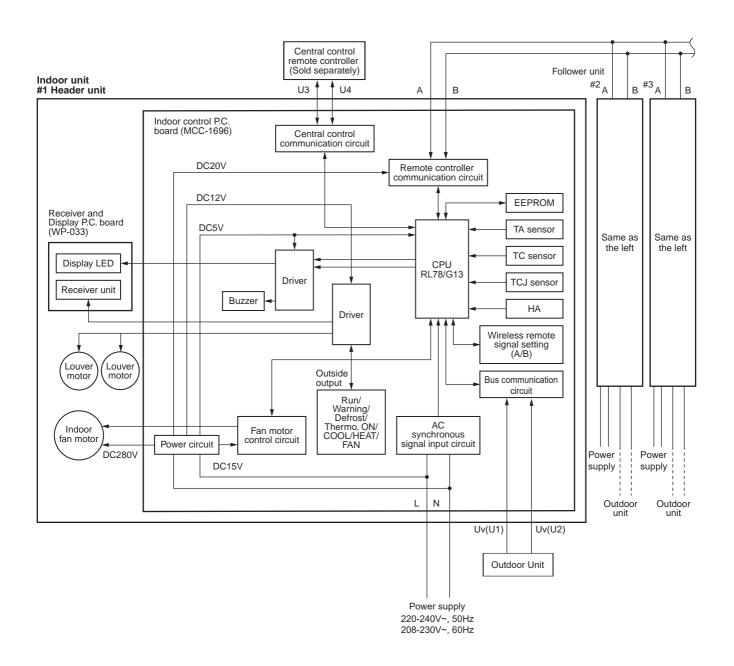

7-2. Indoor P.C. Board MCC-1696

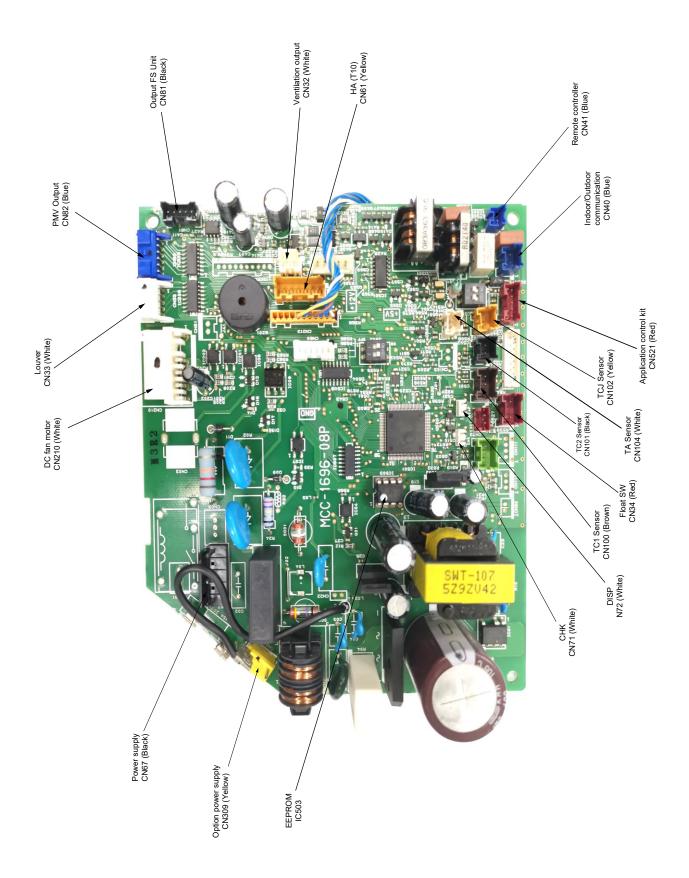

Wall-Type P.C. Board Optional Switch/Connector Specifications


Function	Connector No.	Pin No.	Specifications	Remarks
Terminator resistor provided/Not provided	SW01	Bit 1	OFF: No terminator resistor, ON: Terminator resistor provided	Setup at shipment OFF: No terminator resistor. Only 1 unit is ON during central control by custom only.
Remote controller A/B	30001	Bit 2	OFF: Remote controller A ON: Remote controller B	Setup at shipment OFF: Remote controller A
Fac autout	ONIOO	1	DC12V	Setup at shipment: Linked operation of ON with operation of indoor unit and OFF with stop
Fan output	CN32	2	Output	* The setup of single operation by FAN button on remote controller is executed from remote controller. (DN = 31)
		1	Start/Stop input	HA Start/Stop input (J01: Provided/Not provided = Pulse (At shipment from factory)/Static input switch)
		2	0V (COM)	
HA	CN61	3	Handy prohibition input	Operation stop of handy remote controller is permitted / prohibited by input.
11/4	CINOT	4	Operation output	ON during operation (Answer back of HA)
		5	DC12V (COM)	
		6	Alarm output	ON during output of alarm
		1	DC12V (COM)	
		2	Defrost output	ON during defrosting of outdoor unit
		3	Thermo-ON output	ON when Real thermo. ON (Comp. ON)
Optional output	CN60	4	Cooling output	ON when operation mode is cooling line (Cool, Dry, Cooing/Heating AUTO cooling)
		5	Heating output	ON when operation mode is heating line (Heat, Cooling/Heating AUTO heating)
		6	Fan output	ON when indoor fan is ON
	CN80	1	DC12V (COM)	At shipment from factory, the error code "L30" generates and optional error input to stop operation forcedly (DN:2A = 1) is
Outside error input		2	DC12V (COM)	controlled (Display of protection for devices attached to outside) by setup of outside error input (DN:2A = 2) for 1 minute.
		3	Filter/Option/Outside error input	* Optional error input control is set up on the remote controller.
СНК		1	Check mode input	This check is used for operation check of indoor unit.
Operation check	CN71	2	0V	(The specified operation such as indoor fan "H", drain pump ON, etc. is executed without communication with outdoor unit or remote controller.)
		1	Display mode input	Display mode, communication is enabled by indoor unit and
DISP Display mode	CN72	2	0V	remote controller only. (When power supply is turned on.)
			D 1: 1	Timer short (Usual)
EXCT	CN73	1	Demand input	Indoor unit forced thermo-OFF operation
Demand		2	0V	
Input for float	CN34	1	DC12V	Normal when between ①-③ short-circuits, but
SW	01104	2	NC	abnormal when open-circuits. (check code "P10" appears)
		3	Float SW input	
Output for	CN81	1	DC12V	
Flow selector unit	CINOT	2	EP valve output (Open collector)	
		3	Balance valve output (Open collector)	
		4	Suction valve output (Open collector)	
		5	Discharge valve output (Open collector)	
Output power	CN309	1	AC230V	This can be used as power supply for option devices.
supply for option	CINOUS	3	AC230V	
Connection		1	DC12V	Connected Application control kit (TCB-PCUC2E)
for option	CN521	2	DC5V	(
			İ	I .
P.C.board		3	Send	
•		3	Send Receive	

7-3. Test run of indoor unit

■ Cooling/Heating test run check

The test run for cooling/heating can be preformed from either indoor remote controller or outdoor interface P.C.board. Refer to the Installation Manual and Service Manual of outdoor unit for the procedure of the test run from an outdoor interface P.C.board.

♦ In case of wired remote controller

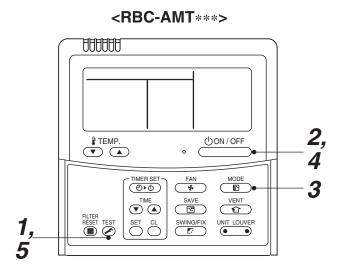


Procedure	Operation contents	
1	Push [TEST] button for 4 seconds or more. [TEST] is displayed at the display part and the mode enters in TEST mode.	TEST
2	Push [ON/OFF] button.	
3	Change the mode from [COOL] to [HEAT] using [MODE] button. • Do not use [MODE] button for other mode except [COOL]/[HEAT] modes. • The temperature cannot be adjusted during test run. • The trouble detection is performed as usual.	** TEST :
4	After test run, push [ON/OFF] button to stop the operation. (Display on the display part is same to that in Procedure 1.)	
5	Push [TEST] button to clear the TEST mode. ([TEST] display in the display part disappears and status becomes the normal stop status.)	

Note) The test run returns to the normal operation after 60 minutes.


<RBC-ASCU11-*>

Be sure to stop the air conditioner before making settings.

(Change the setup while the air conditioner is not working.)

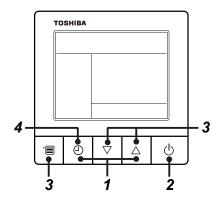


1 Push and hold OFF timer button and [\triangle] setting button simultaneously for 10 seconds or more. [TEST] is displayed on the display part and the test run is permitted.

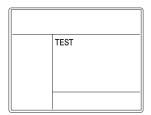

- **2** Push ON/OFF button.
- - Do not run the air conditioner in a mode other than [Cool] or [Heat].
 - The temperature setting function does not work during test run.
 - The check code is displayed as usual.
- 4 After the test run, push OFF timer button to stop a test run.

([TEST] disappears on the display and the air conditioner enters the normal stop mode.)

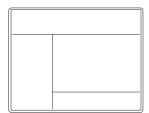

♦ In case of wireless remote controller

1 Turn on the power of the air conditioner.

When power is turned on for the first time after installation, it takes approx. 5 minutes until the remote controller becomes available. In the case of subsequent power-on, it takes approx. 1 minute until the remote controller becomes available.

Execute a test run after the predetermined time has passed.

2 Push "ON/OFF" button on the remote controller, select [Cool] or [Heat] with "MODE" button, and then select [IMM HIGH] with "FAN" button.

3

Cooling test run	Heating test run
Set the temperature to 17 °C with the temp. setup buttons.	Set the temperature to 30 °C with the temp. setup buttons.

4

Cooling test run	Heating test run
After confirming a signal receiving sound "beep" immediately set the temperature to 18 °C with the temp. setup buttons.	After confirming a signal receiving sound "beep" immediately set the temperature to 29 °C with the temp. setup buttons.

5

Cooling test run	Heating test run
After confirming a signal receiving sound "beep" immediately set the temperature to 17 °C with the temp. setup buttons.	After confirming a signal receiving sound "beep" immediately set the temperature to 30 °C with the temp. setup buttons.

6 Repeat procedures $4 \rightarrow 5 \rightarrow 4 \rightarrow 5$.

Indicators "Operation" (green), "Timer" (green), and "Ready" (orange) in the wireless receiver section flash in approx. 10 seconds, and the air conditioner starts operation. If any of these indicators does not flash, repeat procedures 2 to 5.

7 Upon completion of the test run, push "ON/OFF" button to stop operation.

<Overview of test run operations using the wireless remote controller>

▼ Cooling test run:

ON/OFF
$$\rightarrow$$
 17 °C \rightarrow 18 °C \rightarrow 17 °C \rightarrow 18 °C \rightarrow 17 °C \rightarrow 18 °C \rightarrow 17 °C \rightarrow (test run) \rightarrow ON/OFF

▼ Heating test run:

ON/OFF \rightarrow 30 °C \rightarrow 29 °C \rightarrow 30 °C \rightarrow 29 °C \rightarrow 30 °C \rightarrow 29 °C \rightarrow 30 °C \rightarrow (test run) \rightarrow ON/OFF

Check function for operation of indoor unit (Functions at indoor unit side)

This function is provided to check the operation of the indoor unit singly without communication with the remote controller or the outdoor unit. This function can be used regardless of operation or stop of the system. However, if using this function for a long time, a trouble of the equipment may be caused. Limit using this function within several minutes.

[How to operate]

- 1) Short-circuit CHK pin (CN71 on the indoor P.C. board).
 - The operation mode differs according to the indoor unit status in that time.
 - Normal time: Both float SW and fan motor are normal.
 - Abnormal time: Either one of float SW or fan motor is abnormal.
- 2) Restricted to the normal time, if short-circuiting DISP pin (CN72 on the indoor P.C. board) in addition to short-circuit of CHK pin (CN71 on the indoor P.C. board), the minimum opening degree (30 pls) can be set to the indoor PMV only.
 - When open DISP pin, the maximum opening degree (1500 pls) can be obtained again.
 - For the detailed positions of CHK pin (CN71 on indoor P.C. board) and DISP pin (CN72 on indoor P.C. board),
 - refer to the indoor P.C. board.

[How to clear]

Open CHK pin. While the system is operating, it stops once but automatically returns to operation after several minutes.

		Short-circuit of CHK pin			
	Norma	Normal time			
	DISP pin open	DISP pin short circuit	- Abnormal time		
Fan motor	(H)	(H)	Stop		
Indoor PMV (*)	Max. opening degree (1500 pls)	Min. opening degree (30 pls)	Min. opening degree (30 pls)		
Louver	Vertical	Vertical	Immediate stop		
Communication	All ignored	All ignored	All ignored		
P.C. board LED	Lights	Lights	Flashes		

^{*} The actual indoor PMV opening degree may differ from the described values due to adjustment depending on PMV types.

• To exchange the indoor PMV coil, set the indoor PMV to Max. opening degree.

8. APPLIED CONTROL

8-1. Method to set indoor unit function DN code

(When performing this task, be sure to use a wired remote controller.)

Procedure

Be sure to stop the air conditioner before making settings

<RBC-AMT***>


1 Push the ⊘ + ⊖ + ⊖ buttons simultaneously and hold for at least 4 seconds.

The unit No. displayed first is the address of the header indoor unit in group control.


Then the fan and louver of the selected indoor unit move.

- 2 Each time the button (left side of the button) is pressed, one of the indoor unit Nos. under group control is displayed in turn. Then the fan and louver of the selected indoor unit move.
- 3 Use the ⊕ button to select the CODE No. (DN code) of the desired function.
- 4 Use the a button to select the desired SET DATA associated with the selected function.
- **5** Push the ^{SET} button. (The display changes from flashing to steady.)
 - To change the selected indoor unit, go back to step 2.
 - To change the selected function, go back to step 3.
- **6** When the $\stackrel{\frown}{\bigcirc}$ button is pushed, the system returns to normal off state.


<RBC-ASCU11-*>

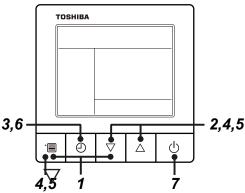


- 1 Push and hold menu button and [] setting button simultaneously for 10 seconds or more.
 - After a while, the display flashes as shown in the figure. "ALL" is displayed as indoor unit numbers during initial communication immediately after the power has been turned on.

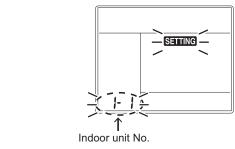

- 2 Each time [] [] setting button is pushed, indoor unit numbers in the group control change cyclically. Select the indoor unit to change settings for.
 - The fan of the selected indoor unit runs . The indoor unit can be confirmed for which to change settings.

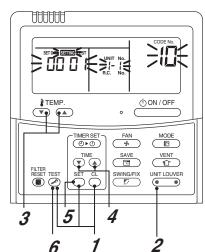

 $oldsymbol{3}$ Push OFF timer button to confirm the selected indoor unit.

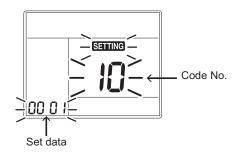

- **4** Push the menu button to make Code No. [**] flash. Change Code No. [**] with [∇] [\triangle] setting button.
- **5** Push the menu button to make Set data [****] flash. Change Set data [****] with $[\nabla] [\triangle]$ setting button.
- 6 Push OFF timer button to complete the set up.
 - To change other settings of the selected indoor unit, repeat from Procedure 4.
- 7 When all the settings have been completed, push ON/OFF button to finish the settings. (Return to the normal mode)
 - " SETTING " flashes and then the display content disappears and the air conditioner enters the normal stop mode. (The remote controller is unavailable while " SETTING " is flashing.)
 - To change settings of another indoor unit, repeat from Procedure 1.

Indoor unit function Code No. (DN Code) table

(includes functions needed to perform applied control on site)

DN	Item	Description	At shipment
	Filter display delay timer	0000: None 0001: 150H	Depending on model
01		0002: 2500H 0003: 5000H	type
	D: 4 4 6 6 6 14	0004: 10000H	2000 01 1 1
02	Dirty state of filter	0000: Standard	0000: Standard
	Central control address	0001: High degree of dirt (Half of standard time) 0001: No.1 unit to 0064: No.64 unit TCC-LINK	00Un/0099: Unfixed *1
	Central control address	0001: No.1 unit to 0128: No.128 unit TU2C-LINK	
03		00Un: Unfixed (When using U series remote controller)	
		0099: Unfixed (Other than U series remote controller)	
04	Specific indoor unit	0000: No priority 0001: Priority	0000: No priority
04	priority		
	Heating temp. shift	0000: 0 °C 0001: +1 °C	Depending on model
06		0002: +2 °C to 0010: +10 °C	type
		(Up to +6 recommended)	
	Demand control	0000: Demand input 0001: O2 sensor input 0002: Card input setup.3 0003: Fire alarm input	0000: Demand input
	(CN73 / CN4)	0002: Card input setup.3 0003: Fire alarm input 0004: Card input setup.4 (Normal open)	
0b		0005: Fire alarm input 0006: Notice cord (202)	
		(Normal close) 0008: Card input setup.1	
		0007: Card input setup.5	
		0009: Card input setup.2	
١	Existence of [AUTO]	0000: Provided	0001: Not provided
0d	mode	0001: Not provided	
	O a d'a manda	(Automatic selection from connected outdoor unit)	
0F	Cooling only	0000: Heat pump 0001: Cooling only (No display of [AUTO] [HEAT])	0000: Heat pump
	Туре	Refer to Type DN code "10" list	Depending on model
10	Type	There is type by code to list	type
11	Indoor unit capacity	0000: Unfixed 0001 to 0034	According to capacity
11		Refer to Indoor Unit Capacity DN code "11" list	type
	Line address	0001: No.1 unit to 0064: No.30 unit TCC-LINK	00Un/0099: Unfixed *1
12		0001: No.1 unit to 0128: No.128 unit TU2C-LINK	
		00Un: Unfixed (When using U series remote controller)	
	Indoor unit address	0099: Unfixed (Other than U series remote controller) 0001: No.1 unit to 0064: No.64 unit TCC-LINK	00Un/0099: Unfixed *1
	indoor unit address	10001: No.1 unit to 0004: No.128 unit TU2C-LINK	
13		00Un: Unfixed (When using U series remote controller)	
		0099: Unfixed (Other than U series remote controller)	
	Group address	0000: Individual 0001: Header unit of group	00Un/0099: Unfixed *1
14		0002: Follower unit of group	
'~		00Un: Unfixed (When using U series remote controller)	
		0099: Unfixed (Other than U series remote controller)	
19	Louver type	0000: No louver 0001: Swing only	Depending on model
	(Air direction adjustment) Temp difference of	0004: (4-way Air Discharge Cassette type, etc.) 0000: 0 °C	type 0003: 3 °C
	[AUTO] mode selection	[0000.0 C 10 0010.10 C(18±5 C)	(Ts ±1.5 °C)
1E	COOL → HEAT,		(10 ± 1.0 0)
	HEAT → COOL	Ts:Remote controller setup temp.	
20	Automatic restart of	0000: None 0001: Restart	0000: None
28	power failure		
2A	Selection of option/Trouble	0000: Filter input 0001: Alarm input	0002: None
	input (TCB-PCUC2E: CN3)	0002: None (Air washer, etc.)	
	HA terminal (CN61)	0000: Usual 0001: Card input setup.1	
2E	select	0002: Fire alarm input 0003: Card input setup.2 (arbiter contact)	(4) (HA terminal)
		0004: Notice cord (201) 0005: Card input setup.5	
31	Ventilating fan control	0000: Unavailable 0001: Available	0000: Unavailable
	Ventilating fan control		
32	TA sensor selection	0000: Body TA sensor 0001: Remote controller se	nsor 0000: Body TA sensor

DN	Item	Desc	At shipment	
33	Temperature unit select	0000: °C	0001: °F	0000: °C
5d	External static pressure High-ceiling adjustment (Air flow selection)	Refer to next page.		Depending on model type
60	Timer setting (wired remote controller)	0000: Available (can be performed)	0001: Unavailable (cannot be performed)	0000: Available
77	Dual set point	0000: Unavailable	0002: Available	0000: Unavailable
79	Alarm output setup of the header unit	0000: Not including the state of following unit	0001: Including the state of following unit	0000: Not including the state of following unit
b3	Soft cooling	0000: Unavailable	0001: Available	0001: Available
b5	Occupancy sensor/ Wireless Remote controller Provided / None	0000: None 0002: Wireless remote controll	0001: Occupancy sensor provided er provided	0000: None
b6	Occupancy sensor Enable / Invalid (Absence time judgment time)	0000: Invalid 0002: 60min. 0005: 150min.	0001: 30min. 0004: 120min.	0002: Enable (60 min.)
b7	Occupancy sensor operation at absent time	0000: Stand by	0001: operation stop	0000: Stand by
CF	4-way cassette type model name	0000: Standard Model	0001: larger case model	Depending on model type
d0	Whether the power saving mode can be set by the remote controller	0000: Invalid	0001: Valid	0001: Valid
E0	Destination	0000: Japan 0004: Global	0003: China	0004: Global
E6	Wireless remote controller A-B selection	0000: A	0001: B	0000: A
F0	Swing mode	0000 : Out of sync swing 0002 : Dual swing	0001 : 4-way sync swing 0003 : Cycle swing	0000: Not including 4-way 0001: 4-way (Compact)
F1	Louver fixed position (Louver No.1)	0000 : Release 0005 : Downward discharge po	0001 : Horizontal discharge position osition	0000: Not fixed
F2	Louver fixed position (Louver No.2)	0000 : Release 0005 : Downward discharge po	0001: Horizontal discharge position	0000: Not fixed
F3	Louver fixed position (Louver No.3)	0000 : Release 0005 : Downward discharge po	0001 : Horizontal discharge position	0000: Not fixed
F4	Louver fixed position (Louver No.4)	0000 : Release 0005 : Downward discharge po	0001 : Horizontal discharge position	0000: Not fixed
F6	Presence of Application control kit (TCB-PCUC2E)	0000: None	0001: Exist	0000: None
FC	Communication protocol *2	0000:TCC-LINK	0003:TU2C-LINK	0000: TCC-LINK
Fd	Priority operation mode (FS unit)	0000: Heating	0001: Cooling	0000: Heating
FE	FS unit address		,	00Un/0099: Unfixed *1

DN	Item	Description	At shipment
180	Notice code number 01	0000: None 0001 ~ 0255 : Notice code	0000: None
181	Notice code number 02	0129 : Notice code (201) 0130 : Notice code (202) (0001 ~ 0255 : TU2C-LINK only)	0000: None
182	Notice code number 03	(000) 0200 : 1020 2mm(0mj)	0000: None
183	Notice code number 04		0000: None
184	Notice code number 05		0000: None
185	Notice code number 06		0000: None
186	Notice code number 07		0000: None
187	Notice code number 08		0000: None
188	Notice code number 09		0000: None
189	Notice code number 10		0000: None
103	Remote controller	0000:Use 0001:Do not use	0000 : Use
1FB	Central device control state	0000: No central device control (Remote controller use is possible) 0001: Central device control (Remote controller use is impossible)	0000: No central device control
1FC	Indoor Unit terminating resistance	0000: OFF 0001: ON	0000: OFF

^{*1} Display order of "00Un" and "0099" varies depending on remote controller models or communication types.

For Central control address (DN [03]), Indoor unit address (DN [13]), FS unit address (DN [FE])

Remote controller	Communication type	Display order		
U series	TU2C-LINK	··· ⇔ 0128 ⇔ 00Un ⇔ 0001 ⇔ ···		
U Series	TCC-LINK	··· ⇔ 0064 ⇔ 00Un ⇔ 0001 ⇔ ···		
Other than U series	TCC-LINK	··· ⇔ 0064 ⇔ 0099 ⇔ 0001 ⇔ ···		

For Line address (DN [12])

	/			
Remote controller	Communication type	Display order		
Lloorion	TU2C-LINK	··· ⇔ 0128 ⇔ 00Un ⇔ 0001 ⇔ ···		
U series	TCC-LINK	$\cdots \Leftrightarrow 0030 \Leftrightarrow 00Un \Leftrightarrow 0001 \Leftrightarrow \cdots$		
Other than U series	TCC-LINK	$\cdots \Leftrightarrow 0030 \Leftrightarrow 0099 \Leftrightarrow 0001 \Leftrightarrow \cdots$		

For Group address (DN [14])

Remote controller	Communication type	Display order		
U series	TU2C-LINK	··· ⇔ 0002 ⇔ 00Un ⇔ 0000 ⇔ ···		
U Series	TCC-LINK	··· \$\ightarrow\$ 0002 \$\ightarrow\$ 00001 \$\ightarrow\$ 0000 \$\ightarrow\$ ···		
Other than U series	TCC-LINK	$\cdots \Leftrightarrow 0002 \Leftrightarrow 0099 \Leftrightarrow 0000 \Leftrightarrow \cdots$		

^{*2} Communication protocol can be automatically switched with the setup in the outdoor unit during installation.

Type DN code "10"

Value	Туре	Model		
08	High Wall	MMK-UP0271, 0301, 0361		

Indoor Unit Capacity DN code "11"

Value	Capacity		
0000*	Disable		
12	0271		
13	0301		
15	0361		

8-2. Applied control of indoor unit

Control system using Remote location ON/OFF control box (TCB-IFCB-4E2)

Wiring and setting

• In the case of group control, the control system functions as long as it is connected to one of the indoor units (control P.C. board) in the group. If it is desired to access the operation and trouble statuses of other units, relevant signals must be brought to it from those units individually.

1. Control items

(1) Start / Stop input signal Start / stop of unit

(2) In-operation signal Output present while unit in normal operation

(3) Check code Output present while alarm (e.g. serial communication trouble or operation of


protective device for indoor / outdoor unit) being activated

2. Wiring diagram of control system using Remote location ON/OFF control box (TCB-IFCB-4E2)

Input IFCB-4E2: No-voltage ON / OFF serial signal

Output No-voltage contact (in-operation and check code indication)

Contact capacity: Max. AC 240 V, 0.5 A

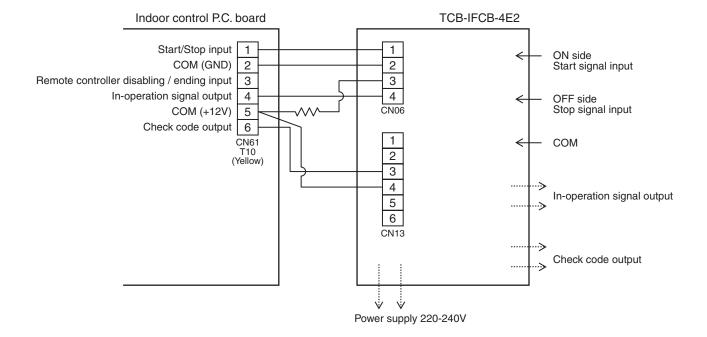

Ventilating fan control from remote controller

[Function]

- The start / stop operation can be operated from the wired remote controller when air to air heat exchanger or ventilating fan is installed in the system.
- The fan can be operated even if the indoor unit is not operating.
- Use a fan which can receive the no-voltage normally-open contact as an outside input signal.
- In a group control, the units are collectively operated and they cannot be individually operated.

1. Operation

Handle a wired remote controller in the following procedure.

- * Use the wired remote controller during stop of the system.
- * Be sure to set up the wired remote controller to the header unit. (Same in group control)
- * In a group control, if the wired remote controller is set up to the header unit, both header and follower units are simultaneously operable.

<RBC-AMT***>

1 Push concurrently $\stackrel{\text{SET}}{\bigcirc} + \stackrel{\text{CL}}{\bigcirc} + \stackrel{\text{TEST}}{\bigcirc}$ buttons for 4 seconds or more.

The unit No. displayed firstly indicates the header indoor unit address in the group control. In this time, the fan of the selected indoor unit turns on.

Every pushing button (left side of the button), the indoor unit numbers in group control are displayed successively.

In this time, the fan of the selected indoor unit only turns on.


- 3 Using the setup temp or button, specify the CODE No. 31.
- 4 Using the timer time ▼ or ♠ button, select the SET DATA. (At shipment: 0000)

The setup data are as follows:

SET DATA Handling of operation of air to air heat exchanger or ventila							
0000	Unavailable (At shipment)						
000 (Available						

- 5 Push $\stackrel{\text{SET}}{\bigcirc}$ button. (OK if display goes on.)
 - To change the selected indoor unit, go to the procedure 2).
 - To change the item to be set up, go to the procedure 3).
- 6 Pushing returns the status to the usual stop status.
- * The ventilating fan control may be unavailable depending on the remote controllers. (RBC-ASCU11-* does not have this function.)

2. Wiring

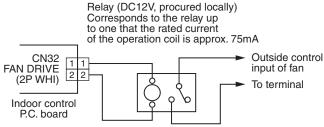

Note) Determine the cable length between the indoor control P.C. board and the relay within 2m.

Auto-off feature control


[Function]

- This function controls the indoor units individually. It is used when the start operation from outside is unnecessary but the stop operation is necessary.
- A card switch box or card lock helps protect customers from forgetting to turn off the indoor unit. (not including the following Card Input 3)
- It is connected with connector on the indoor control P.C. board, and switched with the Code No. and jumper wire setup for use.
- Available connectors are CN61 or CN73. For models without CN73, CN4 on the optional Application control kit (TCB-PCUC2E) can be used.
- * Leaving-ON prevention control cannot be set with both CN61 and CN73 (CN4). If both of them are set, CN73 (CN4) setting automatically turns to a factory default.

[Setup method]

(1) Wiring


Connecting to the CN61 connector

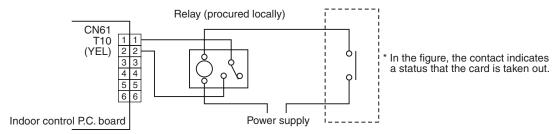

Outside contact (Card switch box, etc: Procured locally)

NOTE) Determine the cable length between the indoor control P.C. board and the relay within 3m.

Connecting to the Application control kit (TCB-PCUC2E, connector: CN4)

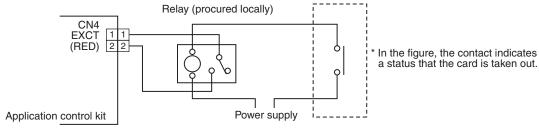

Outside contact (Card switch box, etc: Procured locally)

NOTE) Determine the cable length between the indoor control P.C. board and the relay within 3m.

(2) Code (DN) setup

Set Code (DN) according to "8-1. Method to set indoor unit function DN code".

Connector	Jumper wire (J01)	Code No. (DN)	Set data	Function
			0000 (Factory default)	"HA normal setup" (pulse)
	Short-circuit		0001	"Card Input 1" setup
	(Factory default)	002E	0003	"Card Input 2" setup
CN61			0005	"Card Input 5" setup
	Open-circuit (cut)		0000 (Factory default)	"HA normal setup" (Static)
			0001	"Card Input 3" setup
			0003	"Card Input 4" setup
			0000 (Factory default)	"EXCT demand" setup (Forced thermostat-OFF)
	Short-circuit		0002	"Card Input 3" setup
CN73	(Factory default)	000b	0004	"Card Input 4" setup
(CN4)	or Open-circuit (cut)		0007	"Card Input 5" setup
	Open-circuit (cut)		0008	"Card Input 1" setup
			0009	"Card Input 2" setup

^{*} If you set "Card Input 1 to 5" for Code No. of CN61 and CN73, Code No. 000b setup becomes unavailable and the functions of Card Input 1 to 5 in CN73 cannot be used.

[Control items]

Function	External contact terminal							
Function	Close (Status that card is inserted)	Open (Status that card is taken out)						
Card Input 1	Manual prohibition release (Manual operation)	Manual prohibition (Operation stop)						
Card Input 2	Manual prohibition release (Automatic operation)	Manual prohibition (Operation stop)						
Card Input 3	Operation status continues (Do nothing)	Operation status continues and setting temperature changes (COOL/DRY: 29°C, HEAT: 18°C)						
Card Input 4	Manual prohibition release (The status returns to operating condition before removing the card.)	Manual prohibition (Operation stop)						
Card Input 5	1) To change a setting temperature by changing data at DN code No. 172 to 174. 2) The operation mode can be set by changing data (0000, 0001, 0002) at DN code No. 16b. 0000: operation mode is the same at the current mode. (factory setting default) 0001: operation mode returns to the previous mode when card was inserted. (in case of the previous mode is off operation, the operation mode is also off.) 0002: operation mode starts at the same previous mode when the card was inserted. (the operation mode is on operation even the previous mode is off operation.) See contents below for DN settings and detailed operations.	1) To change a setting temperature, fan speed and wind direction by changing data at DN code No. 16C to 171. 2) The operation mode can be set by changing data (0000, 0001) at DN code No. 16A. 0000: operation mode is the same at the current mode. (factory setting default) 0001: operation automatically starts. See contents below for DN settings and detailed operations.						

^{*} For the card switch box that does not involve contact operation described above, convert signals with a relay including a normally-closed contact.

[Card input setup.5 Code (DN)]

DN	Item	Description	At shipment
16C	Open mode Set temp. (Cool, Dry)	-0015 : -15°C to 0060 : 60°C	0027 : 27°C
16d	Open mode Set temp. (Heat)	-0015 : -15°C to 0060 : 60°C	0020 : 20°C
16E	Open mode Set temp. (Auto)	-0015 : -15°C to 0060 : 60°C	0024 : 24°C
16F	Open mode Fan speed (All operation mode)	0000 : No change	0000 : No change
170	Open mode Wind direction (Cool, Dry, Fan)	0000 : No change	0000 : No change
171	Open mode Wind direction (Heat)	0000 : No change	0000 : No change
16A	Open mode Operation	0000 : No change 0001 : Run operation	0000 : No change
172	Close mode Set temp. (Cool, Dry)	-0015 : -15°C to 0060 : 60°C	0024 : 24°C
173	Close mode Set temp. (Heat)	-0015 : -15°C to 0060 : 60°C	0024 : 24°C
174	Close mode Set temp. (Heat)	-0015 : -15°C to 0060 : 60°C	0024 : 24°C
16b	Close mode Operation	0000 : No change 0001 : Card ON mode operation 0002 : Run operation (Card ON mode setting)	0000 : No change

[The example of Card Input 5 setting]


	Code No. (DN) setting se. [16A] [16b] [16C] [16d] [16F] [170] [171] [172] [173]									External contact terminal		
Case.	[16A] data	[16b] data	[16C] data	[16d] data	[16F] data	[170] data	[171] data	[172] data	[173] data	Close (Status that card is inserted)	Open (Status that card is taken n out)	
(1)	0000	0000	0027	0020	0000	0000	0000	0024	0024	The operation mode continues running at the same as the current mode. The setting temperature of cooling/dry and heating mode is changed to 24°C and 24°C respectively due to change in code No. 172, 173.	The operation mode continues running at the same as the current mode. The setting temperature of cooling/dry and heating mode is changed to 27°C and 20°C respectively due to change in code No. 16C, 16d.	
(2)*	0000	0001	0027	0020	0003	0001	0001	0024	0024	The operation mode is running at the same mode as the last time when the card was inserted due to change in code no. 16b. The operation mode will be off if the mode at the last time was in off operation. Also, the fan speed will the same as the last time when the card is inserted. The setting temperature of cooling/dry and heating mode is changed to 24°C and 24°C respectively due to change in code No. 172, 173.	The operation mode continues running at the same as the current mode. The setting temperature of cooling/dry and heating mode is changed to 27°C and 20°C respectively due to change in code no. 172, 173. The fan speed for all operation modes is changed due to change in code no.16F. The wind direction of Cooling/dry/fan and heating mode are changed due to change in code No. 170, 171 respectively.	
(3)*	0000	0002	0027	0020	0003	0001	0001	0024	0024	The operation mode is running at the same mode as the last time when the card was inserted. Also, the operation mode will be on even the mode was in off operation at the last time due to change in code no. 16B. The fan speed will the same as the last time when the card is inserted. The setting temperature of cooling/dry and heating mode is changed to 24°C and 24°C respectively due to change in code No. 172, 173.	Same operation as case (2)	
(4)	0001	0000	0027	0020	0003	0001	0001	0024	0024	The operation mode continues running at the same as the current mode. The setting temperature of cooling/dry and heating mode is changed to 24°C and 24°C respectively due to change in code No. 172, 173.	Due to change in code no. 16A, the operation mode will be as below. When the operation is ON, the operation mode will continue running at the same as the current mode. When the operation is OFF, the air conditioner will turn on automatically. The setting temperature of cooling/dry and heating mode is changed to 27°C and 20°C respectively due to change in code No. 172, 173. The fan speed for all operation modes is changed due to change in code no.16F. The wind direction of Cooling/dry/fan and heating mode are changed due to change in code No. 170, 171 respectively.	

^{*} The history operation mode is only recorded when the card is inserted even if the operation mode is changed when the card is taken out, there is no related to the history operation mode.

■ Power peak-cut from indoor unit

When the relay is turned on, a forced thermostat OFF operation starts.

• For indoor P.C. boards other than MCC-1643, the "EXCT" is input with connector CN73 on the P.C. board. MCC-1643 requires Application control kit (TCB-PCUC2E) for input of a forced thermostat OFF "EXCT". Please refer to the manual of Application control kit for a detailed setting.

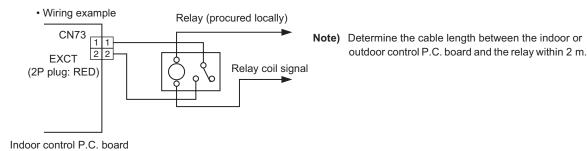

■ Notice code signal

Notice code is a function dedicated to TU2C-Link communication. See service manual for u series outdoor unit for details of Notice code.


[Function]

- Notice Code is issued if there is signal input to connector of outdoor unit P.C. board. This can be used in cases such as when confirming state of outdoor unit (filter clogging, etc.) by air conditioner system.
- Connector that can be used is CN61 or CN73. CN4 of separately-sold "option input/output P.C. board (TCB-PCUC2E)" can be used for models that do not have CN73.
- Used by switching functions with settings of Code No. (DN Code).
- Notice Code is continuously issued while input signal is ON.

[Setup method]


(1) Wiring

Connecting to the CN61 connector

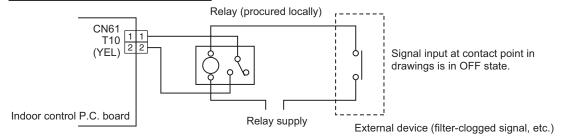

Note) Determine the cable length between the indoor control P.C. board and the relay within 3m.

Connecting to the Application control kit (TCB-PCUC2E, connector: CN4)

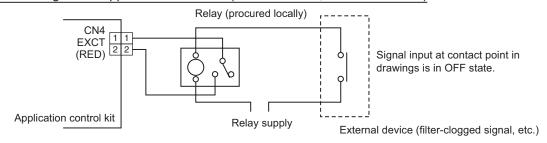

Note) Determine the cable length between the indoor control P.C. board and the relay within 3m.

(2) Code (DN) setup and Notice code

Set Code (DN) according to "8-1. Method to set indoor unit function DN code".

Connector	Code No. (DN)	Set data	Notice code
CN61	002E	0004	201
CN73 (CN4)	000B	0006	202

^{*} Setting of Code No. (DN Code) is necessary to display Notice code mark at remote controller.

Set data corresponding to Notice code to be used to one of Code No. 180 to 189, in accordance with following table.

In case where data other than 0000 is already set, set to other Code No. (DN Code).


Code No. (DN)	Set data	Notice code		
	2222	0==		
0180	0000	OFF (Factory default)		
to	0129	201		
	0120	201		
0189	0130	202		

^{*} It may take up to ten minutes to be displayed on remote controller after Notice code is issued.

■ Manual address setting using the remote controller

Procedure when setting indoor units' addresses first under the condition that indoor wiring has been completed and outdoor wiring has not been started (manual setting using the remote controller)


▼ Wiring example of 2 refrigerant lines

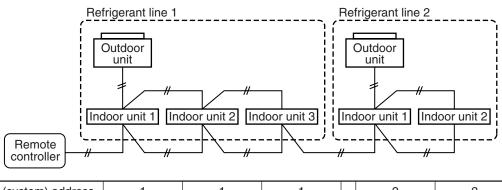

Line (system) address	1	1	1	2	2
Indoor unit address	1	2	3	1	2
Group address	1 Header unit	2 Follower unit	2 Follower unit	2 Follower unit	2 Follower unit

In the example above, disconnect the remote controller connections between the indoor units and connect a wired remote controller to the target unit directly before address setting.

<RBC-AMT***>

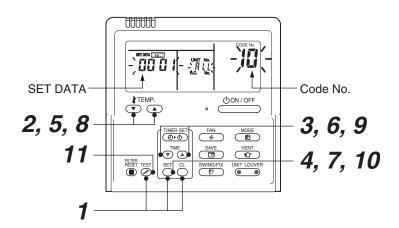

Pair the indoor unit to set and the remote controller one-to-one.

Turn on the power.

1 Push and hold the ○ , ○ and ▷ buttons at the same time for more than 4 seconds. LCD starts flashing.

<Line (system) address>

- **2** Push the TEMP. \bigcirc / \bigcirc buttons repeatedly to set the CODE No. to \bigcirc .
- **3** Push the TIME \(\bar{\cup} \) / \(\text{\text{\$\text{\text{\$\text{\text{\$\ext{\$\text{\$\text{\$\text{\$\text{\$\text{\$\text{\$\text{\$\text{\$\text{\$\text{\$\text{\$\text{\$\text{\$\text{\$\text{\$\text{\$\text{\$\text{\$\text{\$\exitt{\$\text{\$\exitt{\$\text{\$\text{\$\text{\$\text{\$\text{\$\text{\$\text{\$\text{\$\exitt{\$\text{\$\$\exittit{\$\text{\$\$\text{\$\text{\$\text{\$\text{\$\text{\$\text{\$\text{\$\text{\$\text{\$\text{\$\$\text{\$\$\text{\$\text{\$\text{\$\text{\$\text{\$\text{\$\text{\$\text{\$\text{\$\text{\$\text{\$\text{\$\text{\$\text{\$\text{\$\text{\$\text{\$\text{\$\exitt{\$\text{\$\text{\$\text{\$\text{\$\text{\$\text{\$\text{\$\text{\$\exitit{\$\text{\$\text{\$\text{\$\text{\$\text{\$\text{\$\text{\$\text{\$\
- **4** Push

 → button.

 (It is OK if the display turns on.)

<Indoor unit address>

- **5** Push the TEMP. \bigcirc / \bigcirc buttons repeatedly to set the CODE No. to \bigcirc .
- 6 Push the TIME ▼ / ♠ buttons repeatedly to set an indoor unit address.
- 7 Push the button.
 (It is OK if the display turns on.)

<Group address>

- **8** Push the TEMP. \bigcirc / \bigcirc buttons repeatedly to set the CODE No. to $\mbox{\em H}$.
- 9 Push the TIME 🔻 / 📤 buttons repeatedly to set a group address. If the indoor unit is individual, set the address to 🗓 🗓 ; header unit, 🗓 🗓 🗓 ; follower unit, 🗓 🗓 🖟 .

Individual : 0000
Header unit : 0001
Follower unit : 0002
In case of group control

10 Push the button.


(It is OK if the display turns on.)


11 Push the button.

The address setting is complete.

(SETTING flashes. You can control the unit after SETTING has disappeared.)

<RBC-ASCU11-*>

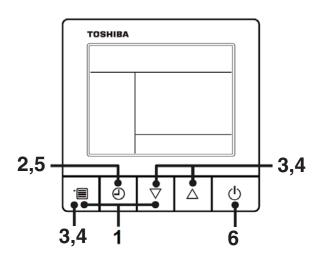

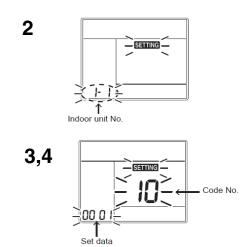

- **1** Push and hold the [menu + ∇] buttons at same time for more than 10 seconds.
- **2** Push the [OFF timer] button to confirm the selected indoor unit.

<Line (system) address>

- **3** Push the [menu] button until the CODE No. flashes. And using the [∇ or \triangle] buttons, specify the CODE No.12.
- **4** Push the [menu] button until the SET DATA flashes. And using the [∇ or \triangle] buttons, set a system address.
- **5** Push the [OFF timer] button to confirm the SET DATA.

<Indoor unit address>

- **3** Push the [menu] button until the CODE No. flashes. And using the [∇ or \triangle] buttons, specify the CODE No.13.
- **4** Push the [menu] button until the SET DATA flashes. And using the [∇ or \triangle] buttons, set an indoor unit address.
- **5** Push the [OFF timer] button to confirm the SET DATA.

<Group address>

- **3** Push the [menu] button until the CODE No. flashes. And using the [∇ or \triangle] buttons, specify the CODE No.14.
- **4** Push the [menu] button until the SET DATA flashes. And using the [∇ or \triangle] buttons, set a group address.

If the indoor unit is individual, set the address to 0000. (header unit : 0001, follower unit : 0002)

Individual :0000 Header unit :0001

Header unit :0001 In case of group control

- **5** Push the [OFF timer] button to confirm the SET DATA.
- 6 When all the settings have been completed, push the [ON/OFF] button to return to normal mode.

NOTE

<In the case of combining with outdoor units of Super Modular Multi System u series (SMMS-u)>

- Turn ON DIP switch 1 of SW100 on the header outdoor unit interface P.C. board the lowest system address number.
- After finishing all the settings above, set the address of the central control devices. (For the setting of the central control address, refer to the installation manual of the central control devices.)

< In the case of combining with outdoor units other than Super Modular Multi System u series (SMMS-u)>


- Set a system address for the header outdoor unit of each line with SW13 and 14 of their interface P.C. boards.
- Turn off dip switch 2 of SW30 on the interface P.C. boards of all the header outdoor units connected to the same central control, except the unit that has the lowest address. (For unifying the termination of the wiring for the central control of indoor and outdoor units)
- Connect the relay connectors between the [U1, U2] and [U3, U4] terminals on the header outdoor unit of each refrigerate line.
- After finishing all the settings above, set the address of the central control devices. (For the setting of the central control address, refer to the installation manuals of the central control devices.)

- Confirming the indoor unit addresses and the position of an indoor unit using the remote controller
- **♦** Confirming the numbers and positions of indoor units

To know the indoor unit addresses though position of the indoor unit is recognized

■ When the unit is individual (the indoor unit is paired with a wired remote controller one-to-one), or it is a group-controlled one.

<RBC-AMT***>

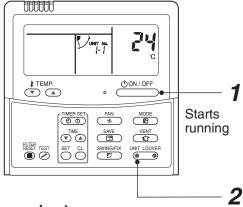

(Execute it while the units are running.)

- **1** Push the $\bigcirc^{\text{OON/OFF}}$ button if the units stop.
- Push the button (left side of the button).

A unit numbers !- ! is indicated on the LCD (it will disappear after a few seconds). The indicated number shows the system address and indoor unit address of the unit.

When 2 or more indoor units are connected to the remote controller (group-controlled units), a number of other connected units appears each time you push the UNIT LOUVER button (left side of the button).


<RBC-ASCU11-*>

There is no such function in the remote controller.

◆ To find an indoor unit's position from its address

▼ When checking unit numbers controlled as a group

<RBC-AMT***>

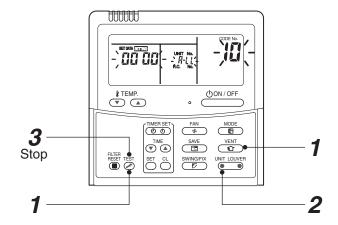


(Execute it while the units are stopped.)


The indoor unit numbers in a group are indicated one after another. The fan and louvers of the indicated units are activated.

- **1** Push and hold the $\stackrel{\text{VENT}}{:}$ and $\stackrel{\text{TEST}}{\triangle}$ buttons at the same time for more than 4 seconds.
 - RLL appears on UNIT No. on the LCD display.
 - The fans and louvers of all the indoor units in the group are activated.
- 2 Push the button (left side of the button). Each time you push the button, the indoor unit numbers are indicated one after another.
 - The first-indicated unit number is the address of the header unit.
 - · Only the fan and louvers of the indicated indoor unit are activated.
- $oldsymbol{3}$ Push the $\stackrel{\mathbb{I}}{ ilde{\varnothing}}$ button to finish the procedure.

All the indoor units in the group stop.

<RBC-ASCU11-*>

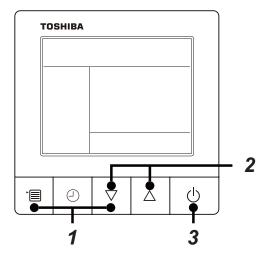


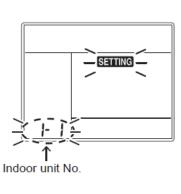

- 1 Push and hold the [menu + ∇] buttons at same time for more than 10 seconds. e.g.)A unit number 1-1 is indicated on the LCD. The indicated number shows the system address and indoor unit address of the unit.
- **2** When 2 or more indoor units are connected to the remote controller (group-controlled units), a number of other connected units appears each time you push the [∇ or \triangle] buttons.
- **3** Push the [ON/OFF] button, return to the normal mode.

▼ To check all the indoor unit addresses using an arbitrary wired remote controller. (When communication wirings of 2 or more refrigerant lines are interconnected for central control)

<RBC-AMT***>

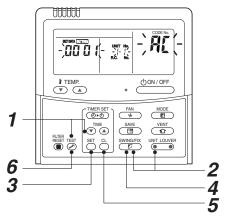

(Execute it while the units are stopped.)

You can check indoor unit addresses and positions of the indoor units in a single refrigerant line. When an outdoor unit is selected, the indoor unit numbers of the refrigerant line of the selected unit are indicated one after another and the fan and louvers of the indicated indoor units are activated.

- 1 Push and hold the TIME ▼ and ৷ buttons at the same time for more than 4 seconds. At first, the line 1 and CODE No. ዶ (Address Change) are indicated on the LCD display. (Select an outdoor unit.)
- 2 Push the button (left side of the button) and buttons repeatedly to select a system address.
- **3** Push the $\stackrel{\text{\tiny SET}}{\bigcirc}$ button to confirm the system address selection.
 - The address of an indoor unit connected to the selected refrigerant line is indicated on the LCD display and its fan and louvers are activated.
- 4 Push the button (left side of the button). Each time you push the button, the indoor unit numbers of the selected refrigerant line are indicated one after another.
 - · Only the fan and louvers of the indicated indoor unit are activated.
- **♦** To select another system address
- **5** Push the $\stackrel{\circ}{\bigcirc}$ button to return to step 2.
 - After returning to step 2, select another system address and check the indoor unit addresses of the line.
- **6** Push the button to finish the procedure.

<RBC-ASCU11-*>


There is no such function in the remote controller.

Changing the indoor unit address using a remote controller

To change an indoor unit address using a wired remote controller.

▼ The method to change the address of an individual indoor unit (the indoor unit is paired with a wired remote controller one-to-one), or an indoor unit in a group. (The method is available when the addresses have already been set automatically.)

<RBC-AMT***>

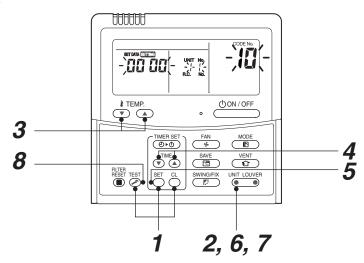


(Execute it while the units are stopped.)

- **1** Push and hold the \bigcirc^{SET} , \bigcirc^{CL} , and \bigcirc^{TEST} buttons at the same time for more than 4 seconds. (If 2 or more indoor units are controlled in a group, the first indicated UNIT No. is that of the head unit.)
- Push the button (left side of the button) repeatedly to select an indoor unit number to change if 2 or more units are controlled in a group. (The fan and louvers of the selected indoor unit are activated.)

 (The fan of the selected indoor unit is turned on.)
- **3** Push the TEMP. **☑** / **☑** buttons repeatedly to select **⅓** for CODE No.
- **4** Push the TIME / buttons repeatedly to change the value indicated in the SET DATA section to that you want.
- **5** Push the button.
- 6 Push the button (left side of the button) repeatedly to select another indoor UNIT No. to change.
 - Repeat steps 4 to 6 to change the indoor unit addresses so as to make each of them unique.
- 7 Push the button (left side of the button) to check the changed addresses.
- **8** If the addresses have been changed correctly, push the button to finish the procedure.

<RBC-ASCU11-*>

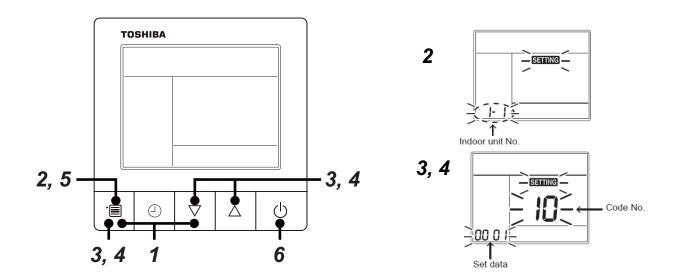

- **1** Push and hold the [menu + ∇] buttons at same time for more than 10 seconds.
- **2** Push the [OFF timer] button to confirm the selected indoor unit.
- **3** Push the [menu] button until the CODE No. flashes. And using the [∇ or \triangle] buttons, specify the CODE No.13.
- **4** Push the [menu] button until the SET DATA flashes. And using the [∇ or \triangle] buttons, set an indoor unit address.
- **5** Push the [OFF timer] button to confirm the SET DATA.
- 6 When all the settings have been completed, push the [ON/OFF] button, return to normal mode.

▼ To change all the indoor unit addresses using an arbitrary wired remote controller. (The method is available when the addresses have already been set automatically.)


(When communication wirings of 2 or more refrigerant lines are interconnected for central control)


NOTE

You can change the addresses of indoor units in each refrigerant line using an arbitrary wired remote controller.

* Enter the address check / change mode and change the addresses.

<RBC-AMT***>

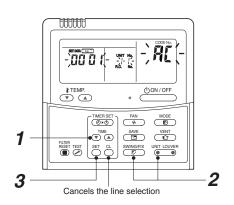

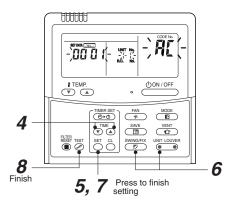

If no number appears on UNIT No., no outdoor unit exists on the line. Push button and select another line following step 2.

(Execute it while the units are stopped.)

- 1 Push and hold the TIME 🛡 / 🌢 buttons at the same time for more than 4 seconds. At first, the line 1 and CODE No. 🗚 (Address Change) are indicated on the LCD display.
- 2 Push button (left side of the button) and buttons repeatedly to select a system address.
- **3** Push the $\stackrel{\text{SET}}{\bigcirc}$ button.
 - The address of one of the indoor units connected to the selected refrigerant line is indicated on the LCD display and the fan and louvers of the unit are activated.
 At first, the current indoor unit address is displayed in SET DATA. (No system address is indicated.)
- **4** Push the TIME ▼ / ♠ buttons repeatedly to change the value of the indoor unit address in SET DATA.

Change the value in SET DATA to that of a new address.

- **5** Push the $\stackrel{\text{\tiny SET}}{\bigcirc}$ button to confirm the new address on SET DATA.
- 6 Push the button (left side of the button) repeatedly to select another address to change.

Each time you push the button, the indoor unit numbers in a refrigerant line are indicated one after another. Only the fan and louvers of the selected indoor unit are activated.

Repeat steps 4 to 6 to change the indoor unit addresses so as to make each of them unique.

7 Push the $\stackrel{\text{SE}}{\bigcirc}$ button.

(All the segments on the LCD display light up.)

8 Push the $\stackrel{\text{les}}{\triangleright}$ button to finish the procedure.

<RBC-ASCU11-*>

There is no such function in the remote controller.

◆ Check code clearing function


How to clear the check code using the wired remote controller

<RBC-AMT***>

- ▼ Clearing a check code of the outdoor unit Clear the currently detected outdoor unit for each refrigerant line to which the indoor unit controlled by the remote controller is connected. (The indoor unit check code is not cleared.) Use the service monitoring function of the remote controller.
- **1** Push and hold the [□] , and [□] for 4 seconds or longer to enter the service monitoring mode.
- **2** Push the ⊕ button to set CODE No. to "FF".
- **3** The display in A of the following figure counts down as follows at 5-second intervals: "0005" \rightarrow "0004" \rightarrow "0003" \rightarrow "0002" \rightarrow "0000".

The check code is cleared when "**IDDO**" appears. However, the display counts down from "**IDDO**" again.

4 Push the to return the display to normal.

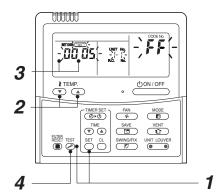


▼ Clearing a check code of the indoor unit

Push the OON/OFF button on the remote controller.

(Only the check code of the indoor unit controlled by the remote controller will be cleared.)

<RBC-ASCU11-*>


▼ Clearing a check code of the outdoor unit Clear the currently detected outdoor unit for each refrigerant line to which the indoor unit controlled by the remote controller is connected. (The indoor unit check code is not cleared.) Use the service monitoring function of the remote controller.

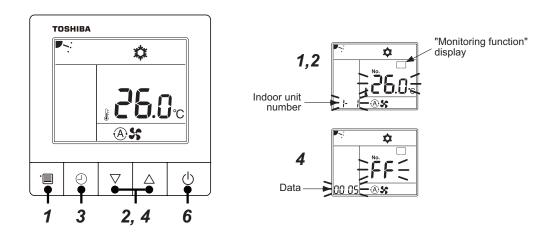

- **1** Push the [menu] button for over 10 seconds.
- **2** Every pushing [∇ or \triangle] buttons, the indoor unit numbers in group control are displayed successively.
- $oldsymbol{3}$ Push the [OFF timer] button to confirm the selected indoor unit.
- **4** Every pushing [∇ or \triangle] buttons to set CODE No. to "FF"
- 5 The display in A of the following figure counts down as follows at 5-second intervals: "0005" \rightarrow "0004" \rightarrow "0003" \rightarrow "0002" \rightarrow "0000" The check code is cleared when "000" appears. However, the display counts down from "005" again.
- 6 After you have finished checking, push the [ON/OFF] button to return to normal mode.
- ▼ Clearing a check code of the indoor unit Push the ON / OFF button on the remote controller. (Only the check code of the indoor unit controlled by the remote controller will be cleared.)

▼ Monitoring function of wired remote controller

<RBC-AMT***>

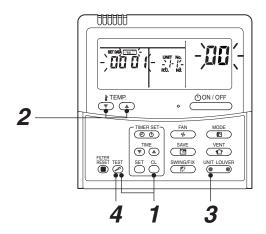


Content

Enter the service monitoring mode using the remote controller to check the sensor temperature or operation status of the remote controller, indoor unit, and outdoor unit.

- **1** Push and hold the $\stackrel{\text{TEST}}{>}$, and $\stackrel{\text{C}}{\bigcirc}$ for 4 seconds or longer to enter the service monitoring mode.
 - The service monitor lights up. The CODE No. 22 appears at first.
- 2 Push the 📆 button to change to CODE No. of the item to monitor. Refer to the next page for CODE No.
- 3 Push the left part of the button (left side of the button) to change to the item to monitor. Monitor the sensor temperature or operation status of the indoor unit and outdoor unit in the refrigerant line.
- **4** Push the button to return the display to normal.

<RBC-ASCU11-*>

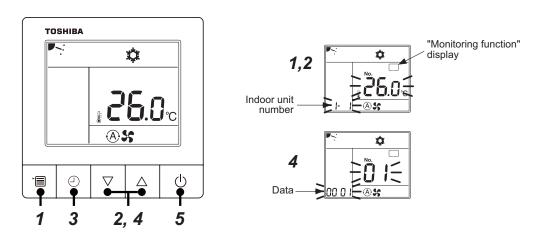

- **1** Push the [menu] button for over 10 seconds. "Monitoring function" is displayed on a screen.
- **2** Every pushing [∇ or \triangle] buttons, the indoor unit numbers in group control are displayed successively.
- 3 Push the [OFF timer] button to confirm the selected indoor unit.
- **4** Every pushing [∇ or \triangle] buttons, CODE No. of the item is changed successively.
- **5** After you have finished checking, push the [ON/OFF] button, return to normal mode.

♦ Indoor service monitor list

	Code No.	Data name	Display format	Unit	Remote controller display example
	00	Room temperature (Use to control)	×1	°C	
	01	Room temperature (Remote controller)	×1	°C	
	02	Indoor suction air temperature (TA)	×1	°C	
	03	Indoor coil temperature (TCJ)	×1	°C	
data *	04	Indoor coil temperature (TC2)	×1	°C	
	05	Indoor coil temperature (TC1)	×1	°C	
r unit	06	Indoor discharge air temperature (TF) **	×1	°C	
Indoor	07	Indoor fan motor number of revolutions**	×1	rpm	[0600] = 600rpm
=	08	Indoor PMV opening	×1/10	pls	[0150]=1500pls
	F3	Filter sign time	×1	h	[2500] = 2500h
	F9	Suction temperature of air to air heat exchanger (TSA) **	×1	°C	[0024] = 24°C
	FA	Outside air temperature (TOA) **	×1	°C	

^{*} When the units are connected to a group, data of the header indoor unit only can be displayed.
** There is also a model which cannot be displayed.

[•] Refer to the service manual of an outdoor unit for "outdoor service monitor list".

9. TROUBLESHOOTING

9-1. Overview

- (1) Before engaging in troubleshooting
 - (a) Applicable models

All Super Modular Multi System (SMMS-*) models.

(Indoor units: MM*-UP***, Outdoor units: MMY-M*P***)

- (b) Tools and measuring devices required
 - · Screwdrivers (Philips, flat head), spanners, long-nose pliers, nipper, pin to push reset switch, etc.
 - · Multimeter, thermometer, pressure gauge, etc.
- (c) Things to check prior to troubleshooting (behaviors listed below are normal)


NO.	Behavior	Possible cause
1	A compressor would not start	The air conditioner is being controlled by the 3-minute protective function. It is in standby status though the room temperature has reached the setup temperature. It is being operated in timer mode or fan mode. It is being in initial communication.
2	An indoor fan would not start	The air conditioner is being controlled by the cool air discharge preventive function in "heating"?
3	An outdoor fan would not start or would change speed for no reason	The air conditioner is being operated in "cooling" under the low outside air temperature. It is being operated in defrost operation.
4	An indoor fan would not stop	The air conditioner is being controlled by function of residual heat elimination being performed as part of the air conditioner shutdown process after heating operation.
5	The air conditioner would not respond to a start/stop command from a remote controller	The air conditioner is being operated under external or remote controller.

CAUTION

The cooling performance may be declining considerably when total operating capacity of cooling indoor units is less than 4 HP while ambient temperature is below.

(2) Troubleshooting procedure

When a problem occurs, proceed with troubleshooting in accordance with the procedure shown below.

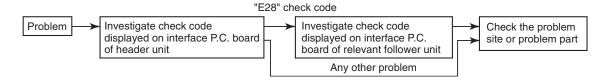

NOTE

Rather than a product trouble (see the List of Check Codes below), the problem could have been caused by a microprocessor malfunction attributable to a poor quality of the power source or an external noise. Check for possible noise sources, and shield the remote controller wiring and signal wires as necessary.

9-2. Troubleshooting method

The remote controllers (main remote controller and central control device) and the interface P.C. board of an outdoor unit are provided with an a 7-segment display (outdoor interface P.C. board) to display operational status. Using this self-diagnosis feature, the trouble site / trouble part may be identified in the event of a trouble by following the method described below.

The list below summarizes check codes detected by various devices. Analyze the check code according to where it is displayed and work out the nature of the trouble in consultation with the list.

- · When investigating a trouble on the basis of a display provided on the indoor remote controller or central control device - See the "central control device or main remote controller display" section of the list.
- When investigating a trouble on the basis of a display provided on an outdoor unit See the "Outdoor 7segment display" section of the list.
- · When investigating a trouble on the basis of a wireless remote controller-controlled indoor unit See the "Indicator light block" section of the list.

List of check codes (indoor unit)

(Check code detected by indoor unit)

IPDU: Compressor / Fan inverter P.C. board

O: Lighting, ⊚: Flashing, ●: Goes off
ALT.: Flashing is alternately when there are two flashing LED
SIM: Simultaneous flashing when there are two flashing LED

	Ch	eck code	Displa	y of re	ceiving	g unit		Simultaneous flashing when there are two flashing LED
B	Outo	loor 7-segment display	Indic	ator li	ght bl	ock		
Remote controller display		Sub-code	Operatio	n Timer	Ready	Flash	Typical trouble on site	Description of check code
E03	_	_	0	•			Indoor-remote controller periodic communication check code	Communication from remote controller or network adaptor has been lost (so has central control communication).
E04	_	_	•	•	0		Indoor-outdoor periodic communication check code	Signals are not being received from outdoor unit.
E08	E08	Duplicated indoor address	0				Duplicated indoor address	Indoor unit detects address identical to its own.
E10	_	_	0	•	•		Communication trouble between indoor unit MCU	Communication trouble between main MCU and the motor microcomputer MCU
E11	_	_	0		•		Communication check code between Application control kit and indoor unit	Communication check code between Application control kit and indoor unit P.C. board
E18	_	_	0	•	•		Check cod in periodic communication between indoor header and follower unit	Periodic communication between indoor header and follower units cannot be maintained.
F01	_	_	0	0	•	ALT	Indoor heat exchanger temperature sensor (TCJ) check code	Heat exchanger temperature sensor (TCJ) has been open / short-circuit.
F02	_	_	0	0	•	ALT	Indoor heat exchanger temperature sensor (TC2) check code	Heat exchanger temperature sensor (TC2) has been open / short-circuit.
F03	_	-	0	0	•	ALT	Indoor heat exchanger temperature sensor (TC1) check code	Heat exchanger temperature sensor (TC1) has been open / short-circuit.
F10	_	_	0	\bigcirc		ALT	Ambient temperature sensor (TA) check code	Ambient temperature sensor (TA) has been open / short-circuit.
F11	_	_	0	0	•	ALT	Discharge temperature sensor (TF) check code	Discharge temperature sensor (TF) has been open / short-circuit.
F29	_	_	0	0	•	SIM	P.C. board or other indoor check code	Indoor EEPROM is abnormal (some other trouble may be detected).
F30	_	_	0	0	0	ALT	Occupancy sensor trouble	Occupancy sensor trouble has been detected.
L03	_	_	0	•	0	SIM	Duplicated indoor group header unit	There is more than one header unit in group.
L07	_	_	0	•	0	SIM	Connection of group control cable to a single indoor unit	There is at least one a single indoor unit to which group control cable is connected.
L08	L08	_	0	•	0	SIM	Indoor group address not set	Address setting has not been performed for one or more indoor units (also detected at outdoor unit end).
L09	_	_	0		0	SIM	Indoor capacity not set	Capacity setting has not been performed for indoor unit.
L20	_	_	0	0	0	SIM	Duplicated central control address	There is duplication in central control address setting.
L30	L30	Detected indoor unit No.	0	0	0	SIM	Indoor external check code input (interlock)	Unit shutdown has been caused by external check code input (CN80).
P01	_	-	•	0	0	ALT	Indoor AC fan check code	Indoor AC fan check code is detected (activation of fan motor thermal relay).
P10	P10	Detected indoor unit No.		0	0	ALT	Indoor overflow check code	Float switch has been activated.
P12	_	-	•	0	0	ALT	Indoor DC fan check code	Indoor DC fan check code (e.g. overcurrent or lock-up) is detected.
P31	_	_	0		0	ALT	Other indoor unit check code	Follower unit cannot be operated due to header unit alarm (E03 /L03 / L07 / L08).

(Check code detected by remote controller)

Che	Check code			of re	ceiving	g unit			
	Outdoor 7-segment display		Indic	ator I	ight bl	ock	Typical trouble site	Description of trouble	
Remote control		Sub-code	Operation (1)	Timer	Ready	Flash	Typical trouble site	Description of trouble	
E01	-	-	0	•	•		No master remote control, failure remote control communication (reception)	Signals cannot be received from indoor unit; master remote control has not been set (including two remote control).	
E02	-	-	0	•	•		Failure remote control communication (transmission)	Signals cannot be transmitted to indoor unit.	
E09	-	-	0	•	•		Duplicated master remote control	Both remote controls have been set as master remote control in two remote control (alarm and shutdown for header unit and continued operation for follower unit)	

(Check code detected by central control device)

Che	Check code			ceiving	g unit			
	Outdoor 7-segment display		Indicator li	ght bl	ock	Turning throughly gite	Description of trouble	
Central control		Sub-code	Operation Timer	Ready	Flash	Typical trouble site	Description of trouble	
C05	-	-	No indication main remote			Failure central control communication (transmission)	Central control device is unable to transmit signal due to duplication of central control device	
C06	-	-	also in use)			Failure central control communication (reception)	Central control device is unable to receive signal.	
C12	-	-	_			Bracket alarm for general- purpose device control interface	Device connected to general-purpose device control interface is trouble.	
P30 (L20)	_	_	(L20 is displa	yed.)		Communication Link	Duplication addresses of indoor units in central control device With the combination of air conditioning system, the indoor unit may detect the check code of L20	

Note: The same trouble, e.g. a communication trouble, may result in the display of different check codes depending on the device that detects it. Moreover, check codes detected by the main remote controller / central control device do not necessarily have a direct impact on air conditioner operation.

Flow selector unit (FS unit) Relation

(Check code detected by indoor unit)

Che	Check code			of re	ceiving	unit			
	Outdoor 7-segment display		Indica	ator I	ight blo	ock	Typical trouble site	Description of trouble	
Main remote control		Sub-code	Operation (1)	Timer	Ready	Flash	Typical trouble site	Bescription of trouble	
E17	-	-	0	•	•		Communication trouble between indoor unit (s) and FS unit (s)	There is no communication from FS unit(s)	
J03	-	-	•	0	0		Duplicated FS units	More than one FS units have been set up in one refrigerant line.	
J10	-	-	•	0	0		FS unit overflow trouble	FS unit has been shutdown in one refrigerant line due to detection of overflow	
J11	-	-	•	0	0		FS unit temperature sensor (TCS) trouble	FS unit temperature sensor (TCS) has been open/short-circuited.	
L12	L12	-	0	0	0		FS unit(s) system trouble	FS unit(s) outside the application setting	

List of Check Codes (Outdoor Unit)

(Check code detected by outdoor interface - typical examples)

If "HELLO" is displayed on the oudoor 7-segment for 1 minute or more, turn off the power supply once and then turn on the power supply again after passage of 30 seconds or more. When the same symptom appears, it is considered there is a possibility of I/F board trouble.

○ : Lighting, ◎ : Flashing, ● : Goes off ALT.: Flashing is alternately when there are two flashing LED SIM: Simultaneous flashing when there are two flashing LED

	Check code		Display	of re	ceiving	unit		
	Outdoor 7-segment display	Central	Indic	ator li	ght blo	ock		5
	Sub-code	control or main remote controller display	Operation	Timer	Ready	Flash	Typical problem site	Description of problem
E06	Number of indoor units from which signal is received normally	E06	•	•	0		Signal lack of indoor unit	Indoor unit initially communicating normally fails to return signal (reduction in number of indoor units connected).
E07	-	(E04)	•	•	0		Indoor-outdoor communication circuit trouble	Signal cannot be transmitted to indoor units (→ indoor units left without communication from outdoor unit).
E08	Duplicated indoor address	(E08)	0	•	•		Duplicated indoor address	More than one indoor unit are assigned same address (also detected at indoor unit end).
E12	01: Indoor-outdoor communication 02: Outdoor-outdoor communication	E12	0	•	•		Automatic address starting trouble	Indoor automatic address setting is started while automatic address setting for equipment in other refrigerant line is in progress. Outdoor automatic address setting is started while automatic address setting for indoor units is in progress.
E15	-	E15	•	•	0		Indoor unit not found during automatic address setting	Indoor unit fails to communicate while automatic address setting for indoor units is in progress.
E16	00: Capacity over 01: Number of units connected	E16	•	•	0		Too many indoor units connected/capacity over	Combined capacity of indoor units is too large. The maximum combined of indoor units shown in the specification table.
E19	00: No header unit 02: Two or more header units	E19	•	•	0		Trouble in number of outdoor header units	There is no or more than one outdoor header unit in one refrigerant line.
E20	01: Connection of outdoor unit from other refrigerant line 02: Connection of indoor unit from other refrigerant line	E20	•	•	0		Connection to other refrigerant line found during automatic address setting	Indoor unit from other refrigerant line is detected while indoor automatic address setting is in progress.
E23	-	E23	•	•	0		Outdoor-outdoor communication transmission trouble	Signal cannot be transmitted to other outdoor units.
E25	-	E25	•	•	0		Duplicated follower outdoor address	There is duplication in outdoor addresses set manually.
E26	Address of outdoor unit from which signal is not received normally	E26	•	•	0		Signal lack of outdoor unit	Follower outdoor unit initially communicating normally fails to do so (reduction in number of follower outdoor units connected).
E28	Detected outdoor unit No.	E28	•	•	0		Outdoor follower unit trouble	Outdoor header unit detects trouble relating to follower outdoor unit (detail displayed on follower outdoor unit).
E31	P.C.board Compressor Fan Motor 1 2	E31	•	•	0		P.C. board communication trouble Sub MCU communication trouble	There is no communication between P.C. boards in inverter box.
F04	-	F04	0	0	0	ALT	Outdoor discharge temperature sensor (TD1) trouble	Outdoor discharge temperature sensor (TD1) has been open/short-circuited.
F05	-	F05	0	0	0	ALT	Outdoor discharge temperature sensor (TD2) trouble	Outdoor discharge temperature sensor (TD2) has been open/short-circuited.
F06	01: TE1 sensor 02: TE2 sensor 03: TE3 sensor	F06	0	0	0	ALT	Outdoor heat exchanger liquid side temperature sensor (TE1, TE2, TE3) trouble	Outdoor heat exchanger liquid side temperature sensors (TE1, TE2, TE3) have been open/ short-circuited.
F07	01: TL1 sensor 02: TL2 sensor 03: TL3 sensor	F07	0	0	0	ALT	Outdoor liquid temperature sensor (TL1,TL2,TL3) trouble	Outdoor liquid temperature sensor (TL1,TL2,TL3) has been open/short-circuited.
F08	-	F08	0	0	0	ALT	Outdoor outside air temperature sensor (TO) trouble	Outdoor air temperature sensor (TO) has been open/short-circuited.
F09	01: TG1 sensor 02: TG2 sensor 03: TG3 sensor	F09	0	0	0	ALT	Outdoor heat exchanger gas side temperature sensor (TG1, TG2, TG3) trouble	Outdoor heat exchanger gas side temperature sensors (TG1, TG2, TG3) have been open/ short-circuited.

	Check code				ceiving	g unit		
	Outdoor 7-segment display	Central control or main	Indic	ator li	ight blo	ock	Typical problem site	Description of problem
	Sub-code	remote controller display	Operation (1)	n Timer	Ready	Flash	Typical problem site	Description of problem
F12	01: TS1 sensor 03: TS3 sensor	F12	0	0	0	ALT	Outdoor suction temperature sensor (TS1,TS3) trouble	Outdoor suction temperature sensor (TS1,TS3) has been open/short-circuited.
F15	-	F15	0	0	0	ALT	Outdoor temperature sensor (TE1,TL1) wiring trouble	Wiring trouble in outdoor temperature sensors (TE1,TL1) has been detected.
F16	_	F16	0	0	0	ALT	Outdoor pressure sensor (Pd, Ps) wiring trouble	Wiring trouble in outdoor pressure sensors (Pd, Ps) has been detected.
F23	_	F23	0	0	0	ALT	Low pressure sensor (Ps) trouble	Output voltage of low pressure sensor (Ps) is zero.
F24	-	F24	0	0	0	ALT	High pressure sensor (Pd) trouble	Output voltage of high pressure sensor (Pd) is zero or provides abnormal readings when compressors have been turned off.
F31	-	F31	0	0	0	SIM	Outdoor EEPROM trouble	Outdoor EEPROM is failure (alarm and shutdown for header unit and continued operation for follower unit)
H05	-	H05	•	0	•		Outdoor discharge temperature sensor (TD1) wiring trouble	Wiring/installation trouble or detachment of outdoor discharge temperature sensor (TD1) has been detected.
H06	-	H06	•	0	•		Activation of low-pressure protection	Low pressure (Ps) sensor detects abnormally low operating pressure.
H07	-	H07	•	0	•		Low oil level protection	Temperature sensor for oil level detection (TK1,TK2) detects abnormally low oil level.
H08	01: TK1 sensor trouble 02: TK2 sensor trouble	H08	•	0	•		Trouble in temperature sensor for oil level detection (TK1,TK2)	Temperature sensor for oil level detection (TK1,TK2) has been open/short-circuited.
H15	-	H15	•	0	•		Outdoor discharge temperature sensor (TD2) wiring trouble	Wiring/installation trouble or detachment of outdoor discharge temperature sensor (TD2) has been detected.
H16	01: TK1 oil circuit trouble 02: TK2 oil circuit trouble	H16	•	0	•		Oil level detection circuit trouble	No temperature change is detected by temperature sensor for oil level detection (TK1,TK2) despite compressor having been started.
L04	-	L04	0	0	0	SIM	Duplicated outdoor refrigerant line address	Identical refrigerant line address has been assigned to outdoor units belonging to different refrigerant piping systems.
	Number of priority indoor units	L05	0	•	0	SIM	Duplicated priority indoor unit (as displayed on priority indoor unit)	More than one indoor unit have been set up as priority indoor unit.
L06	(check code L05 or L06 depending on individual unit)	L06	0	•	0	SIM	Duplicated priority indoor unit (as displayed on indoor unit other than priority indoor unit)	More than one indoor unit have been set up as priority indoor unit.
L08	-	(L08)	0	•	0	SIM	Indoor group address not set	Address setting have not been performed for one or more indoor units (also detected at indoor end).
L10	-	L10	0	0	0	SIM	Outdoor capacity not set	Outdoor unit capacity has not been set (after P.C. board replacement).
L17	-	L17	0	0	0	SIM	Outdoor model incompatibility trouble	Old model outdoor unit has been connected.
L23	_	L23	0	0	0	SIM	SW setting mistake	
L28	-	L28	0	0	0	SIM	Too many outdoor units connected	More than five outdoor units have been connected.

	Check code		Display	of re	ceiving	unit		
	Outdoor 7-segment display	Central control or	Indica	ator li	ght blo	ock	Typical problem site	Description of problem
	Sub-code	main remote controller display	Operation	Timer	Ready	Flash	Typical problem site	Description of problem
L29	P.C.board Compressor Fan Motor 1 2	L29	©	0	0	SIM	Trouble in number of P.C. boards	There are insufficient number of P.C. board in inverter box.
L30	Detected indoor unit No.	(L30)	0	0	0	SIM	Indoor external trouble input (interlock)	Indoor unit has been shut down for external trouble input in one refrigerant line (detected by indoor unit).
P03	-	P03	0	•	0	ALT	Outdoor discharge (TD1) temperature trouble	Outdoor discharge temperature sensor (TD1) has detected abnormally high temperature.
P05	00: Power detection trouble 01: Open phase 02: Power supply miswiring	P05	0	•	0	ALT	Power detection trouble /Open phase detection /Power supply miswiring detection	Open phase is detected when power is turned on. Inverter DC voltage is too high (overvoltage) or too low (undervoltage).
D07	1 : Compressor 1 heat sink trouble 2 : Compressor 2 heat sink trouble	P07				A . F	Heat sink overheating trouble	Temperature sensor built into IPM (TH) detects overheating.
P07	04: Heat sink dew condensation	P07	© 		0	ALT	Heat sink dew condensation trouble	Outdoor liquid temperature sensor (TL2) has detected abnormally low temperature.
P10	Indoor unit No. detected	(P10)	•	0	0	ALT	Indoor unit overflow	Indoor unit has been shutdown in one refrigerant line due to detection of overflow (detected by indoor unit).
P11	_	P11	•	0	0	ALT	Outdoor heat exchanger freeze trouble	Remaining frost on outdoor heat exchanger has been detected repeatedly.
P13	-	P13	•	0	0	ALT	Outdoor liquid backflow detection trouble	State of refrigerant cycle circuit indicates liquid backflow operation.
P15	01: TS condition 02: TD condition	P15	0	•	0	ALT	Gas leak detection	Outdoor suction temperature sensor (TS1) detects sustained and repeated high temperatures that exceed standard value.
P17	P17 –		0	•	0	ALT	Outdoor discharge (TD2) temperature trouble	Outdoor discharge temperature sensor (TD2) detects abnormally high temperature.
P19	Outdoor unit No. detected	P19	0	•	0	ALT	4-way valve reversing trouble	Abnormality in refrigerating cycle is detected during heating operation.
P20	-	P20	0	•	0	ALT	Activation of high-pressure protection	High pressure (Pd) sensor detects high pressure that exceeds standard value.

MG-CTT: Magnet contactor

(Check code detected by Inverter of Compressor featuring in outdoor unit - typical examples)

	Check code		Display	of re	ceiving	unit			
	Outdoor 7-segment display	Central control or	Indica	ator li	ght blo	ock	Typical problem site	Description of proplem	
	Sub-code	main remote controller display	Operation (1)	Timer	Ready	Flash	Typical problem site	2000	
F13	1*: Compressor 1 2*: Compressor 2	F13	0	0	0	ALT	Trouble in temperature sensor built into indoor IPM (TH)	Temperature sensor built into indoor IPM (TH) has been open/short-circuited.	
H01	1*: Compressor 1 2*: Compressor 2	H01	•	0	•		Compressor breakdown	Inverter current (Idc) detection circuit detects overcurrent.	
H02	1*: Compressor 1 2*: Compressor 2	H02	•	0	•		Compressor trouble (lockup)	Compressor lockup is detected	
H03	1*: Compressor 1 2*: Compressor 2	H03	•	0	•		Current detection circuit trouble	Abnormal current is detected while inverter compressor is turned off.	
P04	01: Compressor 1 02: Compressor 2	P04	0	•	0	ALT	Activation of high-pressure SW	High-pressure SW is activated.	
P05	01: Compressor 1 side 02: Compressor 2 side	P05	0	•	0	ALT	Compressor Vdc trouble	Inverter DC voltage is too high (overvoltage) or too low (undervoltage).	
P07	01: Compressor 1 side 02: Compressor 2 side	P07	0	•	0	ALT	Heat sink overheat trouble	Temperature sensor built into IPM (TH) detects overheating.	
P11	-	P11	•	0	0	ALT	Outdoor heat exchanger freeze trouble	Remaining frost on outdoor heat exchanger has been detected repeatedly.	
P22	1*: Fan P.C. board 1 2*: Fan P.C. board 2	P22	0	•	0	ALT	Outdoor fan P.C. board trouble	Outdoor fan P.C. board detects trouble.	
P26	1*: Compressor 1 2*: Compressor 2	P26	0	•	0	ALT	Activation of IPM, compressor short-circuit protection	Short-circuit protection for compressor motor driver circuit components is activated (momentary overcurrent).	
P29	1*: Compressor 1 2*: Compressor 2	P29	0	•	0	ALT	Compressor position detection circuit trouble	Compressor motor position detection trouble is detected.	

Note: The above check codes are examples only, and different check codes may be displayed depending on the outdoor unit configuration


9-3. Troubleshooting based on information displayed on remote controller

<RBC-AMT***>

(1) Checking and testing

When a trouble occurs to an air conditioner, a check code and indoor unit No. are displayed on the display window of the remote controller. Check codes are only displayed while the air conditioner is in operation.

If the display has already disappeared, access check code history by following the procedure described below.

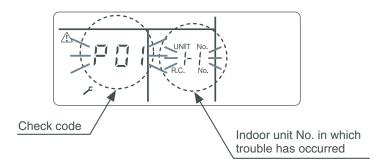

(2) Trouble history

The trouble history access procedure is described below (up to four check codes stored in memory). Check code history can be accessed regardless of whether the air conditioner is in operation or shut down.

<Pre><Pre>rocedure> To be performed when system at rest


1 Invoke the SERVICE CHECK mode by pressing the ⊕ + □ buttons simultaneously and holding for at least 4 seconds.

The letters "> SERVICE CHECK" light up, and the check code "01" is displayed, indicating the trouble history. This is accompanied by the indoor unit No. to which the trouble history is related and a check code.

2 To check other trouble history items, press the button to select another check code.

Check code "01" (latest) → Check code "04" (oldest) Note: Trouble history contains four items.

3 When the button is pushed, normal display is restored.

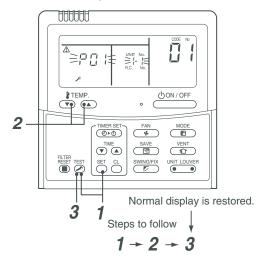


CAUTION

Do not push the $\stackrel{\text{d}}{\sim}$ button as it would erase the whole trouble history of the indoor unit.

<RBC-ASCU11-*>

(1) Confirmation and check

If a problem occurs with the air conditioner, the OFF timer indicator alternately shows the check code and the indoor Unit No. in which the problem occurred.

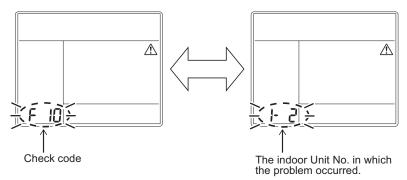

(2) Troubleshooting history and confirmation

You can check the troubleshooting history with the following procedure if a problem occurs with the air conditioner.

(The troubleshooting history records up to 4 incidents.)

You can check it during operation or when operation is stopped.

• If you check the troubleshooting history during OFF timer operation, the OFF timer will be canceled.

| Procedure | Description of oper | ation |
|-----------|---|--------------|
| 1 | Push the OFF timer button for over 10 seconds and the indicators appear as an image indicating the troubleshooting history mode has been entered. If [| No. FA |
| 2 | Each time the setting button is pushed, the recorded troubleshooting history is displayed in sequence. The troubleshooting history appears in order from [01] (newest) to [04] (oldest). | TOSHIBA No. |
| | In the troubleshooting history mode, DO NOT push the Menu button for over 10 seconds, doing so deletes the entire troubleshooting history of the indoor unit. | F 10 |
| 3 | After you have finished checking, push the ON/OFF button to return to the regular mode. If the air conditioner is operating, it remains operated even after the ON/OFF button has been pushed. To stop its operation, push the ON/OFF button again. | |

How to read displayed information

<7-segment display symbols>

DI23456789RbCdEFHLLP

<Corresponding alphanumerical letters>

0 1 2 3 4 5 6 7 8 9 A b C d E F H J L P

Using indoor unit indicators (receiving unit light block) (wireless type)

To identify the check code, check the 7-segment display on the header unit. To check for check codes not displayed on the 7-segment display, consult the "List of Check Codes (Indoor Unit)" in "9-2. Troubleshooting method".

•: Goes off : Lighting : Blinking (0.5 seconds)

| Light block | Check code | <u> </u> | Cause of trouble | . Dilliking (0.5 seconds) | |
|---------------------------------------|-------------------|--|---------------------------------------|---|--|
| Operation Timer Ready All lights out | - | Power turned off or trouble in wiri | ng between receiving and indoor u | nits | |
| Operation Timer Ready | E01
E02
E03 | Trouble reception Trouble transmission Loss of communication | Receiving unit | Trouble or poor contact in wiring between receiving unit and indoor units | |
| Blinking | E08
E09 | Duplicated indoor unit No. (adda Duplicated master remote contri | oller | Setting trouble | |
| | E10
E11
E12 | Automatic address starting troul | n Application control kit and indoo | | |
| Operation Timer Ready | E18
E04 | Trouble or poor contact in wiring (loss of indoor-outdoor commun | · · · · · · · · · · · · · · · · · · · | its | |
| Blinking | E15 | Trouble transmission in indoor-o | omatic address setting | it of Indoor unit) | |
| | E16
E19
E20 | Too many indoor units connected Trouble in number of outdoor he Detection of refrigerant piping c | | omatic address setting | |
| | E23
E25
E26 | Trouble transmission in outdoor-outdoor communication Duplicated follower outdoor address Trouble reception in outdoor-outdoor communication, dropping out of outdoor unit | | | |
| | E28
E31 | Outdoor follower unit trouble P.C. board communication troul | | at of outdoor unit | |
| Operation Timer Ready | P01
P10
P11 | Indoor AC fan trouble Indoor overflow trouble Outdoor heat exchanger freezin | a trauble | | |
| Alternate blinking | P12 | Indoor DC fan trouble Outdoor liquid backflow detectic | | | |
| Operation Timer Ready | P03 | Outdoor discharge (TD1) temperature Activation of outdoor high-press | | | |
| Alternate blinking | P05 | Open phase / power failure
Inverter DC voltage (Vdc) troubl
MG-CTT trouble | | | |
| 7 ittorriate piiriturg | P07 | Outdoor heat sink overheating toutdoor unit | rouble - Poor cooling of electrical | component (IGBT) of | |
| | P15
P17 | Gas leak detection - insufficient
Outdoor discharge (TD2) tempe | erature trouble | | |
| | P18
P19
P20 | Outdoor discharge (TD3) temper
Outdoor 4-way valve reversing to
Activation of high-pressure protections | trouble | | |
| | P22
P26 | Outdoor IPM, Compressor shor | | | |
| | P29
P31 | Compressor position detection | | ower unit trouble) | |

MG-CTT: Magnet contactor

| Light block | Check code | Cause of trouble | |
|--|------------|---|--|
| Operation Timer Ready | F01 | Heat exchanger temperature sensor (TCJ) trouble | |
| Operation Times Treaty | F02 | Heat exchanger temperature sensor (TC2) trouble | la de en contra en |
| -\-\-\-\-\-\-\-\-\-\-\-\-\-\-\-\-\-\-\ | F03 | Heat exchanger temperature sensor (TC1) trouble | Indoor unit temperature sensor trouble |
| LI Alternate blinking | F10 | Ambient temperature sensor (TA) trouble | |
| | F11 | Discharge temperature sensor (TF) trouble | |
| Operation Timer Ready | F04 | Discharge temperature sensor (TD1) trouble Discharge | |
| -X-X-0 | F05 | temperature sensor (TD2) trouble | |
| A A O | F06 | Heat exchanger temperature sensor (TE1, TE2) trouble | |
| L
Alternate blinking | F07 | Liquid temperature sensor (TL) trouble | Outdoor unit temperature |
| | F08 | Outside air temperature sensor (TO) trouble | sensor trouble |
| | F09 | TG1,TG2 or TG3 sensor trouble | |
| | F12 | Suction temperature sensor (TS1) trouble | |
| | F13 | Heat sink sensor (TH) trouble | |
| | F15 | Wiring trouble in heat exchanger sensor (TE1) and liquid temper Outdoor unit temperature sensor wiring / installation trouble | ature sensor (TL) |
| | F16 | Wiring trouble in outdoor high pressure sensor (Pd) and low pres
Outdoor pressure sensor wiring trouble | ssure sensor (Ps) |
| | F22 | Outdoor discharge temperature sensor (TD3) trouble | |
| | F23 | Low pressure sensor (Ps) trouble | |
| | F24 | High pressure sensor (Pd) trouble | Outdoor unit pressure sensor trouble |
| | F30 | Occupancy sensor trouble | Trouble |
| | F31 | Indoor unit EEPROM trouble | |
| Operation Timer Ready | F29 | Failure in indoor EEPROM | |
| Operation Timer Ready | H01 | Compressor breakdown | |
| | H02 | Compressor lockup | Outdoor unit compressor related trouble |
| \sim | H03 | Current detection circuit trouble | |
| Blinking | H04 | Comp. 1 case thermostat operation | |
| | H05 | Wiring / installation trouble or detachment of outdoor discharge to | emperature sensor (TD1) |
| | H06 | Abnormal drop in low-pressure sensor (Ps) reading | Protective shutdown of outdoor unit |
| | H07 | Abnormal drop in oil level | uriit |
| | H08 | Trouble in temperature sensor for oil level detection circuit (TK1, | TK2, TK3, TK4 or TK5) |
| | F14 | Comp. 2 case thermostat operation | |
| | H15 | Wiring / installation trouble or detachment of outdoor discharge to | . , , |
| | H16 | Oil level detection circuit trouble - Trouble in outdoor unit TK1, TI | |
| | H25 | Wiring / installation trouble or detachment of outdoor discharge to | emperature sensor (TD3) |
| Operation Timer Ready | L02 | Model mismatched of indoor and outdoor unit | |
| -\(-\(-\) | L03 | Duplicated indoor group header unit | 11 |
| → → | L05 | Duplicated priority indoor unit (as displayed on priority indoor unit | <u>'</u> |
| Synchronized blinking | L06 | Duplicated priority indoor unit (as displayed on indoor unit other to | inan priority indoor unit) |
| | L07 | Connection of group control cable to a single indoor unit | |
| | L08 | Indoor group address not set | |
| | L09 | Indoor capacity not set | |
| Operation Timer Ready | L04 | Duplicated outdoor refrigerant line address | |
| -\(\)\(\)- \(\)\(\)- | L10
L17 | Outdoor capacity not set | |
| / | L17 | Outdoor model incompatibility trouble | |
| Synchronized blinking | | Flow selector units trouble | |
| | L20 | Duplicated central control address Too many outdoor units connected | |
| | L28
L29 | Too many outdoor units connected | |
| | | Trouble in number of P.C. boards | |
| | L30 | Indoor external interlock trouble (External abnormal input) | |

| Light block | Check code | Cause of trouble |
|-----------------------|------------|--------------------------|
| Operation Timer Ready | F30 | Occupancy sensor trouble |
| Synchronized blinking | F31 | Outdoor EEPROM trouble |

Other (indications not involving check code)

| Light block | Check code | Cause of trouble |
|-----------------------|------------|--|
| Operation Timer Ready | - | Test run in progress |
| Operation Timer Ready | _ | Setting incompatibility (automatic cooling / heating setting for model incapable of it and heating setting for cooling-only model) |

Flow selector unit (FS unit) Relation

| Light block | Check code | Cause of trouble |
|-----------------------|------------|---|
| Operation Timer Ready | E17 | Communication trouble between indoor unit(s) and FS unit(s) |
| Operation Timer Ready | L12 | FS unit(s) system trouble |
| Synchronized blinking | L24 | FS unit(s) setting trouble |
| Operation Timer Ready | J03 | Duplicated FS units |
| • -¤¤- | J10 | FS unit overflow trouble |
| Blinking Blinking | J11 | FS unit temperature sensor(TCS) trouble |

9-4. Check Codes Displayed on Remote Controller and SMMS series Outdoor Unit (7-Segment Display on I/F Board) and Locations to Be Checked

For other types of outdoor units, refer to their own service manuals.

| | Check | code | | | | | |
|----------------------|------------|--|----------------------|--|----------------------------------|---|---|
| Main | Outdoor | 7-segment display | Location of | Description | System status | Check code detection | Check items (locations) |
| remote
controller | Check code | Sub-code | detection | | | condition(s) | , , |
| E01 | _ | _ | Remote
controller | Indoor-remote
controller
communication
trouble
(detected at
remote
controller end) | Stop of corresponding unit | Communication between indoor P.C. board and remote controller is disrupted. | Check remote controller inter-unit tie cable (A/B). Check for broken wire or connector bad contact. Check indoor power supply. Check for failure in indoor P.C. board. Check remote controller address settings (when two remote controllers are in use). Check remote controller P.C. board. |
| E02 | _ | _ | Remote controller | Remote
controller
transmission
trouble | Stop of corresponding unit | Signal cannot be transmitted from remote controller to indoor unit. | Check internal
transmission circuit of
remote controller. Replace remote
controller as necessary. |
| E03 | _ | _ | Indoor unit | Indoor-remote
controller
communication
trouble
(detected at
indoor end) | Stop of corresponding unit | There is no communication from remote controller (including wireless) or network adaptor. | Check remote controller
and network adaptor
wiring. |
| E04 | _ | _ | Indoor unit | Indoor-outdoor
communication
circuit trouble
(detected at
indoor end) | Stop of corresponding unit | Indoor unit is not receiving signal from outdoor unit. | Check order in which power was turned on for indoor and outdoor units. Check indoor address setting. Check indoor-outdoor tie cable. Check outdoor terminator resistor setting (SW100, Bit 2). |
| E04 | E06 | No. of indoor
units from
which signal is
received
normally | I/F | Dropping out of indoor unit | All stop | Condition 1 All indoor unit initially communicating normally fails to return signal for specified length of time. Condition 2 Outdoor I / F board SW103, Bit4: OFF (Factory default) | Check power supply to indoor unit. (Is power turned on?) Check connection of indoor-outdoor communication cable. Check connection of communication connectors on indoor P.C. board. Check connection of communication connectors on outdoor P.C. board. Check for failure in indoor P.C. board. Check for failure in outdoor P.C. board. Check for failure in outdoor P.C. board (I/F). |
| | _ | _ | Indoor unit | Indoor-outdoor
communication
circuit trouble | Only specified indoor units stop | Condition 1 Indoor unit initially communicating normally fails to return signal for specified length of time. | Check power supply to indoor unit. (Is power turned on?) Check indoor-outdoor power-on sequence. Check indoor address setting Check wiring of Indoor-outdoor communication wires Check outdoor terminator resistor setting (SW100, Bit 2). |

| | Check | code | | | | | |
|-------------------|-------|---|----------------------|--|----------------------------|---|---|
| | | 7-segment display | Location of | Description | System status | Check code detection condition(s) | Check items (locations) |
| remote controller | Check | Sub-code | detection | | | Condition(3) | |
| | | No. of indoor
units from
which signal is
received
normally | Indoor unit | Indoor-outdoor
communication
circuit trouble
(E04) | All stop | Condition 1 One indoor unit or more initially communicating normally fails to return signal for specified length of time. Condition 2 Outdoor I / F board SW103, Bit4 : ON (To switch the check code detection condition.) | Check power supply to indoor unit. (Is power turned on?) Check indoor-outdoor power-on sequence. Check indoor address setting Check wiring of Indoor-outdoor communication wires Check outdoor terminator resistor setting (SW100, Bit 2). |
| E04/E06 | E06 | | VF | Dropping out of
indoor unit
(E06) | | Display on main remote controller. Indoor units unavailable for indoor / outdoor communication. :E04 Indoor units available for indoor / outdoor communication. : E06 | Check power supply to indoor unit. (Is power turned on?) Check connection of indoor-outdoor communication cable. Check connection of communication connectors on indoor P.C. board. Check connection of communication connectors on outdoor P.C. board. Check for failure in indoor P.C. board. Check for failure in outdoor P.C. board. Check for failure in outdoor P.C. board (I/F). |
| _ | E07 | _ | I/F | Indoor-outdoor
communication
circuit trouble
(detected at
outdoor end) | All stop | Signal cannot be transmitted from outdoor to indoor units for 30 seconds continuously. | Check outdoor terminator
resistor setting (SW100,
Bit 2). Check connection of
indoor-outdoor
communication circuit. |
| E08 | E08 | Duplicated indoor address | Indoor unit
I/F | Duplicated indoor address | All stop | More than one indoor unit are assigned same address. | Check indoor addresses. Check for any change made to remote controller connection (group/individual) since indoor address setting. |
| E09 | _ | _ | Remote
controller | Duplicated
master remote
controller | Stop of corresponding unit | In two remote controller configuration (including wireless), both controllers are set up as master. (Header indoor unit is shut down with alarm, while follower indoor units continue operating.) | Check remote controller settings. Check remote controller P.C. boards. |
| E10 | _ | _ | Indoor unit | Indoor inter-
MCU
communication
trouble | Stop of corresponding unit | Communication cannot be established/maintained upon turning on of power or during communication. | Check for failure in
indoor P.C. board |
| E12 | E12 | 01:
Indoor-outdoor
communication
02:
Outdoor-outdoor
communication | I/F | Automatic
address starting
trouble | All stop | Indoor automatic address setting is started while automatic address setting for equipment in other refrigerant line is in progress. Outdoor automatic address setting is started while automatic address setting for indoor units is in progress. | Perform automatic address
setting again after
disconnecting
communication cable to
that refrigerant line. |
| E15 | E15 | _ | I/F | Indoor unit not
found during
automatic
address setting | All stop | Indoor unit cannot be detected after indoor automatic address setting is started. | Check connection of indoor-outdoor communication line. Check for trouble in indoor power supply system. Check for noise from other devices. Check for power failure. Check for failure in indoor P.C. board. |

| | Check | code | Location | | | | |
|-------------|------------------|---|-------------|---|----------------------------|--|---|
| Main remote | Outdoor
Check | 7-segment display | of | Description | System status | Check code detection condition(s) | Check items (locations) |
| controller | code | Sub-code | detection | | | , , | |
| E16 | E16 | 00:
Capacity over
01-:
No. of units
connected | I/F | Too many indoor units connected | All stop | Combined capacity of indoor units is too large. Note: If this code comes up after backup setting for outdoor unit failure is performed, perform "No capacity over detected" setting. <"No capacity over detected" setting method> Turn on SW103 / Bit 3 on I/F P.C. board of outdoor header unit. For Cooling Only model, this check code is not displayed even if it exceeds the combined capacity of indoor units. | Check capacities of indoor units connected. Check combined HP capacities of indoor units. Check HP capacity settings of outdoor units. Check No. of indoor units connected. Check for failure in outdoor P.C. board (I/F). |
| | | | | | | More than 128 indoor units are connected. | |
| E18 | _ | _ | Indoor unit | Trouble in
communication
between indoor
header and
follower units | Stop of corresponding unit | Periodic communication
between indoor header and
follower units cannot be
maintained. | Check remote controller wiring. Check indoor power supply wiring. Check P.C. boards of indoor units. |
| E19 | E19 | 00:
No header unit
02:
Two or more
header units | I/F | Trouble in
number of
outdoor header
units | All stop | There are more than one outdoor header units in one line. There is no outdoor header unit in one line. | Outdoor header unit is outdoor unit to which indooroutdoor tie cable (U1,U2) is connected. • Check connection of indoor-outdoor communication line. • Check for failure in outdoor P.C. board (I/F). |
| E20 | E20 | 01:
Connection of
outdoor unit
from other line
02:
Connection of
indoor unit
from other line | I/F | Connection to
other line found
during
automatic
address setting | All stop | Equipment from other line is found to have been connected when indoor automatic address setting is in progress. | Disconnect inter-line tie cable in accordance with automatic address setting method explained in "Address setting" section. |
| E23 | E23 | _ | I/F | Outdooroutdoor
communication
transmission
trouble | All stop | Signal cannot be transmitted to other outdoor units for at least 30 seconds continuously. | Check power supply to outdoor units. (Is power turned on?) Check connection of tie cables between outdoor units for bad contact or broken wire. Check communication connectors on outdoor P.C. boards. Check for failure in outdoor P.C. board (I/F). Check termination resistance setting for communication between outdoor units. |
| E25 | E25 | _ | I/F | Duplicated follower outdoor address | All stop | There is duplication in outdoor addresses set manually. | Note:
Do not set outdoor
addresses manually. |
| E26 | E26 | Address of
outdoor unit
from which
signal is not
received
normally | I/F | Signal lack of outdoor unit | All stop | Outdoor unit initially communicating normally fails to return signal for specified length of time. | Backup setting is being used for outdoor units. Check power supply to outdoor unit. (Is power turned on?) Check connection of tie cables between outdoor units for bad contact or broken wire. Check communication connectors on outdoor P.C. boards. Check for failure in outdoor P.C. board (I/F). |

| | Check | code | | | | | |
|-------------------|---------|--|-------------|--|----------------------------|---|---|
| | Outdoor | 7-segment display | Location of | Description | System status | Check code detection | Check items (locations) |
| remote controller | Check | Sub-code | detection | | | condition(s) | , |
| E28 | E28 | Detected outdoor unit No. | I/F | Outdoor
follower unit
trouble | All stop | Outdoor header unit receives trouble code from outdoor follower unit. | Check check code displayed on outdoor follower unit. Convenient functions> If SW04 is pressed and held for at least 1 second while [E28] is displayed on the 7-segment display of outdoor header unit, the fan of the outdoor unit that has been shut down due to an trouble comes on. If SW04 and SW05 are pressed simultaneously, the fans of normal outdoor units come on. To stop the fan or fans, press SW05 on its own. |
| E31 | E31 | P.C.board Compressor Fan Motor 1 2 1 | I/F | P.C. board
communication
trouble | All stop | Communication is disrupted between P.C. board in inverter box. | Check wiring and connectors involved in communication between P.C. board I/F P.C. board for bad contact or broken wire. Check for failure in outdoor P.C. board (I/F, comp. P.C. board or Fan P.C. board). Check for external noise. |
| | | 80 | | Communication
trouble between
MCU and Sub
MCU | All stop | Communication between MCU and Sub MCU stopped. | Operation of power supply
reset (OFF for 60 seconds
or more) Outdoor I/F PC board
trouble check |
| F01 | _ | _ | Indoor unit | Indoor TCJ
sensor trouble | Stop of corresponding unit | Sensor resistance is infinity or zero (open/short circuit). | Check connection of TCJ sensor connector and wiring. Check resistance characteristics of TCJ sensor. Check for failure in indoor P.C. board. |
| F02 | _ | _ | Indoor unit | Indoor TC2
sensor trouble | Stop of corresponding unit | Sensor resistance is infinity or zero (open/short circuit). | Check connection of TC2 sensor connector and wiring. Check resistance characteristics of TC2 sensor. Check for failure in indoor P.C. board. |
| F03 | _ | _ | Indoor unit | Indoor TC1
sensor trouble | Stop of corresponding unit | Sensor resistance is infinity or zero (open/short circuit). | Check connection of TC1 sensor connector and wiring. Check resistance characteristics of TC1 sensor. Check for failure in indoor P.C. board. |
| F04 | F04 | _ | I/F | TD1 sensor
trouble | All stop | Sensor resistance is infinity or zero (open/short circuit). | Check connection of TD1 sensor connector. Check resistance characteristics of TD1 sensor. Check for failure in outdoor P.C. board (I/F). |

| | Check | code | | | | | |
|-------------------|---------|---|--------------------------|--|----------------------------|--|--|
| | Outdoor | 7-segment display | Location of | Description | System status | Check code detection | Check items (locations) |
| remote controller | Check | Sub-code | detection | | | condition(s) | , |
| F05 | F05 | _ | I/F | TD2 sensor
trouble | All stop | Sensor resistance is infinity or zero (open/short circuit). | Check connection of TD2 sensor connector. Check resistance characteristics of TD2 sensor. Check for failure in outdoor P.C. board (I/F). |
| F06 | F06 | 01: TE1 sensor
trouble
02: TE2 sensor
trouble
03: TE3 sensor
trouble | I/F | TE1/TE2/TE3
sensor trouble | All stop | Sensor resistance is infinity or zero (open/short circuit). | Check connection of TE1/TE2/TE3 sensor connectors. Check resistance characteristics of TE1/TE2/TE3 sensors. Check for failure in outdoor P.C. board (I/F). |
| F07 | F07 | 01: TL1 sensor
trouble
02: TL2 sensor
trouble
03: TL3 sensor
trouble | I/F | TL1/TL2/TL3
sensor trouble | All stop | Sensor resistance is infinity or zero (open/short circuit). | Check connection of TL1/
TL2/TL3 sensor connector. Check resistance
characteristics of TL1/TL2/
TL3 sensor. Check for failure in outdoor
P.C. board (I/F). |
| F08 | F08 | _ | I/F | TO sensor
trouble | All stop | Sensor resistance is infinity or zero (open/short circuit). | Check connection of TO sensor connector. Check resistance characteristics of TO sensor. Check for failure in outdoor P.C. board (I/F). |
| F09 | F09 | 01: TG1 sensor
trouble
02: TG2 sensor
trouble
03: TG3 sensor
trouble | I/F | TG1/TG2/TG3
sensor trouble | All stop | Sensor resistance is infinity or zero (open/short circuit). | Check connection of TG1/TG2/TG3 sensor connectors. Check resistance characteristics of TG1/TG2/TG3 sensors. Check for failure in outdoor P.C. board (I/F). |
| F10 | | _ | Indoor unit | Indoor TA
sensor trouble | Stop of corresponding unit | Sensor resistance is infinity or zero (open/short circuit). | Check connection of TA sensor connector and wiring. Check resistance characteristics of TA sensor. Check for failure in indoor P.C. board. |
| F11 | _ | _ | Indoor unit | Indoor TF
sensor trouble | Stop of corresponding unit | Sensor resistance is infinity or zero (open/short circuit). | Check connection of TF sensor connector and wiring. Check resistance characteristics of TF sensor. Check for failure in indoor P.C. board. |
| F12 | F12 | 01: TS1 sensor
trouble
03: TS3 sensor
trouble | I/F | TS1/TS3
sensor trouble | All stop | Sensor resistance is infinity or zero (open/short circuit). | Check connection of TS1/TS3 sensor connector Check resistance characteristics of TS1/TS3 sensor. Check for failure in indoor P.C. board. |
| F13 | F13 | 1*: Compressor
1 side
2*: Compressor
2 side | Compressor
P.C. board | TH sensor trouble | All stop | Sensor resistance is infinity or zero (open/short circuit). | Failure in IPM built-in
temperature sensor → Replace Compressor P.C. board. |
| F15 | F15 | _ | I/F | Outdoor
temperature
sensor wiring
trouble (TE1,
TL1) | All stop | During compressor
operation in HEAT mode,
TL1 continuously provides
temperature reading higher
than indicated by TL1 by at
least specified margin for 3
minutes or more. | Check installation of TE1 and TL1 sensors. Check resistance characteristics of TE1 and TL1 sensors. Check for outdoor P.C. board (I/F) trouble |

| | Check | code | Location | | | | |
|-------------|---------------|--|--------------------------|--|----------------------------|--|---|
| Main remote | | 7-segment display | Location of | Description | System status | Check code detection condition(s) | Check items (locations) |
| controller | Check
code | Sub-code | detection | | | | |
| F16 | F16 | _ | I/F | Outdoor
pressure
sensor wiring
trouble (Pd, Ps) | All stop | Readings of high-pressure
Pd sensor and low-pressure
Ps sensor are switched.
Output voltages of both
sensors are zero. | Check connection of high-pressure Pd sensor connector. Check connection of low-pressure Ps sensor connector. Check for failure in pressure sensors Pd and Ps. Check for trouble in outdoor P.C. board (I/F). Check for compressor poor compression. |
| F23 | F23 | _ | I/F | Ps sensor
trouble | All stop | Output voltage of Ps
sensor is zero. | Check for connection trouble involving Ps sensor and Pd sensor connectors. Check connection of Ps sensor connector. Check for failure in Ps sensor. Check for compressor poor compression. Check for failure in 4-way valve. Check for failure in outdoor P.C. board (I/F). Check for failure in SV4 circuit. |
| F24 | F24 | _ | I/F | Pd sensor
trouble | All stop | Output voltage of Pd sensor is zero (sensor open-circuited). Pd > 4.15MPa despite compressor having been turned off. | Check connection of Pd sensor connector. Check for failure in Pd sensor. Check for failure in outdoor P.C. board (I/F). |
| F29 | _ | _ | Indoor unit | Other indoor trouble | Stop of corresponding unit | Indoor P.C. board does not operate normally. | Check for failure in indoor
P.C. board (failure
EEPROM) |
| F31 | F31 | _ | I/F | Outdoor
EEPROM
trouble | All stop *1 | Outdoor P.C. board (I/F) does not operate normally. | Check power supply voltage. Check power supply noise. Check for failure in outdoor P.C. board (I/F). |
| H01 | H01 | 1*: Compressor
1 side
2*: Compressor
2 side | Compressor
P.C. board | Compressor
breakdown | All stop | Inverter current detection circuit detects overcurrent and shuts system down. | Check power supply voltage. (AC380V-415V ± 10%). Check for failure in compressor. Check for possible cause of abnormal overloading. Check for failure in outdoor P.C. board (Compressor). |
| H02 | H02 | 1*: Compressor
1 side
2*: Compressor
2 side | Compressor
P.C. board | Compressor
trouble (lockup)
MG-CTT trouble | All stop | Overcurrent is detected several seconds after startup of inverter compressor. | Check for failure in compressor. Check power supply voltage. (AC380V-415V ± 10%). Check compressor system wiring, particularly for open phase. Check connection of connectors/terminals on compressor P.C. board. Check conductivity of case heater. (Check for refrigerant problem inside compressor.) Check for failure in outdoor P.C. board (Compressor). |
| H03 | H03 | 1*: Compressor
1 side
2*: Compressor
2 side | Compressor
P.C. board | Current
detection
circuit trouble | All stop | Current flow of at least
specified magnitude is
detected despite inverter
compressor having been
shut turned off. | Check current detection circuit wiring. Check failure in outdoor P.C. board (Compressor). |

^{*1} Total shutdown in case of header unit Continued operation in case of follower unit

| | Check | code | | | | | |
|-------------|-------|--|-------------|--|---------------|--|--|
| Main remote | | 7-segment display | Location of | Description | System status | Check code detection condition(s) | Check items (locations) |
| controller | Check | Sub-code | detection | | | condition(3) | |
| H05 | H05 | _ | I/F | TD1 sensor
miswiring
(incomplete
insertion) | All stop | Discharge temperature of compressor 1 (TD1) does not increase despite compressor being in operation. | Check installation of TD1 sensor. Check connection of TD1 sensor connector and wiring. Check resistance characteristics of TD1 sensor. Check for failure in outdoor P.C. board (I/F). |
| H06 | H06 | _ | I/F | Activation of low-pressure protection | All stop | Low-pressure Ps sensor detects operating pressure lower than 0.02MPa. | Check service valves to confirm full opening (both gas and liquid sides). Check outdoor PMVs for clogging (PMV1, 2, 3). Check for failure in SV4 circuits. Check for failure in low-pressure Ps sensor. Check indoor filter for clogging. Check valve opening status of indoor PMV. Check refrigerant piping for clogging. Check operation of outdoor fan (during heating). Check for insufficiency in refrigerant quantity. |
| H07 | H07 | _ | VF | Low oil level protection | All stop | Operating compressor detects continuous state of low oil level for about 2 hours. | <all be="" checked="" corresponding="" in="" line="" outdoor="" to="" units=""> Check connection and installation of TK1 and TK2 sensors. Check resistance characteristics of TK1 and TK2 sensors. Check for gas or oil leak in same line. Check for refrigerant problem inside compressor casing. Check SV3D, SV3F valves for failure. Check oil return circuit of oil separator for clogging. Check oil equalizing circuit for clogging. </all> |
| H08 | H08 | 01: TK1 sensor
trouble
02: TK2 sensor
trouble | I/F | Trouble in
temperature
sensor for oil
level detection | All stop | Sensor resistance is infinity or zero (open/short circuit). | Check connection of TK1 sensor connector. Check resistance characteristics of TK1 sensor. Check for failure in outdoor P.C. board (I/F). |
| | 1100 | | | | All stop | Sensor resistance is infinity or zero (open/short circuit). | Check connection of TK2 sensor connector. Check resistance characteristics of TK2 sensor. Check for failure in outdoor P.C. board (I/F). |
| H15 | H15 | _ | I/F | TD2 sensor
miswiring
(incomplete
insertion) | All stop | Discharge temperature of (TD2) does not increase despite compressor 2 being in operation. | Check installation of TD2 sensor. Check connection of TD2 sensor connector and wiring. Check resistance characteristics of TD2 sensor. Check for failure in outdoor P.C. board (I/F). |

| | Check | | Location | | | | |
|-------------|---------------|--|--------------------------|---|----------------------------|---|---|
| Main remote | | 7-segment display | of | Description | System status | Check code detection condition(s) | Check items (locations) |
| controller | Check
code | Sub-code | detection | | | | |
| | | 01: TK1 oil
circuit trouble
02: TK2 oil
circuit trouble | I/F | Oil level
detection
circuit trouble | All stop | No temperature change is detected by TK1 despite compressor 1 having been started. | Check for disconnection of TK1 sensor. Check resistance characteristics of TK1 sensor. Check for connection trouble involving TK1 and TK2 sensors Check for clogging in oil equalizing circuit capillary. Check for refrigerant entrapment inside compressor. |
| H16 | H16 | | | | | No temperature change is detected by TK2 despite compressor 2 having been started. | Check for disconnection of TK2 sensor. Check resistance characteristics of TK2 sensor. Check for connection trouble involving TK1 and TK2 sensors Check SV3F valve malfunction. Check for clogging in oil equalizing circuit capillary. Check for refrigerant entrapment inside compressor. |
| H17 | H17 | 1*: Compressor
1 side
2*: Compressor
2 side | Compressor
P.C. board | Compressor
trouble
(Step-out) | All stop | Judged that the synchronization could not be taken. | Check power supply voltage. (AC380V-415V ± 10%). Check for failure in compressor. Check for possible cause of abnormal overloading. Check for failure in outdoor P.C. board (compressor). |
| L02 | L02 | _ | Indoor unit | Outdoor units
model
disagreement
trouble | Stop of corresponding unit | In case of different outdoor
unit (Not corresponded to
Air to Air Heat Exchanger
type) | Check outdoor unit model.
(Check whether the
outdoor unit corresponds
to Air to Air Heat
Exchanger type or not.) |
| L03 | _ | _ | Indoor unit | Duplicated indoor header unit | Stop of corresponding unit | There are more than one header units in group. | Check indoor addresses. Check for any change made to remote controller connection (group/ individual) since indoor address setting. |
| L04 | L04 | _ | I/F | Duplicated outdoor line address | All stop | There is duplication in line address setting for outdoor units belonging to different refrigerant piping systems. | Check line addresses. |
| L05 | _ | _ | I/F | Duplicated priority indoor unit (as displayed on priority indoor unit) | All stop | More than one indoor units have been set up as priority indoor unit. | Check display on priority
indoor unit. |
| L06 | L06 | No. of priority indoor units | I/F | Duplicated
priority indoor
unit (as
displayed on
indoor unit other
than priority
indoor unit) | All stop | More than one indoor units have been set up as priority indoor unit. | Check displays on priority
indoor unit and outdoor
unit. |
| L07 | _ | _ | Indoor unit | Connection of
group control
cable to
standalone
indoor unit | Stop of corresponding unit | There is at least one standalone indoor unit to which group control cable is connected. | Check indoor addresses. |
| L08 | L08 | _ | Indoor unit | Indoor group /
addresses not
set | Stop of corresponding unit | Address setting has not been performed for indoor units. | Check indoor addresses. Note: This code is displayed when power is turned on for the first time after installation. |
| L09 | _ | _ | Indoor unit | Indoor capacity
not set | Stop of corresponding unit | Capacity setting has not been performed for indoor unit. | Set indoor capacity. (DN = 11) |

| | Check | code | | | | | |
|-------------------|-------|--|-----------------------------------|--|----------------------------|---|---|
| Main | | 7-segment display | Location of | Description | System status | Check code detection condition(s) | Check items (locations) |
| remote controller | Check | Sub-code | detection | _ | | condition(s) | |
| L10 | L10 | _ | I/F | Outdoor capacity not set | All stop | Initial setting of I/F P.C. board has not been implemented. | Check model setting of
P.C. board for servicing
outdoor I/F P.C. board. |
| L20 | _ | _ | Network
adaptor
Indoor unit | Duplicated central control address | All stop | There is duplication in central control address setting. | Check central control addresses. |
| L23 | _ | _ | I/F | SW setting mistake | All stop | Outdoor P.C. board (I/F) does not operate normally. | Check switch setting of
outdoor P.C. board (I/F). |
| L28 | L28 | _ | I/F | Too many outdoor units connected | All stop | There are more than 5 outdoor units. | Check No. of outdoor units connected (Only up to 5 units per system allowed). Check communication lines between outdoor units. Check for failure in outdoor P.C. board (I/F). |
| L29 | L29 | P.C.board Compressor Fan Motor 1 2 1 2 2 1 | I/F | Trouble in No. of P.C. board | All stop | Insufficient number of P.C. board are detected when power is turned on. | Check model setting of P.C. board for servicing outdoor I/F P.C. board. Check connection of UART communication connector. Check compressor P.C. board, fan P.C. board, and I/F P.C. board for failure. |
| L30 | L30 | Detected indoor
address | Indoor unit | Indoor external
interlock
(External
abnormal input) | Stop of corresponding unit | Indoor unit has been shut
down due to external
abnormal input signal. | When external device is connected: 1) Check for trouble in external device. 2) Check for trouble in indoor P.C. board. When external device is not connected: 1) Check for trouble in indoor P.C. board. |
| – | L31 | _ | I/F | Extended IC trouble | Continued operation | There is part failure in P.C. board (I/F). | Check outdoor P.C. board (I/F). |
| P01 | _ | | Indoor unit | Indoor fan
motor trouble | Stop of corresponding unit | | Check the lock of fan motor (AC fan). Check wiring. |
| P03 | P03 | _ | I/F | Discharge
temperature
TD1 trouble | All stop | Discharge temperature (TD1) exceeds 115 °C. | Check outdoor service valves (gas side, liquid side) to confirm full opening. Check outdoor PMVs (PMV1, 2, 3, 4) for clogging. Check resistance characteristics of TD1 sensor. Check for insufficiency in refrigerant quantity. Check for failure in 4-way valve. Check for leakage of SV4 circuit. Check SV4 circuit (wiring or installation trouble in SV41 or SV42). |

| | Check | | Location | | | Observate de detection | |
|-------------|------------------|---|----------------------------|--|---------------|--|---|
| Main remote | Outdoor
Check | 7-segment display | of
detection | Description | System status | Check code detection condition(s) | Check items (locations) |
| P04 | P04 | Sub-code 1*: Compressor 1 side 2*: Compressor 2 side | I/F | Activation of high-pressure SW | All stop | High-pressure SW is activated. | Check connection of highpressure SW connector. Check for failure in Pd pressure sensor. Check outdoor service valves (gas side, liquid side) to confirm full opening. Check for failure in outdoor fan. Check for failure in outdoor fan motor. Check outdoor PMVs (PMV1, 2, 3) for clogging. Check indoor/outdoor heat exchangers for clogging. Check for short-circuiting of outdoor suction/discharge air flows. Check for failure in outdoor P.C. board (I/F). Check for trouble in indoor fan system (possible cause of air flow reduction). Check opening status of indoor PMV. Check indoor-outdoor communication line for wiring trouble. Check for failure operation of check valve in discharge pipe convergent section. Check gas balancing SV4 valve circuit. Check for refrigerant overcharging. |
| P05 | P05 | 00: Power detection trouble 01: Open phase 02: Power supply miswiring 1*: Compressor 1 side 2*: Compressor 2 side | I/F Compressor P.C. board | Power detection
trouble / Open
phase detection
/ Power supply
miswiring
Compressor
Vdc trouble | All stop | Open phase is detected when power is turned on. Inverter DC voltage is too high (overvoltage) or too low (undervoltage). | Check for failure in outdoor P.C. board (I/F). Check wiring of outdoor power supply. Check power supply voltage. |
| | | 1*: Compressor 1 side 2*: Compressor 2 side 01: Compressor 1 heat sink trouble | Compressor
P.C. board | overheating trouble Heat sink overheating trouble | All stop | Temperature sensor built into IPM (TH) is overheated. Condensation detection on heat sink has occurred four times or more in operation. | Check outdoor fan system trouble. Check IPM and heat sink for thermal performance for failure installation. (e.g. mounting screws and thermal conductivity) Check for failure in Compressor P.C. board. (failure IPM built-in temperature sensor (TH)) Check outdoor fan system trouble. Check IPM and heat sink for thermal performance for |
| P07 | P07 | 02: Compressor
2 heat sink
trouble
04: Heat sink
dew
condensation | | Heat sink dew condensation trouble | | Temperature sensor built into IPM (TH) is overheated. | for thermal performance for troubled installation. (e. g. mounting screws and thermal conductivity) • Check for failure in compressor P.C. board. (failure IPM built-in temperature sensor (TH)) • Check shortage of refrigerant. • Check outdoor service valves. • Check connection of TL2 sensor. • Check resistance characteristics of TL2 sensor. • Check resistance characteristics of TO sensor. • Check malfunctions of Pd and Ps sensors. • Check outdoor I/F P.C. board malfunction. • Check PMV2 and PMV3 |

| | Check | code | 1 4' | | | | |
|-------------|-------|-------------------------|-------------|--|----------------------------|---|--|
| Main remote | | 7-segment display | Location of | Description | System status | Check code detection condition(s) | Check items (locations) |
| controller | Check | Sub-code | detection | | | oonalion(o) | |
| P10 | P10 | Detected indoor address | Indoor unit | Indoor overflow trouble | All stop | Float switch operates. Float switch circuit is open-circuited or disconnected at connector. | Check float switch connector. Check operation of drain pump. Check drain pump circuit. Check drain pipe for clogging. Check for failure in indoor P.C. board. |
| P11 | | _ | I/F | Outdoor heat
exchanger
freeze trouble | All stop | Outdoor heat exchanger
remaining frost detection
has occurred eight times
or more due to abnormal
frost formation in heating
operation. | Check shortage of refrigerant. Check connection of TE1, TE2 and TE3 sensors. Check resistance characteristics of TE1, TE2, and TE3 sensors. Check disconnection of TS1 sensor. Check resistance characteristics of TS1 sensor. Check outdoor I/F P.C. board malfunction. Check operation of 4 way valve. Check operation of outdoor PMV (1, 2, 3). Check short circuit from outlet air to inlet air. |
| P12 | _ | _ | Indoor unit | Indoor fan
motor trouble | Stop of corresponding unit | Motor speed measurements continuously deviate from target value. Overcurrent protection is activated. | Check connection of fan connector and wiring. Check for failure in fan motor. Check for failure in indoor P.C. board. Check impact of outside air treatment (OA). |
| P13 | P13 | _ | I/F | Outdoor liquid
backflow
detection
trouble | All stop | <during cooling="" operation="">
When system is in cooling
operation, high pressure is
detected in the unit that
has been turned off. <during heating="" operation="">
When system is in heating
operation, low pressure is
detected to be high in unit
that has been turned off.</during></during> | Check full-close operation of outdoor PMV (1, 2, 3, 4). Check for failure in Pd or Ps sensor. Check failure in outdoor P.C. board (I/F). Check capillary of oil separator oil return circuit for clogging. Check for leakage of check valve in discharge pipe |
| P15 | P15 | 01: TS condition | I/F | Gas leak
detection
(TS1 condition) | All stop | Protective shutdown due to sustained suction temperature at or above judgment criterion for at least 10 minutes is repeated four times or more. <ts criterion="" judgment="" trouble="">In cooling operation: 60 °C In heating operation: 40 °C</ts> | Check for insufficiency in refrigerant quantity. Check outdoor service valves (gas side, liquid side) to confirm full opening. Check PMVs (PMV1, 2, 3, 4) for clogging. Check resistance characteristics of TS1 sensor. Check for failure in 4-way valve. Check SV4 circuit for leakage |
| | | 02: TD condition | I/F | Gas leak
detection
(TD condition) | All stop | Protective shutdown due to sustained discharge temperature (TD1 or TD2) at or above 108 °C for at least 10 minutes is repeated four times or more. | Check for insufficiency in refrigerant quantity. Check PMVs (PMV 1, 2, 3, 4) for clogging. Check resistance characteristics of TD1 and TD2 sensors. Check indoor filter for clogging. Check piping for clogging. Check SV4 circuit (for leakage or coil installation trouble). |

| | Check | code | | | | | |
|----------------------|------------|---------------------------|-------------|---|---------------|--|--|
| Main | Outdoor | 7-segment display | Location of | Description | System status | Check code detection | Check items (locations) |
| remote
controller | Check code | Sub-code | detection | Description | Cystom status | condition(s) | Oncor noms (rocations) |
| P17 | P17 | _ | I/F | Discharge
temperature
TD2 trouble | All stop | Discharge temperature (TD2) exceeds 115 °C. | Check outdoor service valves (gas side, liquid side) to confirm full opening. Check outdoor PMVs (PMV1, 2, 3, 4) for clogging. Check resistance characteristics of TD2 sensor. Check for failure in 4-way valve. Check SV4 circuit for leakage. Check SV4 circuit (for wiring or installation trouble involving SV41 and SV42). |
| P19 | P19 | Detected outdoor unit No. | I/F | 4-way valve
reversing
trouble | All stop | Abnormal refrigerating cycle data is collected during heating operation. | Check for failure in main body of 4-way valve. Check for coil failure in 4-way valve and loose connection of its connector. Check resistance characteristics of TS1 and TE1,TE2 sensors. Check output voltage characteristics of Pd and Ps pressure sensors. Check for wiring trouble involving TE1 and TL1 sensors. |
| P20 | P20 | | I/F | Activation of high-pressure protection | All stop | <during cooling="" operation="">
Pd sensor detects pressure
equal to or greater than
3.85 MPa.
<during heating="" operation="">
Pd sensor detects pressure
equal to or greater than
3.6 MPa.</during></during> | Check for failure in Pd pressure sensor. Check service valves (gas side, liquid side) to confirm full opening. Check for failure in outdoor fan. Check for failure in outdoor fan motor. Check outdoor PMV (PMV1, 2, 3, 4) for clogging. Check indoor/outdoor heat exchangers for clogging. Check for short-circuiting of outdoor suction/ discharge air flows. Check for failure in outdoor P.C. board (I/F). Check for failure in indoor fan system (possible cause of air flow reduction). Check opening status of indoor PMV. Check indoor-outdoor communication line for wiring trouble. Check for troble operation of check valve in discharge pipe convergent section. Check gas balancing SV4 valve circuit. |

| | Check | code | | | | | |
|----------------------|------------|--|--------------------------|---|----------------------------|--|--|
| Main | | | Location of | Description | System status | Check code detection condition(s) | Check items (locations) |
| remote
controller | Check code | Sub-code | detection | | | condition(s) | |
| P22 | P22 | 1*: Fan P.C.
board 1
2*: Fan P.C.
board 2 | Fan INV.
P.C. board | Outdoor fan
P.C. board
trouble | All stop | Protected operation of Fan inverter P.C. board | Check fan motor. Check for failure in fan P.C. board. Check connection of fan motor connector. Check power voltage of the main power supply. |
| P26 | P26 | 1*: Compressor
1 side
2*: Compressor
2 side | Compressor
P.C. board | IPM,
Compressor
shortcircuit
protection
trouble | All stop | Overcurrent is momentarily detected during startup of compressor. | Check connector connection and wiring on compressor P.C. board. Check for failure in compressor (layer shortcircuit). Check for failure in outdoor P.C. board (Compressor). |
| P29 | P29 | 1*: Compressor
1 side
2*: Compressor
2 side | Compressor
P.C. board | Compressor
position
detection circuit
trouble | All stop | Position detection is not going on normally. | Check wiring and connector connection. Check for compressor layer short-circuit. Check for failure in compressor P.C. board. |
| P31 | _ | _ | Indoor unit | Other indoor
trouble
(group follower
unit trouble) | Stop of corresponding unit | There is trouble in other indoor unit in group, resulting in detection of E07/L07/L03/L08. | Check indoor P.C. board. |

Check codes Detected by Central Control Device

| | Check | code | | | | | |
|----------------------|---|----------|--------------------------------------|---|----------------------|---|--|
| Main | Outdoor 7-segment display | | Location Description | System status | Check code detection | Check items (locations) | |
| remote
controller | Check code | Sub-code | detection | | | condition(s) | Check items (recations) |
| C05 | _ | | Central
control
device | Central control
device
transmission
trouble | Continued operation | Central control device is unable to transmit signal. | Check for failure in central control device. Check for failure in central control communication line Check termination resistance setting. |
| C06 | | | Central
control
device | Central control
device reception
trouble | Continued operation | Central control device is unable to receive signal. | Check for failure in central control device. Check for failure in central control communication line Check terminator resistor setting. Check power supply for devices at other end of central control communication line. Check failure in P.C. boards of devices at other end of central control communication line. |
| C12 | _ | | General-
purpose
device
I/F | Batch alarm
for general-
purpose
device
control interface | Continued operation | Trouble signal is input to control interface for general-purpose devices. | Check trouble input. |
| P30 | Differs according to nature of alarm-causing trouble P30 (L20 displayed.) | | Central
control
device | Group control follower unit trouble | Continued operation | Trouble occurs in follower unit under group control. ([P30] is displayed on central control remote controller.) | Check check code of unit
that has generated alarm. |
| | | | | Duplicated central control address | Continued operation | There is duplication in central control addresses. | Check address settings. |

In case of wireless remote controller

REQUIREMENT

- 1. For the operation procedure, be sure to follow the matter.
- 2. Finish the forced cooling operation in a short time because it applies excessive strength to the air conditioner.
- 3. A test operation of forced heating is unavailable. Perform a test operation by heating operation using the switches of the remote controller.


However heating operation may be not carried out according to the temperature conditions.

Check wiring/piping of indoor and outdoor units

- 1. Open the front panel.
- 2. When pushing [RESET] button for 10 seconds or more, "Pi!" sound is heard and the operation changes to a forced cooling operation. After approx. 3 minutes, a cooling operation starts forcedly. Check cool air starts blowing. If the operation does not start, check wiring again.
- 3. To stop a test operation, push [RESET] button once again (Approx. 1 second). The up/down air flow adjusting plate closes and the operation stops.

Check transmission of remote controller


- 1. Push "START/STOP" button of the remote controller to check an operation can also start by the remote controller.
 - When pushing [RESET] button once (For 1 second), the operation changes to automatic operation. For a forced cooling operation, keep the [RESET] button pushed over 10 seconds.
 - "Cooling" operation by the remote controller may be unavailable according to the temperature conditions. Check wiring/piping of the indoor and outdoor units in forced cooling operation.

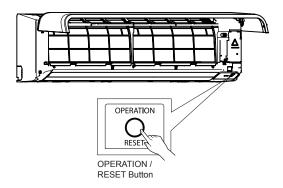


9-5. Sensor Characteristics

Indoor Unit


■ Temperature sensor characteristics

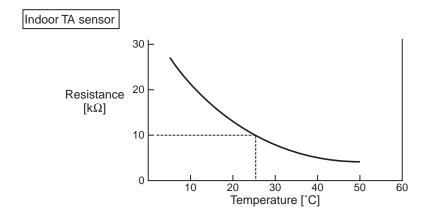

| Temperature [C°] | Resistance value $[k\Omega]$ |
|------------------|------------------------------|
| 0 | 33.9 |
| 5 | 26.1 |
| 10 | 20.3 |
| 15 | 15.9 |
| 20 | 12.6 |
| 25 | 10.0 |
| 30 | 8.0 |
| 35 | 6.4 |
| 40 | 5.2 |
| 45 | 4.2 |
| 50 | 3.5 |
| 55 | 2.8 |
| 60 | 2.4 |
| | |

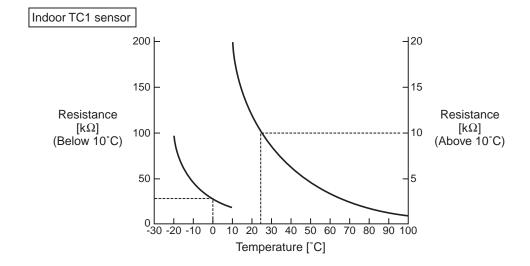

| Temperature | Resistance |
|--------------|---------------------|
| [C°] | value [k Ω] |
| -20 | 99.9 |
| -15 | 74.1 |
| -10 | 55.6 |
| -5 | 42.2 |
| -5
0
5 | 32.8 |
| | 25.4 |
| 10 | 19.8 |
| 15 | 15.6 |
| 20 | 12.4 |
| 25 | 10.0 |
| 30 | 8.1 |
| 35 | 6.5 |
| 40 | 5.3 |
| 45 | 4.4 |
| 50 | 3.6 |
| 55 | 3.0 |
| 60 | 2.5 |
| 65 | 2.5
2.1
1.8 |
| 70 | 1.8 |
| 75 | 1.5 |
| 80 | 1.3
1.1 |
| 85 | 1.1 |
| 90 | 1.0 |
| 95 | 0.8 |
| 100 | 0.7 |
| | |

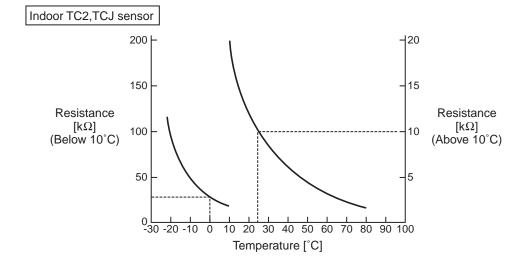

| Temperature [C°] | Resistance
value [kΩ] |
|------------------|--------------------------|
| | |
| -20 | 115.2 |
| -15 | 84.2 |
| -10 | 62.3 |
| -5 | 46.6 |
| <u>0</u>
5 | 35.2 |
| 5 | 26.9 |
| 10 | 20.7 |
| 15 | 16.1 |
| 20 | 12.6 |
| 25 | 10.0 |
| 30 | 8.0 |
| 35 | 6.4 |
| 40 | 5.2 |
| 45 | 4.2 |
| 50 | 3.5 |
| 55 | 2.8 |
| 60 | 2.4 |
| 65 | 2.0 |
| 70 | 1.6 |
| 75 | 1.4 |
| 80 | 1.2 |
| | |

10. INSTALLATION MANUAL

Original instruction

Please read this Installation Manual carefully before installing the Air Conditioner.

- · This Manual describes the installation method of the indoor unit.
- · For installation of the outdoor unit, follow the Installation Manual attached to the outdoor unit.

ADOPTION OF NEW REFRIGERANT

This Air Conditioner is a new type which adopts a new refrigerant HFC (R410A) instead of the conventional refrigerant R22 in order to prevent destruction of the ozone layer.

Information

If U series models (TU2C-Link) are combined with models other than U series (TCC-Link), the wiring specifications and maximum number of connectable indoor units will be changed. Pay attentions to their communication specifications when carrying out the installation, maintenance, or repair. For its details, refer to the "Electrical connection" in this Manual.

Contents

| 1 | PRECAUTIONS FOR SAFETY |
|----|--|
| 2 | ACCESSORY PARTS96 |
| 3 | SELECTION OF INSTALLATION PLACE |
| 4 | INSTALLATION OF INDOOR UNIT |
| 5 | CUTTING A HOLE AND MOUNTING INSTALLATION PLATE |
| 6 | PIPING AND DRAIN HOSE INSTALLATION102 |
| 7 | INDOOR UNIT FIXING |
| 8 | DRAINAGE |
| 9 | REFRIGERANT PIPING107 |
| 10 | ELECTRICAL CONNECTION |
| 11 | APPLICABLE CONTROLS |
| 12 | TEST RUN |
| 13 | TROUBLESHOOTING |

Thank you for purchasing this Toshiba air conditioner.

Please read carefully through these instructions that contain important information which complies with the Machinery Directive (Directive 2006/42/EC), and ensure that you understand them.

After completing the installation work, hand over this Installation Manual as well as the Owner's Manual provided to the user, and ask the user to keep them in a safe place for future reference.

Generic Denomination: Air Conditioner

Definition of Qualified Installer or Qualified Service Person

The air conditioner must be installed, maintained, repaired and removed by a qualified installer or qualified service person. When any of these jobs is to be done, ask a qualified installer or qualified service person to do them for you.

A qualified installer or qualified service person is an agent who has the qualifications and knowledge described in the table below.

| Agent | Qualifications and knowledge which the agent must have | | | |
|-----------------------------|--|--|--|--|
| Qualified
installer | The qualified installer is a person who installs, maintains, relocates and removes the air conditioners made by Toshiba Carrier Corporation. He or she has been trained to install, maintain, relocate and remove the air conditioners made by Toshiba Carrier Corporation or, alternatively, he or she has been instructed in such operations by an individual or individuals who have been trained and is thus thoroughly acquainted with the knowledge related to these operations. The qualified installer who is allowed to do the electrical work involved in installation, relocation and removal has the qualifications pertaining to this electrical work as stipulated by the local laws and regulations, and he or she is a person who has been trained in matters relating to electrical work on the air conditioners made by Toshiba Carrier Corporation or, alternatively, he or she has been instructed in such matters by an individual or individuals who have been trained and is thus thoroughly acquainted with the knowledge related to this work. The qualified installer who is allowed to do the refrigerant handling and piping work involved in installation, relocation and removal has the qualifications pertaining to this refrigerant handling and piping work as stipulated by the local laws and regulations, and he or she is a person who has been trained in matters relating to refrigerant handling and piping work on the air conditioners made by Toshiba Carrier Corporation or, alternatively, he or she has been instructed in such matters by an individual or individuals who have been trained and is thus thoroughly acquainted with the knowledge related to this work. The qualified installer who is allowed to work at heights has been trained in matters relating to working at heights with the air conditioners made by Toshiba Carrier Corporation or, alternatively, he or she has been instructed in such matters by an individual or individuals who have been trained and is thus thoroughly acquainted with the knowledge rel | | | |
| Qualified
service person | The qualified service person is a person who installs, repairs, maintains, relocates and removes the air conditioners made by Toshiba Carrier Corporation. He or she has been trained to install, repair, maintain, relocate and remove the air conditioners made by Toshiba Carrier Corporation or, alternatively, he or she has been instructed in such operations by an individual or individuals who have been trained and is thus thoroughly acquainted with the knowledge related to these operations. The qualified service person who is allowed to do the electrical work involved in installation, repair, relocation and removal has the qualifications pertaining to this electrical work as stipulated by the local laws and regulations, and he or she is a person who has been trained in matters relating to electrical work on the air conditioners made by Toshiba Carrier Corporation or, alternatively, he or she has been instructed in such matters by an individual or individuals who have been trained and is thus thoroughly acquainted with the knowledge related to this work. The qualified service person who is allowed to do the refrigerant handling and piping work involved in installation, repair, relocation and removal has the qualifications pertaining to this refrigerant handling and piping work as stipulated by the local laws and regulations, and he or she is a person who has been trained in matters relating to refrigerant handling and piping work on the air conditioners made by Toshiba Carrier Corporation or, alternatively, he or she has been instructed in such matters by an individual or individuals who have been trained and is thus thoroughly acquainted with the knowledge related to this work. The qualified service person who is allowed to work at heights has been trained in matters relating to working at heights with the air conditioners made by Toshiba Carrier Corporation or, alternatively, he or she has been instructed in such matters by an individual or individuals who have been trained and | | | |

Definition of Protective Gear

When the air conditioner is to be transported, installed, maintained, repaired or removed, wear protective gloves and 'safety' work clothing.

In addition to such normal protective gear, wear the protective gear described below when undertaking the special work detailed in the table below.

Failure to wear the proper protective gear is dangerous because you will be more susceptible to injury, burns, electric shocks and other injuries.

| Work undertaken | Protective gear worn |
|--------------------------------------|---|
| All types of work | Protective gloves 'Safety' working clothing |
| Electrical-related work | Gloves to provide protection for electricians and from heat Insulating shoes Clothing to provide protection from electric shock |
| Work done at heights (50 cm or more) | Helmets for use in industry |
| Transportation of heavy objects | Shoes with additional protective toe cap |
| Repair of outdoor unit | Gloves to provide protection for electricians and from heat |

These safety cautions describe important matters concerning safety to prevent injury to users or other people and damages to property. Please read through this manual after understanding the contents below (meanings of indications), and be sure to follow the description.

| Indication | Meaning of Indication | | |
|------------------|---|--|--|
| ⚠ WARNING | Text set off in this manner indicates that failure to adhere to the directions in the warning could result in serious bodily harm (*1) or loss of life if the product is handled improperly. | | |
| ⚠ CAUTION | Text set off in this manner indicates that failure to adhere to the directions in the caution could result in slight injury (*2) or damage (*3) to property if the product is handled improperly. | | |

- *1: Serious bodily harm indicates loss of eyesight, injury, burns, electric shock, bone fracture, poisoning, and other injuries which leave aftereffect and require hospitalization or long-term treatment as an outpatient.
- *2: Slight injury indicates injury, burns, electric shock, and other injuries which do not require hospitalization or long-term treatment as an outpatient.
- *3: Damage to property indicates damage extending to buildings, household effects, domestic livestock, and pets.

■ Warning indications on the air conditioner unit

| Warning indication | Description |
|---|--|
| WARNING ELECTRICAL SHOCK HAZARD Disconnect all remote electric power supplies before servicing. | WARNING ELECTRICAL SHOCK HAZARD Disconnect all remote electric power supplies before servicing. |
| Moving parts. Do not operate unit with grille removed. Stop the unit before the servicing. | WARNING Moving parts. Do not operate unit with grille removed. Stop the unit before the servicing. |
| CAUTION High temperature parts. You might get burned when removing this panel. | CAUTION High temperature parts. You might get burned when removing this panel. |
| Do not touch the aluminum fins of the unit. Doing so may result in injury. | CAUTION Do not touch the aluminium fins of the unit. Doing so may result in injury. |
| CAUTION BURST HAZARD Open the service valves before the operation, otherwise there might be the burst. | CAUTION BURST HAZARD Open the service valves before the operation, otherwise there might be the burst. |

1 PRECAUTIONS FOR SAFETY

- Ensure that all Local, National and International regulations are satisfied.
- Read this "PRECAUTIONS FOR SAFETY" carefully before Installation.
- The precautions described below include the important items regarding safety. Observe them without fail.
- After the installation work, perform a trial operation (test run) to check for any problem.
 - Follow the Owner's Manual to explain how to use and maintain the unit to the customer.
- Turn off the main power supply switch (or breaker) before the unit maintenance.
- Ask the customer to keep the Installation Manual together with the Owner's Manual.

The manufacturer shall not assume any liability for the damage caused by not observing the description of this manual.

⚠ WARNING

General

- Before starting to install the air conditioner, read through the Installation Manual carefully, and follow its instructions to install the air conditioner.
- Only a qualified installer(*1) or qualified service person(*1) is allowed to do installation work. Inappropriate installation may result in water leakage, electric shock or fire.
- Do not use any refrigerant different from the one specified for complement or replacement. Otherwise, abnormally high pressure may be generated in the refrigeration cycle, which may result in a failure or explosion of the product or an injury to your body.
- Before opening the front panel of the indoor unit or service panel of the outdoor unit, set the circuit breaker to the OFF position. Failure to set the circuit breaker to the OFF position may result in electric shocks through contact with the interior parts. Only a qualified installer(*1) or qualified service person(*1) is allowed to remove the front panel of the indoor unit or service panel of the outdoor unit and do the work required.
- Before carrying out the installation, maintenance, repair or removal work, be sure to set the circuit breaker to the OFF position. Otherwise, electric shocks may result.
- Place a "Work in progress" sign near the circuit breaker while the installation, maintenance, repair or removal work is being carried out. There is a danger of electric shocks if the circuit breaker is set to ON by mistake.

- Only a qualified installer(*1) or qualified service person(*1) is allowed to undertake work at heights using a stand of 50 cm or more or to remove the front panel of the indoor unit to undertake work.
- Wear protective gloves and safety work clothing during installation, servicing and removal.
- Do not touch the aluminium fin of the unit. You may injure yourself if you do so. If the fin must be touched for some reason, first put on protective gloves and safety work clothing, and then proceed.
- Do not climb onto or place objects on top of the outdoor unit. You may fall or the objects may fall off of the outdoor unit and result in injury.
- When work is performed at heights, use a ladder which complies with the ISO 14122 standard, and follow the procedure in the ladder's instructions.
 Also wear a helmet for use in industry as protective gear to undertake the work.
- Before cleaning the filter or other parts of the outdoor unit, set the circuit breaker to OFF without fail, and place a "Work in progress" sign near the circuit breaker before proceeding with the work.
- Before working at heights, put a sign in place so that no-one will approach the work location, before proceeding with the work. Parts and other objects may fall from above, possibly injuring a person below. While carrying out the work, wear a helmet for protection from falling objects.
- Do not use the refrigerant other than R410A.
 For the refrigerant type, check the outdoor unit to be combined.
- The refrigerant used by this air conditioner, follow to the outdoor unit.
- The air conditioner must be transported in stable condition. If any part of the product is broken, contact the dealer.
- When the air conditioner must be transported by hand, carry it by two or more people.
- Do not move or repair any unit by yourself. There is high voltage inside the unit. You may get electric shock while removing the cover and main unit.
- This appliance is intended to be used by expert or trained users in shops, in light industry, or for commercial use by lay persons.

Selection of installation location

- When the air conditioner is installed in a small room, provide appropriate measures to ensure that the concentration of refrigerant leakage occur in the room does not exceed the critical level.
- Do not install the air conditioner in a location that may be subject to a risk
 of exposure to a combustible gas. If a combustible gas leaks and becomes
 concentrated around the unit, a fire may occur.
- To transport the air conditioner, wear shoes with additional protective toe caps.

- To transport the air conditioner, do not take hold of the bands around the packing carton. You may injure yourself if the bands should break.
- Do not place any combustion appliance in a place where it is directly exposed to the wind of air conditioner, otherwise it may cause imperfect combustion.
- Do not install in a location where flammable gas leaks are possible. If the gas leak and accumulate around the unit, it may ignite and cause a fire.
- Install the indoor unit at least 2.5 m above the floor level since otherwise the users may injure themselves or receive electric shocks if they poke their fingers or other objects into the indoor unit while the air conditioner is running.

Installation

- Install the air conditioner securely in a location where the base can sustain the weight adequately. If the strength is not enough, the unit may fall down resulting in injury.
- Follow the instructions in the Installation Manual to install the air conditioner. Failure to follow these instructions may cause the product to fall down or topple over or give rise to noise, vibration, water leakage or other trouble.
- Carry out the specied installation work to guard against the possibility of high winds and earthquake. If the air conditioner is not installed appropriately, a unit may topple over or fall down, causing an accident.
- If refrigerant gas has leaked during the installation work, ventilate the room immediately. If the leaked refrigerant gas comes in contact with fire, noxious gas may generate.
- Use forklift to carry in the air conditioner units and use winch or hoist at installation of them.

Refrigerant piping

- Install the refrigerant pipe securely during the installation work before
 operating the air conditioner. If the compressor is operated with the valve
 open and without refrigerant pipe, the compressor sucks air and the
 refrigeration cycles is over pressurized, which may cause a injury.
- Tighten the flare nut with a torque wrench in the specified manner. Excessive tighten of the flare nut may cause a crack in the flare nut after a long period, which may result in refrigerant leakage.
- After the installation work, confirm that refrigerant gas does not leak.
 If refrigerant gas leaks into the room and flows near a fire source, such as a cooking range, noxious gas may be generated.

- When the air conditioner has been installed or relocated, follow the
 instructions in the Installation Manual and purge the air completely so that no
 gases other than the refrigerant will be mixed in the refrigerating cycle.
 Failure to purge the air completely may cause the air conditioner to
 malfunction.
- Nitrogen gas must be used for the airtight test.
- The charge hose must be connected in such a way that it is not slack.

Electrical wiring

- Only a qualified installer(*1) or qualified service person(*1) is allowed to carry out the electrical work of the air conditioner. Under no circumstances must this work be done by an unqualified individual since failure to carry out the work properly may result in electric shocks and/or electrical leaks.
- To connect the electrical wires, repair the electrical parts or undertake other electrical jobs, wear gloves to provide protection for electricians and from heat, insulating shoes and clothing to provide protection from electric shocks. Failure to wear this protective gear may result in electric shocks.
- Use wiring that meets the specifications in the Installation Manual and the stipulations in the local regulations and laws. Use of wiring which does not meet the specifications may give rise to electric shocks, electrical leakage, smoking and/or a fire.
- Connect earth wire. (grounding work)
 Incomplete grounding causes an electric shock.
- Do not connect earth wires to gas pipes, water pipes, and lightning conductor or telephone earth wires.
- After completing the repair or relocation work, check that the earth wires are connected properly.
- Install a circuit breaker that meets the specifications in the installation manual and the stipulations in the local regulations and laws.
- Install the circuit breaker where it can be easily accessed by the agent.
- When installing the circuit breaker outdoors, install one which is designed to be used outdoors.
- Under no circumstances the power wire must not be extended.
 Connection trouble in the places where the wire is extended may give rise to smoking and/or a fire.
- Electrical wiring work shall be conducted according to law and regulation in the community and installation manual. Failure to do so may result in electrocution or short circuit.

Test run

- Before operating the air conditioner after having completed the work, check that the electrical control box cover of the indoor unit and service panel of the outdoor unit are closed, and set the circuit breaker to the ON position. You may receive an electric shock if the power is turned on without first conducting these checks.
- If there is any kind of trouble (such as an error display has appeared, smell of burning, abnormal sounds, the air conditioner fails to cool or heat or water is leaking) has occurred in the air conditioner, do not touch the air conditioner yourself but set the circuit breaker to the OFF position, and contact a qualified service person. Take steps to ensure that the power will not be turned on (by marking "out of service" near the circuit breaker, for instance) until qualified service person(*1) arrives. Continuing to use the air conditioner in the trouble status may cause mechanical problems to escalate or result in electric shocks or other trouble.
- After the work has finished, use an insulation tester set (500V Megger) to check the resistance is $1M\Omega$ or more between the charge section and the non-charge metal section (earth section). If the resistance value is low, a disaster such as a leak or electric shock is caused at user's side.
- Upon completion of the installation work, check for refrigerant leaks and check the insulation resistance and water drainage. Then conduct a test run to check that the air conditioner is operating properly.

Explanations given to user

- Upon completion of the installation work, tell the user where the circuit breaker is located. If the user does not know where the circuit breaker is, he or she will not be able to turn it off in the event that trouble has occurred in the air conditioner.
- If the fan grille is damaged, do not approach the outdoor unit but set the circuit breaker to the OFF position, and contact a qualified service person(*1) to have the repairs done. Do not set the circuit breaker to the ON position until the repairs are completed.
- After the installation work, follow the Owner's Manual to explain to the customer how to use and maintain the unit.

Relocation

- Only a qualified installer(*1) or qualified service person(*1) is allowed to relocate the air conditioner. It is dangerous for the air conditioner to be relocated by an unqualified individual since a fire, electric shocks, injury, water leakage, noise and/or vibration may result.
- While carrying out the pump-down work shut down the compressor before disconnecting the refrigerant pipe. Disconnecting the refrigerant pipe with the service valve left open and the compressor still operating will cause air or other gas to be sucked in, raising the pressure inside the refrigeration cycle to an abnormally high level, and possibly resulting in rupture, injury or other trouble.

CAUTION

New refrigerant air conditioner installation

- This air conditioner adopts the new HFC refrigerant (R410A) which does not destroy ozone layer.
- The characteristics of R410A refrigerant are; easy to absorb water, oxidizing membrane or oil, and its pressure is approx. 1.6 times higher than that of refrigerant R22. Accompanied with the new refrigerant, refrigerating oil has also been changed. Therefore, during installation work, be sure that water, dust, former refrigerant, or refrigerating oil does not enter the refrigerating cycle.
- To prevent charging an incorrect refrigerant and refrigerating oil, the sizes of connecting sections of charging port of the main unit and installation tools are changed from those for the conventional refrigerant.
- Accordingly the exclusive tools are required for the new refrigerant (R410A).
- For connecting pipes, use new and clean piping designed for R410A, and please care so that water or dust does not enter.

To disconnect the appliance from main power supply.

• This appliance must be connected to the main power supply by means of a switch with a contact separation of at least 3 mm.

The installation fuse (all types can be used) must be used for the power supply line of this air conditioner.

Install the indoor unit at least 2.5 m above the floor level since otherwise the users may injure themselves or receive electric shocks if they poke their fingers or other objects into the indoor unit while the air conditioner is running.

(*1) Refer to the "Definition of Qualified Installer or Qualified Service Person."

2 ACCESSORY PARTS

| Part name | Q'ty | Shape | Usage |
|----------------------------------|------|-------------|---|
| Installation Manual | 1 | This manual | (Hand over to customers) (For other languages that do not appear in this installation Manual, please refer to the enclosed CD-R.) |
| Owner's Manual | 1 | | (Hand over to customers) (For other languages that do not appear in this installation Manual, please refer to the enclosed CD-R.) |
| CD-ROM | 1 | _ | Owner's Manual and Installation Manual. |
| Installation plate | 1 | | |
| Wireless remote controller | 1 | | |
| Battery | 2 | | |
| Remote controller holder | 1 | | |
| Mounting screw Ø4 × 25 ℓ | 6 | ()mmmm> | |
| Flat head wood screw Ø3.1 × 16 ℓ | 2 | | |
| Screw Ø4 × 10 ℓ | 3 | | |
| Heat insulator | 1 | | |

$oldsymbol{3}$ SELECTION OF INSTALLATION PLACE

↑ WARNING

• Install the air conditioner at enough strong place to withstand the weight of the unit. If the strength is not enough, the unit may fall down resulting in injury.

CAUTION

 Do not install the air conditioner in a location subject to a risk of exposure to a combustible gas.

If a combustible gas leaks and stays around the unit, a fire may occur.

Upon approval of the customer, install the air conditioner in a place that satisfies the following conditions.


- · Place where the unit can be installed horizontally.
- Place where a sufficient servicing space can be ensured for safety maintenance and check.
- · Place where drained water will not cause any problem.

Avoid installing in the following places.

Select a location for the indoor unit where the cool or warm air will circulate evenly. Avoid installation in the following kinds of locations.

- · Saline area (coastal area).
- Locations with acidic or alkaline atmospheres (such as areas with hot springs, factories where chemicals or pharmaceuticals are made and places where the exhaust air from combustion appliances will be sucked into the unit).
 - Doing so may cause the heat exchanger (its aluminum fins and copper pipes) and other parts to become corroded.
- Locations with atmospheres with mist of cutting oil or other types of machine oil.
 Doing so may cause the heat exchanger to become corroded, mists caused by the blockage of the heat exchanger to be generated, the plastic parts to be damaged, the heat insulators to peel off, and other such problems to result.
- Places where iron or other metal dust is present. If iron or other metal dust adheres to or collects on the interior of the air conditioner, it may spontaneously combust and start a fire.
- Locations where vapors from food oils are formed (such as kitchens where food oils are used). Blocked filters may cause the air conditioner's performance to deteriorate, condensation to form, the plastic parts to be damaged, and other such problems to result.
- Locations near obstructions such as ventilation openings or lighting fixtures where the flow of the blown air will be disrupted (a disruption of the air flow may cause the air conditioner's performance to deteriorate or the unit to shut down).
- Locations where an in-house power generator is used for the power supply.
 The power line frequency and voltage may fluctuate, and the air conditioner may not work properly as a result.
- On truck cranes, ships or other moving conveyances.
- The air conditioner must not be used for special applications (such as for storing food, plants, precision instruments or art works).
 - (The quality of the items stored may be degraded.)
- Locations where high frequencies are generated (by inverter equipment, in-house power generators, medical equipment or communication equipment).
 - (Malfunctioning or control trouble in the air conditioner or noise may adversely affect the equipment's operation.)
- Locations where there is anything under the unit installed that would be compromised by wetness. (If the drain has become blocked or when the humidity is over 80%, condensation from the indoor unit will drip, possibly causing damage to anything underneath.)
- In the case of the wireless type of system, rooms with the inverter type of fluorescent lighting or locations exposed to direct sunlight.
 - (The signals from the wireless remote controller may not be sensed.)
- · Locations where organic solvents are being used.
- The air conditioner cannot be used for liqueed carbonic acid cooling or in chemical plants.
- Location near doors or windows where the air conditioner may come into contact with high-temperature, high-humidity outdoor air.
 (Condensation may occur as a result.)
- · Locations where special sprays are used frequently.

■ Installation diagram of Indoor and outdoor units

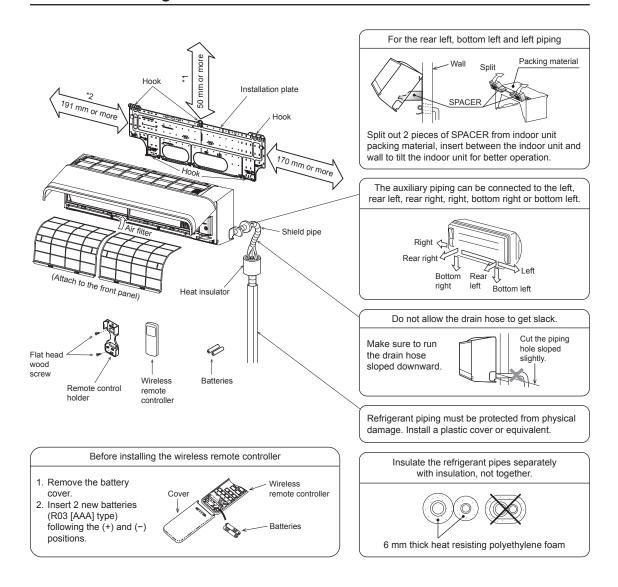

■ Installation space

The indoor unit shall be installed at least 2.5 m height.

Also it must be avoided to put anything on top of the indoor unit.

- *1 Reserve space required to install the indoor unit and for service work.
 - Keep 50 mm or more for clearance between top plate of the indoor unit and the ceiling surface.
- *2 Provide a space as shown for service clearance for the cross flow fan.

■ Installation place


- A place which provides the spaces around the indoor unit as shown in the above diagram.
- · A place where there is no obstacle near the air inlet and outlet.
- A place that allows easy installation of the piping to the outdoor unit.
- · A place which allows the front panel to be opened.



- · Direct sunlight to the indoor unit's wireless receiver should be avoided.
- The microprocessor in the indoor unit should not be too close to RF noise sources.
 (For details, see the owner's manual.)

■ Wireless remote controller

- · A place where there are no obstacles such as a curtain that may block the signal from the indoor unit.
- Do not install the remote controller in a place exposed to direct sunlight or close to a heating source, such as a stove.
- Keep the remote controller at least 1 m apart from the nearest TV set or stereo equipment.
 (This is necessary to prevent image disturb-bounces or noise interference.)
- The location of the remote controller should be determined as shown below.

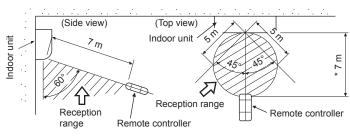

*: Axial distance

4

INSTALLATION OF INDOOR UNIT

! WARNING

Install the air conditioner certainly to sufficiently withstand the weight. If the strength is insufficient, the unit may fall down resulting in human injury. Perform a specified installation work to guard against strong wind or earthquake. An incomplete installation can cause accidents by the units falling and dropping.


REQUIREMENT

Strictly comply with the following rules to prevent damage of the indoor units and human injury.

- Do not put a heavy article on the indoor unit. (Even units are packaged)
- Carry in the indoor unit as it is packaged if possible. If carrying in the indoor unit unpacked by necessity, be sure to use buffering cloth, etc. to not damage the unit.
- To move the indoor unit, do not apply force to the refrigerant pipe, drain pan, foamed parts, or resin parts, etc.
- Carry the package by two or more persons, and do not bundle it with plastic band at positions other than specified.

Be careful to the following items when installating the unit.

• Considering air discharge direction, select an installation place where discharge air can circulate evenly in a room. Avoid to install the unit at place with "NO GOOD" mark in the right figure.

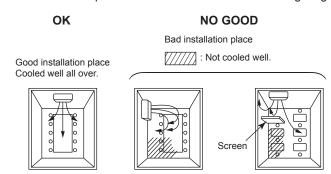


5 CUTTING A HOLE AND MOUNTING INSTALLATION PLATE

Cutting a hole

In case of installing the refrigerant pipes from the rear:


Decide the hole position for piping at 110 mm from the arrow mark (⇒) on the installation plate and drill a hole at a slight downward slant toward outdoor side.

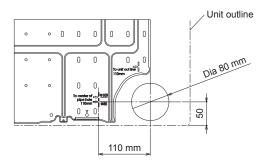

NOTE

 When drilling a wall that contains a metal lath, wire lath or metal plate, be sure to use a pipe hole brim ring sold separately.

■ Mounting the installation plate

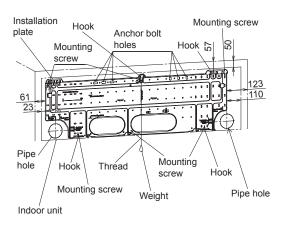


When the installation plate is directly mounted on the wall

- 1. Securely fit the installation plate onto the wall by screwing it in the upper and lower parts to hook up the indoor unit.
- To mount the installation plate on a concrete wall with anchor bolts, utilize the anchor bolt holes as illustrated in the above figure.
- Install the installation plate horizontally in the wall.



When installing the installation plate with a mounting screw, do not use the anchor bolt hole. Otherwise the unit may fall down and result in personal injury and property damage.

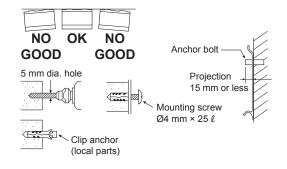

CAUTION

Failure to firmly install the unit may result in personal injury and property damage if the unit falls.

- In case of block, brick, concrete or similar type walls, make 5 mm dia. holes in the wall.
- Insert clip anchors for appropriate mounting screws.


NOTE

 Secure four corners and lower parts of the installation plate with 6 mounting screws to install it.

6 PIPING AND DRAIN HOSE INSTALLATION

■ Piping and drain hose forming

* Since dewing results in a machine trouble, make sure to insulate both connecting pipes. (Use polyethylene foam as insulating material.)

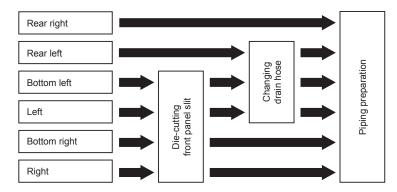

1. Die-cutting front panel slit


Cut out the slit on the left or right side of the front panel for the left or right connection and the slit on the bottom left or right side of the front panel for the bottom left or right connection with a pair of nippers.

2. Changing drain hose

For leftward connection, bottom-leftward connection and rear leftward connection's piping, it is necessary to change the drain hose and drain cap.


How to remove the drain hose

- The drain hose can be removed by removing the screw securing the drain hose and then pulling out the drain hose.
- When removing the drain hose, be careful of any sharp edges of steel plate. The edges can injuries.
- To install the drain hose, insert the drain hose firmly until the connection part contacts with heat insulator, and then secure it with original screw.

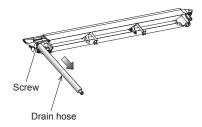


How to remove the drains cap

Clip the drain cap by needle-nose pliers and pull out.

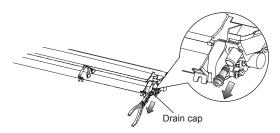


How to fix the drains cap

1) Insert hexagonal wrench (dia. 4 mm) in a centre head.

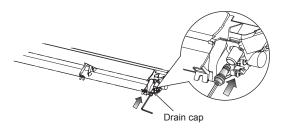

2) Firmly insert drains cap.

Do not apply lubricating oil — (refrigerant machine oil) when inserting the drain cap. Application causes deterioration and drain leakage from the plug.

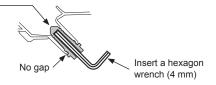



Firmly insert the drain hose and drain cap; otherwise, water may leak.

How to remove the drain hose


- 1) Remove the front panel.
- 2) Remove the screws of drain hose.
- 3) Pull out the drain hose.

How to fix the drain hose

- 1) Put the drain hose.
- 2) Screw the drain hose to the indoor unit.
- 3) Install the front panel.


▼ In case of right or left piping

 After scribing slits of the front panel with a knife or a marking-off pin, cut them with a pair of nippers or an equivalent tool.

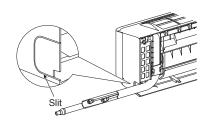

▼ In case of bottom right or bottom left piping

 After scribing slits of the front panel with a knife or a marking-off pin, cut them with a pair of nippers or an equivalent tool.

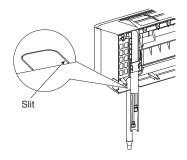


▼ Left-hand connection with piping

Bend the connecting pipe so that it is laid within 43 mm above the wall surface. If the connecting pipe is laid exceeding 43 mm above the wall surface, the indoor unit may unstably be set on the wall. When bending the connecting pipe, make sure to use a spring bender so as not to crush the pipe.

Bend the connecting pipe within a radius of 30 mm.


To connect the pipe after installation of the unit (figure)

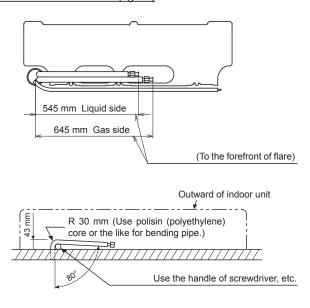

NOTE

If the pipe is bent incorrectly, the indoor unit may unstably be set on the wall.

After passing the connecting pipe through the pipe hole, connect the connecting pipe to the auxiliary pipes and wrap the facing tape around them.

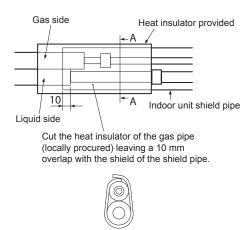

Heat insulator wrapping cross section A-A

Make the slit part of heat insulator to upward.

▼ Insulating the pipes

Insulate the indoor unit completely so there are no gaps using the heat insulator provided.


! CAUTION

Securely apply insulation all the way up to the pipe connecting section of the indoor unit so that there is no exposed area. (the pipe exposed to the outside causes water leak.)

When wrapping the heat insulator around pipes, make sure the slit aperture toward the ceiling surface.

↑ CAUTION

• Bind the auxiliary pipes (two) and power supply wiring and control wiring with facing tape tightly. In case of leftward piping and rear leftward piping, bind the auxiliary pipes (two) only with facing tape.

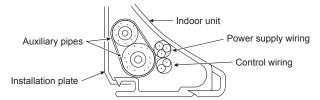


- · Carefully arrange pipes so that any pipe does not stick out of the rear plate of the indoor unit.
- Carefully connect the auxiliary pipes and connecting pipes to one another and cut off the insulating tape wound on the connecting pipe to avoid double-taping at the joint; moreover, seal the joint with the vinyl tape, etc.
- Since dew results in a machine trouble, make sure to insulate both the connecting pipes. (Use polyethylene foam as insulating material.)
- · When bending a pipe, carefully do it, not to crush it.

7 INDOOR UNIT FIXING

- Pass the pipe through the hole in the wall, and hook the indoor unit on the installation plate at the upper hooks.
- Swing the indoor unit to right and left to confirm that it is firmly hooked up on the installation plate.
- While pressing the indoor unit onto the wall, hook it at the lower part on the installation plate. Pull the indoor unit toward you to confirm that it is firmly hooked up on the installation plate.




 For detaching the indoor unit from the installation plate, pull the indoor unit toward you while pushing its bottom up at the specified parts.

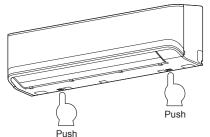

REQUIREMENT

The lower part of indoor unit may float, due to the condition of piping and you cannot fix it to the installation plate. In that case, use the screws provided to fix the unit and the installation plate.

Especially when the pipes are pulled out from the left side, the unit must be screwed to the installation plate.

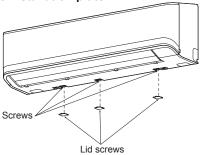



8 DRAINAGE

1. Run the drain hose sloped downwards.

NOTE

- Hole should be made at a slight downward slant on the outdoor side.
- 2. Put water in the drain pan and make sure that the water is drained out of doors.
- 3. When connecting extension drain hose, insulate the connecting part of extension drain hose with shield pipe.

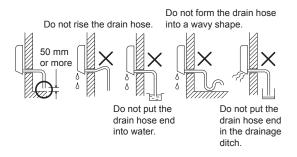

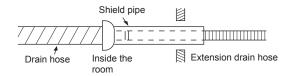


CAUTION

Arrange the drain pipe for proper drainage from the unit.

Improper drainage can result in dew-dropping.

This air conditioner has the structure designed to drain water collected from dew, which forms on the back of the indoor unit, to the drain pan. Therefore, do not store the power cord and other parts at a height above the drain guide.

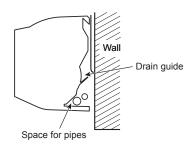

9 REFRIGERANT PIPING

■ Refrigerant Piping

- 1. Use copper pipe with 0.8 mm or more thickness. (In case pipe size is dia. 15.9, with 1.0 mm or more.)
- Flare nut and flare works are also different from those of the conventional refrigerant.
 Take out the flare nut attached to the main unit of the air conditioner, and use it.

REQUIREMENT

When the refrigerant pipe is long, provide support brackets at intervals of 2.5 to 3 m to clamp the refrigerant pipe. Otherwise, abnormal sound may be generated.



IMPORTANT 4 POINTS FOR PIPING WORK

- Reusable mechanical connectors and flared joints are not allowed indoors. When mechanical connectors are reused indoors, sealing parts shall be renewed. When flared joints are reused indoors, the flare part shall be refabricated.
- 2. Tight connection (between pipes and unit)
- 3. Evacuate the air in the connecting pipes by using VACUUM PUMP.
- 4. Check the gas leakage. (Connected points)

■ Pipe size

(dia.: mm)

| MMK- | PIPE SIZE (mm) | |
|---------------------------|----------------|-------------|
| IVIIVITA- | Gas side | Liquid side |
| UP027 to
UP036
type | 15.9 | 9.5 |

Permissible Piping Length and Height Difference

They vary according to the outdoor unit. For details, refer to the Installation Manual attached to the outdoor unit.

Flaring

pipe.

- Cut the pipe with a pipe cutter.
 Remove burrs completely.
 Remaining burrs may cause gas leakage.
- Insert a flare nut into the pipe, and flare the pipe.

As the flaring sizes of R410A differ from those of refrigerant R22, the flare tools newly manufactured for R410A are recommended. However, the conventional tools can be used by adjusting projection margin of the copper

▼ Projection margin in flaring: B (Unit: mm)

RIDGID (Clutch type)

| Outer dia. of copper pipe | Tool used | Conventional tool used |
|---------------------------|------------|------------------------|
| 6.4 , 9.5 | 0.5 to 1.0 | 1.0 to 1.5 |
| 12.7 , 15.9 | 0.5 to 1.1 | 1.5 to 2.0 |

▼ Flaring dia. meter size: A (Unit: mm)

| Outer dia. of copper pipe | A -0.4 |
|---------------------------|--------|
| 6.4 | 9.1 |
| 9.5 | 13.2 |
| 12.7 | 16.6 |
| 15.9 | 19.7 |

CAUTION

- Do not scratch the inner surface of the flared part when removing burrs.
- Flare processing under the condition of scratches on the inner surface of flare processing part will cause refrigerant gas leak.
- Check that the flared part is not scratched, deformed, stepped, or flattened, and that there are no chips adhered or other problems, after flare processing.
- Do not apply refrigerating machine oil to the flare surface.
- * In case of flaring with the conventional flare tool, pull it out approx. 0.5 mm more than that for R22 to adjust to the specified flare size. The copper pipe gauge is useful for adjusting projection margin size.



Tightening connection



 Do not apply excessive torque. Otherwise, the nut may crack depending on the conditions.

(Unit: N·m)

| Outer dia. of copper pipe | Tightening torque |
|---------------------------|-----------------------------|
| 6.4 mm (dia.) | 14 to 18 (1.4 to 1.8 kgf•m) |
| 9.5 mm (dia.) | 33 to 42 (3.3 to 4.2 kgf•m) |
| 12.7 mm (dia.) | 50 to 62 (5.0 to 6.2 kgf•m) |
| 15.9 mm (dia.) | 68 to 82 (6.8 to 8.2 kgf•m) |

▼ Tightening torque of flare pipe connections

Incorrect connections may cause not only a gas leak, but also a trouble of the refrigeration cycle. Align the centres of the connecting pipes and tighten the flare nut as far as possible with your fingers. Then tighten the nut with a spanner and torque wrench as shown in the figure.



Work using double spanner

REQUIREMENT

Tightening with an excessive torque may crack the nut depending on installation conditions. Tighten the nut within the specified tightening torque.

Piping with outdoor unit


Shape of valve differs according to the outdoor unit.

For details of installation, refer to the Installation Manual of the outdoor unit.

Heat insulation

Heat insulation for the pipes should be done separately for the liquid side and gas side. Because both of the liquid and gas side pipes become a low temperature during cooling operation, sufficient heat insulation should be done to prevent condensation.

- Heat insulator with a heat resistance of 120°C or more must be used for the gas side pipe.
- The pipe connection section of the indoor unit must be heat insulated securely and compactly with the attached heat insulator.

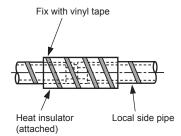

REQUIREMENT

Apply the heat insulation to the pipe connecting section of the indoor unit securely up to the root without exposure of the pipe. (the pipe exposed to the outside causes water leak.)

■ Airtight test/Air purge, etc.

For airtight test, air purge, addition of refrigerant, and gas leak check, follow the Installation Manual attached to the outdoor unit.

Open fully valves of the outdoor unit

Open the valve of the outdoor unit fully. A hexagonal wrench is required for opening the valve.

For details, refer to the Installation Manual attached to the outdoor unit.

■ Gas leak check

Check with a leak detector or soap water whether gas leaks or not, from the pipe connecting section or cap of the valve.

REQUIREMENT


Use a leak detector manufactured exclusively HFC refrigerant (R410A, R134a, etc.).

■ Wireless remote controller A-B selection

Using 2 wireless remote controllers for the respective air conditioners, when the 2 air conditioners are closely installed.

Wireless remote controller B setup

- 1 Push RESET button on the indoor unit to turn the air conditioner ON.
- 2 Point the wireless remote controller at the indoor unit.
- 3 Push and hold CHK• button on the wireless remote controller by the tip of the pencil. "00" will be shown on the display.
- 4 Push MoDE during pushing CHK●. "B" will be shown on the display and "00" will be disappear and the air conditioner will turn OFF. The wireless remote controller B is memorized.

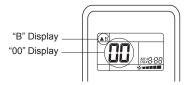

NOTE

- Repeat above step to reset wireless remote controller to be A.
- The wireless remote controllers do not display "A"
- The factory default of the wireless remote controllers is "A".

10 ELECTRICAL CONNECTION

MARNING

- Using the specified wires, ensure to connect the wires, and fix wires securely so that the external tension to the wires do not affect the connecting part of the terminals. Incomplete connection or fixation may cause a fire, etc.
- 2. Be sure to connect earth wire. (grounding work)

Incomplete grounding cause an electric shock. Do not connect ground wires to gas pipes, water pipes, lightning rods or ground wires for telephone wires.

 Appliance shall be installed in accordance with national wiring regulations.
 Capacity shortage of power circuit or incomplete installation may cause an electric shock or a fire.

CAUTION

- For communication line, use wires with the same type and size. If each wire has a different type and size from another one, it will cause a communication trouble.
- If incorrect / incomplete wiring is carried out, it will cause an electrical fire or smoke.
- Install an earth leakage breaker that is not tripped by shock waves.
 If an earth leakage breaker is not installed, an electric shock may be caused.
- Use the cord clamps attached to the product.
- Do not damage or scratch the conductive core and inner insulator of power and control wires when peeling them.
- Use the power supply wire and control wires of specified thickness, type, and protective devices required.
- Do not connect 208-240V power to the terminal blocks (Uv (U1)), (Uv (U2)), (A), (B) for control wiring. (Otherwise, the system will fail.)
- Perform the electric wiring so that it does not come to contact with the high-temperature part of the pipe.

The coating may melt resulting in an accident.

REQUIREMENT

- For power supply wiring, strictly conform to the Local Regulation in each country.
- For wiring of power supply of the outdoor units, follow the Installation Manual of each outdoor unit.
- Perform the electric wiring so that it does not come to contact with the high-temperature part of the pipe.
 The coating may melt resulting in an
 - The coating may melt resulting in an accident.
- After connecting wires to the terminal blocks, provide a trap and fix wires with the cord clamp.
- Run the refrigerant piping line and control wiring line in the same line.
- Do not turn on the power of the indoor unit until vacuuming of the refrigerant pipes completes.

■ Power supply wire and communication wires specifications

Power supply wire and communication wires are procured locally.

For the power supply specifications, follow the table below. Power supply wiring and communication wiring are to be procured locally.

For specifications of the power capacity of the outdoor unit and the power supply wires, refer to the Installation Manual supplied with the outdoor unit.

Indoor unit power supply

- · Prepare an exclusive power supply for the indoor unit independently of the outdoor unit.
- Arrange the power supplies to the indoor and outdoor units, so that a common earth leakage breaker and main switch can be used.
- Power supply wire specification: Cable 3-core 2.5 mm², in conformity with Design H07RN-F or 60245 IEC 57.

▼ Power supply

| Power supply | 220 - 240V ~, 50 Hz
208 - 230V ~, 60 Hz | | | | | |
|---|--|---------------------|--|--|--|--|
| Power supply switch / Earth leakage breaker or power supply wiring / fuse rating for indoor units should be selected by the accumulated total current values of the indoor units. | | | | | | |
| Power supply wiring | Below 50 m | 2.5 mm ² | | | | |

Control wiring, Central controller wiring

- · Use a 2 core non polarity wire.
- To prevent any possible noise issues, use a shielded 2 core wire.
- The total stated length of communication wiring is determined by the interconnecting length of indoor to outdoor wire plus the length of the central control communication wire.

▼ Communication line

TU2C-Link models (U series) can be combined with TCC-Link models (other than U series). For details of communication type, refer to the following table.

Communication type and model names

| Communication type | TU2C-Link
(U series and future models) | TCC-Link
(Other than U series) |
|--|---|--|
| Outdoor unit | MMY-M <u>U</u> P * * * ↑ This letter indicates U series model. | Other than U series
MMY-MHP ***
MCY-MHP ***
MMY-MAP *** |
| Indoor unit | MM * - <u>U</u> P * * *
↑
This letter indicates U series model. | Other than U series
MM * -AP * * * |
| Wired remote controller | RBC-ASC <u>U</u> * * * * ↑ This letter indicates U series model. | Other than U series |
| Wireless remote controller kit & receiver unit | RBC-AX <u>U</u> * * * * ↑ This letter indicates U series model. | Other than U series |

U series outdoor unit : SMMS-u (MMY-MUP ***)

Other than U series outdoor unit: SMMS-i, SMMS-e etc. (MMY-MHP ***)

< In the case of combining with outdoor units of Super Modular Multi System u series (SMMS-u)>

| Uv line and Uc line (L2, L3, L4) (2-core shield wire, non-polarity) | Wire size : | 0.5 mm ²
0.75 to 1.25 mm ² | (Up to 500 m)
(Up to 1000 m) |
|---|-------------|---|----------------------------------|
| Uh line (L1) (2-core shield wire, non-polarity) | Wire size : | 0.75 to 1.25 mm ²
2.0 mm ² | (Up to 1000 m)
(Up to 2000 m) |


• **U** (v, h, c) line means of control wiring.

Uv line: Between indoor and outdoor units.

Uh line: Central control line.

Uc line: Between outdoor and outdoor units.

 Uv line and Uc line are independent from another refrigerant line. Total length of Uv and Uc lines (L3+L4) in each refrigerant line is up to 1000 m.

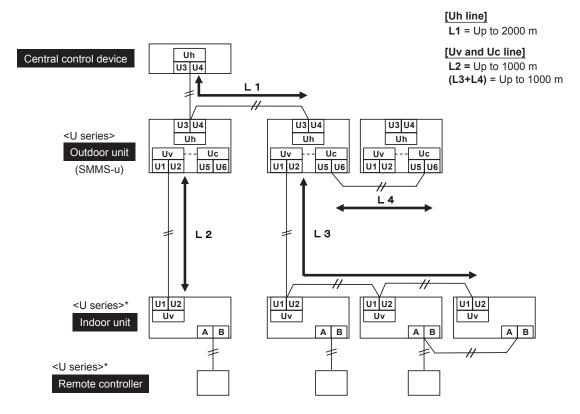


* Even if the indoor unit and the remote controller are "other than U series", the wiring specification are the same.

<In the case of combining with outdoor units other than Super Modular Multi System u series (SMMS-u)>

| Control wiring between indoor units, and outdoor unit (L2, L3) (2-core shield wire, non-polarity) Central control line wiring (L1) (2-core shield wire, non-polarity) | - Wire size : | 1.25 mm²
2.0 mm² | (Up to 1000 m)
(Up to 2000 m) |
|--|---------------|-----------------------------|----------------------------------|
| Control wiring between outdoor units (L4) (2-core shield wire, non-polarity) | Wire size : | 1.25 to 2.0 mm ² | (Up to 100 m) |

• The length of the communication line (L1+L2+L3) means the total length of the inter-unit wire length between indoor and outdoor units added with the central control system wire length.

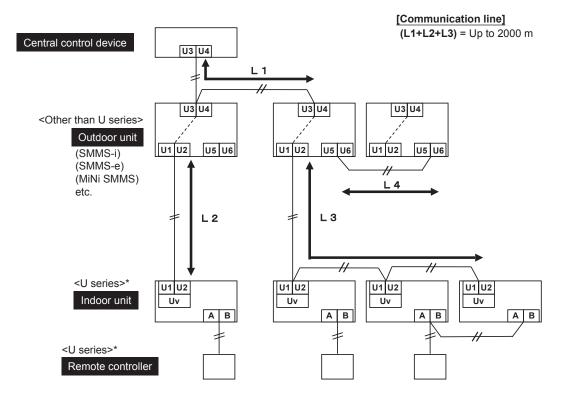

* Even if the indoor unit and the remote controller are "other than U series", the wiring specification are the same.

Wired remote controller wiring


This wiring is not required when using the supplied wireless remote controller.

• For wiring remote controllers a 2 core non polarity wire must be used.

| Wired remote controller wiring, remote controller inter-unit wiring | Wire size: 0.5 mm² to 2.0 mm² | |
|---|-----------------------------------|-------------|
| | | |
| Total wire length of wired remote controller wiring and remote | In case of wired type only | Up to 500 m |
| controller inter-unit wiring = L + L1 + L2 + Ln | In case of wireless type included | Up to 400 m |
| Total wire length of wired remote controller inter-unit wiring = L1 + | L2 + Ln | Up to 200 m |

CAUTION

- The remote controller wire (Communication line) and AC 208-240V wires cannot be parallel to contact each other and cannot be stored in the same conduits. If doing so, a trouble may be caused on the control system due to noise or other factor.
- If U series models (TU2C-Link) are combined with models other than U series (TCC-Link), the wiring specifications and maximum number of connectable indoor units will be changed. Pay attentions to their communication specifications when carrying out the installation, maintenance, or repair.
 For its details, refer to the "Communication line" in 10 Electrical connection.

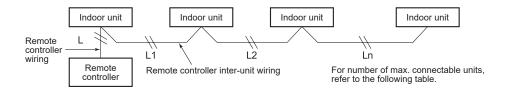

Max. number of connectable indoor units, and communication type

| | | | | Unit ty | /ре | | | |
|----------------------------------|-----------|-------------|----------|----------|----------|----------|----------|---|
| Outdoor unit | U series | U series | U series | U series | * | * | * | * |
| Indoor unit | U series | U series | * | * | U series | U series | * | * |
| Remote controller | U series | * | U series | * | U series | * | U series | * |
| Communication type | TU2C-Link | nk TCC-Link | | | | | | |
| Max. number of connectable units | 16 | 8 | | | | | | |

^{*:} Other than U series

REQUIREMENT


After carrying out installation of additional indoor unit, relocation, or repairing, set the addresses again. For its detail, refer to the Installation Manual attached to the outdoor unit.

■ Wiring between indoor and outdoor units

NOTE

A wiring diagram below is an example for connection to SMMS-u series. For connecting to other
outdoor unit series, refer to the Installation Manual attached to the outdoor unit to be connected.

Wiring example

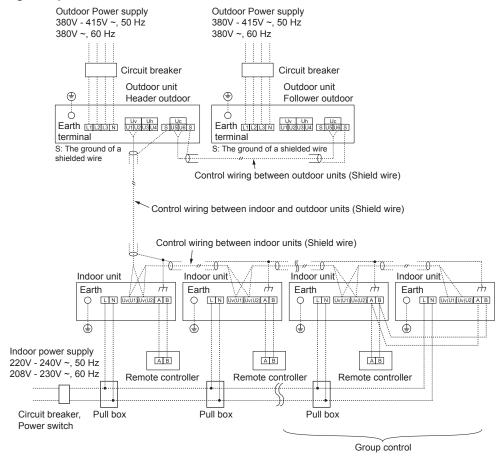


■ Address setup

Set up the addresses as per the Installation Manual supplied with the outdoor unit.

■ Wired remote controller wiring

 As the wired remote controller wire has non-polarity, there is no problem if connections to indoor unit terminal blocks A and B are reversed.

▼ Wiring diagram

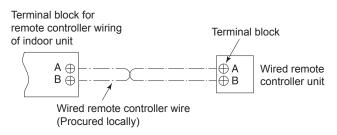

■ Wiring Connection

How to connect the power supply wiring and control wiring

The power supply wire and the control wire can be connected without removing the front panel.


REQUIREMENT


Connect the power supply wire after connecting the control wire for this model.

- Remove the air inlet grille.
 Open the air inlet grille upward and pull it toward you.
- Remove the terminal cover and the clamp base.
- Insert the power supply wire and control wire (according to the local rule) into the pipe hole on the wall.
- Take the power supply wire out of the cable slot on the rear panel so that it protrudes about 150 mm from the front.
- Insert the control wire fully into the control/ wired remote controller terminal block (Uv (U1), (Uv (U2), (A), (B) and secure it tightly with screws.
- 6. Clamp the control wire with the cord clamp.
- 7. Install the clamp base with a screw.
- Insert the power supply wire fully into the terminal block and secure it tightly with screws. Tightening torque: 1.2 N·m (0.12 kgf·m) Secure the earth line with the earth screw.
- Clamp the power supply wire with the cord clamp.
- 10. Attach the terminal cover and the air inlet grille to the indoor unit


CAUTION


- Be sure to refer to the wiring diagram attached inside the front panel.
- Check local electrical cords an also any specific wiring instructions and limitations.
- Do not catch the control wire when installing the clamp base.

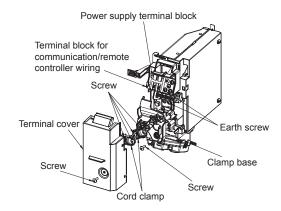

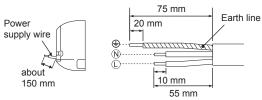


<Stripping length of the power supply wire>

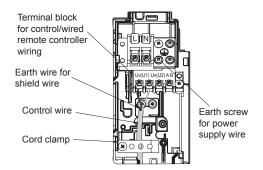

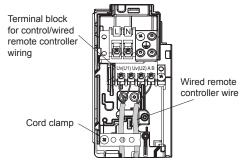

<Connecting wired remote controller wire>

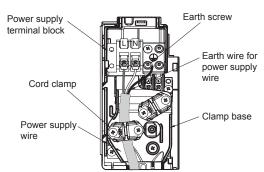


■ Wiring connection for flow selector unit

How to connect the wiring of flow selector unit

Connect the power supply wire and the communication wire supplied with the flow selector unit to the indoor unit.

- 1. Remove the air inlet grille.
 - Open the air inlet grille upward and pull it toward you.
- 2. Remove the terminal cover and the clamp base.
- Insert the control wire fully into the control/wired remote controller terminal block and secure it tightly with screws.
- 4. Connect the control wire connector of the flow selector unit to the lead with a connector to the left of the control/wired remote controller terminal block.
- 5. Clamp the control wire and the control wire of the flow selector unit with the cord clamp.
- 6. Install the clamp base with a screw.
- Insert the power supply wire fully into the terminal block and secure it tightly with screws. Tightening torque: 1.2 N·m (0.12 kgf·m)
 Secure the earth line with the earth screw.
- 8. Clamp the power supply wire with the cord clamp.
- 9. Insert the power supply wire fasten terminal of the flow selector unit into the power supply terminal. Secure the earth line with the earth screw.
- 10. Clamp the power supply wire of the flow selector unit tight with the cord clamp.
- 11. Attach the terminal cover, the front panel and the air inlet grille to the indoor unit.

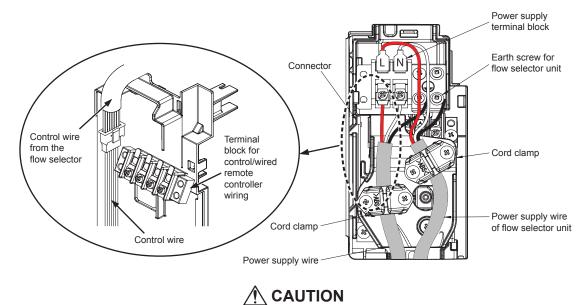

Confirm that every wires are stored in the electric parts box without getting caught before attaching the terminal cover.

11 APPLICABLE CONTROLS

REQUIREMENT

When the air conditioner is used for the first time, it will take some moments after the power has been turned on before the remote controller becomes available for operations: This is normal and is not indicative of trouble.

- Concerning the automatic addresses (The automatic addresses are set up by performing operations on the outdoor interface circuit board.)
 - While the automatic addresses are being set up, no remote controller operations can be performed.
 - Setup takes up to 10 minutes (usually about 5 minutes).
- When the power is turned on after automatically address setup, it takes up to 10 minutes (usually about 3 minute) for the outdoor unit to start operating after the power has been turned on.

 Refore the air conditioner was shipped from the

Before the air conditioner was shipped from the factory, all units are set to [STANDARD] (factory default).

If necessary, change the indoor unit settings. The settings are changed by operating the wired remote controller.

- * The settings cannot be changed using only a wireless remote controller and simple remote controller by itself so install a wired remote controller separately as well.
- Applicable controls setup (settings at the site)

Remote controller model name: RBC-ASCU11-E

Basic procedure

Be sure to stop the air conditioner before making settings.


(Change the setup while the air conditioner is not working.)




Set only the Code No. shown in the following table:

Do NOT set any other Code No.


If a Code No. not listed is set, it may not be possible to operate the air conditioner or other trouble with the product may result.

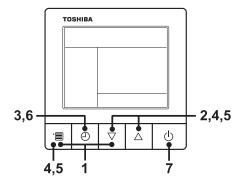

- Push and hold menu button and [▽] setting button simultaneously for 10 seconds or more.
 - After a while, the display flashes as shown in the figure. "ALL" is displayed as indoor unit numbers during initial communication immediately after the power has been turned on.

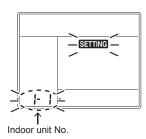

- 2 Each time [▽] [△] setting button is pushed, indoor unit numbers in the group control change cyclically. Select the indoor unit to change settings for.
 - The fan of the selected indoor unit runs.
 The indoor unit can be confirmed for which to change settings.
- 3 Push OFF timer button to confirm the selected indoor unit.

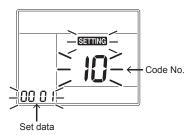

Push the menu button to make Code No. [**] flash. Change Code No. [**] with [√] [∧] setting button.

- **5** Push the menu button to make Set data [****] flash. Change Set data [****] with $[\nabla]$ [\triangle] setting button.
- 6 Push OFF timer button. By doing so, the setup is completed.
 - · To change other settings of the selected indoor unit, repeat from Procedure 4.
- 7 When all the settings have been completed, push ON/OFF button to determine the settings.

"SETTING" flashes and then the display content disappears and the air conditioner enters the normal stop mode. (The remote controller is unavailable while "SETTING" is flashing.)

· To change settings of another indoor unit, repeat from Procedure 1.

Change of lighting time of filter sign

According to the installation condition, the lighting time of the filter sign (Notification of filter cleaning) can be changed.

Follow to the basic operation procedure

$$(1 \rightarrow 2 \rightarrow 3 \rightarrow 4 \rightarrow 5 \rightarrow 6)$$
.

- For the CODE No. in Procedure 4. specify [01].
- For the ISET DATA1 in Procedure **5**, select the SET DATA of filter sign lighting time from the following table.

| SET DATA | Filter sign lighting time |
|----------|---------------------------|
| 0000 | None |
| 0001 | 150H (Factory setting) |
| 0002 | 2500H |
| 0003 | 5000H |
| 0004 | 10000H |

■ To secure better effect of heating

When it is difficult to obtain satisfactory heating due to installation place of the indoor unit or structure of the room, the detection temperature of heating can be raised. Also use a circulator, etc. to circulate heat air near the ceiling.

Follow to the basic operation procedure

$$(\textbf{1} \rightarrow \textbf{2} \rightarrow \textbf{3} \rightarrow \textbf{4} \rightarrow \textbf{5} \rightarrow \textbf{6}).$$

- For the CODE No. in Procedure 4, specify [06].
- For the SET DATA in Procedure **5**. select the SFT DATA of shift value of detection. temperature to be set up from the table below.

| SET DATA | Detection temp shift value |
|----------|----------------------------|
| 0000 | No shift |
| 0001 | +1°C |
| 0002 | +2°C (Factory setting) |
| 0003 | +3°C |
| 0004 | +4°C |
| 0005 | +5°C |
| 0006 | +6°C |

■ Adjustment of air direction

- Using the remote controller switch, change the up/down air direction by moving the horizontal louver.
- Adjust the right/left air direction by bending the vertical grille inside of the air outlet port with hands.

REQUIREMENT

Do not touch the horizontal louver directly with hands; otherwise a trouble may be caused. For handling of the horizontal louver, refer to "Owner's Manual" attached to the outdoor unit.

■ Group control

- In a group control a remote controller can control up to maximum 8 or 16 units.
 (Depending on the outdoor unit.). The wired remote controller only can control a group control. The wireless remote controller is unavailable for this control.
- For cabling procedure and cables of the individual line (Identical refrigerant line) system, refer to "Electrical connection" in this Manual.
- Cabling between indoor units in a group is performed in the following procedure. Connect the indoor units by connecting the remote controller inter-unit cables from the remote controller terminal blocks (A, B) of the indoor unit connected with a remote controller to the remote controller terminal blocks (A, B) of the other indoor unit. (Non-polarity)
- For address setup, refer to the Installation Manual attached to the outdoor unit.

NOTE

Network adapter (Model TCB-PCNT20E) can not connect to this High Wall type air conditioner.

12 TEST RUN

■ Before test run

- Before turning on the circuit breaker, carry out the following procedure.
 - 1) By using insulation tester ($500VM\Omega$), check that resistance of $1M\Omega$ or more exists between the terminal block L to N and the earth (grounding). If resistance of less than $1M\Omega$ is detected, do not run the unit.
 - Check the valve of the outdoor unit being opened fully.
- To protect the compressor at activation time, leave power-ON for 12 hours or more for operating.
- Before starting a test run, be sure to set addresses following the Installation Manual supplied with the outdoor unit.

◆ Requirements for turning thermostat OFF

Cooling operation

- When the outdoor/suction air temperature is lower than or equal to 19°C.
- When the outdoor/suction air temperature is lower than or equal to 3°C above the set temperature.

Heating operation

- When the outdoor/suction air temperature is lower than or equal to -10°C.
- When the outdoor/suction air temperature is higher than or equal to 15°C.
- When the outdoor/suction air temperature is higher than or equal to 3°C above the set temperature.

■ Execute a test run

 When a fan operation is to be performed for an individual indoor unit, turn off the power, short circuit CN72 on the circuit board, and then turn the power back on. (Set the operation mode to "fan" to operate the unit.) When the test run has been performed using this method, be sure to release the short circuit of CN72 after the test run is completed.

Operate the unit with the remote controller as usual.

For the procedure of the operation, refer to the Owner's Manual attached to the outdoor unit. A forced test run can be executed in the following procedure even if the operation stops by thermostat-OFF.

In order to prevent a serial operation, the forced test run is released after 60 minutes have passed and returns to the usual operation.




 Do not use the forced test run for cases other than the test run because it applies an excessive load to the devices.


Wired remote controller

Be sure to stop the air conditioner before making settings.

(Change the setup while the air conditioner is not working.)

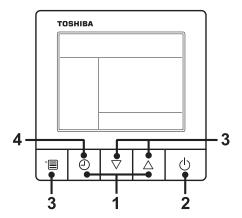


Push and hold OFF timer button and [△] setting button simultaneously for 10 seconds or more. [TEST] is displayed on the display part and the test run is permitted.

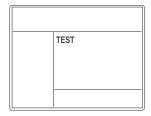

- 2 Push ON/OFF button.
- Push menu button to select the operation mode. Select [☼ Cool] or [♠ Heat] with [▽] [△] setting button, and then push menu button (three times) again to determine the operation mode.
 - Do not run the air conditioner in a mode other than [Cool] or [Heat].
 - The temperature setting function does not work during test run.
 - · The check code is displayed as usual.
- 4 After the test run, push OFF timer button to stop a test run.

([TEST] disappears on the display and the air conditioner enters the normal stop mode.)

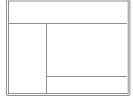


In case of wireless remote controller (Forced test operation is performed in a different way.)

REQUIREMENT

- For the operation procedure, be sure to follow the Owner's Manual.
- Finish the forced cooling operation in a short time because it applies excessive strength to the air conditioner.
- A test operation of forced heating is unavailable. Perform a test operation by heating operation using the switches of the remote controller.
 However heating operation may be not

However heating operation may be not carried out according to the temperature conditions.

- Check wiring/piping of indoor and outdoor units
- When pushing [RESET] button for 10 seconds or more and detach [RESET] button, "Pi!" sound is heard and the operation changes to a forced cooling operation. After approx. 3 minutes, a cooling operation starts forcedly. Check cool air starts blowing. If the operation does not start, check wiring again.
- 2. To stop a test operation, push [RESET] button once again (Approx. 1 second). The louver closes and the operation stops.

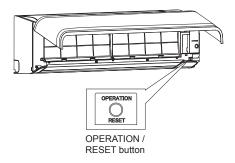


- · Check transmission of remote controller
- Push "START/STOP" button of the remote controller to check an operation can also start by the remote controller.
 - "Cooling" operation by the remote controller may be unavailable according to the temperature conditions.
 Check wiring/piping of the indoor and outdoor units in forced cooling operation.

13 TROUBLESHOOTING

A wired remote controller is necessary for this function. This function cannot be operate with a wireless remote controller.

■ Confirmation and check

If a problem occurs with the air conditioner, the OFF timer indicator alternately shows the check code and the indoor Unit No. in which the problem occurred.

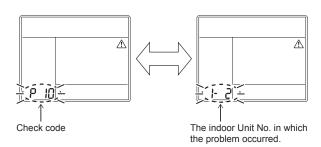

■ Troubleshooting history and confirmation

You can check the troubleshooting history with the following procedure if a problem occurs with the air conditioner. (The troubleshooting history records up to 4 incidents.)

You can check it during operation or when operation is stopped.

· If you check the troubleshooting history during OFF timer operation, the OFF timer will be canceled.

| Procedure | Description of operation |
|-----------|--|
| 1 | Push the OFF timer button for over 10 seconds and the indicators appear as an image indicating the troubleshooting history mode has been entered. If [\$\notines\$ Service check] is displayed, the mode enters in the troubleshooting history mode. • [01: Order of troubleshooting history] appears in the temperature indicator. • The OFF timer indicator alternately shows the [check code] and the [indoor Unit No.] in which the problem occurred. |
| 2 | Each time the setting button is pushed, the recorded troubleshooting history is displayed in sequence. The troubleshooting history appears in order from [01] (newest) to [04] (oldest). CAUTION In the troubleshooting history mode, DO NOT push the Menu button for over 10 seconds, doing so deletes the entire troubleshooting history of the indoor unit. |
| 3 | After you have finished checking, push the ON/OFF button to return to the regular mode. • If the air conditioner is operating, it remains operated even after the ON/OFF button has been pushed. To stop its operation, push the ON/OFF button again. |

■ Check method

On the remote controller (Wired remote controller, Central control remote controller) and the interface P.C. board of the outdoor unit (I/F), a check display LCD (Remote controller) or 7-segment display (on the outdoor interface P.C. board) to display the operation is provided. Therefore the operation status can be known. Using this self-diagnosis function, a trouble or position with error of the air conditioner can be found as shown in the table below.

■ Check code list

The following list shows each check code. Find the check contents from the list according to part to be checked.

- · In case of check from indoor remote controller: See "Wired remote controller display" in the list.
- In case of check from outdoor unit: See "Outdoor 7-segment display" in the list.
- In case of check from indoor unit with wireless remote controller: See "Sensor block display of receiving unit" in the list.

O: Lighting,

□: Goes off

ALT: Flashing is alternately when there are two flashing LED.

SIM: Simultaneous flashing when there are two flashing LED.

Inverter: Compressor / Fan inverter P.C. board

| Check code | | Wirel | ess rem | ote cont | roller | | | |
|--------------------|------|--|-----------|----------|----------|-------|--|---|
| Wired remote | Outo | loor unit 7-segment display | Sen | | k displa | y of | Check code name | Judging
device |
| controller display | | Auxiliary code | Operation | Timer | Ready | Flash | | |
| E01 | _ | _ | ¤ | • | • | | Communication trouble between indoor unit and remote controller (Detected at remote controller side) | Remote controller |
| E02 | _ | _ | ¤ | • | • | | Remote controller transmission trouble | Remote controller |
| E03 | _ | _ | ¤ | • | • | | Communication trouble between indoor unit and remote controller (Detected at indoor unit side) | Indoor unit |
| E04 | _ | _ | • | • | ¤ | | Communication circuit trouble between indoor / outdoor unit (Detected at indoor unit side) | Indoor unit |
| E06 | E06 | No. of indoor units in which sensor has been normally received | • | • | ¤ | | Decrease of No. of indoor units | I/F |
| _ | E07 | _ | • | • | ¤ | | Communication circuit trouble between indoor / outdoor unit (Detected at outdoor unit side) | I/F |
| E08 | E08 | Duplicated indoor unit addresses | ¤ | • | • | | Duplicated indoor unit addresses | Indoor unit,
I/F |
| E09 | | _ | a | • | • | | Duplicated master remote controllers | Remote controller |
| E10 | | _ | a | • | • | | Communication trouble between indoor unit MCU | Indoor unit |
| E11 | | _ | ¤ | • | • | | Communication trouble between Application control kit and Indoor unit | Indoor unit
Application
control kit |
| E12 | E12 | 01: Indoor/Outdoor units communication 02: Outdoor/Outdoor units communication | ¤ | • | • | | Automatic address start trouble | I/F |
| E15 | E15 | _ | • | • | ¤ | | No indoor unit during automatic addressing | I/F |
| E16 | E16 | 00: Capacity over 01 ~: No. of connected units | • | • | ¤ | | Capacity over / No. of connected indoor units | I/F |
| E18 | _ | _ | ¤ | • | • | | Communication trouble between header and follower units Indoor unit | Indoor unit |
| E19 | E19 | 00: Header is not detected
02: Two or more header
units | • | • | ¤ | | Outdoor header units quantity trouble | I/F |

| | Check code | Wireless remote controller | | | | | | |
|--------------------|---------------------------------------|---|-----------|--|-------|-------|--|-------------------|
| Wired remote | remote Outdoor unit 7-segment display | | Sen | Sensor block display of receiving unit | | | Check code name | Judging
device |
| controller display | | Auxiliary code | Operation | Timer | Ready | Flash | | |
| E20 | E20 | 01: Outdoor unit of other
line connected
02: Indoor unit of other line
connected | • | • | ¤ | | Other line connected during automatic address | I/F |
| E23 | E23 | _ | • | • | ¤ | | Sending trouble in communication
between outdoor units
Trouble in number of heat storage units
(trouble with reception) | I/F |
| E25 | E25 | _ | • | • | ¤ | | Duplicated follower outdoor addresses | I/F |
| E26 | E26 | No. of outdoor units which received signal normally | • | • | ¤ | | Decrease of No. of connected outdoor units | I/F |
| E28 | E28 | Detected outdoor unit number | • | • | ¤ | | Follower outdoor unit trouble | I/F |
| E31 | E31 | *1 Inverter quantity information | • | • | ¤ | | Inverter communication trouble | I/F |
| F01 | _ | _ | ¤ | ¤ | • | ALT | Indoor unit TCJ sensor trouble | Indoor unit |
| F02 | _ | _ | ¤ | ¤ | • | ALT | Indoor unit TC2 sensor trouble | Indoor unit |
| F03 | _ | _ | ¤ | ¤ | • | ALT | Indoor unit TC1 sensor trouble | Indoor unit |
| F04 | F04 | _ | ¤ | ¤ | 0 | ALT | TD1 sensor trouble | I/F |
| F05 | F05 | _ | ¤ | Ø | 0 | ALT | TD2 sensor trouble | I/F |
| F06 | F06 | 01: TE1 sensor
02: TE2 sensor
03: TE3 sensor | ¤ | ¤ | 0 | ALT | TE1,TE2 or TE3 sensor trouble | l/F |
| F07 | F07 | 01: TL1 sensor
02: TL2 sensor
03: TL3 sensor | ¤ | ¤ | 0 | ALT | TL1,TL2 or TL3 sensor trouble | I/F |
| F08 | F08 | _ | ¤ | ¤ | 0 | ALT | TO sensor trouble | I/F |
| F09 | F09 | 01: TG1 sensor
02: TG2 sensor
03: TG3 sensor | ¤ | ¤ | 0 | ALT | TG1,TG2 or TG3 sensor trouble | I/F |
| F10 | _ | _ | ¤ | ¤ | • | ALT | Indoor unit TA sensor trouble | Indoor unit |
| F11 | _ | _ | ¤ | ¤ | • | ALT | TF sensor trouble | Indoor unit |
| F12 | F12 | 01: TS1 sensor
03: TS3 sensor | ¤ | ¤ | 0 | ALT | TS1 or TS3 sensor trouble | I/F |
| F13 | F13 | 01: Comp. 1 side
02: Comp. 2 side
03: Comp. 3 side | ¤ | ¤ | 0 | ALT | TH sensor trouble | Inverter |
| F15 | F15 | _ | ¤ | ¤ | 0 | ALT | Outdoor unit temp. sensor miswiring (TE, TL) | I/F |
| F16 | F16 | _ | ¤ | ¤ | 0 | ALT | Outdoor unit pressure sensor miswiring (Pd, Ps) | I/F |
| F22 | F22 | _ | ¤ | ¤ | 0 | ALT | TD3 sensor trouble | I/F |
| F23 | F23 | _ | ¤ | Ø | 0 | ALT | Ps sensor trouble | I/F |
| F24 | F24 | _ | ¤ | ¤ | 0 | ALT | Pd sensor trouble | I/F |
| F29 | _ | _ | ¤ | ¤ | • | SIM | Indoor unit other trouble | Indoor unit |
| F30 | F30 | _ | ¤ | ¤ | 0 | SIM | Occupancy sensor trouble | Indoor unit |
| F31 | F31 | _ | ¤ | ¤ | 0 | SIM | Indoor unit EEPROM trouble | I/F |
| H01 | H01 | 01: Comp. 1 side
02: Comp. 2 side
03: Comp. 3 side | • | ¤ | • | | Compressor break down | Inverter |
| H02 | H02 | 01: Comp. 1 side
02: Comp. 2 side
03: Comp. 3 side | • | ¤ | • | | Compressor trouble (lock) | Inverter |
| H03 | H03 | 01: Comp. 1 side
02: Comp. 2 side
03: Comp. 3 side | • | ¤ | • | | Current detect circuit system trouble | Inverter |
| H04 | H04 | | • | ¤ | • | | Comp. 1 case thermostat operation | I/F |
| H05 | H05 | _ | | ¤ | • | | TD1 sensor miswiring | I/F |

| Check code | | Wirel | ess rem | ote cont | roller | | | |
|--|-----|--|-----------|----------|--------|-----------------|---|---------------------|
| Wired remote Controller Outdoor unit 7-segment display | | Sen | | k displa | y of | Check code name | Judging device | |
| display | | Auxiliary code | Operation | Timer | Ready | Flash | | |
| H06 | H06 | _ | • | ¤ | • | | Low pressure protective operation | I/F |
| H07 | H07 | _ | • | ¤ | • | | Oil level down detective protection | I/F |
| H08 | | 01: TK1 sensor trouble
02: TK2 sensor trouble
03: TK3 sensor trouble
04: TK4 sensor trouble
05: TK5 sensor trouble | • | ¤ | • | | Oil level detective temp. sensor trouble | l/F |
| H14 | H14 | _ | • | ¤ | | | Comp. 2 case thermostat operation | I/F |
| H15 | H15 | _ | • | ¤ | • | | TD2 sensor miswiring | I/F |
| H16 | HIO | 01: TK1 oil circuit system trouble 02: TK2 oil circuit system trouble 03: TK3 oil circuit system trouble 04: TK4 oil circuit system trouble 05: TK5 oil circuit system trouble | • | ¤ | • | | Oil level detective circuit trouble | l/F |
| H25 | H25 | _ | • | ¤ | • | | TD3 sensor miswiring | I/F |
| L02 | L02 | _ | ¤ | • | ¤ | SIM | Model mismatch of indoor and outdoor unit | I/F |
| L03 | _ | _ | ¤ | • | ¤ | SIM | Indoor unit centre unit duplicated | Indoor unit |
| L04 | L04 | _ | ¤ | 0 | ¤ | SIM | Outdoor unit line address duplicated | I/F |
| L05 | _ | _ | ¤ | • | ¤ | SIM | Duplicated indoor units with priority (Displayed in indoor unit with priority) | I/F |
| L06 | L06 | No. of indoor units with priority | ¤ | • | ¤ | SIM | Duplicated indoor units with priority (Displayed in unit other than indoor unit with priority) | I/F |
| L07 | _ | _ | ¤ | | ¤ | SIM | Group line in individual indoor unit | Indoor unit |
| L08 | L08 | _ | ¤ | • | ¤ | SIM | Indoor unit group/Address unset | Indoor unit,
I/F |
| L09 | _ | _ | ¤ | • | ¤ | SIM | Indoor unit capacity unset | Indoor unit |
| L10 | L10 | _ | ¤ | 0 | ¤ | SIM | Outdoor unit capacity unset | I/F |
| L17 | L17 | _ | ¤ | 0 | ¤ | SIM | Outdoor unit type mismatch trouble | I/F |
| L18 | L18 | _ | ¤ | 0 | ¤ | SIM | Flow selector unit trouble | I/F |
| L20 | _ | _ | ¤ | 0 | ¤ | SIM | Duplicated central control addresses | Indoor unit |
| L28 | L28 | _ | ¤ | 0 | ¤ | SIM | Too many outdoor units connected | I/F |
| L29 | L29 | *1 Inverter quantity information | ¤ | 0 | ¤ | SIM | No. of inverter trouble | I/F |
| L30 | L30 | Detected indoor unit address | ¤ | 0 | ¤ | SIM | Indoor unit outside interlock | Indoor unit |
| _ | L31 | _ | | _ | | | Extended I/C trouble | I/F |
| P01 | _ | _ | • | ¤ | Ø | ALT | Indoor fan motor trouble | Indoor unit |
| P03 | P03 | _ | ¤ | • | ¤ | ALT | Discharge temp. TD1 trouble | I/F |
| P04 | P04 | 01: Comp. 1 side
02: Comp. 2 side
03: Comp. 3 side | ¤ | • | ¤ | ALT | High-pressure SW system operation | Inverter |
| P05 | P05 | 00:
01: Comp. 1 side
02: Comp. 2 side
03: Comp. 3 side | ¤ | • | ¤ | ALT | Phase missing detection/Power failure detection Inverter DC voltage trouble (comp.) Inverter DC voltage trouble (comp.) Inverter DC voltage trouble (comp.) | I/F |
| P07 | | 01: Comp. 1 side
02: Comp. 2 side
03: Comp. 3 side
04: Heat sink | ¤ | • | ¤ | ALT | Heat sink overheat trouble Heat sink dew condensation trouble | Inverter, I/F |
| P10 | | Detected indoor unit address | • | ¤ | a | ALT | Indoor unit overflow trouble | Indoor unit |

| | | Check code | Wirel | ess rem | ote cont | roller | | |
|-------------------------|-----|--|---|---------|----------|--------|--|----------------|
| Wired remote controller | | door unit 7-segment display | Sensor block display of
receiving unit | | | y of | Check code name | Judging device |
| controller display | | Auxiliary code | Operation | Timer | Ready | Flash | | |
| P11 | P11 | _ | • | ¤ | ¤ | ALT | Outdoor heat exchanger freezing trouble | I/F |
| P12 | _ | _ | | ¤ | Ø | ALT | Indoor unit fan motor trouble | Indoor unit |
| P13 | P13 | _ | • | ¤ | ¤ | ALT | Outdoor liquid back detection trouble | I/F |
| P15 | P15 | 01: TS condition
02: TD condition | ¤ | • | ¤ | ALT | Gas leak detection | I/F |
| P17 | P17 | _ | ¤ | • | ¤ | ALT | Discharge temp. TD2 trouble | I/F |
| P19 | P19 | Detected outdoor unit number | ¤ | • | ¤ | ALT | 4-way valve inverse trouble | I/F |
| P20 | P20 | _ | ¤ | • | ¤ | ALT | High-pressure protective operation | I/F |
| P22 | P22 | #0: Element short circuit #E: Vdc voltage trouble #1: Position detection circuit trouble #2: Input current sensor trouble #3: Motor lock trouble #C: Sensor temperature trouble (No TH sensor) #4: Motor current trouble #D: Sensor short circuit/ release trouble (No TH sensor) #5: Synchronization/step-out trouble *Put in Fan Inverter No. in [#] mark. | ¤ | • | ¤ | ALT | Outdoor unit fan inverter trouble | Inverter |
| P26 | P26 | 01: Comp. 1 side
02: Comp. 2 side
03: Comp. 3 side | ¤ | • | ¤ | ALT | IPM short protection trouble | Inverter |
| P29 | P29 | 01: Comp. 1 side
02: Comp. 2 side
03: Comp. 3 side | ¤ | • | ¤ | ALT | Comp. position detective circuit system trouble | Inverter |
| P31 | _ | _ | ¤ | • | ¤ | ALT | Other indoor unit trouble (Group follower indoor unit trouble) | Indoor unit |

*1 Inverter quantity information

(Super Modular Multi System i series (SMMS-i))

| | | | | | . , , , , , , , , , , , , , , , , , , , | |
|------|----------------------|---|-------------|----------|---|--|
| No | No. Comp. In | | p. Inverter | | Trouble | |
| INO. | 1 | 2 | 3 | Inverter | Trouble | |
| 01 | 0 | | | | Comp. 1 | |
| 02 | | 0 | | | Comp. 2 | |
| 03 | 0 | 0 | | | Comp. 1 + Comp. 2 | |
| 04 | | | 0 | | Comp. 3 | |
| 05 | 0 | | 0 | | Comp. 1 + Comp. 3 | |
| 06 | | 0 | 0 | | Comp. 2 + Comp. 3 | |
| 07 | 0 | 0 | 0 | | Comp. 1 + Comp. 2 + Comp. 3 | |
| 08 | | | | 0 | Fan | |
| 09 | 0 | | | 0 | Comp. 1 + Fan | |
| 0A | | 0 | | 0 | Comp. 2 + Fan | |
| 0B | 0 | 0 | | 0 | Comp. 1 + Comp. 2 + Fan | |
| 0C | | | 0 | 0 | Comp. 3 + Fan | |
| 0D | 0 | | 0 | 0 | Comp. 1 + Comp. 3 + Fan | |
| 0E | | 0 | 0 | 0 | Comp. 2 + Comp. 3 + Fan | |
| 0F | 0 | 0 | 0 | 0 | All | |
| | ○ : Inverter trouble | | | | | |

*1 Inverter quantity information

(Super Modular Multi System e and u series (SMMS-e, SMMS-u))

| No. | | mp.
erter | Fan Inverter | | Trouble | |
|-----|----------------------|--------------|--------------|---|---------------------------|--|
| | 1 | 2 1 2 | | | | |
| 01 | 0 | | | | Comp. 1 | |
| 02 | | 0 | | | Comp. 2 | |
| 03 | 0 | 0 | | | Comp. 1 + Comp. 2 | |
| 08 | | | 0 | | Fan 1 | |
| 09 | 0 | | 0 | | Comp. 1 + Fan 1 | |
| 0A | | 0 | 0 | | Comp. 2 + Fan 1 | |
| 0B | 0 | 0 | 0 | | Comp. 1 + Comp. 2 + Fan 1 | |
| 10 | | | | 0 | Fan 2 | |
| 11 | 0 | | | 0 | Comp. 1 + Fan 2 | |
| 12 | | 0 | | 0 | Comp. 2 + Fan 2 | |
| 13 | 0 | 0 | | 0 | Comp. 1 + Comp. 2 + Fan 2 | |
| 18 | | | 0 | 0 | Fan 1 + Fan 2 | |
| 19 | 0 | | 0 | 0 | Comp. 1 + Fan 1 + Fan 2 | |
| 1A | | 0 | 0 | 0 | Comp. 2 + Fan 1 + Fan 2 | |
| 1B | 0 | 0 | 0 | 0 | All | |
| | ○ : Inverter trouble | | | | | |

[•] For details about check codes determined with an Interface P.C. board or an Inverter P.C. board, refer to the Installation Manual of the outdoor unit.

Trouble detected by central control device

| | neck code | Wireless remote controller | | | roller | | | |
|-------------------|-----------|---|------------------|---------------------|-----------|--|---|-----------------------|
| Central control | Οι | Outdoor unit 7-segment Sensor block display of receiving unit | | | | Check code name | Judging device | |
| device indication | | Auxiliary code | Operation | Timer | Ready | Flash | | |
| C05 | _ | _ | _ | | | Sending trouble in central control device | Communication
Link | |
| C06 | _ | _ | _ | | | Receiving trouble in central control device | Communication
Link | |
| C12 | _ | _ | _ | | | Batch alarm of general-purpose equipment control interface | General-purpose equipment I/F | |
| | Diffe | ers according to trouble co
al | ntents of
arm | f unit wit | h occurre | ence of | Group control follower unit trouble | |
| P30
(L20) | _ | _ | (| (L20 is displayed.) | |) | Duplication addresses of indoor units in central control device With the combination of air conditioning system, the indoor unit may detect the check code of L20 | Communication
Link |

WARNINGS ON REFRIGERANT LEAKAGE

Check of Concentration Limit

The room in which the air conditioner is to be installed requires a design that in the event of refrigerant gas leaking out, its concentration will not exceed a set limit.

The refrigerant R410A which is used in the air conditioner is safe, without the toxicity or combustibility of ammonia, and is not restricted by laws to be imposed which protect the ozone layer. However, since it contains more than air, it poses the risk of suffocation if its concentration should rise excessively. Suffocation from leakage of R410A is almost non-existent. With the recent increase in the number of high concentration buildings, however, the installation of multi air conditioner systems is on the increase because of the need for effective use of floor space, individual control, energy conservation by curtailing heat and carrying power etc. Most importantly, the multi air conditioner system is able to replenish a large amount of refrigerant compared with conventional individual air conditioners. If a single unit of the multi conditioner system is to be installed in a small room, select a suitable model and installation procedure so that if the refrigerant accidentally leaks out, its concentration does not reach the limit (and in the event of an emergency, measures can be made before injury can occur).

In a room where the concentration may exceed the limit, create an opening with adjacent rooms, or install mechanical ventilation combined with a gas leak detection device.

The concentration is as given below.


Total amount of refrigerant (kg)

Min. volume of the indoor unit installed room (m³) ≤ Concentration limit (kg/m³)

The concentration limit of R410A which is used in multi air conditioners is 0.3 kg/m³.

▼ NOTE 1

If there are 2 or more refrigerating systems in a single refrigerating device, the amounts of refrigerant should be as charged in each independent device.

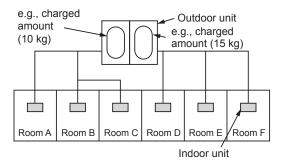

For the amount of charge in this example:


The possible amount of leaked refrigerant gas in rooms A, B and C is 10 kg.

The possible amount of leaked refrigerant gas in rooms D, E and F is 15 kg.


▼ NOTE 2

The standards for minimum room volume are as follows.


(1) No partition (shaded portion)

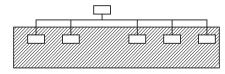

(2) When there is an effective opening with the adjacent room for ventilation of leaking refrigerant gas (opening without a door, or an opening 0.15% or larger than the respective floor spaces at the top or bottom of the door).

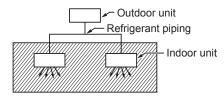


(3) If an indoor unit is installed in each partitioned room and the refrigerant piping is interconnected, the smallest room of course becomes the object. But when a mechanical ventilation is installed interlocked with a gas leakage detector in the smallest room where the density limit is exceeded, the volume of the next smallest room becomes the object.

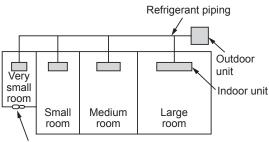

Mechanical ventilation device - Gas leak detector

▼ NOTE 3

The minimum indoor floor area compared with the amount of refrigerant is roughly as follows: (When the ceiling is 2.7 m high)

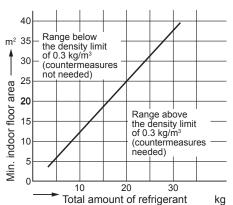

CONFIRMATION OF INDOOR UNIT SETUP

Prior to delivery to the customer, check the address and setup of the indoor unit, which has been installed in this time and fill the check sheet (Table below). Data of four units can be entered in this check sheet. Copy this sheet according to the No. of the indoor units. If the installed system is a group control system, use this sheet by entering each line system into each installation manual attached to the other indoor units.

REQUIREMENT

This check sheet is required for maintenance after installation. Be sure to fill this sheet and then pass this Installation Manual to the customers.

Indoor unit setup check sheet

| Indoor unit | | | Indoor unit | | | Indoor unit | | | Indoor unit | | |
|--|-----------------------------|------------------|---|----------------------------|-----------------------|---|---------------------------------|------------------|---|----------------------------|------------------|
| Room name | | | Room name | | | Room name | | | Room name | | |
| Model Model | | | | Model | | | Model | | | | |
| | | | check methounnecessar | | | controls in the | his sheet.) | | | | |
| | | | unnecessar
], Group [14 | | | | | | | | |
| Line | Indoor | Group | Line | Indoor | Group | Line | Indoor | Group | Line | Indoor | Group |
| | | | | | | | | | | | |
| Centra | l control a | ddress | Centra | I control a | ddress | Centra | l control ad | ddress | Centra | l control a | ddress |
| | | | | | | | | | | | |
| | arious setu | | | arious setu | | | arious setu | • | | arious setu | |
| (For check | | fer to Appli | cable contro | | | CHANGE],
ase of repla | | | | | |
| | h ceiling se
ODE No. [5 | | | h ceiling se
ODE No. [5 | | | h ceiling se
ODE No. [5 | | | h ceiling se
ODE No. [5 | |
| □ NO CHA
□ STANDA
□ HIGH CI | ARD
EILING 1 | [0000]
[0001] | □ NO CHA □ STANDA □ HIGH C | ARD
EILING 1 | [0000]
[0001] | □ NO CHA □ STANDA □ HIGH CI | ARD
EILING 1 | [0000]
[0001] | □ NO CHA
□ STANDA
□ HIGH C | ARD
EILING 1 | [0000]
[0001] |
| Have you | | [0003] | ☐ HIGH C | | [0003]
neck mark [| │□ HIGH CI
x] in [NO CH | | [0003] | □ HIGH C
mark [x] in [| | [0003] |
| respectivel | у. | • | cable contro | | - | KJ III [IVO OII | ,, u 102,, u 11 | a iiii oriook | man [x] iii [| T E WIJ II ONE | ingou, |
| | sign lighting
ODE No. [0 | | Filter sign lighting time (CODE No. [01]) | | | Filter sign lighting time (CODE No. [01]) | | | Filter sign lighting time (CODE No. [01]) | | |
| □ NO CHA | NGE | | □ NO CHA | ANGE | | □ NO CHA | NGE | | □ NO CHA | ANGE | |
| □ NONE
□ 150H | | [0000]
[0001] | ☐ NONE
☐ 150H | | [0000]
[0001] | □ NONE
□ 150H | | [0000]
[0001] | □ NONE
□ 150H | | [0000]
[0001] |
| □ 2500H
□ 5000H | | [0002] | □ 2500H
□ 5000H | | [0002] | □ 2500H
□ 5000H | | [0002] | □ 2500H
□ 5000H | | [0002] |
| □ 10000H | | [0003]
[0004] | □ 10000H | | [0003]
[0004] | □ 10000H | | [0003]
[0004] | □ 10000H | | [0003]
[0004] |
| | | | . shift value'
refer to App | | | [x] in [NO Clasheet.) | HANGE], an | d fill check | mark [x] in [| ITEM] if cha | anged, |
| Detecte | d temp. shi | ft value | Detecte | d temp. shi | ft value | Detected temp. shift value Detected temp. shift value | | | | ift value | |
| (Co | setup
ODE No. [0 | 61) | (C | setup
ODE No. [0 | 61) | setup
(CODE No. [06]) | | | setup
(CODE No. [06]) | | |
| □ NO CHA | | 17 | □ NO CHA | _ | 27 | □ NO CHANGE | | | □ NO CHA | _ | |
| □ NO SHIF | =T | [0000] | □ NO SHII
□ +1°C | FT | [0000] | □ NO SHII | =T | [0000] | □ NO SHI
□ +1°C | FT | [0000] |
| □+1°C
□+2°C | | [0001]
[0002] | □ +1°C
□ +2°C | | [0001]
[0002] | | | [0001]
[0002] | □+1°C
□+2°C | | [0001]
[0002] |
| □+3°C | | [0003] | □ +3°C | | [0003] | □ +3°C | | [0003] | □ +3°C | | [0003] |
| □ +4°C
□ +5°C | | [0004]
[0005] | □ +4°C
□ +5°C | | [0004]
[0005] | □ +4°C
□ +5°C | | [0004]
[0005] | □ +4°C
□ +5°C | | [0004]
[0005] |
| □+6°C | | [0005] | □ +6°C | | [0005] | □ +6°C | | [0005] | □ +6°C | | [0006] |
| Incorporation of parts sold separately | | | ation of pa | | | ation of pa | rts sold | | ration of pa | | |
| (When inco | | the setup c | | | | porated, fill on setup | | | | on Manual | attached |
| □ Standard | Panel
d panel | | □ Standar | Panel
d panel | | Panel ☐ Standard panel ☐ St | | □ Standar | Panel
d panel | | |
| ☐ Super lo | Filter
ng life filter | | ☐ Super lo | Filter
ng life filter | | ☐ Super lo | Filter □ Super long life filter | | Filter □ Super long life filter | | - |
| ☐ Others (☐ Others (|) | | ☐ Others (☐ Others (|) | | ☐ Others (☐ Others (|) | | ☐ Others (☐ Others (|) | |

11. HOW TO REPLACE THE MAIN PARTS

WARNING

• Since high voltages pass through the electrical parts, turn off the power without fail before proceeding with the repairs.

Electric shocks may occur if the power plug is not disconnected.

• After the repairs have been completed (after the front panel and cabinet have been installed), perform a test run, and check for smoking, unusual sounds and other abnormalities.

If this check is omitted, a fire and/or electric shocks may occur.

Before proceeding with the test run, install the front panel and cabinet.

- Ensure that the following steps are taken when doing repairs on the refrigerating cycle.
 - Do not allow any naked flames in the surrounding area.
 If a gas stove or other appliance is being used, extinguish the flames before proceeding.

If the flames are not extinguished, they may ignite any oil mixed with the refrigerant gas.

- 2. Do not use welding equipment in an airtight room.
 - Carbon monoxide poisoning may result if the room is not properly ventilated.
- 3. Do not bring welding equipment near flammable objects.

 Flames from the equipment may cause the flammable objects to catch fire.
- If keeping the power on is absolutely unavoidable while doing a job such as inspecting the circuitry, wear rubber gloves to avoid contact with the live parts.

Electric shocks may be received if the live parts are touched.

High-voltage circuits are contained inside this unit.

Proceed very carefully when conducting checks since directly touching the parts on the control circuit board may result in electric shocks.

12-1. Indoor Unit

| No. | Part name | Procedures | Remarks |
|-----|------------------|--|------------------|
| 1 | Air inlet grille | 1) Stop operation of the air conditioner and turn off its main power supply. 2) Open the air inlet grille and push it up until the air inlet grille take off. <remark> If you do not have enough space for push the air inlet grille up until it take off, you can push the arms of air inlet grille toward the outside, and remove the air inlet grille.</remark> | Air inlet grille |
| 2 | Air filters | 1) Follow to the procedure in the item ①. Air filters 2) Remove the left and the right air filters from the front panel. | |

| No. | Part name | Procedures | Remarks |
|-----|-------------|---|---|
| 3 | Front panel | Follow to the procedure in the item ② . Securely remove screws (3 pcs.) at the front panel. Open 4 screw caps and securely remove screws (4 pcs.) at the front panel. | [How to open screw cap] Step 1) Push up screw cap Screw cap |
| | | | Step 2) Lower screw cap |
| | | 4) Pull the clue of a front panel and remove the hook of the back body. Clue Hooks | |
| | | | |
| | | 5) Slightly open the lower part of the front panel then pull the upper part of the front panel toward you to remove it as shown on figure. | |
| | | | |
| | | | |

| No. | Part name | Procedures | Remarks |
|-----|-------------------------------|--|--|
| 4 | Electric part
box assembly | 1) Follow the procedure item 3. 2) Remove screw holding the electric part cover then remove fixing screw of base camp and remove it. Fan motor connector louver motor connector (exists a tube) TC sensor (no tube) | Connectors Base clamp Screw Electric part cover |
| | | 3) Disconnect the connectors for the fan motor and louver motor from P.C.board assembly. 4) Remove the earth screw and earth line from evaporator. 5) Pull out TC sensor and TCJ sensor from sensor holder of the evaporator. 6) Remove TA sensor from the evaporator. 7) Remove the 2 fixing screws that secures the electric parts box assembly, unit display assembly and remove the electric parts box assembly. | Unit display Screws |
| | | - The sensor, earth line must turn to down. TCJ sensor (exist a tube) TC sensor (no tube) Earth line | |

| No. | Part name | Procedures | Remarks |
|-----|-------------------|---|--|
| (5) | Horizontal louver | Remove shaft of the horizontal louver from the drain pan. (First remove 2 the center shafts then remove the other shafts.) | Drain pan Bend and remove Horizontal louver (Back) Horizontal louver (Front) |
| 6 | Drain hose | 1) Follow the procedure item ③. 2) The drain hose can be removed by removing the screw securing the drain hose and then pulling out the drain hose. 3) When removing the drain hose, be careful of any sharp edges of steel plate. The edges may cause injury. Drain pan Heat insulator of drain pan Drain hose Insulation Drain hose Dra | Drain pan Drain hose |

| No. | Part name | Procedures | Remarks |
|-----|-----------------------|--|--------------------------------------|
| 7 | Drain pan
assembly | Follow to the procedure in the item ③ Remove screw holding the electric part cover. Remove fixing screws of the unit display and remove unit display. Disconnect the middle connector of louver motor code (5P) Remove 2 fixing screws from the drain pan then remove the drain pan assembly from the body back. | Middle connector Unit display Screw |
| | | Screws | |
| | | <to re-installation=""> Press the drain pan into the back body Please confirm that drain pan is attached certainly. Please confirm that center arm of drain pan has fitted into back body certainly. </to> | |
| | | | |
| | | Fit Boss of back body Center arm of drain pan | |

| No. | Part name | Procedures | Remarks |
|-----|--------------------------|--|-------------------------------------|
| 8 | Vertical louver assembly | 1) Follow the procedure item ③ and ⑦. 2) Remove fixing screw from the vertical louver set then remove them from the body back. | Vertical louver set Screw |
| 9 | Fan motor | 1) Follow the procedure item ③,⑦and ⑧. 2) Loosen the set screw of the cross flow fan. | Hexagon screw driver Cross flow fan |
| | | 3) Remove 2 fixing screws of the motor band.4) Pull the motor band and the fan motor outward. | Fan motor Motor band |
| | | - Keep connector position and arrange fan motor wires follow figure. Fan motor connector must not contact the Motor band Fan motor connector Fan motor wires | |

| No. | Part name | Procedures | Remarks |
|-----|----------------|--|--|
| 10 | Cross flow fan | Follow the procedure item③,⑦and⑧. Loosen the set screw of the cross flow fan. (Refer to the⑨ for how to remove set screw.) Remove 4 fixing screws from the bearing base then remove it from the main unit. Remove 4 screws which are fixing heat exchanger. Lift up the heat exchanger follow the figure. Pull out the left hand side until the cross flow fan is released from the shaft of the fan motor and then pull out the lower side of heat exchanger follow the figure. | Cross flow fan Bearing base Heat exchanger Cross flow fan |
| | | <to re-installation=""></to> 1) To incorporate the fan motor and the motor into the position in the following figure. Install the cross flow fan so that the right end of the 1st joint from the right of the Cross flow fan is keep 4.0mm from closed wall of the main unit. Holding the set screw, install the cross flow fan so that thin area on shaft of the fan motor comes to the mounting hole of the set screw. | |

| No. | Part name | Procedures | Remarks |
|------|--------------------------------|--|------------------------------------|
| (11) | Heat exchanger
(Evaporator) | 1) Follow the procedure item ③ and ④. 2) Remove 4 fixing screws at the left side of the heat exchanger. | Heat exchanger Screw |
| | | 3) Remove 3 fixing screw at the upper right side of the heat exchanger. 4) Remove fixing screw at the under right side of the heat exchanger. 5) Remove the pipe holder from the rear side of the main unit. | Heat exchanger Pipe holder Screw |
| | | | |
| | | | |
| | | | |
| | | | |

Microcomputer

| No. | Part name | Procedure | Remarks |
|-----|------------------|--|---|
| 1) | Common procedure | 1) Perform procedure item ③ and ④of Indoor Unit. | Replace terminal block, microcomputer ass'y and the P.C. board ass'y. |

12. Replacement of P.C. Board for Indoor Unit Servicing

<Models>

MMK-UP****HP-E(TR) Series

<Note: when replacing the P.C. board for indoor unit servicing>

The nonvolatile memory (hereafter called EEPROM, IC503) on the indoor unit P.C. board before replacement includes the model specific type information and capacity codes as the factory-set value and the important setting data which have been automatically or manually set when the indoor unit is installed, such as system/indoor/group addresses, high ceiling select setting, etc. When replacing the P.C. board for indoor unit servicing, follow the procedures below.

After replacement completes, confirm whether the settings are correct by checking the indoor unit No., Group header unit/follower unit settings and perform the cooling cycle confirmation through the trial operation.

<Replacement procedures>

Case 1

Before replacement, the indoor unit can be turned on and the setting data can be read out by wired remote control operation.

EEPROM data read out [1] (Refer to page 1)

Replacement of P.C. board for Indoor unit servicing and power on [2] (Refer to page 2.)

Writing the read out EEPROM data [3] (Refer to page 2.)

Power reset(for all indoor units connected to the remote control when the group operation control is performed.)

Case 2

The EEPROM before replacement is defective and the setting data cannot be read out.

Writing the setting data to EEPROM, such as high ceiling installation setting and optional connection setting, etc., based on the customer information. [3] (Refer to page 2.)

Ų

Power reset (for all indoor units connected to the remote control when the group operation control is performed.)

[1] Setting data read out from EEPROM

The setting data modified on the site, other than factory-set value, stored in the EEPROM shall be read out.

- Step 1 Press , and button on the remote control simultaneously for more than 4 seconds. When the group operation control is performed, the unit No. displayed for the first time is the header unit No. At this time, the CODE No.(DN)shows .Also,the fan of the indoor unit selected starts its operation and the swing operation also starts if it has the louvers.
- Step 2 Every time when the button is pressed, the indoor unit No. under the group control is displayed in order. Specify the indoor unit No.to be replaced.
 - 1. Change the CODE No.(DN) to 🗓 🗓 by pressing 🔻 / 📤 buttons for the temperature setting. (this is the setting for the filter sign lighting time.)

At this time, be sure to write down the setting data displayed.

- 2. Change the CODE No.(DN) by pressing \(\bullet\) / \(\bullet\) buttons for the temperature setting. Similarly, be sure to write down the setting data displayed.
- 3. Repeat the step 2-2 to set the other settings in the same way and write down the setting data as shown in the table 1(example)on page 4.
- The CODE No.(DN)are ranged from 🗓 🕻 to 🗡 b .The CODE No.(DN) may skip.

Step 3 After writing down all setting data, press button to return to the normal stop status. (It takes approx. 1 min until the remote control operation is available again.)

CODE No.required at least

| DN | Contents | | | |
|-----|------------------------------------|--|--|--|
| 10 | Type | | | |
| 11 | Indoor unit capacity | | | |
| 12 | System address | | | |
| 13 | Indoor unit address | | | |
| 14 | Group address | | | |
| FC | Communication protocol | | | |
| 1FC | Indoor Unit terminating resistance | | | |

- 1. The CODE No. for the Indoor unit type and Indoor unit capacity are required to set the rotation number setting of the fan.
- 2. If the system/indoor/group addresses are different from those before replacement, the auto-address setting mode starts and the manual resetting may be required again.

 (when the multiple units group operation including twin system.)

[2] P.C. Board for indoor unit servicing replacement procedures

Step 1 Replace the P.C. board to the P.C. board for indoor unit servicing.

At this time, perform the same setting of the jumper wire(J01,J08,J09)setting(cut),switch SW501, (short-circuit) connector CN34 as the setting of the P.C. board before replacement.

Step 2 It is necessary to set Indoor unit to be exchanged: Remote controller = 1:1

Based upon the system configuration, turn on power of the indoor unit with one of the following items.

1) Single (Individual) operation


Turn on power of the indoor units and proceed to [3].

- 2) Group operation
 - A) In case that power of the exchanged indoor unit only can be turned on Turn on power of the exchanged indoor unit only and proceed to [3].
 - B) In case that power of the indoor units cannot be turned on individually (Case 1)
 - Remove temporarily the group wire connected to the terminal blocks A and B of the exchanged indoor unit.
 - b) After connecting the remote controller wire only to the removed terminal block, turn on power of the indoor units and proceed to [3].

When the above methods cannot be used, follwer to the two cases below.

- C) In case that power of the indoor units cannot be turned in individually (Case 2)
 - Remove all CN41 connectors of the indoor units in the same group except those of the exchanged indoor unit.
 - b) Turn on power of the indoor units and proceed to [3].

After [3] operation has finished, be sure to return the temporarily removed group wire or CN41 connector to the original connection.

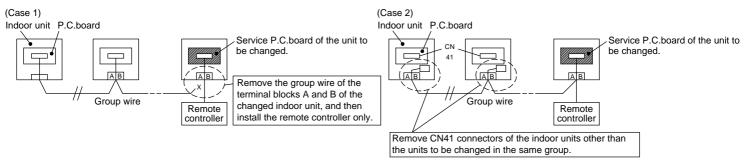

[3] Writing the setting data to EEPROM

The settings stored in the EEPROM of the P.C. board for indoor unit servicing are the factory-set values.

Step 1 Press , and buttons on the remote control simultaneously for more than 4 seconds.

* In the group control operation, the unit No. displayed for the first time is the header unit No.

At this time, the CODE No. (DN)shows \mathbb{Q} . Also, the fan of the indoor unit selected starts its operation and the swing operation starts if it has the louvers.

(The unit No. **FLL** is displayed if the auto-address setting mode is interrupted in [2] step 2 a) 2. on pervious page.)

Step 2 Every time when the button is pressed, the indoor unit Nos. in the group control operation are displayed in order.

(The settings stored in the EEPROM of the P.C. board for indoor unit servicing are the factory-set values.) Specify the indoor unit No.with its P.C. board replaced to the P.C. board for indoor unit servicing.

(You cannot perform this operation if **FLL** is displayed.)

- Step 3 Select the CODE No. (DN) can be selected by pressing the V/ button for the temperature setting.
 - Set the indoor unit type and capacity.

The factory-set values shall be written to the EEPROM by changing the type and capacity.

<Fig. 1 RBC-AMT32E>

- 1. Set the CODE No. (DN) to 👪 . (without change)
- 2. Select the type by pressing ▼/ ▲ buttons for the timer setting.

 (For example, High wall type is set to "0008" Refer to table 2 on page 4.)
- 3. Press button. (The operation completes if the setting data is displayed.)
- 5. Select the capacity by pressing \(\bigsigm\) / \(\bigsigm\) buttons for the timer setting. (For example, 036 Type is set to "0015". Refer to table 2 on page 4.)
- 6. Press 🖱 button. (The setting completes if the setting data are displayed.)
- 7. Press the button to return to the normal stop status.

 (It takes approx. 1 min until the remote control operation is available again.)

(It takes approx. 1 min until the remote control operation is available again.) 3 6 5 1 4 2

Write the on-site setting data to the EEPROM, such as address setting, etc. Perform the steps 1 and 2 above again.

Change the CODE No. (DN) to **!!** by pressing **\(\bullet\)**/ **\(\bullet\)** buttons for the temperature setting. (this is the setting for the filter sign lighting time.)

Check the setting data displayed at this time with the setting data put down in [1] (on page 1).

1. If the setting data is different, modify the setting data by pressing \(\nldet\) / \(\begin{array}{c}\) buttons for the timer setting to the data put down in [1].

The operation completes if the setting data is displayed.

2. If the data is the same, proceed to next step.

As described above, check the setting data and modify to the data put down in [1]. Repeat the steps 6 and 7.

After the setting completes, press button to return to the normal stop status.

(It takes approx. 1 min until the remote control operation is available again.)

The CODE No. (DN) are ranged from [1] to 4 h. The CODE No. (DN) is not limited to be serial No. Even after modifying the data wrongly and pressing 5 button, it is possible to return to the data before modification by pressing 5 button if the CODE No. (DN) is not changed.

<Fig.2 EEPROM layout diagram>

The EEPROM (IC503) is attached to the IC socket. When detaching the EEPROM, use a tweezers, etc. Be sure to attach the EEPROM by fitting its direction as shown in the figure.

Do not bend the IC lead when replacing.

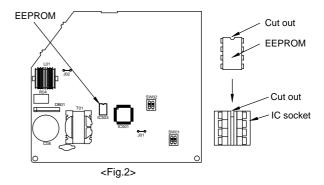


Table 1.Setting data(CODE No. table(example))

| DN | Item | Setting data | Factory-set value |
|-----|---|---------------------|-------------------------------|
| 01 | Filter display delay timer | | 0002 : 2500H |
| 02 | Dirty state of filter | | 0000 : Standard |
| 03 | Central control address | | 00Un/0099 : Unfixed |
| 04 | Specific indoor unit priority | | 0000 : No priority |
| 06 | Heating suction temperature shift | | 0002 : +2°C |
| 0D | Automatic mode | | 0001 : No automatic |
| 0F | Cooling only | | 0000 : Heat pump |
| 10 | Туре | | Depending on model type |
| 11 | Indoor unit capacity | | According to capacity type |
| 12 | Line address | | 00Un/0099 : Unfixed |
| 13 | Indoor unit address | | 00Un/0099 : Unfixed |
| 14 | Group address | | 00Un/0099 : Unfixed |
| 19 | Flap type (Wind direction adjustment) | | Depending on Type |
| 1E | Temperature range of cooling/heating automatic SW control point | | 0003 : 3 deg9Ts±1.5) |
| 28 | Automatic restart of power failure | | 0000 : None |
| 29 | Humidifier operation condition | | 0000 : Usual |
| 2A | Selection of option / Trouble input (TCB-PCUC2E: CN3) | | 0002 : None |
| 2E | HA terminal (CN61) select | | 0000 : Usual (HA terminal) |
| 31 | Ventilating fan control | | 0000 : Unavailable |
| 32 | Sensor SW | | 0000 : Body sensor |
| 33 | Temperature unit select | | 0000 : Centigrade (°C) |
| 5D | External static pressure | | 0000 : Default setting |
| 60 | Timer setting (wired remote controller) | | 0000 : Available |
| 7A | Change unit 0.5°C or 1.0°C on remote | | 0000 : 0.5°C |
| D0 | Remote controller operation save function | | 0001 : Enable |
| E0 | Region | 0004 : Global model | 0000 : Japan model |
| F6 | Presence of Application control kit (TCB-PCUC2E) | | 0000 : None |
| FC | Communication protocol | | 0000 : TCC-LINK |
| FE | FS unit adress | | 00Un/0099 : Unfixed |
| 103 | Remote controller setting | | 0000 : With remote controller |
| 1Fb | Remote controller operation | | 0000 : Operation possible |
| 1FC | Indoor Unit terminating resistance | | 0000 : OFF |

Table 2. Type : CODE No.10

| Setting data | Туре | Type name abb. | |
|--|----------------|--------------------|--|
| 0001 *1 4-way Air Discharge
Cassette Type | | MMU-UP****HP-E(TR) | |
| 0008 | High wall type | MMK-UP***HP-E(TR) | |

^{*1} EEPROM initial value on the P.C. board for indoor unit servicing.

Table 3. Indoor unit capacity: CODE No.11


| Setup data | Model | | |
|------------|----------|--|--|
| 0000*1 | Invalid | | |
| 0012 | 027 type | | |
| 0013 | 030 type | | |
| 0015 | 036 type | | |

*2 **A** CAUTION

< Model name MMK-UP****HP-E(TR) > For the above model. Set the CODE no. to **"E0"** the setting data "0000" (initial) to "0004"


13. EXPLODED VIEWS AND PARTS LIST

Indoor Unit

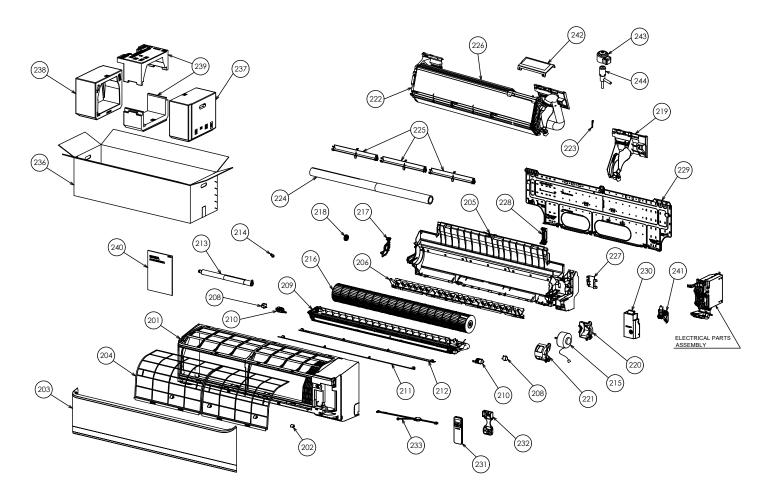

| Location | Part | Decemention | Location | Part | Description |
|----------|----------|--------------------------|----------|----------|-----------------------------|
| No. | No. | Description | No. | No. | Description |
| 201 | 43T00842 | FRONT PANEL ASSY | 224 | 43T49381 | PIPE, SHIELD |
| 202 | 43T00771 | CAP SCREW ASSY | 225 | 43T49383 | SEAL, FRONT |
| 203 | 43T09571 | GRILLE OF AIR INLET ASSY | 226 | 43T49403 | SEAL, UP |
| 204 | 43T80356 | AIR FILTER | 227 | 43T49043 | HOLDER, PIPE |
| 205 | 43T03416 | BACK BODY ASSY | 228 | 43T49382 | PIPE FIXTURE |
| 206 | 43T22361 | VERTICAL LOUVER ASSY | 229 | 43T82345 | PLATE, INSTALLATION ASSY |
| 208 | 43T21527 | MOTOR-LOUVER | 230 | 43T62364 | TERMINAL COVER ASSY |
| 209 | 43T72374 | DRAIN PAN ASSY | 231 | 43T66324 | WIRELESS REMOCO |
| 210 | 43T2D303 | GEAR ASSY | 232 | 43T83305 | HOLDER, REMOTE CONTROL |
| 211 | 43T22362 | HORIZONTAL LOUVER FRONT | 233 | 43T60511 | CORD MOTOR LOUVER HR |
| 212 | 43T22363 | HORIZONTAL LOUVER BACK | 236 | 43T91385 | PACKING BOX |
| 213 | 43T70325 | DRAIN HOSE ASSY | 237 | 43T91382 | PACKING CUSHION RIGHT |
| 214 | 43T79322 | DRAIN CAP | 238 | 43T91383 | PACKING CUSHION LEFT |
| 215 | 43T21492 | FAN-MOTOR | 239 | 43T91384 | PACKING CUSHION CENTER |
| 216 | 43T20369 | CROSS FLOW FAN ASSY | 240 | 43T85824 | OWNER'S MANUAL |
| 217 | 43T39402 | BASE BEARING ASSY | | | (MMK-UP0271,0301,0361HP-E) |
| 218 | 43T22312 | BEARING ASSY, MOLD | 240 | 43T85825 | OWNER'S MANUAL |
| 219 | 43T39401 | MOTOR COVER ASSY | | | (MMK-UP0271,0301,0361HP-TR) |
| 220 | 43T39403 | MOTOR BAND BACK | 241 | 43T62365 | CLAMP BASE ASSY |
| 221 | 43T39404 | MOTOR BAND FRONT | 242 | 43T04467 | PMV COVER ASSEMBLY |
| 222 | 43T44819 | REFRIGERATION CYCLE ASSY | 243 | 43T46519 | COIL, PMV |
| 223 | 43T19333 | HOLDER, SENSOR | 244 | 43T46518 | BODY, PMV |

Indoor Unit (Part-E)

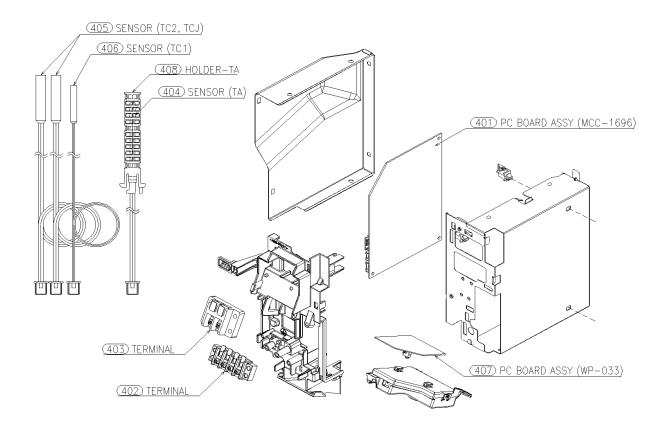

| Location | Part | Description | Location | Part | Description |
|----------|----------|--------------------|----------|----------|-----------------------|
| No. | No. | | No. | No. | Description |
| 401 | 43TN9831 | PC BOARD ASSY | 405 | 43T50304 | SENSOR;HEAT EXCHANGER |
| 402 | 43T60448 | TERMINAL | 406 | 43T50317 | SENSOR;HEAT EXCHANGER |
| 403 | 43T60078 | TERMIMAL BLOCK | 407 | 43TN9745 | DISPLAY PC BOARD ASSY |
| 404 | 43T50391 | SENSOR; THERMOSTAT | 408 | 43T63356 | HOLDER-TA |
| | | | | | |

WARNINGS ON REFRIGERANT LEAKAGE

Check of Concentration Limit

The room in which the air conditioner is to be installed requires a design that in the event of refrigerant gas leaking out, its concentration will not exceed a set limit.

The refrigerant R410A which is used in the air conditioner is safe, without the toxicity or combustibility of ammonia, and is not restricted by laws to be imposed which protect the ozone layer. However, since it contains more than air, it poses the risk of suffocation if its concentration should rise excessively. Suffocation from leakage of R410A is almost non-existent. With the recent increase in the number of high concentration buildings, however, the installation of multi air conditioner systems is on the increase because of the need for effective use of floor space, individual control, energy conservation by curtailing heat and carrying power etc.

Most importantly, the multi air conditioner system is able to replenish a large amount of refrigerant compared with conventional individual air conditioners. If a single unit of the multi conditioner system is to be installed in a small room, select a suitable model and installation procedure so that if the refrigerant accidentally leaks out, its concentration does not reach the limit (and in the event of an emergency, measures can be made before injury can occur).

In a room where the concentration may exceed the limit, create an opening with adjacent rooms, or install mechanical ventilation combined with a gas leak detection device. The concentration is as given below.

Total amount of refrigerant (kg)


Min. volume of the indoor unit installed room (m³)

Concentration limit (kg/m³)

The concentration limit of R410A which is used in multi air conditioners is 0.3 kg/m³.

NOTE 1

If there are 2 or more refrigerating systems in a single refrigerating device, the amounts of refrigerant should be as charged in each independent device.

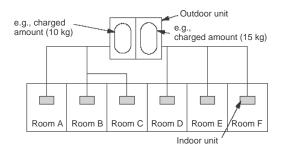

For the amount of charge in this example:

The possible amount of leaked refrigerant gas in rooms A, B and C is 10 kg.


The possible amount of leaked refrigerant gas in rooms D, E and F is 15 kg.

Important


NOTE 2:

The standards for minimum room volume are as follows.


(1) No partition (shaded portion)

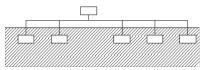

(2) When there is an effective opening with the adjacent room for ventilation of leaking refrigerant gas (opening without a door, or an opening 0.15 % or larger than the respective floor spaces at the top or bottom of the door).

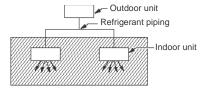


(3) If an indoor unit is installed in each partitioned room and the refrigerant piping is interconnected, the smallest room of course becomes the object. But when a mechanical ventilation is installed interlocked with a gas leakage detector in the smallest room where the density limit is exceeded, the volume of the next smallest room becomes the object.

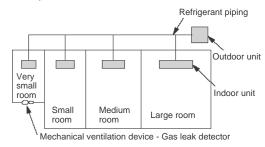

NOTE 3:

The minimum indoor floor area compared with the amount of refrigerant is roughly as follows: (When the ceiling is 2.7 m high)

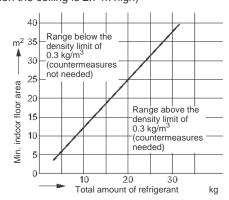

Toshiba Carrier (Thailand) Co., Ltd. 144/9 MOO 5, BANGKADI INDUSTRIAL PARK, TIVANON ROAD, TAMBOL BANGKADI, AMPHUR MUANG, PATHUMTHANI 12000, THAILAND.