
# TOSHIBA

FILE No. AE0-2203W Revised: ① Aug. 2023

# AIR TO WATER HEAT PUMP Service Manual

Model name:

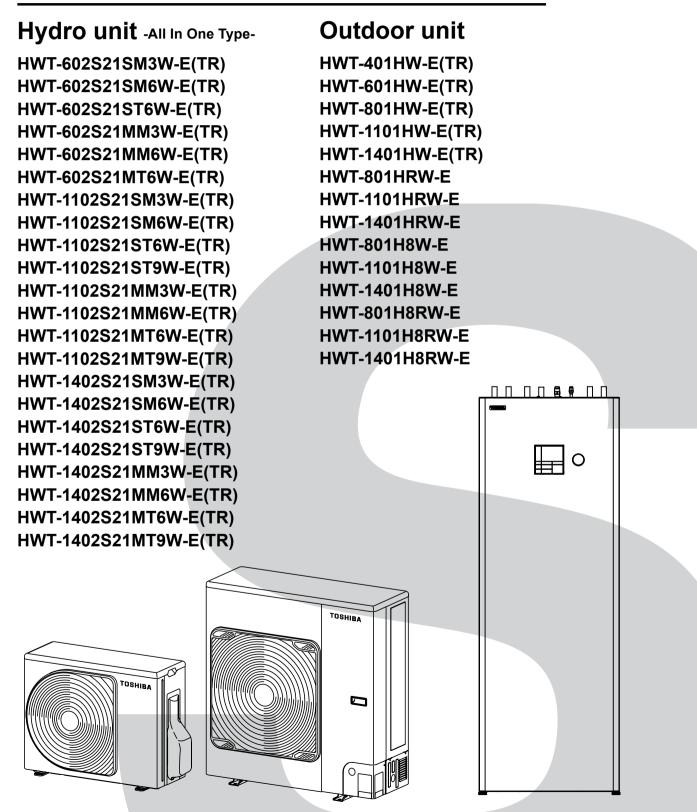

# Contents

1	Specifications	. 18
2	Construction views (External views)	. 23
_	2-1.Hydro unit	
	2-2.Outdoor unit	
3		
3	Refrigeration cycle / Water system diagram	
	3-1.Water system diagram	
	3-2.Refrigeration cycle system diagram	28
4	Wiring diagram	. 29
	4-1.Hydro unit	29
	4-2.Outdoor unit	32
	4-3.Hot water cylinder unit	36
5	Key electric component rating	. 37
	5-1.Hydro unit	37
	5-2.Outdoor unit	43
	5-3.Hot water cylinder unit	44
	5-4.Water heat exchange control board	45
	5-5.Outdoor control board	49
6	Refrigerant (R32)	. 55
6	Refrigerant (R32)         6-1.Safety during installation / servicing	
6		55
6	6-1.Safety during installation / servicing	55 56
6	6-1.Safety during installation / servicing 6-2.Refrigerant piping installation	55 56 56
6	6-1.Safety during installation / servicing 6-2.Refrigerant piping installation 6-2-1.Piping materials and joints used	55 56 56 57
6	<ul> <li>6-1.Safety during installation / servicing</li> <li>6-2.Refrigerant piping installation</li> <li>6-2-1.Piping materials and joints used</li> <li>6-2-2.Processing of piping materials</li> <li>6-3.Tools</li> <li>6-3-1.Required tools</li> </ul>	55 56 56 57 58 58
6	<ul> <li>6-1.Safety during installation / servicing</li> <li>6-2.Refrigerant piping installation</li> <li>6-2-1.Piping materials and joints used</li> <li>6-2-2.Processing of piping materials</li> <li>6-3.Tools</li> <li>6-3-1.Required tools</li> <li>6-4.Recharging of refrigerant</li> </ul>	55 56 56 57 58 58 58
6	<ul> <li>6-1.Safety during installation / servicing</li> <li>6-2.Refrigerant piping installation</li> <li>6-2-1.Piping materials and joints used</li> <li>6-2-2.Processing of piping materials</li> <li>6-3.Tools</li> <li>6-3-1.Required tools</li> <li>6-4.Recharging of refrigerant</li> <li>6-5.Brazing of pipes</li> </ul>	55 56 56 57 58 58 58 60
6	<ul> <li>6-1.Safety during installation / servicing</li></ul>	55 56 57 58 58 58 58 60 60
6	<ul> <li>6-1.Safety during installation / servicing</li> <li>6-2.Refrigerant piping installation</li> <li>6-2-1.Piping materials and joints used</li> <li>6-2-2.Processing of piping materials</li> <li>6-3.Tools</li> <li>6-3-1.Required tools</li> <li>6-4.Recharging of refrigerant</li> <li>6-5.Brazing of pipes</li> <li>6-5-1.Materials for brazing</li> <li>6-5-2.Flux</li> </ul>	55 56 57 58 58 58 60 60 61
6	<ul> <li>6-1.Safety during installation / servicing</li> <li>6-2.Refrigerant piping installation</li></ul>	55 56 57 58 58 58 60 61 61
6	<ul> <li>6-1.Safety during installation / servicing</li> <li>6-2.Refrigerant piping installation</li></ul>	55 56 57 58 58 58 60 60 61 61 62
6	<ul> <li>6-1.Safety during installation / servicing</li> <li>6-2.Refrigerant piping installation</li> <li>6-2-1.Piping materials and joints used</li> <li>6-2-2.Processing of piping materials</li> <li>6-3.Tools</li> <li>6-3-1.Required tools</li> <li>6-4.Recharging of refrigerant</li> <li>6-5.Brazing of pipes</li> <li>6-5-1.Materials for brazing</li> <li>6-5-2.Flux</li> <li>6-5-2.Flux</li> <li>6-5-3.Brazing</li> <li>6-6.Instructions for re-use piping of R22 or R407C</li> <li>6-6-1.Basic conditions needed to reuse the existing pipe</li> </ul>	55 56 57 58 58 60 61 61 62 62
6	<ul> <li>6-1.Safety during installation / servicing</li></ul>	55 56 57 58 58 58 60 61 61 62 62 62
6	<ul> <li>6-1.Safety during installation / servicing</li></ul>	55 56 57 58 58 60 61 61 62 62 62 62 63
6	<ul> <li>6-1.Safety during installation / servicing</li></ul>	55 56 57 58 58 58 60 61 61 61 62 62 62 63 63
6	<ul> <li>6-1.Safety during installation / servicing</li></ul>	55 56 57 58 58 58 60 61 61 61 62 62 62 63 63 63
6	<ul> <li>6-1.Safety during installation / servicing</li></ul>	55 56 57 58 58 58 60 60 61 61 62 62 62 63 63 63 63

	6-7.Charging additional refrigerant	64
	6-7-1.[Assumed gas leak]	64
	6-7-2.[Limiting the additional charge]	64
	6-7-3.[Cautions on charging additional refrigerant]	64
	6-8.General safety precautions for using R32 refrigerant	65
	6-8-1.Recovery	65
	6-8-2.Decommissioning	65
	6-8-3.Labelling	65
7	Operational description	66
8	Method of failure diagnosis	112
	8-1.Matters to be confirmed first	113
	8-1-1.Check the power supply voltage	113
	8-1-2.Check for any miswiring of the connection cables between the hydro unit and the outdoor unit	
	8-1-3.About the installation of the temperature sensor	
	8-2.Non-defective operation (program operation) No check code display appears	
	8-3.Outline of the determination diagram	
	8-3-1.Procedure of failure diagnosis	
	8-3-2. How to determine from the check code on the remote controller	114
	8-3-3.How to cancel a check code on the remote controller	114
	8-3-4.How to diagnose by check code	115
	8-4.Diagnosis flow chart for each check code	124
	8-4-1.Hydro unit failure detection	124
	8-4-2.Outdoor unit failure detection	144
	8-4-3. Temperature sensor, temperature-resistance characteristic table	156
	8-5.Operation check by PC board switch	157
	8-5-1.Operation check mode	157
	8-6.How to diagnose by fault simptom	158
	8-7.Brief method for checking the key components	
	8-7-1.Hydro unit	
	8-7-2.Outdoor unit	159
9	Hydro unit and outdoor unit settings	161
10	Replacement of the service PC board	203
11	How to exchange main parts	204
12	For cooling installation	259
13	Periodic inspection items	260
14	Part exploded view, part list	262
15	Appendix	287

## Generic denomination: Air to Water Heat Pump

### Definition of qualified installer or qualified service person

The Air to Water Heat Pump must be installed, maintained, repaired and removed by a qualified installer or qualified service person

When any of these jobs is to be done, ask a qualified installer or qualified service person to do them.

A qualified installer or qualified service person is an agent who has the qualifications and knowledge described in the table below.

Agent	Qualifications and knowledge which the agent must have
Qualified installer (*1)	<ul> <li>The qualified installer is a person who installs, maintains, relocates and removes the Air to Water Heat Pump made by Toshiba Carrier Air-conditioning Europe Sp. z o.o</li> <li>He or she has been trained to install, maintain, relocate and remove the Air to Water Heat Pump made by Toshiba Carrier Air-conditioning Europe Sp. z o.o. or, alternatively, he or she has been instructed in such operations by an individual or individuals who have been trained and is thus thoroughly acquainted with the knowledge related to these operations.</li> <li>The qualified installer who is allowed to do the electrical work involved in installation, relocation and removal has the qualifications pertaining to this electrical work as stipulated by the local laws and regulations, and he or she is a person who has been trained in matters relating to electrical work on the Air to Water Heat Pump made by Toshiba Carrier Air-conditioning Europe Sp. z o.o. or, alternatively, he or she has been instructed in such work enters by an individual or individuals who have been trained and is thus thoroughly acquainted with the knowledge related to this work.</li> <li>The qualified installer who is allowed to do the refrigerant handling and piping work involved in installation, relocation and removal has the qualifications pertaining to this refrigerant handling and piping work as stipulated by the local laws and regulations, and he or she is a person who has been trained in matters relating to refrigerant handling and piping work on the Air to Water Heat Pump made by Toshiba Carrier Air-conditioning Europe Sp. z o.o. or, alternatively, he or she has been trained in matters relating to refrigerant handling and piping work on the Air to Water Heat Pump made by Toshiba Carrier Air-conditioning Europe Sp. z o.o. or, alternatively, he or she has been trained in matters relating to refrigerant handling and piping work on the Air to Water Heat Pump made by Toshiba Carrier Air-conditioning Europe Sp. z o.o. or, alternatively, he or she has been</li></ul>
Qualified service person (*1)	<ul> <li>The qualified service person is a person who installs, repairs, maintains, relocates and removes the Air to Water Heat Pump made by Toshiba Carrier Air-conditioning Europe Sp. z o.o He or she has been trained to install, repair, maintain, relocate and remove the Air to Water Heat Pump made by Toshiba Carrier Air-conditioning Europe Sp. z o.o. or, alternatively, he or she has been instructed in such operations by an individual or individuals who have been trained and is thus thoroughly acquainted with the knowledge related to these operations.</li> <li>The qualified service person who is allowed to do the electrical work involved in installation, repair, relocation and removal has the qualifications pertaining to this electrical work as stipulated by the local laws and regulations, and he or she is a person who has been trained in matters relating to electrical work on the Airto Water Heat Pump made by Toshiba Carrier Air-conditioning Europe Sp. z o.o. or, alternatively, he or she has been instructed in such matters by an individual or individuals who have been trained and is thus thoroughly acquainted with the knowledge related to this work.</li> <li>The qualified service person who is allowed to do the refrigerant handling and piping work involved in installation, repair, relocation and removal has the qualifications pertaining to this refrigerant handling and piping work as stipulated by the local laws and regulations, and he or she is a person who is allowed to do the refrigerant handling and piping work as stipulated by the local laws and regulations, and he or she is a person who is allowed to do the refrigerant handling and piping work as stipulated by the local laws and regulations, and he or she is a person who has been trained in matters relating to refrigerant handling and piping work as stipulated by the local laws and regulations, and he or she is a person who have been trained and is thus thoroughly acquainted with the knowledge related to this work.</li> <li>The qualified service person</li></ul>

## Definition of protective gear

When the Air to Water Heat Pump is to be transported, installed, maintained, repaired or removed, wear protective gloves and "safety" work clothing.

In addition to such normal protective gear, wear the protective gear described below when undertaking the special work detailed in the table below.

Failure to wear the proper protective gear is dangerous because you will be more susceptible to injury, burns, electric shocks and other injuries.

Work undertaken	Protective gear worn
All types of work	Protective gloves "Safety" working clothing
Electrical-related work	Gloves to provide protection for electricians and from heat Insulating shoes Clothing to provide protection from electric shock
Work done at heights (50 cm or more)	Helmets for use in industry
Transportation of heavy objects	Shoes with additional protective toe cap
Repair of Outdoor Unit	Gloves to provide protection for electricians and from heat

The unit and this service guide list very important safety precautions.

Understand the following details (indications and symbols) before reading the body text, and follow the instructions.

The important contents concerned to the safety are described on the product itself and on this Service Manual. Please read this Service Manual after understanding the described items thoroughly in the following contents (Indications / Illustrated marks), and keep them.

## [Explanation of indications]

Indication	Explanation
	Indicates contents assumed that an imminent danger causing a death or serious injury of the repair engineers and the third parties when an incorrect work has been executed.
	Indicates possibilities assumed that a danger causing a death or serious injury of the repair engineers, the third parties, and the users due to troubles of the product after work when an incorrect work has been executed.
	Indicates contents assumed that an injury or property damage (*) may be caused on the repair engineers, the third parties, and the users due to troubles of the product after work when an incorrect work has been executed.

\* Property damage: Enlarged damage concerned to property, furniture, and domestic animal/pet.

# [Explanation of illustrated marks]

Mark	Explanation
$\otimes$	Indicates prohibited items (Forbidden items to do) The sentences near an illustrated mark describe the concrete prohibited contents.
0	Indicates mandatory items (Compulsory items to do) The sentences near an illustrated mark describe the concrete mandatory contents.
$\triangle$	Indicates cautions (Including danger / warning) The sentences or illustration near or in an illustrated mark describe the concrete cautious contents.

## Warning indications on the Air to Water Heat Pump

# [Confirmation of warning label on the main unit]

Confirm that labels are indicated on the specified positions

If removing the label during parts replace, stick it as the original.

	WARNING (Risk of fire)	Outdoor Unit. In case that refrigera	Prefrigerant only. Refrigerant type is written on nameplate of ant type is R32, this unit uses a flammable refrigerant. nd comes in contact with fire or heating part, it will create re is risk of fire.	
	Read the OWNER'S M	Read the OWNER'S MANUAL carefully before operation.		
	Service personnel are required to carefully read the OWNER'S MANUAL and INSTALLATION MANUAL before operation.			
i	Further information is	available in the OWN	ER'S MANUAL, INSTALLATION MANUAL, and the like.	
	Warning indication	on	Description	
	WARNI	NG	WARNING	
ELECTRICAL SHOCK H Disconnect all remote electri power supplies before servic		electric	ELECTRICAL SHOCK HAZARD Disconnect all remote electric power supplies before servicing.	
	WARNING		WARNING	
	Moving parts. Do not operate unit with grille removed. Stop the unit before the servicing.		Moving parts. Do not operate unit with grille removed. Stop the unit before the servicing.	
	CAUTI	ON	CAUTION	
	High temperature parts. You might get burned when removing this panel.		High temperature parts. You might get burned when removing this panel.	
	CAUTI	ON	CAUTION	
	Do not touch the alumin Doing so may result in		Do not touch the aluminum fins of the unit. Doing so may result in injury.	
	CAUTI	ON	CAUTION	
	BURST HA Open the service valve operation, otherwise th burst.	es before the	BURST HAZARD Open the service valves before the operation, otherwise there might be the burst.	

## **Precaution for safety**

The appliance shall be installed in accordance with national wiring regulations. Capacity shortages of the power circuit or an incomplete installation may cause an electric shock or fire.

	Before carrying out the installation, maintenance, repair or removal work, be sure to set the circuit breaker to the OFF position. Otherwise, electric shocks may result.
	Before opening the intake grille of the indoor unit or service panel of the outdoor unit, set the circuit breaker to the OFF position. Failure to set the circuit breaker to the OFF position may result in electric shocks through contact with the interior parts.
Turn off breaker	Only a qualified installer (*1) or qualified service person (*1) is allowed to remove the intake grille of the indoor unit or service panel of the outdoor unit and do the work required.
	Before starting to repair the outdoor unit fan or fan guard, be absolutely sure to set the circuit breaker to the OFF position, and place a "Work in progress" sign on the circuit breaker.
	When cleaning the filter or other parts of the indoor unit, set the circuit breaker to OFF without fail, and place a "Work in progress" sign near the circuit breaker before proceeding with the work.
$\bigcirc$	Do not turn ON the circuit breaker under the condition of removing a cabinet, a panel, etc. Otherwise, it leads to an electric shock with a high voltage, resulting in loss of life.
Prohibition	

	Before starting to repair the Air to Water Heat Pump, read carefully through the Service Manual, and repair the Air to Water Heat Pump by following its instructions.
	Only qualified service person (*1) is allowed to repair the Air to Water Heat Pump. Repair of the Air to Water Heat Pump by unqualified person may give rise to a fire, electric shocks, injury, wate leaks and/or other problems.
	Only a qualified installer (*1) or qualified service person (*1) is allowed to carry out the electrical work of the Ai to Water Heat Pump. Under no circumstances must this work be done by an unqualified individual since failure to carry out the work
	properly may result in electric shocks and/or electrical leaks.
	Wear protective gloves and safety work clothing during installation, servicing and removal.
	When connecting the electrical wires, repairing the electrical parts or undertaking other electrical jobs, wea gloves to provide protection for electricians, insulating shoes and clothing to provide protection from electri shocks.
	Failure to wear this protective gear may result in electric shocks.
•	Use wiring that meets the specifications in the Installation Manual and the stipulations in the local regulations and laws. Use of wiring which does not meet the specifications may give rise to electric shocks, electrical leakage,
	smoking and/or a fire.
General	Only a qualified installer (*1) or qualified service person (*1) is allowed to undertake work at heights using a stand of 50 cm or more.
	When working at heights, use a ladder which complies with the ISO 14122 standard, and follow the procedure in the ladder's instructions.
	Also wear a helmet for use in industry as protective gear to undertake the work. When working at heights, put a sign in place so that no-one will approach the work location, before proceeding
	when working at heights, put a sign in place so that no-one will approach the work location, before proceeding with the work.
	Parts and other objects may fall from above, possibly injuring a person below.
	Do not touch the aluminum fin of the outdoor unit. You may injure yourself if you do so. If the fin must be touched for some reason, first put on protective gloves and safety work clothing, and then proceed.
	Do not climb onto or place objects on top of the outdoor unit.
	You may fall or the objects may fall of the outdoor unit and result in injury.
	When transporting the Air to Water Heat Pump, wear shoes with additional protective toecap.
	When transporting the Air to Water Heat Pump, do not hold the bands around the packing carton. You may injure yourself if the bands should break.
	This Air to Water Heat Pump has passed the pressure test as specified in IEC 60335-2-40 Annex EE.
	When you access inside of the electric cover to repair electric parts, wait for about five minutes after turning of the breaker.
0	Do not start repairing immediately. If a fault exists that could compromise safety, then no electrical supply shall be connected to the circuit until it i satisfactorily dealt with. If the fault cannot be corrected immediately but it is necessary to continue operation, a adequate temporary solution shall be used. This shall be reported to the owner of the equipment so all partie
Electric shock hazard	are advised. Initial safety checks shall include: - that capacitors are discharged;
	Touching the terminals of charged high-voltage capacitors may cause electric shock. Natural discharge of the capacitor takes about five minutes.
	<ul> <li>that no live electrical components and wiring are exposed while charging, recovering or purging the system;</li> <li>that there is continuity of earth bonding;</li> </ul>
	Place a "Work in progress" sign near the circuit breaker while the installation, maintenance, repair or removal work is being carried out. There is a danger of electric shocks if the circuit breaker is set to ON by mistake.
$\bigcirc$	When checking the electric parts, removing the cover of the electric parts box of Indoor Unit and/or front panel of Outdoor Unit inevitably to determine the failure, put a sign "Do not enter" around the site before the work. Failure
Prohibition	to do this may result in third person getting electric shock. Before operating the Air to Water Heat Pump after having completed the work, check that the electrical parts box cover of the indoor unit and service panel of the outdoor unit are closed, and set the circuit breaker to the

Stay on protection	If, in the course of carrying out repairs, it becomes absolutely necessary to check out the electrical parts with the electrical parts box cover of one or more of the indoor units and the service panel of the outdoor unit removed in order to find out exactly where the trouble lies, wear insulated heat-resistant gloves, insulated boots and insulated work overalls, and take care to avoid touching any live parts. You may receive an electric shock if you fail to heed this warning. Only qualified service person (*1) is allowed to do this kind of work.
	Before troubleshooting or repair work, check the earth wire is connected to the earth terminals of the main unit, otherwise an electric shock is caused when a leak occurs. If the earth wire is not correctly connected, contact an electric engineer for rework.
	After completing the repair or relocation work, check that the earth wires are connected properly.
Check earth wires	Be sure to connect earth wire. (Grounding work) Incomplete earthing causes an electric shock. Do not connect earth wires to gas pipes, water pipes, and lightning rods or earth wires for telephone wires.
$\bigcirc$	Do not modify the products. Do not also disassemble or modify the parts. It may cause a fire, electric shock or injury.
Prohibition of modification	
Use specified	When any of the electrical parts are to be replaced, ensure that the replacement parts satisfy the specifications given in the Service Manual (or use the parts contained on the parts list in the Service Manual). Use of any parts which do not satisfy the required specifications may give rise to electric shocks, smoking and/ or a fire.
parts	Replace components only with parts specified by the manufacturer. Other parts may result in the ignition of refrigerant in the atmosphere due to the refrigerant leak.
Do not bring a child close to the equipment	If, in the course of carrying out repairs, it becomes absolutely necessary to check out the electrical parts with the electrical parts box cover of one or more of the indoor units and the service panel of the outdoor unit removed in order to find out exactly where the trouble lies, place "Keep out" signs around the work site before proceeding. Third-party individuals may enter the work site and receive electric shocks if this warning is not heeded.
0	Connect the cut-off lead wires with crimp contact, etc, put the closed end side upward and then apply a water- cut method, otherwise a leak or production of fire is caused at the users' side.
Insulating measures	
<b>D</b> No fire	<ul> <li>When performing repairs using a gas burner, replace the refrigerant with nitrogen gas because the oil that coats the pipes may otherwise burn.</li> <li>When repairing the refrigerating cycle, take the following measures.</li> <li>1)Be attentive to fire around the cycle.</li> <li>When using a gas stove, etc, be sure to put out fire before work; otherwise the oil mixed with refrigerant gas may catch fire.</li> <li>2)Do not use a brazing in the closed room.</li> </ul>
	<ul><li>When using it without ventilation, carbon monoxide poisoning may be caused.</li><li>3)Do not bring inflammables close to the refrigerant cycle, otherwise fire of the brazing may catch the inflammables.</li></ul>

	The refrigerant used by this Air to Water Heat Pump is the R32.
	Check the used refrigerant name and use tools and materials of the parts which match with it. For the products which use R32 refrigerant, the refrigerant name is indicated at a position on the outdoor unit where is easy to see. To prevent miss charging, the route of the service port is changed from one of the former R22. Be careful for miss charging since a charging port of R32 is the same diameter as that of R410A.
	Do not use any refrigerant different from the one specified for complement or replacement. Otherwise, abnormally high pressure may be generated in the refrigeration cycle, which may result in a failure or explosion of the product or an injury to your body.
	For an Air to Water Heat Pump which uses R32, never use other refrigerant than R32. For an Air to Water Heat Pump which uses other refrigerant (R22, R410A etc.), never use R32. If different types of refrigerant are mixed, abnormal high pressure generates in the refrigerating cycle and an injury due to breakage may be caused. If the different type of refrigerants are mixed in, be sure to recharge the refrigerant.
Refrigerant	Do not charge refrigerant additionally. If charging refrigerant additionally when refrigerant gas leaks, the refrigerant composition in the refrigerating cycle changes resulted in change of Air to Water Heat Pump characteristics or refrigerant over the specified standard amount is charged and an abnormal high pressure is applied to the inside of the refrigerating cycle resulted in cause of breakage or injury. Therefore if the refrigerant gas leaks, recover the refrigerant in the Air to Water Heat Pump, execute vacuuming, and then newly recharge the specified amount of liquid refrigerant. In this time, never charge the refrigerant over the specified amount.
	When recharging the refrigerant in the refrigerating cycle, do not mix the refrigerant or air other than R32 into the specified refrigerant. If air or others is mixed with the refrigerant, abnormal high pressure generates in the refrigerating cycle resulted in cause of injury due to breakage.
	After the installation work, confirm that refrigerant gas does not leak. If refrigerant gas leaks into the room and flows near a fire source, such as a cooking range, it may generate noxious gases, causing a fire.
	Never recover the refrigerant into the outdoor unit. When the equipment is moved or repaired, be sure to recover the refrigerant with recovering device. The refrigerant cannot be recovered in the outdoor unit; otherwise a serious accident such as breakage or injury is caused.
Assembly / Cabling	After repair work, surely assemble the disassembled parts, and connect and lead the removed wires as before. Perform the work so that the cabinet or panel does not catch the inner wires. If incorrect assembly or incorrect wire connection was done, a disaster such as a leak or fire is caused at user's side.
Insulator check	After the work has finished, be sure to use an insulation tester set (500 VM $\Omega$ ) to check the resistance is 1 M $\Omega$ or more between the charge section and the non-charge metal section (Earth position). If the resistance value is low, a disaster such as a leak or electric shock is caused at user's side.
0	When the refrigerant gas leaks during work, execute ventilation. If the refrigerant gas touches to a fire, it may generate noxious gases, causing a fire. A case of leakage of the refrigerant and the closed room full with gas is dangerous because a shortage of oxygen occurs. Be sure to execute ventilation.
Ventilation	If refrigerant gas has leaked during the installation work, ventilate the room immediately. If the leaked refrigerant gas comes in contact with fire, it may generate noxious gases, causing a fire.

•	When the refrigerant gas leaks, find out the leaked position and repair it surely. If the leaked position cannot be found out and the repair work is interrupted, pump-down and tighten the service valve, otherwise the refrigerant gas may leak into the room. When gas touches to fire such as fan heater, stove or cocking stove, it may generate noxious gases, causing a fire though the refrigerant gas itself is innocuous. When installing equipment which includes a large amount of charged refrigerant in a sub-room, it is necessary that the concentration does not the limit even if the refrigerant leaks. If the refrigerant leaks and exceeds the limit concentration, an accident of shortage of oxygen is caused.
Compulsion	Tighten the flare nut with a torque wrench in the specified manner. Excessive tighten of the flare nut may cause a crack in the flare nut after a long period, which may result in refrigerant leakage.
	Nitrogen gas must be used for the airtight test.
	The charge hose must be connected in such a way that it is not slack.
	For the installation/moving/reinstallation work, follow to the Installation Manual. If an incorrect installation is done, a trouble of the refrigerating cycle, water leak, electric shock or fire is caused.
	Install the outdoor unit properly in a location that is durable enough to support the weight of the outdoor unit. Insufficient durability may cause the outdoor unit to fall, which may result in injury.
	Once the repair work has been completed, check for refrigerant leaks, and check the insulation resistance and water drainage. Then perform a trial run to check that the Air to Water Heat Pump is running properly.
0	After repair work has finished, check there is no trouble. If check is not executed, a fire, electric shock or injury may be caused. For a check, turn off the power breaker.
Check after repair	After repair work (installation of front panel and cabinet) has finished, execute a test run to check there is no generation of smoke or abnormal sound. If check is not executed, a fire or an electric shock is caused. Before test run, install the front panel and cabinet.
	Check the following matters before a test run after repairing piping.
$\sim$	<ul> <li>Connect the pipes surely and there is no leak of refrigerant.</li> </ul>
Do not operate the unit with the valve closed	<ul> <li>The valve is opened. Running the compressor under condition that the valve closes causes an abnormal high pressure resulted in damage of the parts of the compressor and etc. and moreover if there is leak of refrigerant at connecting section of pipes, the air is suctioned and causes further abnormal high pressure resulted in burst or injury.</li> </ul>
•	Only a qualified installer (*1) or qualified service person (*1) is allowed to relocate the Air to Water Heat Pump. It is dangerous for the Air to Water Heat Pump to be relocated by an unqualified individual since a fire, electric shocks, injury, water leakage, noise and/or vibration may result.
Check after reinstallation	<ul> <li>Check the following items after reinstallation.</li> <li>1) The earth wire is correctly connected.</li> <li>2) The power cord is not caught in the product.</li> <li>3) There is no inclination or unsteadiness and the installation is stable.</li> <li>If check is not executed, a fire, an electric shock or an injury is caused.</li> </ul>
•	When the service panel of the outdoor unit is to be opened in order for the compressor or the area around this part to be repaired immediately after the Air to Water Heat Pump has been shut down, set the circuit breaker to the OFF position, and then wait at least 10 minutes before opening the service panel. If you fail to heed this warning, you will run the risk of burning yourself because the compressor pipes and other parts will be very hot to the touch. In addition, before proceeding with the repair work, wear the kind of insulated heat-resistant gloves designed to protect electricians.
Cooling check	When the service panel of the outdoor unit is to be opened in order for the fan motor, reactor, inverter or the areas around these parts to be repaired immediately after the Air to Water Heat Pump has been shut down, set the circuit breaker to the OFF position, and then wait at least 10 minutes before opening the service panel. If you fail to heed this warning, you will run the risk of burning yourself because the fan motor, reactor, inverter heat sink and other parts will be very hot to the touch. In addition, before proceeding with the repair work, wear the kind of insulated heat-resistant gloves designed to protect electricians.

	Only a qualified installer (*1) or qualified service person (*1) is allowed to install the Air to Water Heat Pump. If the Air to Water Heat Pump is installed by an unqualified individual, a fire, electric shocks, injury, water leakage, noise and/or vibration may result.
	Before starting to install the Air to Water Heat Pump, read carefully through the Installation Manual, and follow its instructions to install the Air to Water Heat Pump.
	Do not install the Air to Water Heat Pump in a location that may be subject to a risk of expire to a combustible gas. If a combustible gas leaks and becomes concentrated around the unit, a fire may occur.
Installation	When transporting the Air to Water Heat Pump, use a forklift truck and when moving the Air to Water Heat Pump by hand, move the unit with 4 people.
	Install a circuit breaker that meets the specifications in the Installation Manual and the stipulations in the local regulations and laws.
	Install the circuit breaker where it can be easily accessed by the agent.
	Do not place any combustion appliance in a place where it is directly exposed to the wind of Air to Water Heat Pump, otherwise it may cause imperfect combustion.
0	When carrying out the pump-down work shut down the compressor before disconnecting the refrigerant pipe. Disconnecting the refrigerant pipe with the service valve left open and the compressor still operating will cause air, etc. to be sucked in, raising the pressure inside the refrigeration cycle to an abnormally high level, and possibly resulting in rupture, injury, etc.
Compulsion	When removing the brazing parts of suction and discharge pipe for the compressor, remove them at the place ventilated well after recovering the refrigerant. Improper recovering may cause the spurt of the refrigerant and the refrigeration oil, causing an injury.
$\bigcirc$	Do not vent gases to the atmosphere. Venting gases to the atmosphere is prohibited by the law.
Prohibition	

0	Ensure wearing of gloves when performing any work in order to avoid injury from parts, etc. Failure to wear the proper protective gloves cause an injury due to the parts, etc.
Wearing of gloves	
0	When performing the brazing work, check whether refrigerant leaks or remains. If the leakage refrigerant gas touches a fire source, it may generate noxious gases, causing a fire.
Confirm	

### Explanations given to user

• If you have discovered that the fan grille is damaged, do not approach the outdoor unit but set the circuit breaker to the OFF position, and contact a qualified service person to have the repairs done. Do not set the circuit breaker to the ON position until the repairs are completed.

### Relocation

- Only a qualified installer (\*1) or qualified service person (\*1) is allowed to relocate the Air to Water Heat Pump. It is dangerous for the Air to Water Heat Pump to be relocated by an unqualified individual since a fire, electric shocks, injury, water leakage, noise and/or vibration may result.
- When carrying out the pump-down work shut down the compressor before disconnecting the refrigerant pipe. Disconnecting the refrigerant pipe with the service valve left open and the compressor still operating will cause air, etc. to be sucked in, raising the pressure inside the refrigeration cycle to an abnormally high level, and possibly resulting in rupture, injury, etc.

(\*1) Refer to the "Definition of qualified installer or qualified service person".

Note: This Air to Water Heat Pump is for residential use.

## **Refrigerant R32**

This Air to Water Heat Pump adopts a new HFC type refrigerant (R32) which does not deplete the ozone layer.

### (1) Safety caution concerned to refrigerant R32

Be sure that water, dust, the former refrigerant or the former refrigerating oil is not mixed into the refrigerating cycle of the Air to Water Heat Pump with refrigerant R32 during installation work or service work. If an incorrect work or incorrect service is performed, there is a possibility to cause a serious accident.

Use the tools and materials exclusive to R32 to purpose a safe work.

# (2) Safety and cautions on installation / service <Safety items>

When gas concentration and ignition energy are happened at the same time, R32 has a slight possibility of burning. Although it will not ignite under normal work environment conditions, be aware that the flame spreads if ignition should occur.

It is necessary to carry out installation/servicing safely while taking the following precautions into consideration.

- Never use refrigerant other than specified refrigerant (R32) in an Air to Water Heat Pump which is designed to operate with the specified refrigerant (R32).
   If other refrigerant than R32 is used, it may cause personal injury, etc. by a malfunction, a fire, a rupture.
- (2) Since R32 is heavier than air, it tends to accumulate at the bottom (near the floor). Ventilate properly for the working environment to prevent its combustion. Especially in a basement or a closed room where is the high risk of the accumulation, ventilate the room with a local exhaust ventilation. If refrigerant leakage is confirmed in the room or the place where the ventilation is insufficient, do not work until the proper ventilation is performed and the work environment is improved.
- (3) When performing brazing work, be sure to check for leakage refrigerant or residual refrigerant. If the leakage refrigerant comes into contact with fire, a poisonous gas may occur or it may cause a fire. Keep adequate ventilation during the work.
- (4) When refrigerant gas leaks during work, execute ventilation. If the leakage refrigerant comes into contact with a fire, a poisonous gas may occur or it may cause a fire.
- (5) No person carrying out work in relation to a refrigerating system which involves exposing any pipe work shall use any sources of ignition in such a manner that it may lead to the risk of fire or explosion. All possible ignition sources, including cigarette smoking, should be kept sufficiently far away from the site of installation, repairing, removing and disposal, during which refrigerant can possibly be released to the surrounding space. Prior to work taking place, the area around the equipment is to be surveyed to make sure that there are no

flammable hazards or ignition risks. "No Smoking" signs shall be displayed.

- (6) When installing or removing an Air to Water Heat Pump, do not mix air in the refrigerant cycle. If air or others is mixed with the refrigerant, abnormal high pressure generates in the refrigerating cycle, causing injury due to the breakage.
- (7) After installation work complete, confirm that refrigerant gas is not leaking on the flare connection part or others. If leaked refrigerant comes to contact with a fire, toxic gas may occur, causing a fire.
- (8) Perform the installation work and re-installation according to the installation manual. Pay attention especially to the area of application. Improper installation may cause refrigeration trouble, water leakage, electric shock, or fire etc.
- (9) Unauthorized modifications to the Air to Water Heat Pump may be dangerous. If a breakdown occurs please call a qualified Air to Water Heat Pump technician or electrician. Improper repair may result in water leakage, electric shock and fire, etc.
- (10) Carry out the airtight test with nitrogen at a specified pressure. Do not use oxygen or acetylene gas absolutely as it may cause an explosion.
- (11) Always carry a refrigerant leakage detection sensor during the work and work while checking that no refrigerant leaks around working environment.
- (12) If the leakage refrigerant comes into contact with fire, it may cause a fire. Have a dry powder or CO<sub>2</sub> fire extinguisher adjacent to the charging area.
- (13) During repairs to sealed components, all electrical supplies shall be disconnected from the equipment being

worked upon prior to any removal of sealed covers, etc. If it is absolutely necessary to have an electrical supply to equipment during servicing, then a permanently operating form of leak detection shall be located at the most critical point to warn of a potentially hazardous situation.

Particular attention shall be paid to the following to ensure that by working on electrical components, the casing is not altered in such a way that the level of protection is affected. This shall include damage to cables, excessive number of connections, terminals not made to original specification, damage to seals, incorrect fitting of glands, etc.

Ensure that seals or sealing materials have not degraded to the point that they no longer serve the purpose of preventing the ingress of flammable atmospheres. Replacement parts shall be in accordance with the manufacturer's specifications.

(14) Do not apply any permanent inductive or capacitance loads to the circuit without ensuring that this will not exceed the permissible voltage and current permitted for the equipment in use. Intrinsically safe components are the only types that can be worked on while live in the presence of a flammable atmosphere. The test apparatus shall be at the correct rating. Replace components only with parts specified by the manufacturer.

Other parts may result in the ignition of refrigerant in the atmosphere from a leak.

#### <Caution items>

- (1) The opposite side dimension of the Air to Water Heat Pump's flared nut using R32 and the shape of the charge port are the same as those of R410A.
- (2) Be careful not to charge refrigerant by mistake. Should the different type of refrigerant mix in, be sure to recharge the refrigerant.
- (3) Do not mix the other refrigerant or refrigerating oil with the refrigerant.
- (4) Since the pressure of R32 is 1.6 times higher than that of the former refrigerant (R22), use tools and parts with high pressure resistance specification similar to R410A.
- (5) In the installation time, use clean pipe materials and work with great attention so that water and others do not mix in because pipes are affected by impurities such as water, oxide film, oil, etc. Use the clean pipes. Be sure to braze while flowing nitrogen gas in the pipe. (Never use gas other than nitrogen gas.)
- (6) For the earth protection, use a vacuum pump for air purge.
- (7) R32 refrigerant is Single-component refrigerant that does not change its composition. Although it is possible to charge the refrigerant with either liquid or gas, charge it with liquid.

### (3) Pipe materials

For the refrigerant pipes, copper pipe and joints are mainly used. It is necessary to select the most appropriate pipes to conform to the standard. Use clean pipes or joints to which little impurities adhere.

### (1) Copper pipe

### <Piping>

The pipe thickness, flare-finishing size, flare nut and others differ according to a refrigerant type.

When using a long copper pipe for R32, it is recommended to select "Copper or copper-base pipe without seam" and one with bonded oil amount 40 mg / 10 m or less.

Also do not use crushed, deformed, discolored (especially inside) pipes.

(Impurities cause clogging of expansion valves and capillary tubes.)

### <Flare nut>

Use the flare nuts which are attached to the Air to Water Heat Pump unit.

Be sure to select the pipes with copper thickness in the table below since the pressure of an Air to Water Heat Pump using R32 is higher than that of R22.

Nominal diameter	Outer diameter (mm)	Thickness (mm) R410A or R32
1/4	6.4	0.80
1/2	12.7	0.80
5/8	15.9	1.00

Make sure not to use a thin copper pipe such as 0.7 mm copper thickness in the market.

### (2) Joint

The flare joint and socket joint are used for joints of the copper pipe. The joints are rarely used for installation of the Air to Water Heat Pump. However clear impurities when using them.

### (4) Tools

#### O: R410A tools available, $\Delta$ : Partly unavailable, imes: R410A tools unavailable

No.	Installation / service tools		Use	Applicability to R32 Air to	Applicability to R22 Air to
NO.	Tools / Equipment	specification	USe	Water Heat Pump or not	Water Heat Pump or not
1	Flare tool	Clutch type	Pipe flaring	0	0
2	Copper pipe gauge for adjusting projection margin	_	Flaring by conventional flare tool	0	_
3	Torque wrench	_	Tightening of flare nut	0	×
4	Gauge manifold	Port size 1/2"-20UNF (5/16" Flare)	Evacuating, refrigerant charge, run check, etc.		×
5	Charge hose	High-voltage	Turi check, etc.	0	×
6	Vacuum pump	_	Vacuum drying	O Note 3 1/2"-20UNF (5/16" Flare)	▲ Connection diameter 1/4"
7	Vacuum pump adapter	_	Vacuum drying	O Note 4 1/2"-20UNF (5/16" Flare)	▲ Connection diameter 1/4"
8	Electronic balance for refrigerant charging	For 10 kg or 20 kg cylinder	Refrigerant charge	0	0
9	Leakage detector	—	Gas leakage check	O Note 5	O Note 5
10	Refrigerant cylinder	_	Refrigerant charge	× Note 6	×
11	Refrigerant recovery cylinder	Exclusive for R32	Refrigerant recovery container	× Note 7	×
12	Refrigerant recovery device	_	Refrigerant recovery device	O Note 8	▲ Connection diameter 1/4"

**Note 1** When flaring is carried out for R410A or R32 using the conventional flare tools, adjustment of projection margin is necessary. For this adjustment, a copper pipe gauge, etc. are necessary.

- **Note 2** When saturation temperature is described, the gauge manifold differs for R410A and R32. If saturation temperature reading is required, special tools exclusive for R32 are required.
- Note 3 Since R32 has a slight possibility of burning, be sure to use the tools corresponding to R32.
- **Note 4** Like R410, a Vacuum pump adapter needs installing to prevent a Vacuum pump oil (mineral oil) from flowing backward into the Charge hose. Mixing of the Vacuum pump oil into R32 refrigerant may cause a trouble such as generation of sludge, clogging of capillary, etc.
- Note 5 Be sure to use those tools after confirming they correspond to each refrigerant.
- **Note 6** For a refrigerant cylinder exclusive for R32, the paint color (or label color) of the cylinder is set to the specified color (light blue) together with the indication of the refrigerant name.
- **Note 7** Although the container specification is the same as R410A, use a recovering container exclusive for R32 to avoid mixing with other refrigerants.
- **Note 8** Be careful for miss charging of the refrigerant during work. Miss-charging of the refrigerant type may cause not only damage of the equipment but also a fire etc.

### ▼ General tools

In addition to the above exclusive to	ols, the following equipments is necessary as the general tools.
1) Pipe cutter	6) Spanner or Adjustable wrench
2) Reamer	7) Hole core drill
3) Pipe bender	8) Tape measure
4) Level vial	9) Metal saw
5) Screwdriver (+, –)	
Also prepare the following equipmer	nt for other installation method and run check.
1) Clamp meter	3) Insulation resistance tester (Megger)
2) Thermometer	4) Electroscope

# 1 **Specifications**

Unit name	Hydro unit		HWT-602S21SM3W-E, HWT-602S21ST6W-E, HWT-602S21MM6W-E, HWT-401HW-E		HWT-602S21MM3W-E	
	Outdoor unit				HWT-60	
Heating capacity *1 (kW)			4			.0
Cooling capacity *2 (kW)			4	.0	5	.0
Variable range of compressor frequen	су		10 - 8	30 Hz	10 - 1	00 Hz
Power source				1 phase 50 Hz	220-240 V	
Operation mode			Heating	Cooling	Heating	Cooling
Electric characteristic *1 *2	Total	Current (A)	4.08	5.38	5.78	7.11
		Power (kW)	0.77	1.15	1.25	1.52
		Power factor (%)	82	93	94	93
Operating noise sound power level ①	Hydro unit (dB (A))	·	40	40	40	40
	Outdoor unit (dB (A))		65	62	65	62
Coefficient of performance *1 *2			5.20	3.45	4.80	3.30
Hydro unit	Outer dimension	Height (mm)		170	0	
		Width (mm)		595	5	
		Depth (mm)		670	)	
	Net weight (kg)			HWT-*SM,ST*:116 / H	HWT-*MM,MT*:122	
	Color			Whit		
	Remote controller	Height (mm)	1	120		
	Outer dimension *3	Width (mm)	1	120		
		Depth (mm)	1	16		
	Circulation pump	Motor output (W)	+	60 (M		
	On our during	Flow rate (L/min)	11.6	11.5	17.3	14.3
		Туре	11.0			14.0
			Non-self-suction centrifugal pump			
	Heat exchanger Tank Water volume (L)		Plate-type heat exchange			
	Idlik			210		
	Maximum water temperature (°C)		65 10			
Dutdeen unit	Maximum water pressure (bar)		630			
Dutdoor unit	Outer dimension Height (mm)					
		Width (mm)	800			
	Depth (mm)		300 42			
	Net weight (kg)					
	Color		Silky shade			
	Compressor	Motor output (W)	1100			
		Туре	Twin rotary type with DC-inverter variable speed control			
		Model		DX150A1		
	Fan motor	Standard air capacity (m³/min)	33.6	36.4	33.6	36.4
		Motor output (W)		43		
Refrigerant piping	Connection method		Flare con	nection (Conformity w		ydro side)
	Hydro unit	Liquid (mm)	Ø6.4			
		Gas (mm)	Ø12.7			
	Outdoor unit	Liquid (mm)	Ø6.4			
		Gas (mm)	Ø12.7			
	Maximum length (m)			30		
	Maximum chargeless len	igth (m)	20			
	Maximum height differen	ce (m)	±30			
	Minimum length (m)		5			
Refrigerant	Refrigerant name		R32			
	Charge amount (kg)			0.9	I	
Vater piping	Pipe diameter		R3/4"			
	Maximum length (m)		None (Need the flow rate 10 L/min or more)			
	Maximum height difference (m)		±7			
	Maximum working water pressure (kPa) *4		1	250		
Dperating temperature range	Hydro unit (°C) *5 (Coolir		1	5-32 / 5-32		
	Outdoor unit (°C) (Coolin		1	10-43 / -20-2		
Dperating humidity range	Hydro unit (%)	<u> </u>	1	15-8		
· · · · · · · · · · · · · · · · · · ·	Outdoor unit (%)		+	15-10		
Wiring connection	Power wiring		3	wires: including earth		t)
J	Connecting line		<u> </u>	4 wires: includir		,
	1		1			

Connecting line
 4 wires: including earlin wire
 4 consistence,
 4 Cooling performance measurement conditions: outside air temperature 35°C, water supply temperature 12°C, outlet water temperature 7°C, refrigerant piping length 7.5 m (no height
 difference),
 \*3 • The remote controller should be shipped with the hydro unit.
 • Use two 1.5-meter wires to connect the hydro unit with the remote controller,
 \*4 Check the water piping for leakage under the maximum operating pressure.
 \*5 Do not leave the hydro unit at 5°C or below.
 ① Max operation
 Heating: outside air temperature 7°C, water supply temperature 47°C, outlet water temperature 55°C,
 Cooling: outside air temperature 7°C, water supply temperature 12°C, outlet water temperature 7°C.

Unit name	Hydro unit	Hydro unit		HWT-1102S21SM3W-E, HWT-1102S21SM6W-E			
				HWT-1102S21ST6W-E, HWT-1102S21ST9W-E			
			HWT-1102S21MM3W-E, HWT-1102S21MM6W-E				
			HWT-1102S21MT6W-E, HWT-1102S21MT9W-E			N-E	
	Outdoor unit		HWT-801	1H(R)W-E	HWT-1101	IH(R)W-E	
Heating capacity *1 (kW)			8	.0	11	.0	
Cooling capacity *2 (kW)			6	.0	8.	0	
Variable range of compressor freque	ency		10 - 1	90 Hz	10 - 1	00 Hz	
Power source				1 phase 50 H	Iz 220-240 V		
Operation mode			Heating	Cooling	Heating	Cooling	
Electric characteristic *1 *2	Total	Current (A)	7.05	8.51	10.60	12.82	
		Power (kW)	1.54	1.88	2.39	2.86	
		Power factor (%)	95	96	98	97	
Operating noise sound power level	D Hvdro unit (dB (A))		40	40	40	40	
	Outdoor unit (dB (A))		65	63	65	64	
Coefficient of performance *1 *2			5.19	3.20	4.60	2.80	
Hydro unit	Outer dimension	Height (mm)	0.10	17		2.00	
		Width (mm)		59			
		Depth (mm)		67			
	Not weight (kg)	Deptil (IIIII)		07 1,ST*:116 / HWT-*MN		MT0*-402	
	Net weight (kg)		HW1- 3W			1119.123	
	Color Remete controller	Height (mm)		Wh			
	Remote controller Outer dimension *3	Height (mm)		12			
		Width (mm)		12			
		Depth (mm)		1			
	Circulation pump	Motor output (W)		60 (N			
		Flow rate (L/min)	23.0	16.7	32.1	22.7	
		Туре		Non-self-suction			
	Heat exchanger		Plate-type heat exchange				
	Tank	Water volume (L)	210				
		Maximum water temperature (°C)	65				
		Maximum water pressure (bar)	10				
Outdoor unit	Outer dimension	Height (mm)	1050				
		Width (mm)	1010				
		Depth (mm)		37	0		
	Net weight (kg)			7	5		
	Color			Silky	shade		
	Compressor	Motor output (W)		20			
		Туре	Twin rotary type with DC-inverter variable speed control			control	
		Model		NX220A			
	Fan motor	Standard air capacity (m³/min)	52.4	52.4	58.4	52.4	
		Motor output (W)	02.4	6		02.4	
Refrigerant piping	Connection method	motor output (11)	Elare con	nection (Conformity)		vdro side)	
	Hydro unit	Liquid (mm)		Ø		yaro olao)	
		Gas (mm)		Ø1			
	Outdoor unit	Liquid (mm)		Ø			
		Gas (mm)	Ø15.9				
	Maximum length (m)		30				
	Maximum chargeless length (m)		8				
	-		1		±30		
	Maximum height differen						
	Maximum height differen Minimum length (m)			5	j		
Refrigerant	Maximum height differen Minimum length (m) Refrigerant name			E R	5 32		
-	Maximum height differen Minimum length (m) Refrigerant name Charge amount (kg)			5 R3 1.2	5 32 25		
-	Maximum height differen Minimum length (m) Refrigerant name Charge amount (kg) Pipe diameter			5 R3 1.2 R3	5 32 25 /4"		
-	Maximum height differen Minimum length (m) Refrigerant name Charge amount (kg) Pipe diameter Maximum length (m)	ce (m)		5 R3 1.2 R3 Ione (Need the flow r	5 32 25 /4" ate 14 L/min or more	ə)	
-	Maximum height differen Minimum length (m) Refrigerant name Charge amount (kg) Pipe diameter Maximum length (m) Maximum height differen	ce (m) ce (m)	N	t R3 1.1 R3 Ione (Need the flow r ±	5 32 25 /4" 24 L/min or more 7	9)	
Water piping	Maximum height differen Minimum length (m) Refrigerant name Charge amount (kg) Pipe diameter Maximum length (m) Maximum height differen Maximum working water	ce (m) ce (m) pressure (kPa) *4	N	5 R( 1.: R3 lone (Need the flow r ± 25	5 32 25 /4" ate 14 L/min or more 7 50	9)	
Water piping	Maximum height differen Minimum length (m) Refrigerant name Charge amount (kg) Pipe diameter Maximum length (m) Maximum height differen	ce (m) ce (m) pressure (kPa) *4	N	t R3 1.1 R3 Ione (Need the flow r ±	5 32 25 /4" ate 14 L/min or more 7 50	ə)	
Water piping	Maximum height differen Minimum length (m) Refrigerant name Charge amount (kg) Pipe diameter Maximum length (m) Maximum height differen Maximum working water	ce (m) ce (m) pressure (kPa) *4 ng / Heating / Hot water)	N	5 R( 1.; R3 lone (Need the flow r ± 25	5 32 25 /4" ate 14 L/min or more 7 50 32 / 5-32	>)	
Water piping Operating temperature range	Maximum height differen         Minimum length (m)         Refrigerant name         Charge amount (kg)         Pipe diameter         Maximum length (m)         Maximum length differen         Maximum working water         Hydro unit (°C) *5 (Coolir	ce (m) ce (m) pressure (kPa) *4 ng / Heating / Hot water)	N	5-32 / 5-32	5 32 25 /4" ate 14 L/min or more 7 50 32 / 5-32 25 / -25-43	ə)	
Water piping Operating temperature range	Maximum height differen           Minimum length (m)           Refrigerant name           Charge amount (kg)           Pipe diameter           Maximum length (m)           Maximum length (m)           Maximum length (m)           Maximum vorking water           Hydro unit (°C) *5 (Coolir           Outdoor unit (°C) (Coolin	ce (m) ce (m) pressure (kPa) *4 ng / Heating / Hot water)	N	5 R R R R R R R lone (Need the flow r ± 25 5-32 / 5-3 10-43 / -25-	5 32 25 /4" ate 14 L/min or more 7 50 32 / 5-32 25 / -25-43 85	9)	
Refrigerant Water piping Operating temperature range Operating humidity range Wiring connection	Maximum height differen         Minimum length (m)         Refrigerant name         Charge amount (kg)         Pipe diameter         Maximum length (m)         Maximum length (m)         Maximum length (m)         Maximum vorking water         Hydro unit (°C) *5 (Coolir         Outdoor unit (°C) (Coolin         Hydro unit (%)	ce (m) ce (m) pressure (kPa) *4 ng / Heating / Hot water)		5 8 1.: 1.: 8 8 10-10 (Need the flow r ± 25 5-32 / 5-3 10-43 / -25- 10-43 / -25- 15-	5 32 25 74" ate 14 L/min or more 7 50 32 / 5-32 25 / -25-43 85 100		

Connecting line
 Connecting line
 A writes. Including early write
 A writes. Including e

Unit name	Hydro unit		HWT-1402S21SM3W-E, H	WT_1/02S21SM6W_F	
Unit hame			HWT-1402S21ST6W-E, HWT-1402S21ST9W-E		
			HWT-1402S21MM3W-E, HWT-1402S21MM6W-E		
			HWT-1402S21MT6W-E, H		
	Outdoor unit		HWT-1401H(R)W-E		
Heating capacity *1 (kW)			14.0		
Cooling capacity *2 (kW)			10.0		
Variable range of compressor frequen	су		10 - 82	Hz	
Power source			1 phase 50 Hz	220-240 V	
Operation mode			Heating	Cooling	
Electric characteristic *1 *2	Total	Current (A)	14.2	18.7	
		Power (kW)	3.04	4.08	
		Power factor (%)	93.0	95.0	
Operating noise sound power level ①	Hydro unit (dB (A))	·	40	40	
	Outdoor unit (dB (A))		65	63	
Coefficient of performance *1 *2	•		4.60	2.45	
Hydro unit	Outer dimension	Height (mm)	1700	)	
		Width (mm)	595		
		Depth (mm)	670		
	Net weight (kg)		HWT-*SM,ST*:117 / HWT-*MM,	MT6*:123 / HWT-*MT9*:124	
	Color		White	9	
	Remote controller	Height (mm)	120		
	Outer dimension *3	Width (mm)	120		
		Depth (mm)	16		
	Circulation pump	Motor output (W)	MAX75(S21S),MAX7	5,MAX60(S21M)	
		Flow rate (L/min)	40.5	28.6	
		Туре	Non-self-suction ce	entrifugal pump	
	Heat exchanger		Plate-type heat exchange		
	Tank Water volume (L)		210		
		Maximum water temperature (°C)	65		
	Maximum water pressure (bar)		10		
Outdoor unit	Outer dimension         Height (mm)		1050	)	
	Width (mm) Depth (mm)		1010		
			370		
	Net weight (kg)		88		
	Color		Silky sh	ade	
	Compressor	Motor output (W)	3750		
		Туре	Twin rotary type with DC-inve		
		Model	DX380A21	-	
	Fan motor	Standard air capacity (m³/min)	78.7	78.7	
		Motor output (W)	100		
Refrigerant piping	Connection method		Flare connection (Conformity wi		
	Hydro unit	Liquid (mm)	Ø6.4		
		Gas (mm)	Ø15.		
	Outdoor unit	Liquid (mm)			
			Ø6.4		
	Maximum langth (m)	Gas (mm)	Ø15.9		
	Maximum length (m)	the (me)	25		
	Maximum chargeless leng		8		
	Maximum height difference	= (11)	±25		
Pofrigoront	Minimum length (m)		5		
Refrigerant	Refrigerant name		R32		
	Charge amount (kg)		1.40		
Water piping	Pipe diameter		R3/4		
	Maximum length (m)		None (Need the flow rate 18 L/min or more)		
	Maximum height difference		±7		
	Maximum working water p		250		
Operating temperature range	Hydro unit (°C) *5 (Cooling		5-32 / 5-32		
	Outdoor unit (°C) (Cooling / Heating / Hot water)		10-43 / -25-2		
			5		
Operating humidity range	Hydro unit (%)				
	Outdoor unit (%)		15-10	0	
Operating humidity range Wiring connection				0 wire (Outdoor unit)	

Connecting line
 4 wires: including earth wire
 \*1 Heating performance measurement conditions: outside air temperature 7°C, water supply temperature 30°C, outlet water temperature 35°C, refrigerant piping length 7.5 m (no height difference).
 \*2 Cooling performance measurement conditions: outside air temperature 35°C, water supply temperature 12°C, outlet water temperature 7°C, refrigerant piping length 7.5 m (no height difference).
 \*3 • The remote controller should be shipped with the hydro unit.
 • Use two 1.5-meter wires to connect the hydro unit with the remote controller.
 \*4 Check the water piping for leakage under the maximum operating pressure.
 \*5 Do not leave the hydro unit at 5°C or below.
 (Max operation
 Heating: outside air temperature 7°C, water supply temperature 47°C, outlet water temperature 55°C. cooling: outside air temperature 35°C, water supply temperature 7°C.

Unit name	Hydro unit		нм	T-1102S21SM3W-F	HWT-1102S21SM6	W-E	
Onit name			HWT-1102S21SM3W-E, HWT-1102S21SM6W-E HWT-1102S21ST6W-E, HWT-1102S21ST9W-E				
			HWT-1102S21S16W-E, HWT-1102S21S19W-E HWT-1102S21MM3W-E, HWT-1102S21MM6W-E				
			HWT-1102S21MIM3W-L, HWT-1102S21MIM0W-L HWT-1102S21MT6W-E, HWT-1102S21MT9W-E				
	Outdoor unit			H8(R)W-E	HWT-1101		
Heating capacity *1 (kW)		8	8,0	11	,0		
Cooling capacity *2 (kW)			6	5,0	8	,0	
Variable range of compressor frequen	cy			53 Hz	10 - 6	64 Hz	
Power source	,		-		Hz 380-415V		
Operation mode			Heating	Cooling	Heating	Cooling	
Electric characteristic *1 *2	Total	Current (A)	2.50	3.10	3.63	4.37	
		Power (kW)	1.55	1.94	2.30	2.88	
		Power factor (%)	93	93	94	98	
Operating noise sound power level ①	Hydro unit (dB (A))		40	44	40	44	
	Outdoor unit (dB (A))		71	66	70	67	
Coefficient of performance *1 *2			5.15	3.04	4.78	2.77	
•			5.15			2.11	
Hydro unit	Outer dimension	Height (mm)			700		
		Width (mm)			95		
		Depth (mm)			70		
	Net weight (kg)		HWI-*SN	/I,ST*:116 / HWT-*MI		MT9*:123	
	Color				nite		
	Remote controller Outer dimension *3	Height (mm)			20		
		Width (mm)			20		
		Depth (mm)		1	6		
	Circulation pump	Motor output (W)		60 (I	MAX)		
		Flow rate (L/min)	23.0	16.7	32.1	22.7	
		Туре	Non-self-suction centrifugal pump				
	Heat exchanger			Plate-type heat exchange			
	Tank	Water volume (L)	210				
		Maximum water temperature (°C)	65				
		Maximum water pressure (bar)	10				
Outdoor unit	Outer dimension Height (mm)			10	50		
	Width (mm)				10		
	Depth (mm)			3	70		
	Net weight (kg)				2		
	Color			Silky	shade		
	Compressor	Motor output (W)			······································		
	•	Туре	Twin rotary type with DC-inverter variable speed control				
		Model			2TJ-20M	00111101	
	Fan motor	Standard air capacity (m³/min)	58.4	58.4	78.7	78.7	
		Motor output (W)	50.4			10.1	
Refrigerant piping	Connection method	Motor Output (W)	Elare con	100 Flare connection (Conformity with ISO 14903 in Hydro side)			
	Hydro unit	Liquid (mm)			6.4	yuro side)	
		,			5.9		
		Gas (mm)					
	Outdoor unit	Liquid (mm)			6.4		
		Gas (mm)	Ø15.9				
	Maximum length (m)		25				
	Maximum chargeless len		8				
	Maximum height differen	ce (m)			25		
	Minimum length (m)		5				
Refrigerant	Refrigerant name		R32				
	Charge amount (kg)		1.30				
Nater piping	Pipe diameter		R3/4"				
	Maximum length (m)		None (Need the flow rate 14 L/min or more)				
	Maximum height differen	( )			:7		
	Maximum working water	,			50		
Operating temperature range	Hydro unit (°C) *5 (Coolir	ng / Heating / Hot water)		5-32 / 5-	32 / 5-32		
	Outdoor unit (°C) (Coolin	g / Heating / Hot water)		10-43 / -25	-25 / -25-43		
Operating humidity range	Hydro unit (%)			15	-85		
	Outdoor unit (%)			15-	100		
Wiring connection	Power wiring		5	5 wires: including ear	th wire (Outdoor uni	t)	
	Connecting line			-	ding earth wire		
	-		1				

Connecting line
 Connecting line
 4 wires: including earth wire
 4 wires: outside air temperature to a wire
 4 wires: including earth wire
 4 wires: including earth wire
 4 wires: including earth wire
 4 wires: outside air temperature 7°C, water supply temperature 47°C, outlet water temperature 55°C.
 Cooling: outside air temperature 7°C, water supply temperature 12°C, outlet water temperature 7°C.


Unit name	Hydro unit		HWT-1402S21SM3W-E.	HWT-1402S21SM6W-E	
			HWT-1402S21ST6W-E. HWT-1402S21ST9W-E HWT-1402S21MM3W-E. HWT-1402S21MM6W-E HWT-1402S21MT6W-E. HWT-1402S21MT9W-E		
	Outdoor unit		HWT-1401H8(R)W-E		
Heating capacity *1 (kW)			14.0		
Cooling capacity *2 (kW)			10.		
Variable range of compressor frequer	ю		10 - 82		
Power source			3 phase 50 H	z 380-415V	
Operation mode			Heating	Cooling	
Electric characteristic *1 *2	Total	Current (A)	4.60	5.60	
		Power (kW)	3.04	4.08	
		Power factor (%)	93.0	95.0	
Operating noise sound power level ①	Hydro unit (dB (A))	÷	45	45	
	Outdoor unit (dB (A))		72	70	
Coefficient of performance *1 *2			4.60	2.45	
Hydro unit	Outer dimension	Height (mm)	170	0	
,		Width (mm)	59		
		Depth (mm)	67		
	Net weight (kg)		HWT-*SM,ST*:117 / HWT-*MM		
	Color Romoto controllor	Hoight (mm)	Whi		
	Remote controller Outer dimension *3	Height (mm)	12		
		Width (mm)	12		
		Depth (mm)	16		
	Circulation pump	Motor output (W)	140 (N	IAX)	
		Flow rate (L/min)	40.5	28.6	
	Туре		Non-self-suction centrifugal pump		
	Heat exchanger		Plate-type heat exchange		
	Tank	Water volume (L)	210		
		Maximum water temperature (°C)	65		
	Maximum water pressure (bar)		10		
Outdoor unit	Outer dimension Height (mm)		105	0	
	Width (mm)		101	0	
		Depth (mm)	37	)	
	Net weight (kg)		92		
	Color		Silky s		
	Compressor	Motor output (W)	375		
		Туре	Twin rotary type with DC-inverter variable speed control		
		Model	RX380A2TJ-20M		
	Fan motor	Standard air capacity (m³/min)	78.7		
	Fairmotor	Motor output (W)	10		
Defriverent nining	Connection method				
Refrigerant piping		Linuid (com)	Flare connection (Conformity w		
	Hydro unit	Liquid (mm)	Ø6.4		
		Gas (mm)	Ø15		
	Outdoor unit	Liquid (mm)	Ø6.4		
		Gas (mm)	Ø15.9		
	Maximum length (m)		25		
	Maximum chargeless len	gth (m)	8		
	Maximum height differend	ce (m)	±25		
	Minimum length (m)		5		
Refrigerant	Refrigerant name		R32		
	Charge amount (kg)		1.3	0	
	Pipe diameter		R3/-	1"	
Water piping	•		None (Need the flow ra	te 14 L/min or more)	
Water piping	Maximum length (m)				
Water piping	Maximum length (m) Maximum height differend	ce (m)	±7		
Water piping	Maximum height differend	. ,			
	Maximum height differend Maximum working water	pressure (kPa) *4	25	)	
	Maximum height difference Maximum working water Hydro unit (°C) *5 (Coolir	pressure (kPa) *4 g / Heating / Hot water)	250 5-32 / 5-3	2 / 5-32	
Water piping Operating temperature range Operating humidity range	Maximum height differend Maximum working water Hydro unit (°C) *5 (Coolir Outdoor unit (°C) (Coolin	pressure (kPa) *4 g / Heating / Hot water)	250 5-32 / 5-3 10-43 / -25-2	) 2 / 5-32 25 / -25-43	
	Maximum height differend Maximum working water Hydro unit (°C) *5 (Coolin Outdoor unit (°C) (Coolin Hydro unit (%)	pressure (kPa) *4 g / Heating / Hot water)	250 5-32 / 5-3 10-43 / -25-2 15-8	) 2 / 5-32 25 / -25-43 25	
Operating temperature range Operating humidity range	Maximum height differend Maximum working water Hydro unit (°C) *5 (Coolin Outdoor unit (°C) (Coolin Hydro unit (%) Outdoor unit (%)	pressure (kPa) *4 g / Heating / Hot water)	250 5-32 / 5-3 10-43 / -25-2 15-6 15-1	) 2 / 5-32 25 / -25-43 35 00	
Operating temperature range	Maximum height differend Maximum working water Hydro unit (°C) *5 (Coolin Outdoor unit (°C) (Coolin Hydro unit (%)	pressure (kPa) *4 g / Heating / Hot water)	250 5-32 / 5-3 10-43 / -25-2 15-8	) 2 / 5-32 25 / -25-43 35 00 n wire (Outdoor unit)	

Connecting line
 Connecting line
 4 wires: including earth wire
 4 wires: outside air temperature to a the hydro unit.
 4 wires to connect the hydro unit with the remote controller.
 4 Check the water piping for leakage under the maximum operating pressure.
 4 Check the water piping for leakage under the maximum operating pressure.
 5 Do not leave the hydro unit at 5°C or below.
 ① Max operation
 Heating: outside air temperature 7°C, water supply temperature 47°C, outlet water temperature 55°C.
 Cooling: outside air temperature 35°C, water supply temperature 12°C, outlet water temperature 7°C.

# **2** Construction views (External views)


# 2-1. Hydro unit


HWT-602S21SM3W-E(TR), HWT-602S21SM6W-E(TR), HWT-602S21ST6W-E(TR), HWT-602S21MM3W-E(TR) HWT-602S21MM6W-E(TR), HWT-602S21MT6W-E(TR), HWT-1102S21SM3W-E(TR), HWT-1102S21SM6W-E(TR) HWT-1102S21ST6W-E(TR), HWT-1102S21ST9W-E(TR), HWT-1102S21MM3W-E(TR), HWT-1102S21MM6W-E(TR) HWT-1102S21MT6W-E(TR), HWT-1102S21MT9W-E(TR), HWT-1402S21SM3W-E(TR), HWT-1402S21SM6W-E(TR) HWT-1402S21ST6W-E(TR), HWT-1402S21ST9W-E(TR), HWT-1402S21MM3W-E(TR), HWT-1402S21MM6W-E(TR) HWT-1402S21MT6W-E(TR), HWT-1402S21MT9W-E(TR), HWT-1402S21MM3W-E(TR), HWT-1402S21MM6W-E(TR) HWT-1402S21MT6W-E(TR), HWT-1402S21MT9W-E(TR)

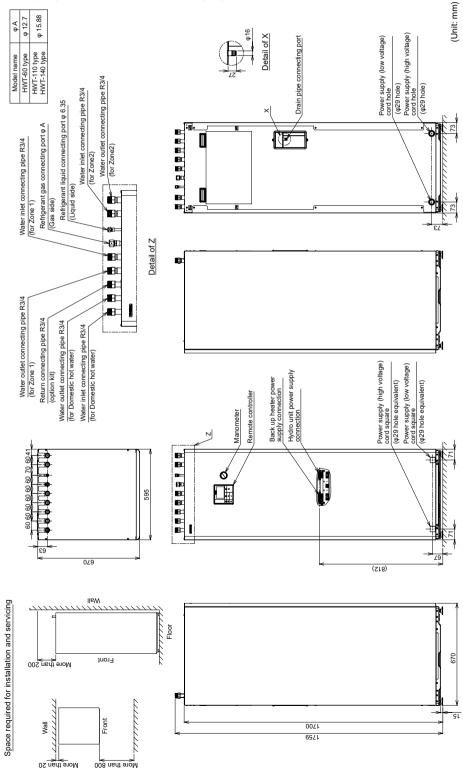

# 2-2. Outdoor unit

# HWT-401HW-E(TR), HWT-601HW-E(TR)

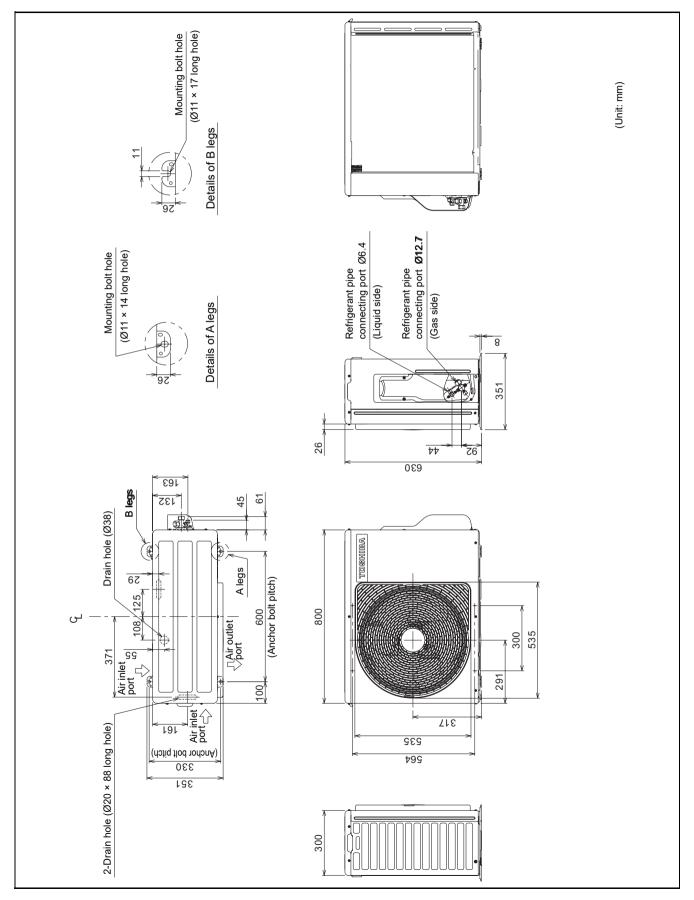


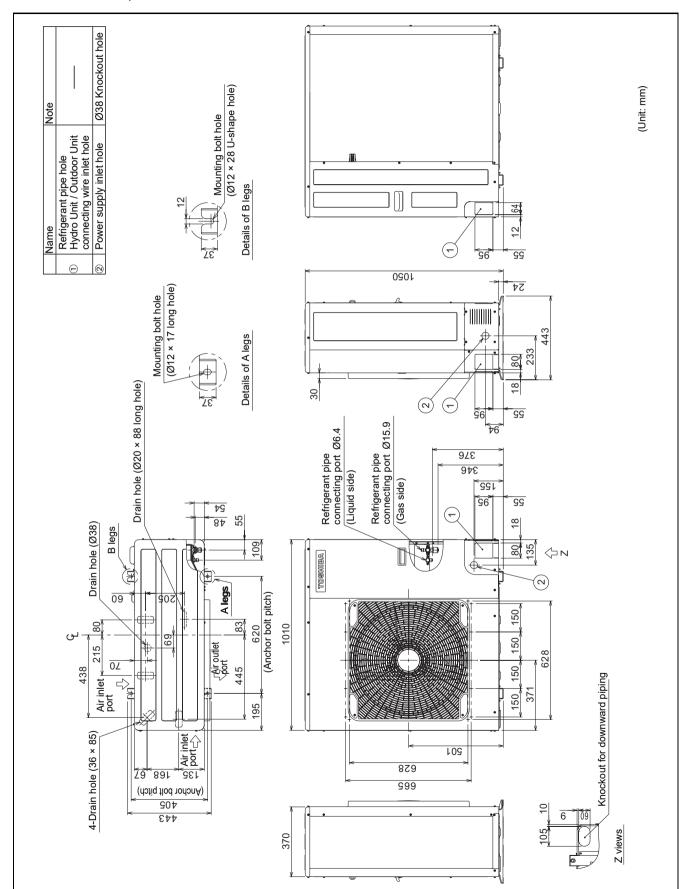


#### HWT-801HW-E(TR), HWT-1101HW-E(TR), HWT-1401HW-E(TR), HWT-801HRW-E, HWT-1101HRW-E HWT-1401HRW-E, HWT-801H8W-E, HWT-1101H8W-E, HWT-1401H8W-E, HWT-801H8RW-E HWT-1101H8RW-E, HWT-1401H8RW-E

# **3** Refrigeration cycle / Water system diagram

# 3-1. Water system diagram

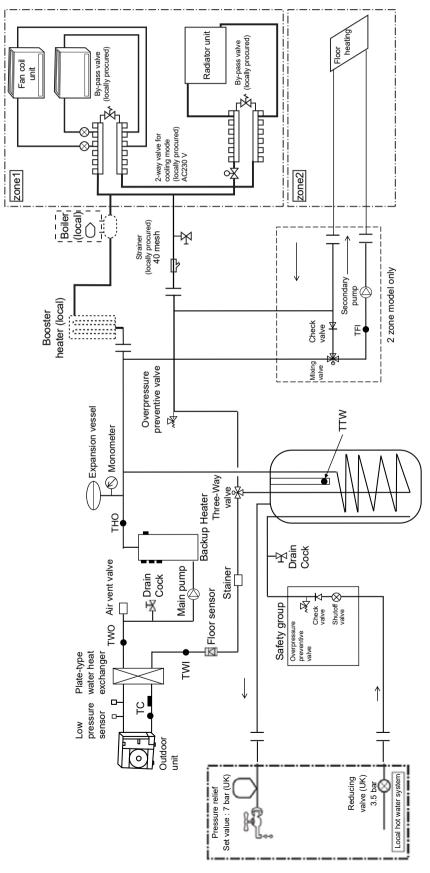

## Installation example of water circuit

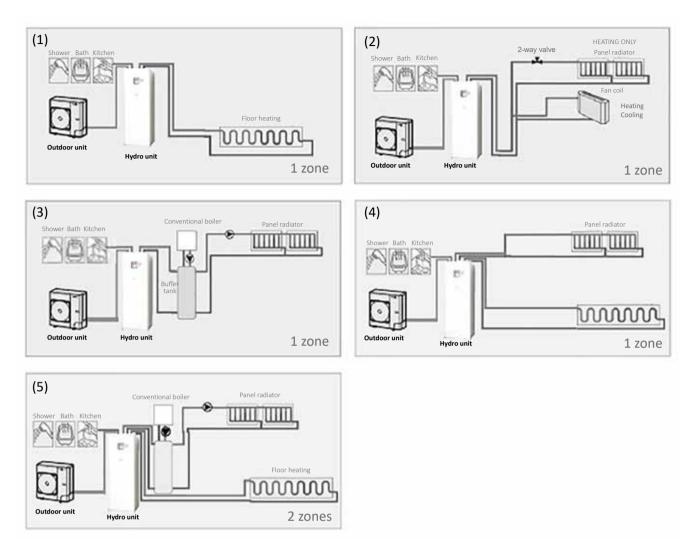


The water flowing for a system without buffer tank ((1), (2), (4)) requires 18L/min(1402S21), 14L/min (1102S21), 11L/min (602S21), or more. This water flowing requires 5 or more branches of Floor heating or Radiator etc. Less than 5 branches may cause a flow deficiency. In this case, please provide a buffer tank and secondary pumps as shown in (3), (5).

Please check how to install the boiler. (See page \*\*)


# 3-2. Refrigeration cycle system diagram

### HWT-602S21\*\*\*W-E

### HWT-401HW-E, HWT-601HW-E

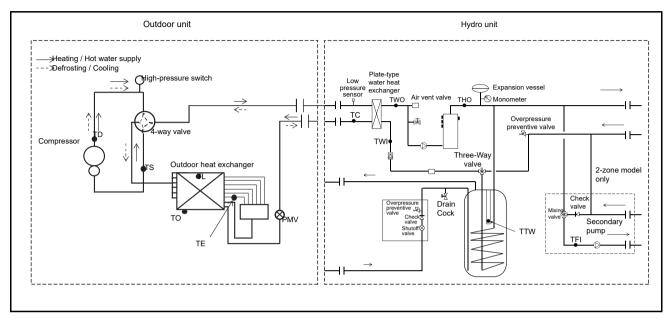


## HWT-1102S21\*\*\*W-E, HWT-1402S21\*\*\*W-E HWT-801H(R)W-E, HWT-1101H(R)W-E, HWT-1401H(R)W-E, HWT-801H8(R)W-E, HWT-1101H8(R)W-E,

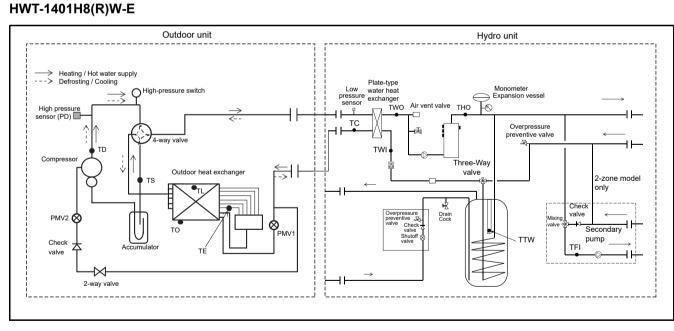


# **4** Wiring diagram

# 4-1. Hydro unit

### HWT-602S21SM3W-E(TR), HWT-602S21SM6W-E(TR), HWT-602S21ST6W-E(TR) HWT-1102S21SM3W-E(TR), HWT-1102S21SM6W-E(TR), HWT-1102S21ST6W-E(TR) HWT-1102S21ST9W-E(TR), HWT-1102S21MM3W-E(TR), HWT-1102S21MM6W-E(TR) HWT-1102S21MT6W-E(TR), HWT-1102S21MT9W-E(TR)

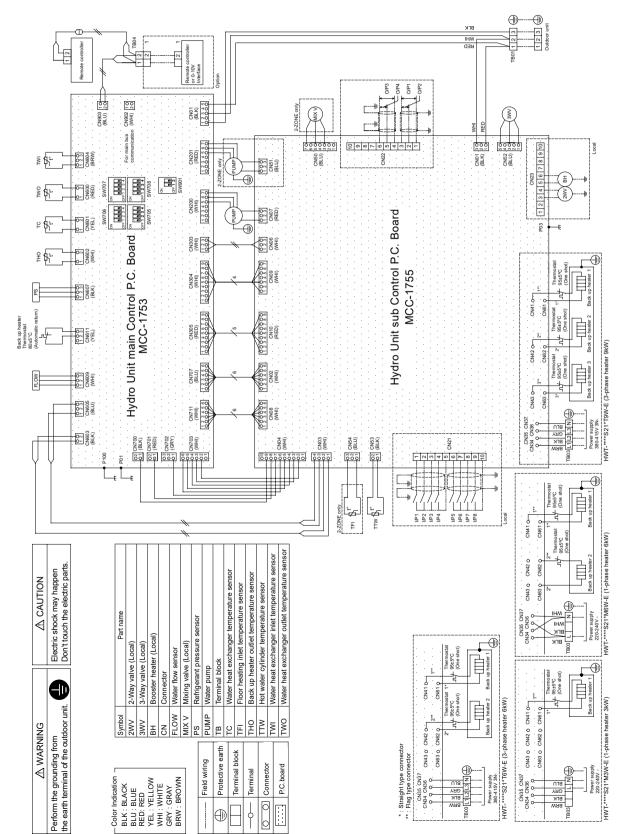


# HWT-1402S21SM3W-E(TR), HWT-1402S21SM6W-E(TR), HWT-1402S21ST6W-E(TR) HWT-1402S21ST9W-E(TR), HWT-1402S21MM3W-E(TR), HWT-1402S21MM6W-E(TR) HWT-1402S21MT6W-E(TR), HWT-1402S21MT9W-E(TR)

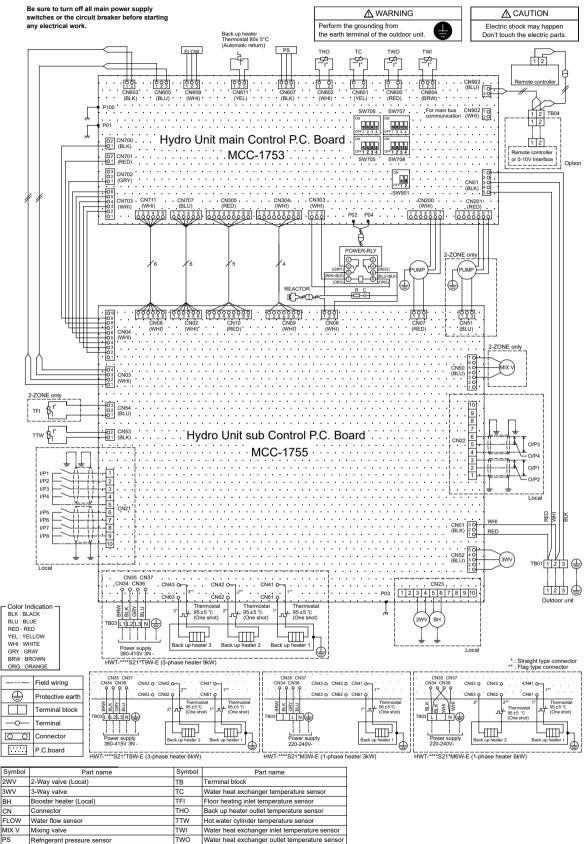


PS Refrigerant pressure sensor PUMP Water pump

### HWT-602S21MM3W-E(TR), HWT-602S21MM6W-E(TR), HWT-602S21MT6W-E(TR)

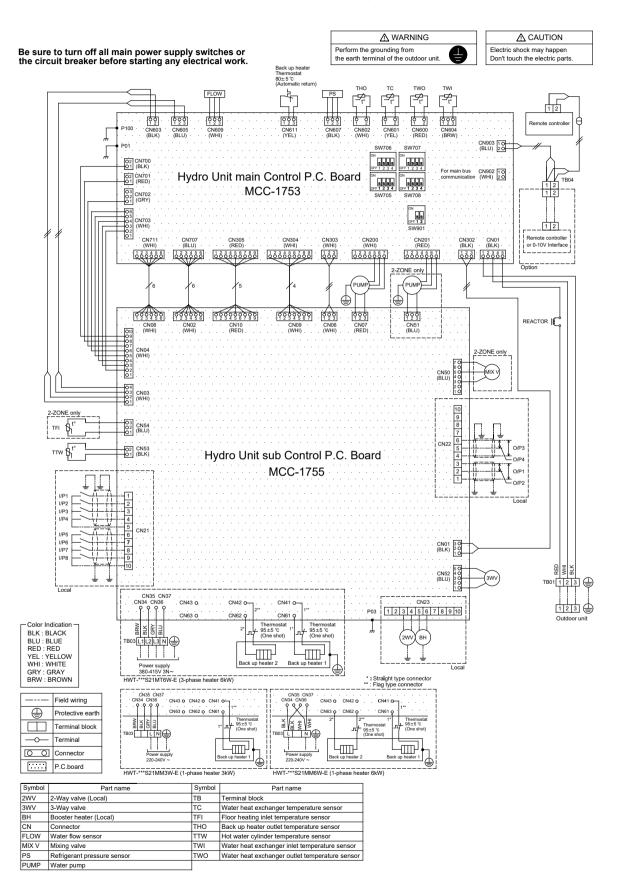



# 4-2. Outdoor unit

# HWT-401HW-E(TR), HWT-601HW-E(TR)

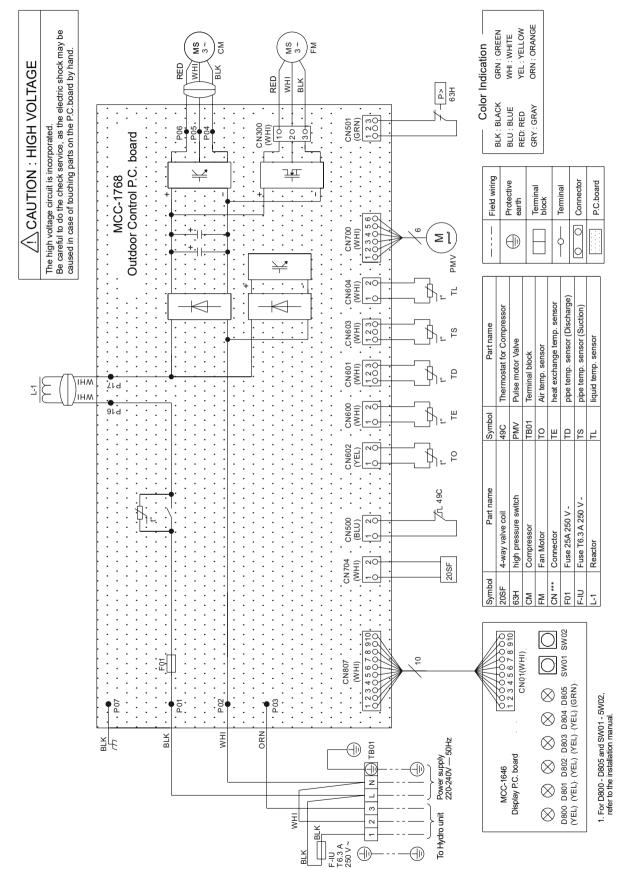


# HWT-801HW-E(TR), HWT-1101HW-E(TR) HWT-801HRW-E, HWT-1101HRW-E

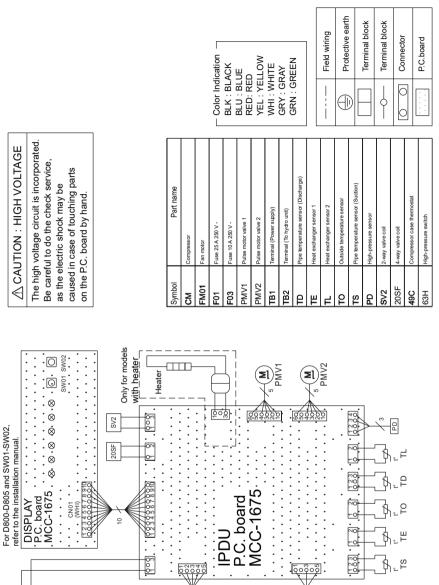


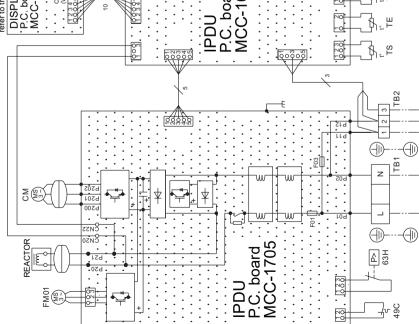


### HWT-1401HW-E(TR), HWT-1401HRW-E

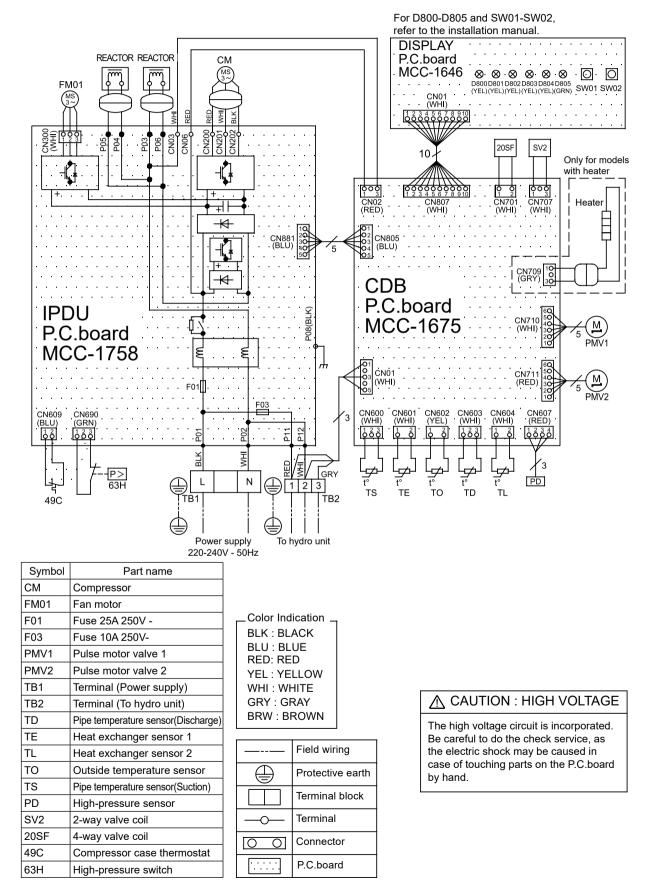

# HWT-801H8W-E, HWT-1101H8W-E, HWT-1401H8W-E HWT-801H8RW-E, HWT-1101H8RW-E, HWT-1401H8RW-E

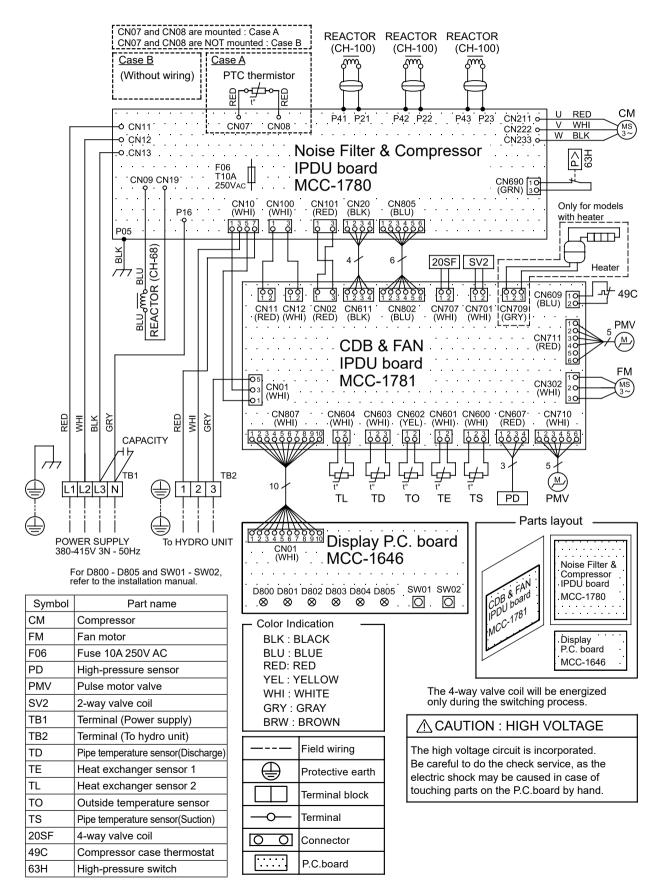

## 4-3. Hot water cylinder unit

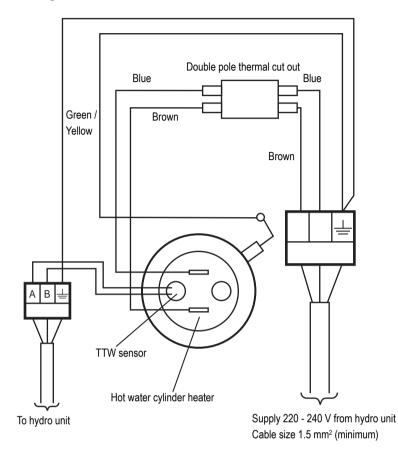

## **5** Key electric component rating 5-1. Hydro unit

### HWT-602S21SM3W-E, HWT-602S21SM6W-E, HWT-602S21ST6W-E

No	Component norma	Model name			Tuno nomo	Rating	
No.	Component name	M3W-E	M6W-E	T6W-E	Type name	Rating	
1	Circulation pump for zone1	0	0	0	UPM 4LK 15-75 130	AC230 V 0.66 A (MAX	
2	Backup heater 3 kW	0			SMP10E8304 3KW	AC230 V 3 kW	
3	Backup heater 6 kW		0		SMP10E8304 6KW	AC230 V 6 kW	
4	Backup heater 6 kW			0	SMP10E8304 6KW	AC400 V (3N) 6 kW	
5	Backup heater 9 kW	-	-	-	-	_	
6	Water heat exchange tempera- ture sensor (TC sensor)	0	0	0	-	10 kΩ (25°C)	
7	Water inlet temperature sensor (TWI sensor)	0	0	0	_	10 kΩ (25°C)	
8	Water outlet temperature sen- sor (TWO sensor)	0	0	0	_	10 kΩ (25°C)	
9	Heater outlet water temperature sensor (THO sensor)	0	0	0	_	10 kΩ (25°C)	
10	Hot water cylinder temperature sensor (TTW sensor)	0	0	0	_	10 kΩ (25°C)	
11	Floor inlet temperature sensor (TFI sensor)	-	-	-	_	-	
12	Low pressure sensor	0	0	0	-	Operating pressure 0.20 MPa	
13	Thermal protector (auto)	0	0	0	_	Operating temperature 80±3°C DC42 V 0.2 A	
14	Thermal protector (single operation)	0	0	0	_	Operating temperature 95±5°C AC250 V 16 A	
15	Flow sensor	0	0	0	VVX20	DC12 V 15 mA	
16	Remote controller (Main)	0	0	0	HWS-AMSU51-E		
17	Remote controller (Sub)	OP	OP	OP	HWS-AMSU51-E		
18	0 - 10 V Interface	OP	OP	OP	HWS-IFAIP01U-E		
19	Water 3-way valve	0	0	0	SSAE01AH01	AC230 V 6.5W	
19	Water 5-way valve	0		0	SSALUTATION	3Wire SPDT type	
20	Water 2-way valve terminal	0	0	0	_	AC230 V 0.1 A 2Wire type mountable	
21	Mixing valve terminal	-	-	-	-	-	
22	Circulation pump terminal	_	-	-	-	-	
23	Booster heater terminal	0	0	0	-	AC230 V 1.0 A	
24	Fuse (Backup heater)	0	0	0	-	AC250 V 25 A	
25	PC board (Main)	0	0	0	MCC-1753		
26	PC board (Sub)	0	0	0	MCC-1755		

HWT-602S21MM3W-E, HWT-602S2	1MM6W-E, HWT-602S21MT6W-E
-----------------------------	---------------------------

No	Component name	Model name			Turne neme	Dating
No.		M3W-E	M6W-E	T6W-E	<ul> <li>Type name</li> </ul>	Rating
1	Circulation pump for zone1	0	0	0	UPM 4LK 15-75 130	AC230 V 0.66 A (MAX)
2	Backup heater 3 kW	0			SMP10E8304 3KW	AC230 V 3 kW
3	Backup heater 6 kW		0		SMP10E8304 6KW	AC230 V 6 kW
4	Backup heater 6 kW			0	SMP10E8304 6KW	AC400 V (3N) 6 kW
5	Backup heater 9 kW	-	_	-	-	-
6	Water heat exchange temperature sensor (TC sensor)	0	0	0	_	10 kΩ (25°C)
7	Water inlet temperature sensor (TWI sensor)	0	0	0	_	10 kΩ (25°C)
8	Water outlet temperature sensor (TWO sensor)	0	0	0	_	10 kΩ (25°C)
9	Heater outlet water temperature sensor (THO sensor)	0	0	0	-	10 kΩ (25°C)
10	Hot water cylinder temperature sensor (TTW sensor)	0	0	0	_	10 kΩ (25°C)
11	Floor inlet temperature sensor (TFI sensor)	0	0	0	_	10 kΩ (25°C)
12	Low pressure sensor	0	0	0	-	Operating pressure 0.20 MPa
13	Thermal protector (auto)	0	0	0	-	Operating temperature 80±3°C DC42 V 0.2 A
14	Thermal protector (single operation)	0	0	0	_	Operating temperature 95±5°C AC250 V 16 A
15	Flow sensor	0	0	0	VVX20	DC12 V 15 mA
16	Remote controller (Main)	0	0	0	HWS-AMSU51-E	
17	Remote controller (Sub)	OP	OP	OP	HWS-AMSU51-E	
18	0 - 10 V Interface	OP	OP	OP	HWS-IFAIP01U-E	
19	Water 3-way valve	0	0	0	SSAE01AH01	AC230 V 6.5W 3Wire SPDT type
20	Water 2-way valve terminal	0	0	0	_	AC230 V 0.1 A 2Wire type mountable
21	Mixing valve	0	0	0	ARA651	AC230 V 5VA SPDT type
22	Circulation pump terminal	0	0	0	UPM 4LK 15-75 130	AC230 V 0.66 A (MAX)
23	Booster heater terminal	0	0	0	-	AC230 V 1.0 A
24	Fuse (Backup heater)	0	0	0	-	AC250 V 25 A
24	PC board (Main)	0	0	0	MCC-1753	
26	PC board (Sub)	0	0	0	MCC-1755	
27	Reactor(CH-68)	0	0	0	CH-68-3FC	18 mH, 5A

### HWT-1102S21SM3W-E, HWT-1102S21SM6W-E, HWT-1102S21ST6W-E, HWT-1102S21ST9W-E

		Model n	ame			Type name	Rating
No.	Component name	M3W-E	M6W-E	T6W-E	T9W-E		
1	Circulation pump for zone1	0	0	0	0	UPM 4LK 15-75 130	AC230 V 0.66 A (MAX)
2	Backup heater 3 kW	0				SMP10E8304 3KW	AC230 V 3 kW
3	Backup heater 6 kW		0			SMP10E8304 6KW	AC230 V 6 kW
4	Backup heater 6 kW			0		SMP10E8304 6KW	AC400 V (3N) 6 kW
5	Backup heater 9 kW				0	SMP10E8304 9KW	AC400 V (3N) 9 kW
6	Water heat exchange temperature sensor (TC sensor)	0	0	0	0	-	10 kΩ (25°C)
7	Water inlet temperature sensor (TWI sensor)	0	0	0	0	-	10 kΩ (25°C)
8	Water outlet temperature sensor (TWO sensor)	0	0	0	0	-	10 kΩ (25°C)
9	Heater outlet water temperature sensor (THO sensor)	0	0	0	0	-	10 kΩ (25°C)
10	Hot water cylinder temperature sensor (TTW sensor)	0	0	0	0	-	10 kΩ (25°C)
11	Floor inlet temperature sensor (TFI sensor)	-	-	-	-	-	-
12	Low pressure sensor	0	0	0	0	-	Operating pressure 0.20 MPa
13	Thermal protector (auto)	0	0	0	0	_	Operating temperature 80±3°C DC42 V 0.2 A
14	Thermal protector (single operation)	0	0	0	0	-	Operating temperature 95±5°C AC250 V 16 A
15	Flow sensor	0	0	0	0	VVX20	DC12 V 15 mA
16	Remote controller (Main)	0	0	0	0	HWS-AMSU51-E	
17	Remote controller (Sub)	OP	OP	OP	OP	HWS-AMSU51-E	
18	0 - 10 V Interface	OP	OP	OP	OP	HWS-IFAIP01U-E	
19	Water 3-way valve	0	0	0	0	SSAE01AH01	AC230 V 6.5W 3Wire SPDT type
20	Water 2-way valve terminal	0	0	0	0	-	AC230 V 0.1 A 2Wire type mountable
21	Mixing valve terminal	0	0	0	0	-	AC230 V 0.1 A 2Wire type mountable
22	Circulation pump terminal	0	0	0	0	-	AC230 V 1.0 A
23	Booster heater terminal	0	0	0	0	-	AC230 V 1.0 A
24	Fuse (Backup heater)	0	0	0	0	-	AC250 V 25 A
25	PC board (Main)	0	0	0	0	MCC-1753	
26	PC board (Sub)	0	0	0	0	MCC-1755	

### HWT-1102S21MM3W-E, HWT-1102S21MM6W-E, HWT-1102S21MT6W-E, HWT-1102S21MT9W-E

		Model n	ame			Type name	Rating
No.	Component name	M3W-E	M6W-E	T6W-E	T9W-E		
1	Circulation pump for zone1	0	0	0	0	UPM 4LK 15-75 130	AC230 V 0.66 A (MAX)
2	Backup heater 3 kW	0				SMP10E8304 3KW	AC230 V 3 kW
3	Backup heater 6 kW		0			SMP10E8304 6KW	AC230 V 6 kW
4	Backup heater 6 kW			0		SMP10E8304 6KW	AC400 V (3N) 6 kW
5	Backup heater 9 kW				0	SMP10E8304 9KW	AC400 V (3N) 9 kW
6	Water heat exchange temperature sensor (TC sensor)	0	0	0	0	-	10 kΩ (25°C)
7	Water inlet temperature sensor (TWI sensor)	0	0	0	0	_	10 kΩ (25°C)
8	Water outlet temperature sensor (TWO sensor)	0	0	0	0	-	10 kΩ (25°C)
9	Heater outlet water temperature sensor (THO sensor)	0	0	0	0	-	10 kΩ (25°C)
10	Hot water cylinder temperature sensor (TTW sensor)	0	0	0	0	-	10 kΩ (25°C)
11	Floor inlet temperature sensor (TFI sensor)	0	0	0	0	-	10 kΩ (25°C)
12	Low pressure sensor	0	0	0	0	-	Operating pressure 0.20 MPa
13	Thermal protector (auto)	0	0	0	0	_	Operating temperature 80±3°C DC42 V 0.2 A
14	Thermal protector (single operation)	0	0	0	0	-	Operating temperature 95±5°C AC250 V 16 A
15	Flow sensor	0	0	0	0	VVX20	DC12 V 15 mA
16	Remote controller (Main)	0	0	0	0	HWS-AMSU51-E	
17	Remote controller (Sub)	OP	OP	OP	OP	HWS-AMSU51-E	
18	0 - 10 V Interface	OP	OP	OP	OP	HWS-IFAIP01U-E	
19	Water 3-way valve	0	0	0	0	SSAE01AH01	AC230 V 6.5W 3Wire SPDT type
20	Water 2-way valve terminal	0	0	0	0	-	AC230 V 0.1 A 2Wire type mountable
21	Mixing valve	0	0	0	0	ARA651	AC230 V 5VA SPDT type
22	Circulation pump for zone2	0	0	0	0	UPM 4LK 15-75 130	AC230 V 0.66 A (MAX)
23	Booster heater terminal	0	0	0	0	-	AC230 V 1.0 A
24	Fuse (Backup heater)	0	0	0	0	-	AC250 V 25 A
25	PC board (Main)	0	0	0	0	MCC-1753	
26	PC board (Sub)	0	0	0	0	MCC-1755	

### HWT-1402S21SM3W-E, HWT-1402S21SM6W-E, HWT-1402S21ST6W-E, HWT-1402S21ST9W-E

		Model n	ame		-		
No.	Component name	M3W-E	M6W-E	T6W-E	T9W-E	− Type name	Rating
1	Circulation pump for zone1	0	0	0	0	UPM 4LK 15-75 130	AC230 V 1.1 A (MAX)
2	Backup heater 3 kW	0				SMP10E8304 3KW	AC230 V 3 kW
3	Backup heater 6 kW		0			SMP10E8304 6KW	AC230 V 6 kW
4	Backup heater 6 kW			0		SMP10E8304 6KW	AC400 V (3N) 6 kW
5	Backup heater 9 kW				0	SMP10E8304 9KW	AC400 V (3N) 9 kW
6	Water heat exchange temperature sensor (TC sensor)	0	0	0	0	-	10 kΩ (25°C)
7	Water inlet temperature sensor (TWI sensor)	0	0	0	0	-	10 kΩ (25°C)
8	Water outlet temperature sensor (TWO sensor)	0	0	0	0	-	10 kΩ (25°C)
9	Heater outlet water temperature sensor (THO sensor)	0	0	0	0	-	10 kΩ (25°C)
10	Hot water cylinder temperature sensor (TTW sensor)	0	0	0	0	-	10 kΩ (25°C)
11	Floor inlet temperature sensor (TFI sensor)	-	-	-	-	-	-
12	Low pressure sensor	0	0	0	0	-	Operating pressure 0.20 MPa
13	Thermal protector (auto)	0	0	0	0	-	Operating temperature 80±3°C DC42 V 0.2 A
14	Thermal protector (single operation)	0	0	0	0	-	Operating temperature 95±5°C AC250 V 16 A
15	Flow sensor	0	0	0	0	VVX20	DC12 V 15 mA
16	Remote controller (Main)	0	0	0	0	HWS-AMSU51-E	
17	Remote controller (Sub)	OP	OP	OP	OP	HWS-AMSU51-E	
18	0 - 10 V Interface	OP	OP	OP	OP	HWS-IFAIP01U-E	
19	Water 3-way valve	0	0	0	0	SSAE01AH01	AC230 V 6.5W 3Wire SPDT type
20	Water 2-way valve terminal	0	0	0	0	-	AC230 V 0.1 A 2Wire type mountable
21	Mixing valve	-	-	-	-	-	-
22	Circulation pump for zone2	-	-	-	-	-	-
23	Booster heater terminal	0	0	0	0	-	AC230 V 1.0 A
24	Fuse (Backup heater)	0	0	0	0	-	AC250 V 25 A
25	PC board (Main)	0	0	0	0	MCC-1753	
26	PC board (Sub)	0	0	0	0	MCC-1755	
27	Reactor	0	0	0	0	CH-43-Z	9.6mH 1.0A
28	Relay					LY2F	250AC 10A
29	Sparkkiller	0	0	0	0	_	500VAC 0.1uF 120Ω UL1007

### HWT-1402S21MM3W-E, HWT-1402S21MM6W-E, HWT-1402S21MT6W-E, HWT-1402S21MT9W-E

	Component name	Model na	ame			- Type name	Rating
No.		M3W-E	M6W-E	T6W-E	T9W-E		
1	Circulation pump for zone1	0	0	0	0	UPM 4LK 15-75 130	AC230 V 1.1 A (MAX)
2	Backup heater 3 kW	0				SMP10E8304 3KW	AC230 V 3 kW
3	Backup heater 6 kW		0			SMP10E8304 6KW	AC230 V 6 kW
4	Backup heater 6 kW			0		SMP10E8304 6KW	AC400 V (3N) 6 kW
5	Backup heater 9 kW				0	SMP10E8304 9KW	AC400 V (3N) 9 kW
6	Water heat exchange temperature sensor (TC sensor)	0	0	0	0	-	10 kΩ (25°C)
7	Water inlet temperature sensor (TWI sensor)	0	0	0	0	-	10 kΩ (25°C)
8	Water outlet temperature sensor (TWO sensor)	0	0	0	0	-	10 kΩ (25°C)
9	Heater outlet water temperature sensor (THO sensor)	0	0	0	0	-	10 kΩ (25°C)
10	Hot water cylinder temperature sensor (TTW sensor)	0	0	0	0	-	10 kΩ (25°C)
11	Floor inlet temperature sensor (TFI sensor)	-	-	-	-	-	-
12	Low pressure sensor	0	0	0	0	-	Operating pressure 0.20 MPa
13	Thermal protector (auto)	0	0	0	0	-	Operating temperature 80±3°C DC42 V 0.2 A
14	Thermal protector (single operation)	0	0	0	0	-	Operating temperature 95±5°C AC250 V 16 A
15	Flow sensor	0	0	0	0	VVX20	DC12 V 15 mA
16	Remote controller (Main)	0	0	0	0	HWS-AMSU51-E	
17	Remote controller (Sub)	OP	OP	OP	OP	HWS-AMSU51-E	
18	0 - 10 V Interface	OP	OP	OP	OP	HWS-IFAIP01U-E	
19	Water 3-way valve	0	0	0	0	ARA651	AC230 V 5VA SPDT type
20	Water 2-way valve terminal	0	0	0	0	-	AC230 V 0.1 A 2Wire type mountable
21	Mixing valve	0	0	0	0	ARA651	AC230 V 5VA SPDT type
22	Circulation pump for zone2	0	0	0	0	UPM 4LK 15-75 130	AC230 V 0.66 A (MAX)
23	Booster heater terminal	0	0	0	0	-	AC230 V 1.0 A
24	Fuse (Backup heater)	0	0	0	0	-	AC250 V 25 A
25	PC board (Main)	0	0	0	0	MCC-1753	
26	PC board (Sub)	0	0	0	0	MCC-1755	
27	Reactor	0	0	0	0	CH-43-Z	9.6mH 1.0A
28	Relay					LY2F	250AC 10A
29	Sparkkiller	0	0	0	0	-	500VAC 0.1uF 120Ω UL1007

## 5-2. Outdoor unit

### HWT-401HW-E, HWT-601HW-E

No.	Component name	Type name	Rating
1	Compressor	DX150A1T-21F	
2	Outdoor fan motor	ICF-140-A43-1	Output 43 W
3	Reactor	CH-102	18 mH, 16 A
4	4-way valve coil	DXQ-1233	DC12 V
5	Pulse motor valve (PMV) coil	PQ-M10012-000313	DC12 V
6	Compressor case thermostat	US-622KXTMQO-SS	OFF = 125 ± 4°C, ON = 90 ± 5°C
7	PC board	MCC-1768	
8	High pressure switch	ACB-4UB154W	OFF = 4.15 + 0, -0.15 MPa

### HWT-801H(R)W-E, HWT-1101H(R)W-E

No.	Component name	Type name	Rating
1	Compressor	NX220A1FJ-20N	
2	Outdoor fan motor	ICF-280-A60-1	Output 60 W
3	Reactor	CH-101	10 mH, 20 A
4	4-way valve coil	DXQ-1233	DC12 V
5	Pulse motor valve (PMV) coil	UKV-A040	DC12 V
6	PC board (Compressor)	MCC-1705	
7	PC board (Control)	MCC-1675	
8	High pressure sensor	NSK-BH042J-873	0 - 4.15 MPa
9	High pressure switch	ACB-4UB231W	OFF = 4.60 +0, - 0.3 MPa
10	Compressor case thermostat	US-622	OFF = 125 ± 4°C, ON = 90 ± 5°C
11	2-way valve coil INJ	TEV-SMOAG2260A1	AC220 - 240 V
12	Check valve INJ	BCV-302DY	
13	Pulse motor valve (PMV) coil INJ	FAM-MD12TF-1	
14	Cord heater	Flexelec	150W

### HWT-1401H(R)W-E

No.	Component name	Type name	Rating
1	Compressor	DX380A2TJ-20M	
2	Outdoor fan motor	ICF-280-A100-1	Output 100 W
3	Reactor	CH-100-FC	10 mH, 16 A
4	4-way valve coil	DXQ-1233	DC12 V
5	Pulse motor valve (PMV) coil	UKV-A040	DC12 V
6	PC board (Compressor)	MCC-1758	
7	PC board (Control)	MCC-1675	
8	High pressure sensor	NSK-BH042J-873	0 - 4.15 MPa
9	High pressure switch	ACB-4UB231W	OFF = 4.60 +0, - 0.3 MPa
10	Compressor case thermostat	US-622	OFF = 125 ± 4°C, ON = 90 ± 5°C
11	2-way valve coil INJ	TEV-SMOAG2260A1	AC220 - 240 V
12	Check valve INJ	BCV-302DY	
13	Pulse motor valve (PMV) coil INJ	FAM-MD12TF-1	
14	Cord heater	Flexelec	150W

No.	Component name	Type name	Rating
1	Compressor	RX380A2TJ-20M	
2	Outdoor fan motor	ICF-280-A100-1	Output 100 W
3	Reactor(CH-100)	CH-100-2Z	10 mH, 16 A
4	4-way valve coil	DXQ-1233	DC12 V
5	Pulse motor valve (PMV) coil	UKV-A040	DC12 V
6	PC board (Compressor)	MCC-1780	
7	PC board (Control)	MCC-1781	
8	High pressure sensor	NSK-BH042J-873	0 - 4.15 MPa
9	High pressure switch	ACB-4UB231W	OFF = 4.60 +0, - 0.3 MPa
10	Compressor case thermostat	US-622	OFF = 125 ± 4°C, ON = 90 ± 5°C
11	2-way valve coil INJ	TEV-SMOAG2260A1	AC220 - 240 V
12	Check valve INJ	BCV-302DY	
13	Pulse motor valve (PMV) coil INJ	FAM-MD12TF-1	
14	Cord heater	Flexelec	150W
15	Reactor(CH-68)	CH-68-3FC	18 mH, 5A

### HWT-801H8(R)W-E, HWT-1101H8(R)W-E, HWT-1401H8(R)W-E

## 5-3. Hot water cylinder unit


	Component name	Model name				
No.		1501 CSH M3-E (-UK)	2101 CSH M3-E (-UK)	3001 CSH M3-E (-UK)	Type name	Rating
1	Hot water cylinder heater	0	0	0	-	AC230 V 2.7 kW
2	Hot water cylinder temperature sensor (TTW sensor)	0	0	0	_	10 kΩ (25°C)
3	Thermal cut-out	0	0	0	-	Operating temperature Manual reset 82°C (+3K/-2K)

O····· Applied

## 5-4. Water heat exchange control board


HWT-602S21S\*\*W-E(6kW ZONE1), HWT-1102S21\*\*\*W-E

### MCC-1753 (main)

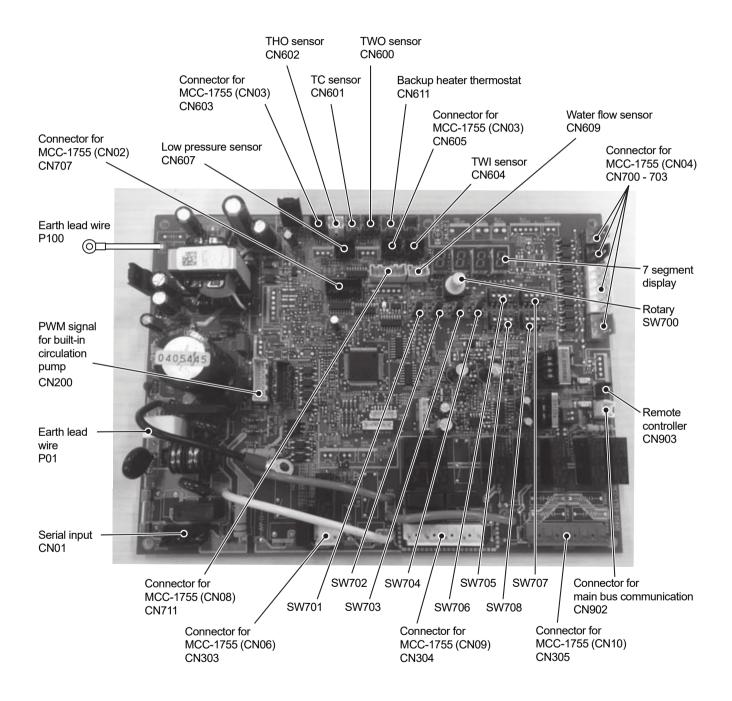


### HWT-602S21M\*\*W-E(6kW ZONE2)

### MCC-1753 (main)

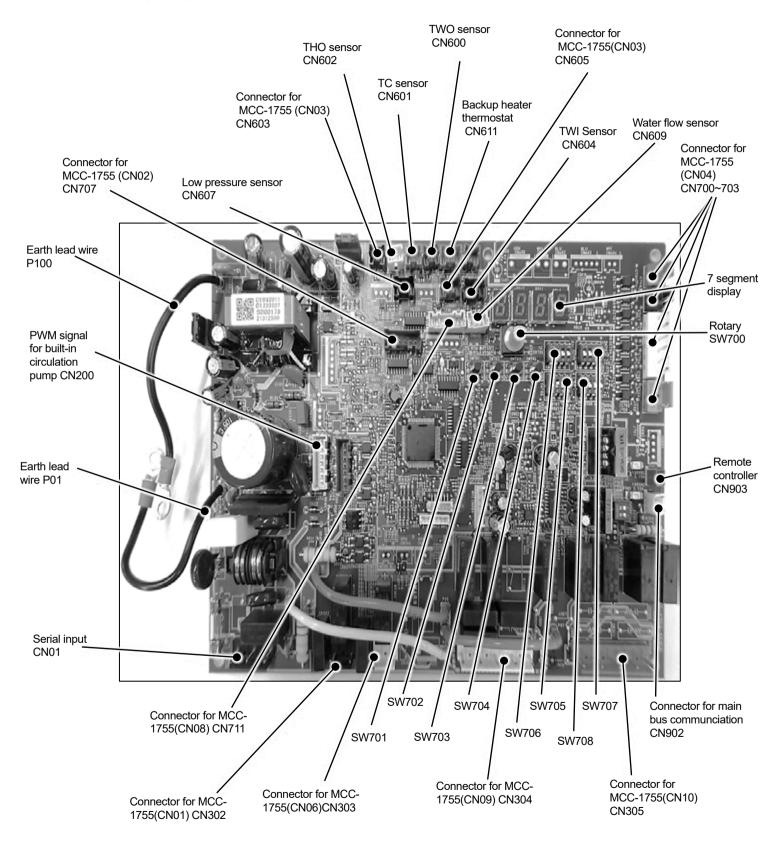


### HWT-1402S21\*\*\*W-E

### MCC-1753 (main)

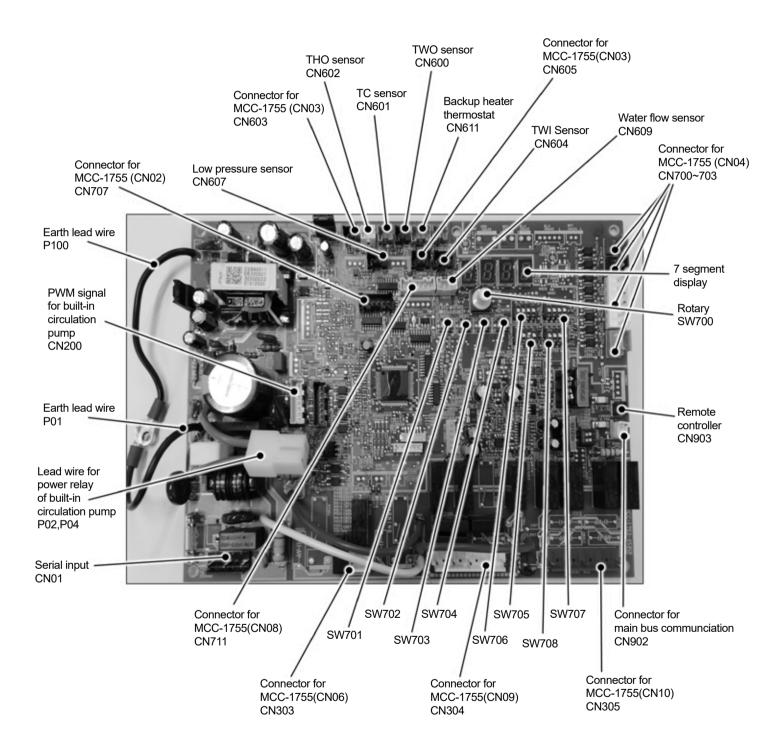

### HWT-602S21\*\*\*W-E, HWT-1102S21\*\*\*W-E, WT-1402S21\*\*\*W-E


### MCC-1755 (sub)

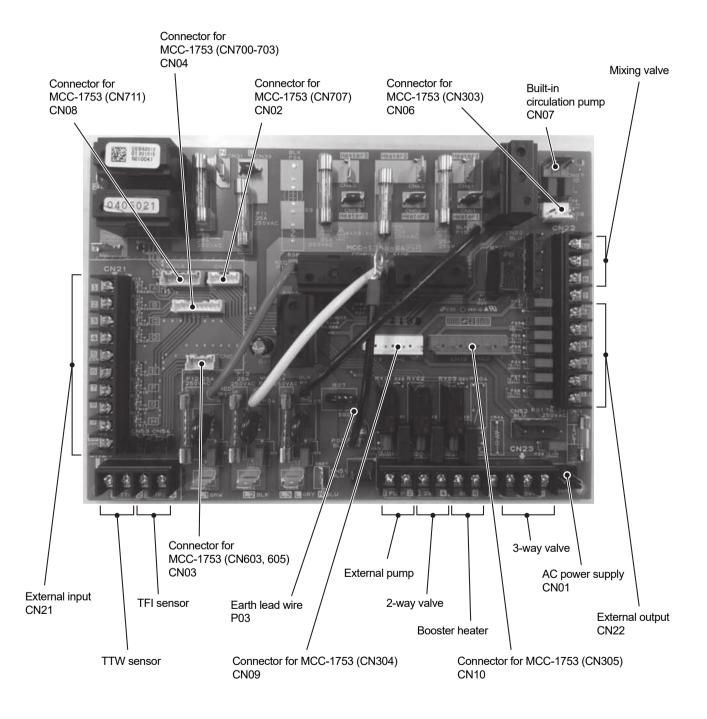

## 5-5. Outdoor control board


HWT-401HW-E, HWT-601HW-E

### MCC-1768

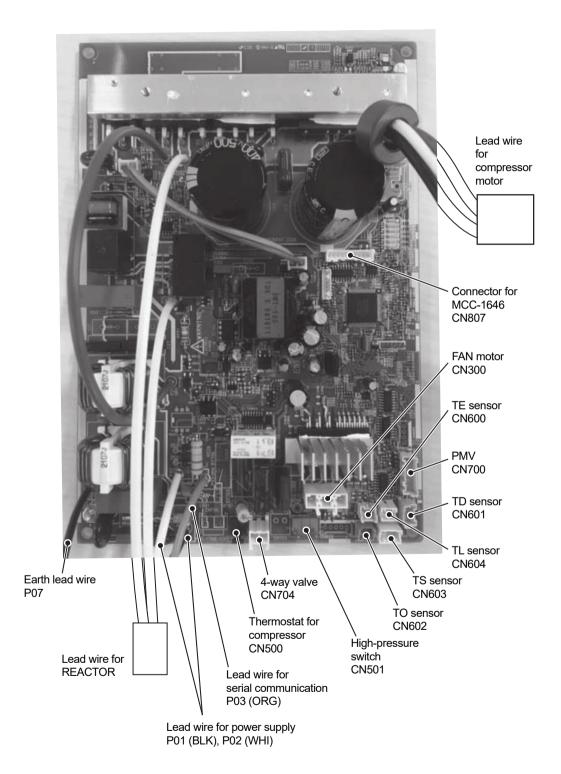


### HWT-801H(R)W-E, HWT-1101H(R)W-E, HWT-1401H(R)W-E

### MCC-1675 (Interface CDB)

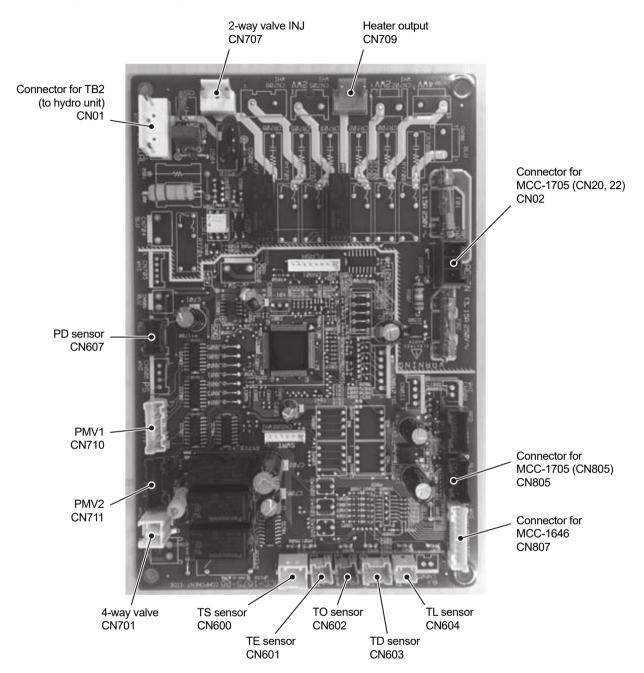


### HWT-801H(R)W-E, HWT-1101H(R)W-E

### MCC-1705 (Compressor, Fan IPDU)

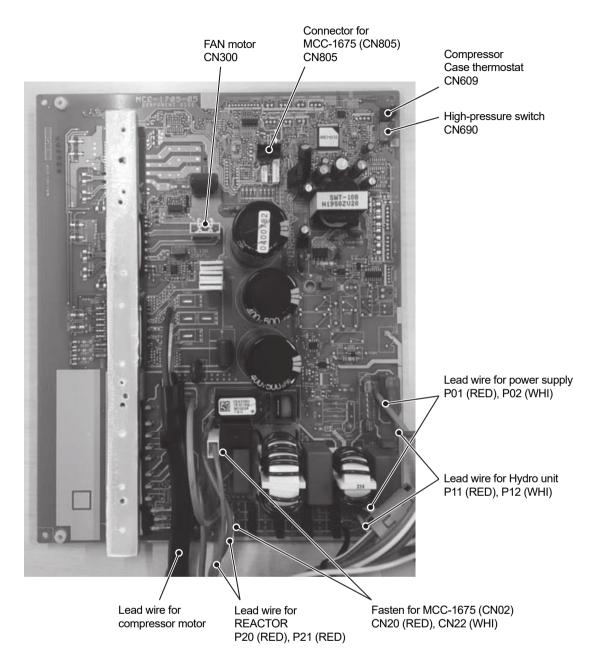


### HWT-1401HW-E, HWT-1401HRW-E

### MCC-1758 (Compressor, Fan IPDU)

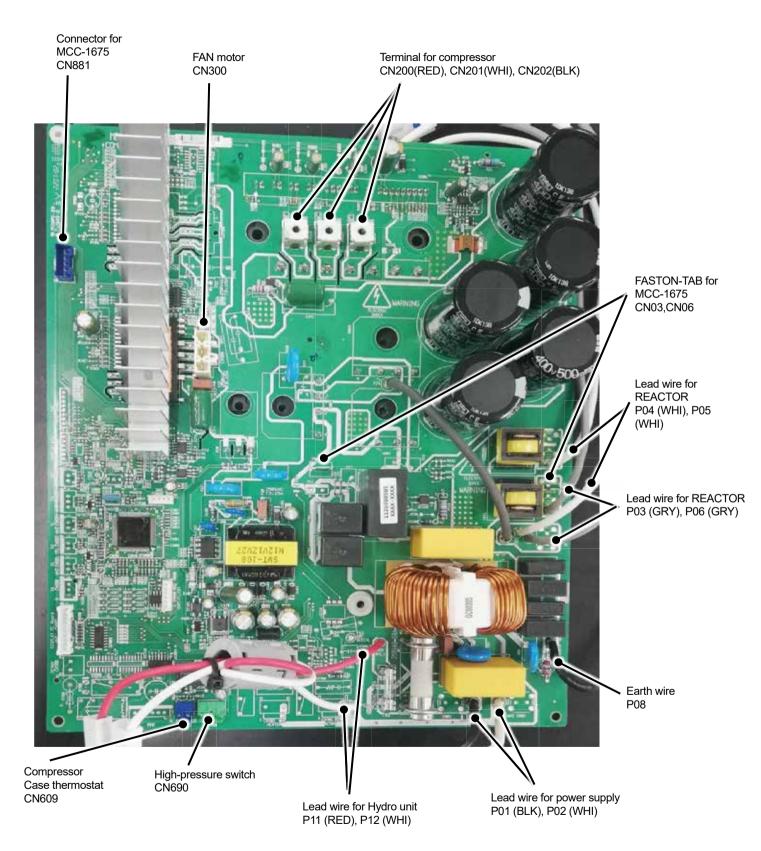

### HWT-801H8(R)W-E, HWT-1101H8(R)W-E, HWT-1401H8(R)W-E


### MCC-1780(Compressor IPDU)

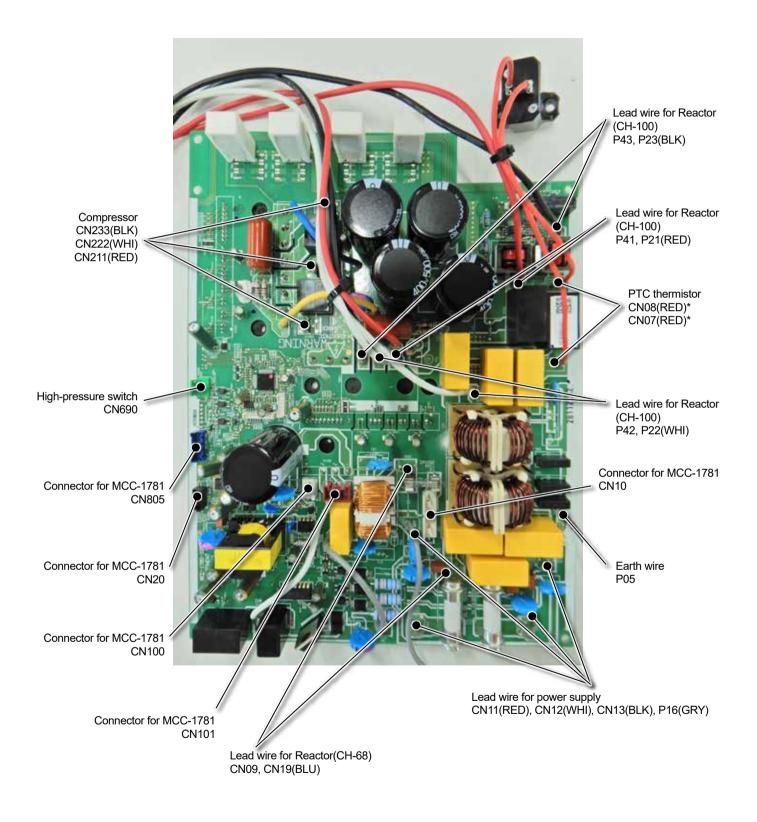

\*This figure of the board shows the type with the PTC thermistor doesn't mounted on the board. The board with the PTC thermistor doen't have lead wires for CN07 and CN08.

### HWT-801H8(R)W-E, HWT-1101H8(R)W-E, HWT-1401H8(R)W-E

### MCC-1781(CDB & FAN IPDU)

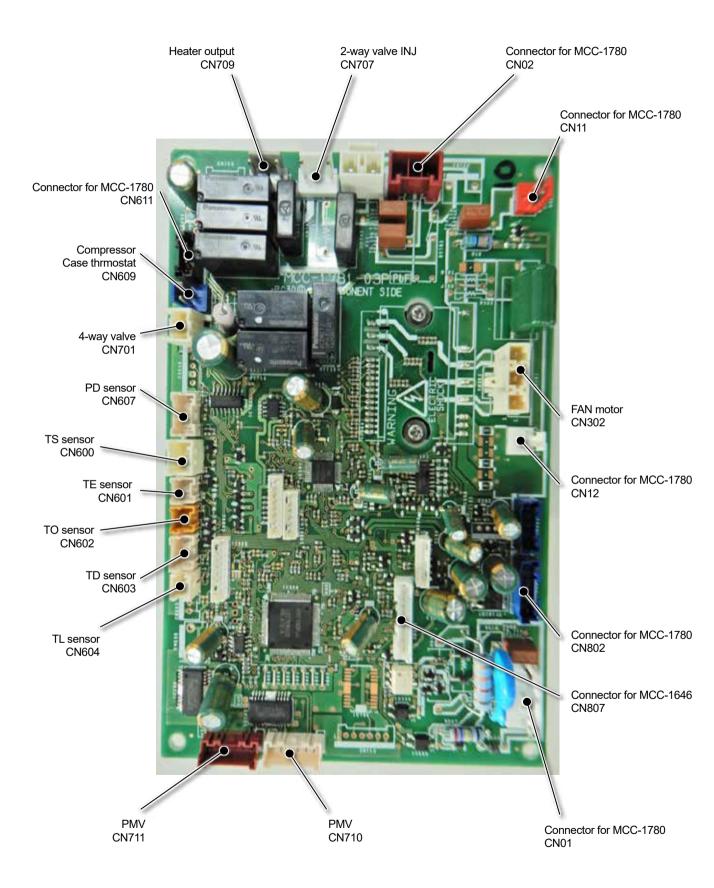

# 6 Refrigerant (R32)

This Air to Water Heat Pump adopts the R32 refrigerant which does not damage the ozone layer.

The working pressure of the new refrigerant R32 is 1.6 times higher than conventional refrigerant (R22). The refrigerating oil is also changed in accordance with change of refrigerant, so be careful that water, dust, and existing refrigerant or refrigerating oil are not entered in the refrigerant cycle of the Air to Water Heat Pump using

the new refrigerant during installation work or servicing time. The next section describes the precautions for Air to Water Heat Pump using the new refrigerant.

Conforming to contents of the next section together with the general cautions included in this manual, perform the correct and safe work.

## 6-1. Safety during installation / servicing

As R32's pressure is about 1.6 times higher than that of R22, improper installation / servicing may cause a serious trouble. By using tools and materials exclusive for R32, it is necessary to carry out installation/ servicing safely while taking the following precautions into consideration.

- (1) Never use refrigerant other than R32 in an Air to Water Heat Pump which is designed to operate with R32. If other refrigerant than R32 is mixed, pressure in the refrigeration cycle becomes abnormally high, and it may cause personal injury, etc. by a rupture.
- (2) Confirm the used refrigerant name, and use tools and materials exclusive for the refrigerant R32.
   The refrigerant name R32 is indicated on the visible place of the outdoor unit of the Air to Water Heat Pump using R32 as refrigerant.
   A diameter of the charge port for R32 is the same as that for the R410A's. Be careful not to charge the refrigerant

by mistake.

- (3) If a refrigeration gas leakage occurs during installation/servicing, be sure to ventilate fully. If the refrigerant gas comes into contact with fire, a poisonous gas may occur.
- (4) When installing or removing an Air to Water Heat Pump, do not allow air or moisture to remain in the refrigeration cycle.

Otherwise, pressure in the refrigeration cycle may become abnormally high so that a rupture or personal injury may be caused.

- (5) After completion of installation work, check to make sure that there is no refrigeration gas leakage. If the refrigerant gas leaks into the room, coming into contact with fire in the fan-driven heater, space heater, etc., a poisonous gas may occur.
- (6) When an Air to Water Heat Pump system charged with a large volume of refrigerant is installed in a small room, it is necessary to exercise care so that, even when refrigerant leaks, its concentration does not exceed the marginal level.

If the refrigerant gas leakage occurs and its concentration exceeds the marginal level, an oxygen starvation accident may result.

- (7) Be sure to carry out installation or removal according to the installation manual. Improper installation may cause refrigeration trouble, water leakage, electric shock, fire, etc.
- (8) Unauthorized modifications to the Air to Water Heat Pump may be dangerous. If a breakdown occurs please call a qualified Air to Water Heat Pump technician or electrician.

Improper repair may result in water leakage, electric shock and fire, etc.

(9) When breaking into the refrigerant circuit to make repairs or for any other purpose conventional procedures shall be used.

However, for flammable refrigerants it is important that best practice is followed since flammability is a consideration.

The following procedure shall be adhered to:

- · remove refrigerant;
- purge the circuit with inert gas
- evacuate
- purge with inert gas
- · open the circuit by cutting or brazing

## 6-2. Refrigerant piping installation

## 6-2-1. Piping materials and joints used

For the refrigerant piping installation, copper pipes and joints are mainly used.

Copper pipes and joints suitable for the refrigerant must be chosen and installed.

Furthermore, it is necessary to use clean copper pipes and joints whose interior surfaces are less affected by contaminants.

### (1) Copper pipes

It is necessary to use seamless copper pipes which are made of either copper or copper alloy and it is desirable that the amount of residual oil is less than 40 mg / 10 m.

Do not use copper pipes having a collapsed, deformed or discolored portion (especially on the interior surface). Otherwise, the expansion valve or capillary tube may become blocked with contaminants.

As an Air to Water Heat Pump using R32 incurs pressure higher than when using R22, it is necessary to choose adequate materials.

Thicknesses of copper pipes used with R32 are as shown in Table 6-2-1. Never use copper pipes thinner than 0.8 mm even when it is available on the market.

### NOTE

Refer to the "6-6. Instructions for re-use piping of R22 or R407C".

		Wall thick	ness (mm)
Nominal diameter	Outer diameter (mm)	R410A or R32	R22
1/4	6.4	0.80	0.80
1/2	12.7	0.80	0.80
5/8	15.9	1.00	1.00

### Table 6-2-1 Thicknesses of annealed copper pipes

### (2) Joints

For copper pipes, flare joints or socket joints are used. Prior to use, be sure to remove all contaminants.

a) Flare joints

Flare joints used to connect the copper pipes cannot be used for piping whose outer diameter exceeds 20 mm. In such a case, socket joints can be used.

Sizes of flare pipe ends, flare joint ends and flare nuts are as shown in Tables 6-2-3 to 6-2-5 below.

b) Socket joints

Socket joints are such that they are brazed for connections, and used mainly for thick piping whose diameter is larger than 20 mm. Thicknesses of socket joints are as shown in Table 6-2-2.

### Table 6-2-2 Minimum thicknesses of socket joints

Nominal diameter	Reference outer diameter of copper pipe jointed (mm)	Minimum joint thickness (mm)
1/4	6.4	0.50
1/2	12.7	0.70
5/8	15.9	0.80

## 6-2-2. Processing of piping materials

When performing the refrigerant piping installation, care should be taken to ensure that water or dust does not enter the pipe interior, that no other oil other than lubricating oils used in the installed Air to Water Heat Pump is used, and that refrigerant does not leak.

When using lubricating oils in the piping processing, use such lubricating oils whose water content has been removed. When stored, be sure to seal the container with an airtight cap or any other cover.

### (1) Flare processing procedures and precautions

a) Cutting the pipe

- By means of a pipe cutter, slowly cut the pipe so that it is not deformed. b) Removing burrs and chips
  - If the flared section has chips or burrs, refrigerant leakage may occur.
- Carefully remove all burrs and clean the cut surface before installation. c) Insertion of flare nut
- d) Flare processing

Make certain that a clamp bar and copper pipe have been cleaned. By means of the clamp bar, perform the flare processing correctly. Use either a flare tool for R410A / R32 or conventional flare tool. Flare processing dimensions differ according to the type of flare tool. When using a conventional flare tool, be sure to secure "dimension A" by using a gauge for size adjustment.

DIA D

Fig. 6-2-1 Flare processing dimensions

### Table 6-2-3 Dimensions related to flare processing for R410A or R32 / R22


			A (mm)				
Nominal diameter	Outer diameter (mm)	Thickness (mm)	Flare tool for R410A, R22 Conventional fla				al flare tool 22)
			clutch type	Clutch type	Wing nut type	Clutch type	Wing nut type
1/4	6.4	0.8	0 to 0.5	1.0 to 1.5	1.5 to 2.0	0.5 to 1.0	1.0 to 1.5
1/2	12.7	0.8	0 to 0.5	1.0 to 1.5	2.0 to 2.5	0.5 to 1.0	1.5 to 2.0
5/8	15.9	1.0	0 to 0.5	1.0 to 1.5	2.0 to 2.5	0.5 to 1.0	1.5 to 2.0

### Table 6-2-4 Flare and flare nut dimensions for R410A or R32

Nominal diameter	Outer diameter	Thickness	Dimension (mm)			Flare nut width	
Nominal diameter	(mm)	(mm)	Α	В	С	D	(mm)
1/4	6.4	0.8	9.1	9.2	6.5	13	17
1/2	12.7	0.8	16.6	16.0	12.9	23	26
5/8	15.9	1.0	19.7	19.0	16.0	25	29

### Table 6-2-5 Flare and flare nut dimensions for R22

Nominal diameter	Outer diameter	Thickness	Dimension (mm)			Flare nut width	
Nominal diameter	(mm)	(mm)	Α	В	С	D	(mm)
1/4	6.4	0.8	9.1	9.2	6.5	13	17
1/2	12.7	0.8	16.2	16.0	12.9	20	24
5/8	15.9	1.0	19.4	19.0	16.0	23	27

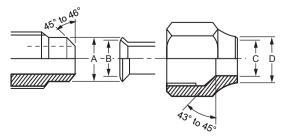

### Fig. 6-2-2 Relations between flare nut and flare seal surface

### (2) Flare connecting procedures and precautions

- a) Make sure that the flare and union portions do not have any scar or dust, etc.
- b) Correctly align the processed flare surface with the union axis.
- c) Tighten the flare with designated torque by means of a torque wrench.
   The tightening torque for R410A or R32 is the same as that for conventional R22.
   Incidentally, when the torque is weak, the gas leakage may occur.
   When it is strong, the flare nut may crack and may be made non-removable.
   When choosing the tightening torque, comply with values designated by manufacturers.
   Table 6-2-6 shows reference values.

### NOTE

When applying oil to the flare surface, be sure to use oil designated by the manufacturer. If any other oil is used, the lubricating oils may deteriorate and cause the compressor to burn out.

### Table 6-2-6 Tightening torque of flare for R410A or R32 [Reference values]


Nominal diameter	Outer diameter (mm)	Tightening torque N•m (kgf•m)	Tightening torque of torque wrenches available on the market N•m (kgf•m)
1/4	6.4	14 to 18 (1.4 to 1.8)	16 (1.6), 18 (1.8)
1/2	12.7	50 to 62 (5.0 to 6.2)	55 (5.5)
5/8	15.9	68 to 82 (6.8 to 8.2)	65 (6.5)

# 6-3. Tools6-3-1. Required tools

Refer to the "(4) Tools" (page 17)

## 6-4. Recharging of refrigerant

When it is necessary to recharge refrigerant, charge the specified amount of new refrigerant according to the following steps.

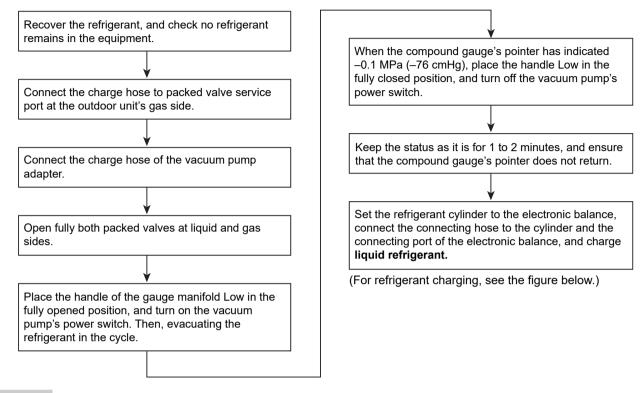

### NOTE

- (1) Never charge refrigerant exceeding the specified amount.
- (2) If the specified amount of refrigerant cannot be charged, charge refrigerant bit by bit in COOL mode.
- (3) Do not carry out additional charging.

When additional charging is carried out if refrigerant leaks, the refrigerant composition changes in the refrigeration cycle, which changes characteristics of the Air to Water Heat Pump, refrigerant exceeding the specified amount is charged, and working pressure in the refrigeration cycle becomes abnormally high pressure, and may cause a rupture or personal injury.

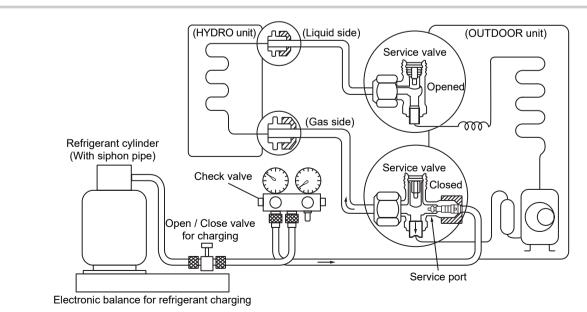


Fig. 6-4-1 Configuration of refrigerant charging

### NOTE

(1) Be sure to make setting so that **liquid** can be charged.

(2) When using a cylinder equipped with a siphon, liquid can be charged without turning it upside down.

R32 refrigerant is a Single-component refrigerant that does not change its composition.

Although it is possible to charge the refrigerant with either liquid or gas, charge it with liquid.

(If using gas for charging, composition of the refrigerant changes and then characteristics of the Air to Water Heat Pump change.)

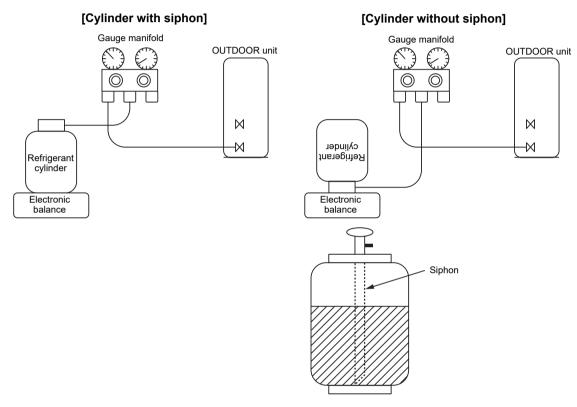


Fig. 6-4-2

## 6-5. Brazing of pipes

## 6-5-1. Materials for brazing

### (1) Silver brazing filler

Silver brazing filler is an alloy mainly composed of silver and copper.

It is used to join iron, copper or copper alloy, and is relatively expensive though it excels in solderability.

### (2) Phosphor bronze brazing filler

Phosphor bronze brazing filler is generally used to join copper or copper alloy.

### (3) Low temperature brazing filler

Low temperature brazing filler is generally called solder, and is an alloy of tin and lead.

Since it is weak in adhesive strength, do not use it for refrigerant pipes.

### NOTE

- Phosphor bronze brazing filler tends to react with sulfur and produce a fragile compound water solution, which may cause a gas leakage. Therefore, use any other type of brazing filler at a hot spring resort, etc., and coat the surface with a paint.
- (2) When performing brazing again at time of servicing, use the same type of brazing filler.

## 6-5-2. Flux

### (1) Reason why flux is necessary

- By removing the oxide film and any foreign matter on the metal surface, it assists the flow of brazing filler.
- In the brazing process, it prevents the metal surface from being oxidized.
- By reducing the brazing filler's surface tension, the brazing filler adheres better to the treated metal.

### (2) Characteristics required for flux

- Activated temperature of flux coincides with the brazing temperature.
- Due to a wide effective temperature range, flux is hard to carbonize.
- It is easy to remove slag after brazing.
- The corrosive action to the treated metal and brazing filler is minimum.
- It excels in coating performance and is harmless to the human body.

As the flux works in a complicated manner as described above, it is necessary to select an adequate type of flux according to the type and shape of treated metal, type of brazing filler and brazing method, etc.

### (3) Types of flux

### Noncorrosive flux

Generally, it is a compound of borax and boric acid. It is effective in case where the brazing temperature is higher than 800°C.

### Activated flux

Most of fluxes generally used for silver brazing are this type.

It features an increased oxide film removing capability due to the addition of compounds such as potassium fluoride, potassium chloride and sodium fluoride to the borax-boric acid compound.

## (4) Piping materials for brazing and used brazing filler / flux

Piping material	Used brazing filler	Used flux
Copper - Copper	Phosphor copper	Do not use
Copper - Iron	Silver	Paste flux
Iron - Iron	Silver	Vapour flux

### NOTE

- (1) Do not enter flux into the refrigeration cycle.
- (2) When chlorine contained in the flux remains within the pipe, the lubricating oil deteriorates. Therefore, use a flux which does not contain chlorine.
- (3) When adding water to the flux, use water which does not contain chlorine (e.g. distilled water or ion-exchange water).
- (4) Remove the flux after brazing.

## 6-5-3. Brazing


As brazing work requires sophisticated techniques, experiences based upon a theoretical knowledge, it must be performed by a person qualified.

In order to prevent the oxide film from occurring in the pipe interior during brazing, it is effective to proceed with brazing while letting dry Nitrogen gas flow.

### Never use gas other than Nitrogen gas.

### (1) Brazing method to prevent oxidation

- 1) Attach a reducing valve and a flow-meter to the Nitrogen gas cylinder.
- 2) Use a copper pipe to direct the piping material, and attach a flow-meter to the cylinder.
- Apply a seal onto the clearance between the piping material and inserted copper pipe for Nitrogen in order to prevent backflow of the Nitrogen gas.
- 4) When the Nitrogen gas is flowing, be sure to keep the piping end open.
- Adjust the flow rate of Nitrogen gas so that it is lower than 0.05 m<sup>3</sup>/Hr or 0.02 MPa (0.2 kgf/ cm<sup>2</sup>) by means of the reducing valve.
- 6) After performing the steps above, keep the Nitrogen gas flowing until the pipe cools down to a certain extent (temperature at which pipes are touchable with hands).
- 7) Remove the flux completely after brazing.

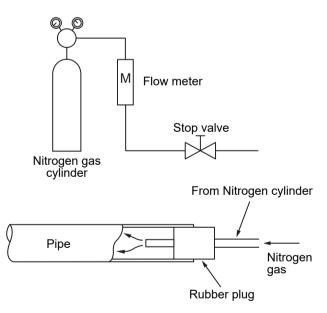

### Fig. 6-5-1 Prevention of oxidation during brazing

## 6-6. Instructions for re-use piping of R22 or R407C

Instruction of works:

The existing R22 and R407C piping can be reused for our Air to Water Heat Pump R32 products installations.

### 

Confirming the existence of scratches or dents on the existing pipes and confirming the reliability of the pipe strength are conventionally referred to the local site. If the specified conditions can be cleared, it is possible to update existing R22 and R407C pipes to those for R32 models.

## 6-6-1. Basic conditions needed to reuse the existing pipe

Check and observe three conditions of the refrigerant piping works.

- (1) Dry (There is no moisture inside of the pipes.)
- (2) Clean (There is no dust inside of the pipes.)
- (3) Tight (There is no refrigerant leak.)

# 6-6-2. Restricted items to use the existing pipes

In the following cases, the existing pipes cannot be reused as they are. Clean the existing pipes or exchange them with new pipes.

- (1) When a scratch or dent is heavy, be sure to use the new pipes for the works.
- (2) When the thickness of the existing pipe is thinner than the specified "Pipe diameter and thickness" be sure to use the new pipes for the works.
  - The operating pressure of R32 is high. If there is a scratch or dent on the pipe or a thinner pipe is used, the pressure strength may be inadequate, which may cause the pipe to break in the worst case.

### \* Pipe diameter and thickness (mm)

Reference outside diameter (mm)	Wall thickness (mm)	Material
6.4	0.8	—
12.7	0.8	—
15.9	1.0	—

• In case that the pipe diameter is DIA 12.7 mm or less and the thickness is less than 0.7 mm, be sure to use the new pipes for works.

- (3) The pipes are left as coming out or gas leaks. (Poor refrigerant)
  - There is possibility that rain water or air including moisture enters in the pipe.
- (4) Refrigerant recovery is impossible.(Refrigerant recovery by the pump-down operation on the existing Air to Water Heat Pump)
  - There is possibility that a large quantity of poor oil or moisture remains inside of the pipe.
- (5) A dryer on the market is attached to the existing pipes.
  - There is possibility that copper green rust generated.
- (6) Check the oil when the existing Air to Water Heat Pump was removed after refrigerant had been recovered.

In this case, if the oil is judged as clearly different compared with normal oil.

- The refrigerator oil is copper rust green: There is possibility that moisture is mixed with the oil and rust generates inside of the pipe.
- There is discolored oil, a large quantity of the remains, or bad smell.
- A large quantity of sparkle remained wear-out powder is observed in the refrigerator oil.
- (7) The Air to Water Heat Pump which compressor was exchanged due to a trouble compressor. When the discolored oil, a large quantity of the remains, mixture of foreign matter, or a large quantity of sparkle remained wear-out powder is observed, the cause of trouble will occur.
- (8) Installation and removal of the Air to Water Heat Pump are repeated with temporary installation by lease and etc.
- (9) In case that type of the refrigerator oil of the existing Air to Water Heat Pump is other than the following oil (Mineral oil), Suniso, Freol-S, MS (Synthetic oil), alkyl benzene (HAB, Barrel-freeze), ester series, PVE only of ether series.
  - Winding-insulation of the compressor may become inferior.

### NOTE

The above descriptions are results of confirmation by our company and they are views on our Air to Water Heat Pump, but they do not guarantee the use of the existing pipes of the Air to Water Heat Pump that adopted R410A in other companies.

## 6-6-3. Branching pipe for simultaneous operation system

In the concurrent twin system, when TOSHIBAspecified branching pipe is used, it can be reused. Branching pipe model name: RBC-TWP30E, RBC-TWP50E

On the existing Air to Water Heat Pump for simultaneous operation system (twin system), there is a case of using branch pipe that has insufficient compressive strength. In this case please change it to the branch pipe for R32 or R410A.


## 6-6-4. Curing of pipes

When removing and opening the indoor unit or outdoor unit for a long time, cure the pipes as follows:

- Otherwise rust may generate when moisture or foreign matter due to dewing enters in the pipes.
- The rust cannot be removed by cleaning, and a new piping work is necessary.

Place position	Term	Curing manner
Outdoors	1 month or more	Pinching
Outdoors	Less than 1 month	Dipohing or toping
Indoors	Every time	Pinching or taping

## 6-6-5. Final installation checks

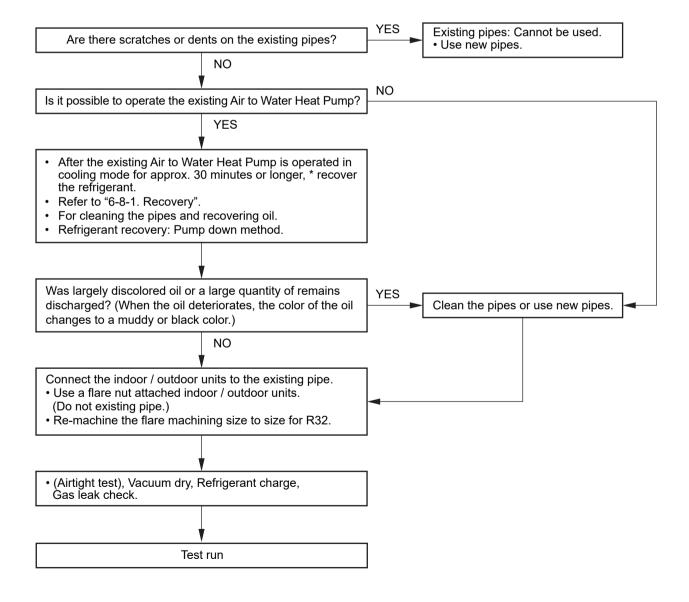

## 6-6-6. Handling of existing pipe

When using the existing pipe, carefully check it for the following:

- Wall thickness (within the specified range)
- · Scratches and dents
- Water, oil, dirt, or dust in the pipe
- · Flare looseness and leakage from welds
- Deterioration of copper pipe and heat insulator
- Before recovering the refrigerant in the existing system, perform a cooling operation for at least 30 minutes.

### Cautions for using existing pipe

- Do not reuse a flare nut to prevent gas leaks. Replace it with the supplied flare nut and then process it to a flare.
- Blow nitrogen gas or use an appropriate means to keep the inside of the pipe clean.
   If discolored oil or much residue is discharged, wash

the pipe.

- Check welds, if any, on the pipe for gas leaks.
- There may be a problem with the pressure resistance of the branching pipes of the existing piping.

Replace them with branch pipes (sold separately).

When the pipe corresponds to any of the following, do not use it. Install a new pipe instead.

- The pipe has been opened (disconnected from indoor unit or outdoor unit) for a long period.
- The pipe has been connected to an outdoor unit that does not use refrigerant R22, R410A, R32 R407C.
- The existing pipe must have a wall thickness equal to or larger than the following thicknesses.

Reference outside diameter (mm)	Wall thickness (mm)	Material
6.4	0.8	—
12.7	0.8	—
15.9	1.0	—

• Do not use any pipe with a wall thickness less than these thicknesses due to insufficient pressure capacity

## 6-6-7. Recovering refrigerant

Use the refrigerant recovery equipment to recover the refrigerant.

# 6-7. Charging additional refrigerant

Amount of additional refrigerant shall be restricted by the following explanation to ensure the reliability. Miss-charging leads to the abnormal high pressure in the refrigerant cycle, causing a rupture, an injury and a compressor malfunction.

## 6-7-1. [Assumed gas leak]

The refrigerant can be charged only when the amount of a leak such as a slow-leak found at the installation work can be ensured that it is within the additional limits shown in the following.

Recharge the refrigerant if the amount of leakage is unknown when you feel "Cooling is not working well" or "Heating is not working well".

# 6-7-2. [Limiting the additional charge]

- The maximum amount of additional refrigerant shall be up to 10% of the normal amount of the refrigerant. If no improvement in symptoms can be found at the above limitation, recover all gases and recharge the normal amount of refrigerant.
- If the slow leak is found at the installation work and the connection pipe length is 15 m or less, tighten the flare nut at the leak point and do not add the refrigerant.

# 6-7-3. [Cautions on charging additional refrigerant]

- When charging additional refrigerant, use a balance with an accuracy of more than 10 g scale. Do not use a health-meter etc.
- If the refrigerant gas leaks, find the leakage point and repair it securely. Though the refrigerant gas itself is innocuous, if it touch a fire source such as fan heater, stove or kitchen stove, noxious gas may occur.
- When charging the refrigerant, charge with liquid refrigerant.

Work carefully and charge it little by little since it may be rapidly charged due to the liquid state.

## 6-8. General safety precautions for using R32 refrigerant

## 6-8-1. Recovery

- When removing refrigerant from a system, either for servicing or decommissioning, it is recommended good practice that all refrigerants are removed safely.
- When transferring refrigerant into cylinders, ensure that only appropriate refrigerant recovery cylinders are employed.
- Ensure that the correct number of cylinders for holding the total system charge are available.
- All cylinders to be used are designated for the recovered refrigerant and labelled for that refrigerant (i.e. special cylinders for the recovery of refrigerant).
- Cylinders shall be complete with pressure relief valve and associated shut-off valves in good working order.
- Empty recovery cylinders are evacuated and, if possible, cooled before recovery occurs.
- The recovery equipment shall be in good working order with a set of instructions concerning the equipment that is at hand and shall be suitable for the recovery of mildly flammable refrigerants.
- In addition, a set of calibrated weighing scales shall be available and in good working order.
- Hoses shall be complete with leak-free disconnect couplings and in good condition.
- Before using recovery machine check that it is satisfactory working order, has been properly maintained and that any associated electrical components are sealed to prevent ignition in the event of a refrigerant release.
- · Consult manufacturer if in doubt.
- The recovered refrigerant shall be returned to the refrigerant supplier in the correct recovery cylinder, and the relevant Waste Transfer Note arranged.
- Do not mix refrigerants in recovery units and especially not in cylinders.
- If compressors or compressor oils are to be removed, ensure that they have been evacuated to an acceptable level to make certain that mildly flammable refrigerant does not remain within the lubricant.
- The evacuation process shall be carried out prior to returning the compressor to the suppliers.
- Only electric heating to the compressor body shall be employed to accelerate this process.
- When oil is drained from a system, it shall be carried out safely.

## 6-8-2. Decommissioning

- Before carrying out this procedure, it is essential that the technician is completely familiar with the equipment and all its details. Only a qualified installer (\*1) or qualified service person (\*1) is allowed to do this work.
- It is recommended good practice that all refrigerants are recovered safely.
- Prior to the task being carried out, an oil and refrigerant sample shall be taken in case analysis is required prior to re-use of reclaimed refrigerant.
- It is essential that electrical power is available before the task is commenced.

### NOTE

a)Become familiar with the equipment and its operation.

b) Isolate system electrically.

c) Before attempting the procedure ensure that:

- Mechanical handling equipment is available, if required, for handling refrigerant cylinders;
- All personal protective equipment is available and being used correctly;
- The recovery process is supervised at all times by a competent person;
- Recovery equipment and cylinders conform to the appropriate standards.

d) Pump down refrigerant system, if possible.

- e) If a vacuum is not possible, make a manifold so that refrigerant can be removed from the various parts of the system.
- f) Make sure that cylinder is situated on the scales before recovery takes place.
- g) Start the recovery machine and operate in accordance with manufacturers instructions.
- h) Do not overfill cylinders (No more than 80% volume liquid change).
- i) Do not exceed the maximum working pressure of the cylinder, even temporarily.
- j) When the cylinders have been filled correctly and the process complete, make sure that the cylinders and the equipment are removed from site promptly and all isolation valves on equipment are closed off.
- k) Recovered refrigerant shall not be changed into another refrigerant system unless it has been cleaned and checked.
- $(^{\star}1)$  Refer to the "Definition of qualified installer or qualified service person".


## 6-8-3. Labelling


- Equipment shall be labelled stating that it has been de-commissioned and emptied of refrigerant.
- The label shall be dated and signed.
- Ensure that are labels on the equipment stating the equipment contains mildly flammable refrigerant.

## 7 Operational description


This chapter describes the working circuit and control of Air to Water Heat Pump about the following operations.


	Item	Page
7-1	<ul> <li>7-1. Basic Operation</li> <li>1) Operation control</li> <li>2) Hot water supply operation</li> <li>3) Heating operation</li> <li>4) Cooling operation</li> </ul>	60 to 62
7-2	<ul> <li>7-2. Operation Mode and Control Method <ol> <li>Heat pump operation range of hot water supply, heating and cooling</li> <li>Hot water supply operation</li> <li>Heating operation</li> <li>Cooling operation</li> <li>Simultaneous operations of "hot water supply" and "heating"</li> <li>Simultaneous operations of "hot water supply" and "cooling"</li> <li>Boiler control</li> <li>Hot water boost operation</li> <li>Anti bacteria operation</li> <li>Night setback operation</li> <li>Night time low-noise operation</li> </ol> </li> </ul>	63 to 75
7-3	<ul> <li>7-3. Hydro Unit Control <ol> <li>Capacity control (compressor, high-temperature release, low-temperature release)</li> <li>Heater control</li> <li>Circulation pump control</li> <li>Control by the flow sensor</li> <li>Mixing Valve control (2-temperature heating control)</li> <li>Room temperature control</li> <li>Room temperature control with the thermostat</li> <li>Control of Mode selection and forced stop &amp; restart</li> <li>Control of limit of heat pump operation (Tempo1, 2)</li> <li>Connection to a Smart Grid network (SG ready)</li> <li>Output signal control</li> <li>Q-H characteristics of hydro unit</li> <li>Automatic restart control</li> <li>High return water protect control</li> </ol> </li> </ul>	75 to 92
7-4	7-4. Outdoor unit control         1) PMV (Pulse motor valve) control         2) Discharge temperature release control         3) Current release control         4) Outdoor fan control         5) Defrosting control         6) Winding heating control         7) Short circuit operation prevention control         8) Over current protection control         9) High pressure release control         10) High pressure switch         11) Compressor case thermostat         12) Bottom plate heater control         13) Start up from hibernation         14) Liquid injection control	93 to 104

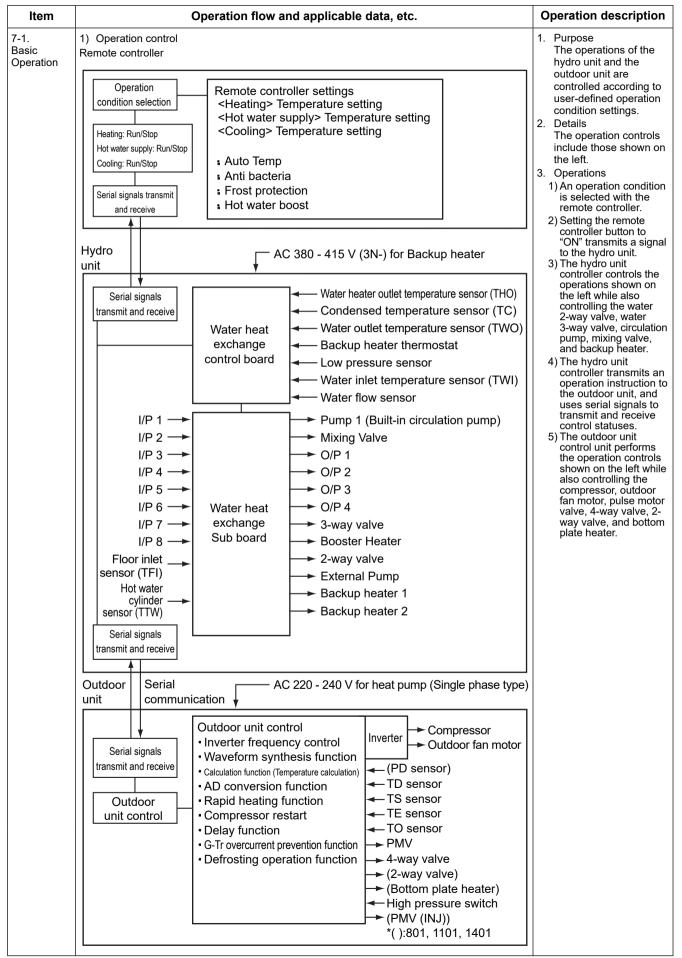


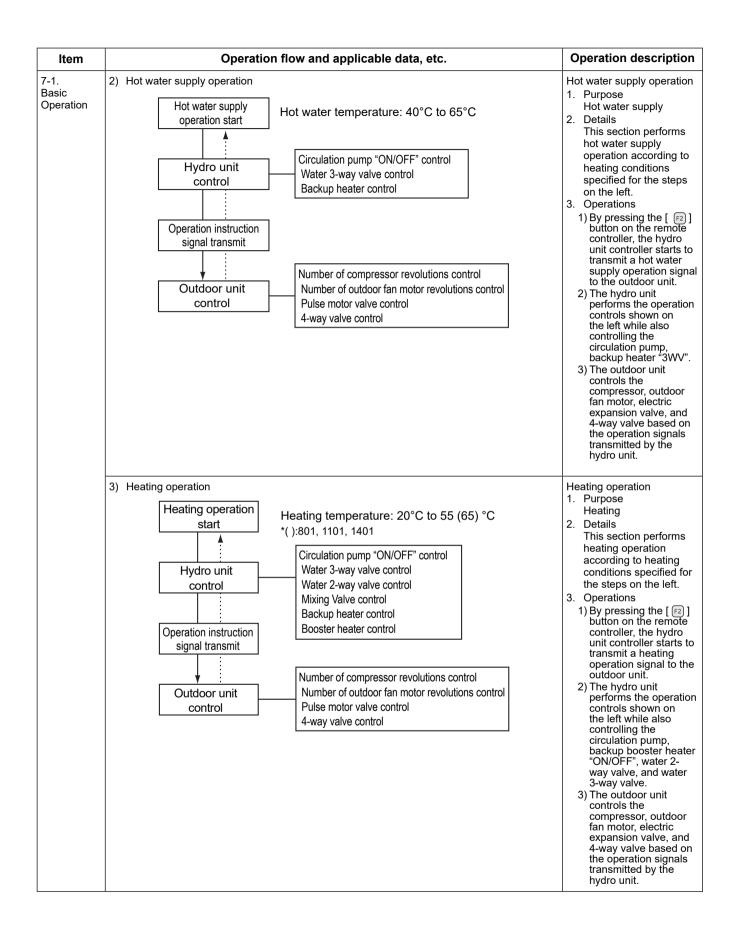

ltem	Operation flow and applicable data, etc.	Operation description
7-1. Basic Operation	4) Cooling operation Cooling operation start Hydro unit control Operation instruction signal transmit Outdoor unit control Number of compressor revolutions control Number of outdoor fan motor revolutions control Pulse motor valve control 4-way valve control	<ol> <li>Purpose Cooling</li> <li>Details This section performs cooling operation according to cooling conditions specified for the steps on the left.</li> <li>Operations         <ol> <li>By pressing the [ []] button on the remote controller, the hydro unit controller starts to transmit a cooling operation signal to the outdoor unit.</li> </ol> </li> <li>The hydro unit controller performs the operation controls shown on the left while also controlling the circulation pump, water 2-way valve, and water 3-way valve.</li> <li>The outdoor unit controls the compressor, outdoor fan motor, pulse motor valve, and 4-way valve based on the operation signals transmitted by the hydro unit.</li> </ol>

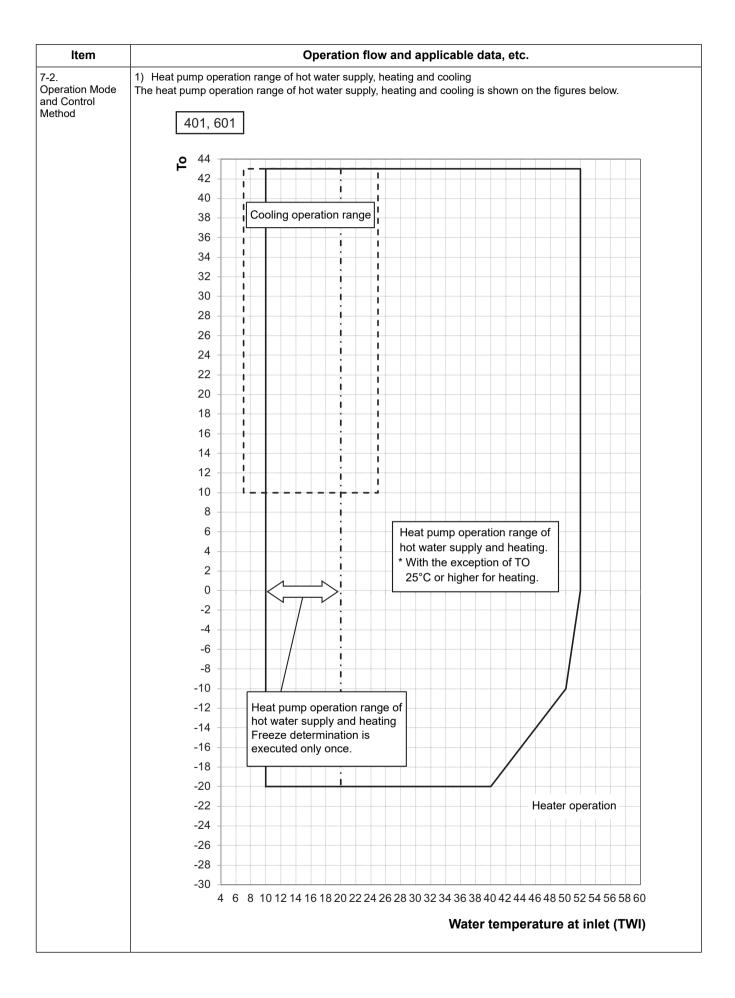

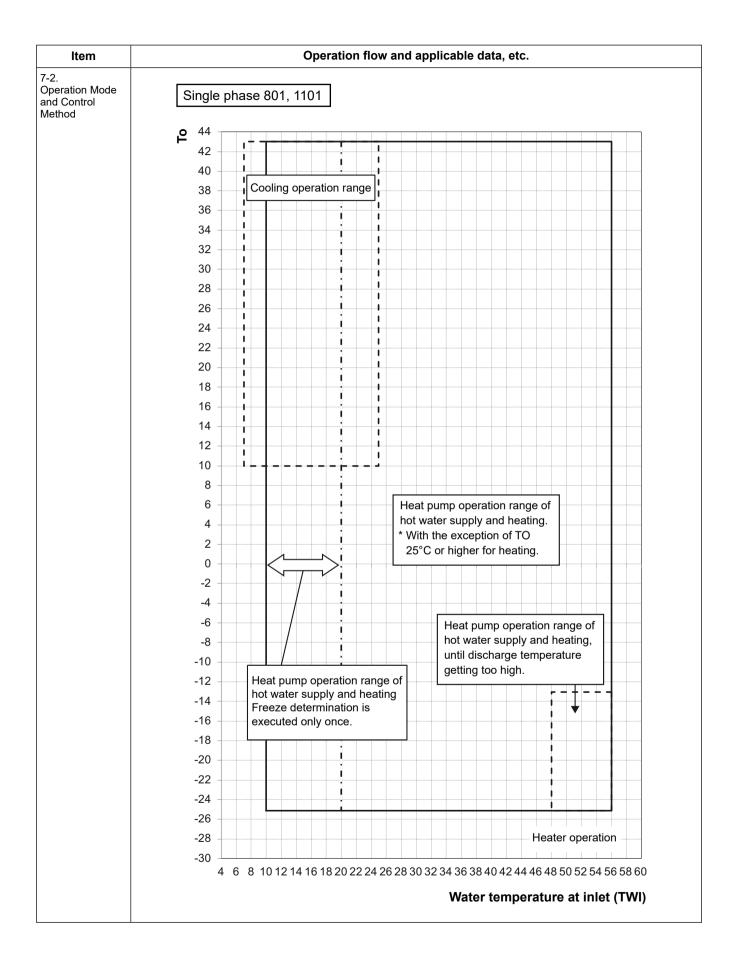

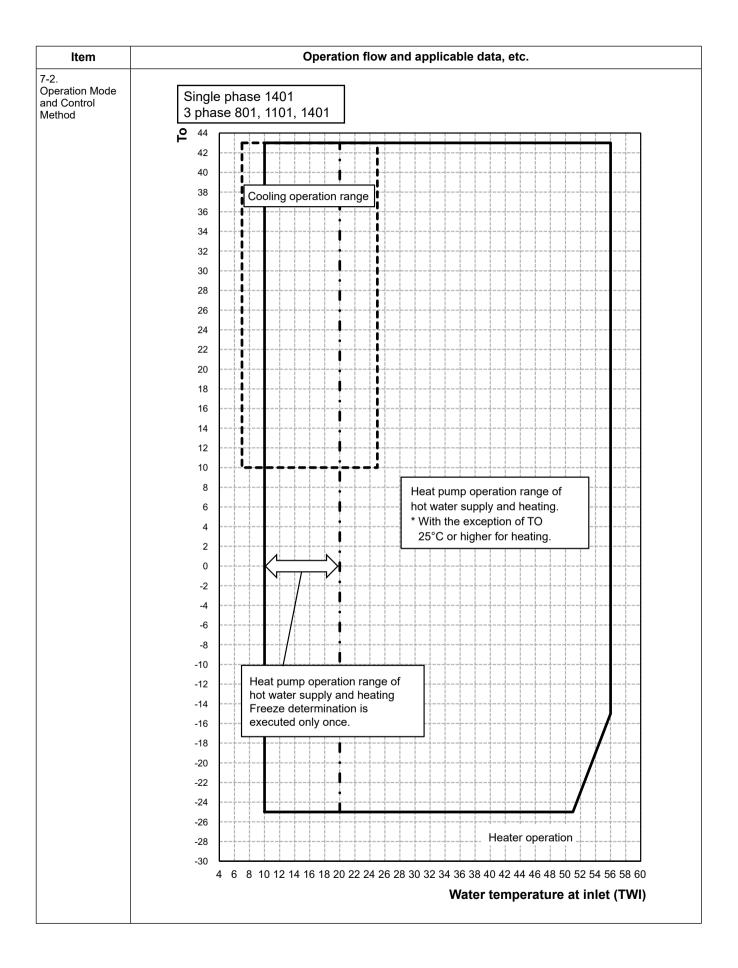

Item				Ope	ration flo	ow and a	pplicab	le data, e	etc.			
<b>-</b> 2.	The followin	ig shows t	he operati	on mode	s and cont	rolled obj	ects.					
Operation Mode and Control	Operation				Heating	and Hot v	vater both	operate	Cooling	g and Hot v	water both	operate
Aethod	mode	Cooling	Heating	Hot water		np select	Heat pur for ho	np select t water oply	Heat pur for co	np select ooling		np selec t water oply
	Controlled object	oniy	supply only	Heating side	Hot water supply side	Heating side	Hot water supply side	Cooling side	Hot water supply side	Cooling side	Hot water supply side	
	Heat pump	0	0	0	0	×	×	0	0	×	×	0
	Backup heater	×	0	0	0	×	×	0	×	×	×	0
	<ul> <li>1) Operat When 1 followir</li> <li>TTW</li> <li>2) Operat An ope of TTW</li> <li>Heat</li> <li>When pump</li> <li>Heat When met,</li> <li>Thern When select</li> <li>3) Operat The op</li> <li>The risk of the op</li> <li>The risk</li> <li>TTW</li> <li>*1: When the heater op into "a zo</li> </ul>	ng operation < 38°C is ion mode irration mode y sensor. pump operation operation er operation the heater mostat stan n TTW $\geq$ 1 the heater mostat stan n TTW $\geq$ 1 ted. ion stop veration stop 100, 140	ondition remote co on start cc detected. determina de is deter eration sel 8°C (a zor n is selection TW < TSU r operation tus "OFF" "SC_H is r ops in the ntroller giv is met. temperatu	ndition is mined acc ection *1 ne in the r ed. on C_H (b zco n is select selection met, the th following es a stop re is -20 (	nermostat cases. instruction	pperation s the tempe is met, th right figure status "O n. below, th	starts. rature e heat e) is FF" is (Tr e	emperatur remote o HP_H C	Controller) DFF 52°C ON 38°C TSC_	ylinder ur	t OFF c Z ration np a Zo rater temp	one *4
	I Telated Div			0.441				Default	Setting a	available ra	ange	
				Setting it	em							
	DN	Ipper limit o	f hot water	Setting it supply tem				65°C	6	0 - 65°C		
	<b>DN</b> 1E U		f hot water f hot water	supply tem	perature			65°C 40°C	-	0 - 65°C 0 - 60°C		
	<b>DN</b> 1E U 1F L	ower limit o		supply tem supply tem	perature				4			
	<b>DN</b> 1E U 1F L 20 H	ower limit o leat pump s	f hot water	supply tem supply tem ature	perature			40°C	4	0 - 60°C		
	DN           1E         U           1F         L           20         H           21         H	ower limit o leat pump s leat pump e	f hot water start temper and tempera	supply tem supply tem ature ature	perature	t water sup		40°C 38°C	4	0 - 60°C 0 - 45°C		

\*4: When the hot water supply mode does not operate for certain period, to prevent water temperature drop, hot water supply mode will operate even TTW is in c Zone, it's operation cycle is depend on DN\_6AC setting (default 24H).

ltem		Operation flow and applica	ble data, e	etc.
7-2. Operation Mode and Control Method	<operation • This operation • The rem • Operation • This operation • This operation • This operation • The rem • To set ter • To 2 zone • For 2 zone • For 2 zone</operation 	2 can be changed. mperatures for <u>zone 1</u> and <u>zone 2</u> , use SEL	and DN_6BA s, and the se ECT ( to	to "0001". et temperatures of <u>zone 1</u> o switch between <u>zone 1</u> and
	<ul> <li>Press opera</li> <li>2) Oper An op of TW</li> <li>Hea Whe hea</li> <li>The Whe ther</li> <li>3) Oper Wher stops</li> <li>The rest stops</li> <li>The rest heater into "d i</li> </ul>	emote controller gives a stop instruction. he outside temperature is -20 (-25) °C or below, the operation is selected even if the TWI temperature falls	TSC_F TS	WI Thermostat off e zone operation diff2K d zone Heat pump operation SC_F is a heating temperature t with remote controller
	Related D	N		
	DN	Setting item	Default	Setting available range
	1A	Upper limit of heating (Zone1) limited temperature	55 (65)	37 - 55 (65) °C
	1B	Lower limit of heating (Zone1) limited temperature	20	20 - 37°C
	1C	Upper limit of heating (Zone2) limited temperature	55 (65)	37 - 55 (65) °C

ltem		Oper	ration flow and applic	able data, e	tc.	
Item 7-2. Operation Mode and Control Method	<ol> <li>1) Opera Pressi</li> <li>2) Opera An op tempe</li> <li>Heat Whe heat</li> <li>Ther Whe therr</li> <li>3) Opera When opera</li> <li>The opera</li> <li>The opera</li> </ol>	g operation he [ $[r]$ ] button twice, starts a ation start condition ing the [ $[r]$ ] button twice, start ation mode selection heration mode is determined a erature of TWI sensor. t pump operation selection *1 in TWI $\geq$ TSC_F (d zone in the pump operation is selected. mostat status "OFF" in TWI < TSC_F (e zone in the mostat status "OFF" is selected ation stop condition to either of the following condi- tion stops. remote controller gives a stop operation is switched to heatin he outside temperature is 10°C	Higher of TSC_F+2K or	TWI Heat pump opera (Cooling) / d zone SC_F e zone	off operatio	
	Related DN	1				
	DN 02	Setting	item	Default	Setting available range	
	02	Cooling mode availability Upper limit of cooling setting temp	oraturo	0 25	0: Permitted 18 - 30°C	
	19	Lower limit of cooling setting temp		7	7 - 20°C	
	the outs • f zon A he side. The 30 m If TT the c Hot v the T	heat pump maintains a supply ninutes during a simultaneous W does not reach the TSC_H operation repeat the heating 20 water supply 30 minutes cycle TSC_H.	oply priority d in the hot water supply of hot water for up to operation. during 30 minutes, ) minutes/	-20 (-25)*	ot water pply heat imp priority veration eater operation 1101, 1401	f zone Diff: 5de h zone '
		mode by zone				
	Zone		Heating side			
	f	Heat pump *2	Stop *2			
	heater c	Heater *3 at after a heat pump operation operation for "hot water" and th hanges as follows.				
	Zon	-	Heating side			
	f	Hot water supply side Heater	Heat pump			
		/ < 38°C (DN_20) is met, the o		returns to fiza	ne	

ltem		Oper	ation flow and a	applicable data	a, etc.	
7-2. Operation Mode and Control Method	* The heat pump	operations of "hot water runs for the hot water su maintains a supply of ho	pply side when TT	W is less than 38		peration.
Method		Hot water supply side	Cooling side			
	TTW < 38°C	Heat pump	stop			
	The operation mo	de returns to normal wh	en TTW become 5	52°C or more (DN	_21).	
	<ul> <li>7-1) Boiler settin <ul> <li>Connect its</li> <li>DN_6B0 =</li> <li>Set the DN</li> </ul> </li> <li>The temper The boiler of and supplyi</li> <li>Priority sett /boiler.</li> <li>When DN_ the hydro u When DN_ temperature</li> <li>Coordinatio When DN_ HP switchir When DN_</li> </ul>	connection cable to CN "0/1" switches "Not using _6B0 to "1" when using rature switching the boile output becomes effective runs in heating operation ing hot water simultaneo ting between the boiler a 3E is set to "0" (Default) unit's temperature setting 3E is set to "1", the boile e setting. (The setting of n setting of the boiler and	g boiler (Default) / the boiler. er and heat pump: e when the outside h. Also, the boiler ru- ously. and hydro unit: DN_ , the hydro unit has b. er continues to run 5 DN_3E is effective d heat pump: when runs, pump ON. (H within 60 minutes) s. (the heater may	Using boiler". DN_23 = -10°C (( a air temperature i uns when the hea _3E = "0/1" switch s priority, the boild even after inlet w e during the HP+I DN_5B = "0", the lowever, if the ex run instead for up	Default) See the r s -10°C or less. It pump is running nes the running pr er stops as inlet w rater temperature Boiler operation.) boiler and heat pr ternal air tempera	next item. I for heating while heating iority; hydro unit (Default) rater temperature reaches reaches the hydro unit's ump runs simultaneously. iture becomes the boiler-
	DN_6B5 sh	nould be "0 (Default)"				
	<installation exan<="" th=""><th>nple&gt;</th><th></th><th></th><th></th><th></th></installation>	nple>				
			]		TO <= -10*	-10* < TO
		Boiler		HEATING	Boiler + HP**	HP
	-			HOT WATER	HP	HP
			Radiator	HEATING & HOT WATER	Boiler for heating HP for hot water or heating	HP
			THEFT HERE	COOLING	-	HP (TO ≥ 10)
	Outdoor unit Hydro un	Buffer tank	(and the state of	COOLING & HOT WATER	HP for cooling or hot water	HP for cooling or hot water
	* Boiler & HP swi ** Boiler control / f	tching temp setting DN_23 = unctionality setting DN_5B =	= -10 L = 0 (HP+Boiler)		1	

Item		Opera	tion flow and a	applicable data, etc.	
7-2. Operation Mode and Control Method	<ul> <li>J zone: heat put</li> </ul>		ler operation *1		
	-10 Heat pur operation Heat pun operation Heat pun boiler ope	np &	I zone Diff: 5K J zone		
		ration (see 7-3-9) is ir		perature when an external	signal to control the limit of heat
	Temperature range in (Detected temp	n which the boiler sign erature of TWI, TWO of TWO and THO < 67°C	al is output r THO)		
	7-4) A02 failure detecti A02 failure detection is	deactivated depending	g on the settings o		ooiler is installed or not (DN_6B0).
	Boiler is installed or ( (DN_6B0)	failure detection	te A02 (Detected on)	ture recognized as A02 failu temperature of TWI, TWO THO)	
	OFF (Not installed)	0		TWO or THO $\ge$ 75°C (Beep) TWO or THO $\ge$ 75°C (Beep)	
	ON	0	TWI or	TWO or THO ≥ 75°C (Beep)	
		Diler under the condition unit, the user is fully re	on that no limit ha		rom the boiler has damaged parts
	7-5)2 zone temperatur Set the DN code corre		0	ions.	
	Boiler is installed (DN_6B0)	ZONE2 operation is using (DN_6BA)	P2 synchronize with P1 (DN_6B5)	Coordination of the boiler and heat pump	2 zone temperature control P1 / P2 / Mixing Valve control
			OFF (No synchronize, Always ON)	0 (Boiler and heat pump) 1 (Boiler only) 2 (Heater only)	ON / ON / ON
	ON	ON		3 (Boiler only (P1 OFF))	OFF / ON / ON
	(Installed)	(Using)	ON (Synchronize)	(Boiler and heat pump) (Boiler and heat pump) 1 (Boiler only) 2 (Heater only)	ON / ON / ON
				3 (Boiler only (P1 OFF))	OFF / OFF / OFF
					·

Item		Operation flow and applic	able data, etc.	
7-2.	Related DN	N		
Operation Mode and Control	DN	Setting item	Default	Variable range
Method	23	Boiler-heat pump switching temperature	-10°C	-20 - 20°C
	3E	Control priority between the hydro unit and boiler (Control valid for operating heat pump mode)	0: Hydro unit control	Independent temperature control for the hydro unit and boiler
	5B	Coordination of the boiler and heat pump	3: Boiler only (Pump OF	F) 0: Boiler and Heat pump 1: Boiler only 2: Heater only
	62	Activate/deactivate A02 failure detection	0: Activate	1: Deactivate
	A Hot wate 1) How to • When in the start c operat • A Hot v • The re usual • The us Chang HOT Hot v 65°C	hot water boost "ON" after pressing the remote controll heating side switches to in the hot water side, and contir ondition, TTW < 38°C. In addition, the backup heater is ion under TSC_H = 65°C. water boost operation returns to the usual operation after <u>mote controller display during a Hot water boost operation</u> sual set temperature change is used for changing the se the BOOST set temperature with DN_09, if necessary TWATER button set to "ON" water boost button set to "ON" Current heat pump operation Hot water supply side hot water operation (DN_09) to twater operation (DN_08) Usual operation	er [ 😰 ] button, a hea nues the operation rega s immediately energize or 60 minutes passed o on is the same as the s t temperature during a t.	at pump operation in progress irdless of the hot water supply ed to start a Hot water supply r reached 65°C. set temperature display of a
		T		
	DN	Setting item		g available range
	09	Hot water boost set temperature	65°C	40 - 65°C
	08	Hot water boost operation time		30 - 180 min Every 10 min

ltem		Operation flow and appli	cable data, e	etc.						
7-2. Operation Mode and Control Method	<ul> <li>9) Anti bacteria operation</li> <li>An Anti bacteria operation regularly performs a Hot water supply operation with the set temperature TSC_H = 65°C (can be set with DN_0A).</li> <li>1) How to operate</li> </ul>									
	at the set cyd The first Anti When the se another 30 m The priority z supply heate The hot wate forcibly perfor During Anti b	[ 22] ] button and then the remote controller Ant cle and time (both can be set with the remote cor bacteria operation starts when press the Anti bact t temperature 65°C is reached after the Anti bact hinutes (can be set with DN_0B). cone determined by the outside temperature sele r. er heat pump operation, when selected, ignores the rms a hot water operation. hacteria operation (Forcible hot water operation a t is changed from the remote controller, the norm	ntroller DN) to s cteria "ON" and eria operation s cts an operatio he hot water su t 65°C), the hot	tart Anti bacteria operation. I starting time come. started, the set temperature remains n, Hot water heat pump or hot water upply start condition (TTW < 38°C) a t water set temperature display is no						
	НОТ	WATER button set to "ON"								
		ţ								
	Anti t	pacteria button set to "ON"								
		V								
		Anti bacteria start time								
	65°C	hot water supply operation								
	65°C bo	t water supply operation for 30 minutes								
		hot water supply operation emperature: 40°C to 70°C)								
			_							
		🕂 Caution								
		C hot water supply operation with Anti bacteria, ontroller does not display 65°C.								
	Be careful no	t to burn yourself; Output water may be hotter								
		played on the remote controller.								
	Related DN									
	DN	Setting item	Default	Setting available range						
	0A	Anti bacteria set temperature	65°C	65 - 70°C						
	0B	Anti bacteria holding time	30 min	0 - 250 min						
	Remote controller 0C	Anti bacteria start time	22:00	0:00 - 23:00						
	Remote controller 0D	Anti bacteria operation cycle	7 days	Every day to 10 days						
		1	1							

Item		Operation flow and ap	oplicable data, et	с.					
7-2. Operation Mode and Control Method	<ul> <li>10) Night setback operation</li> <li>A Night setback operation performs heating at 5K lower and cooling at 5K higher temperatures against the remote controller set temperature from the setting start time (22:00) to the end time (6:00) every day.</li> <li>Note) • Set the remote controller time before starting a Night setback operation.</li> <li>• The set time can be changed with remote controller DN. (See 9-8)</li> </ul>								
	Related DN			1					
	DN	Setting item	Default	Setting available ra	ange				
	Remote controller I 0E	Night setback start Time setting	22:00	0:00 - 23:00					
	Remote controller I 0F	Night setback end Time setting	6:00	0:00 - 23:00					
	26 1	Night setback setting Temperature width	5 degree	3 - 20 degree					
	58 1	Night setback setting activate	0. Zone 1 & 2	1. Zone 1 only					
	1) How to opera	peration performs heating at the set tempe te remote controller [ ा] button and then Fr			eration at the se				
	<ul> <li>A Frost protection of</li> <li>1) How to opera</li> <li>Pressing the temperature of</li> <li>Set Frost pro</li> <li>The remote c</li> <li>A set temperation</li> <li>2) Automatic sto</li> <li>The operation</li> <li>Longest periodic</li> <li>By entering the "ON", the operation</li> <li>has passed.</li> </ul>	peration performs heating at the set tempe te remote controller [ ा] button and then Fr	operation. uring Frost protection ration cancels the op N_12 and 13 on the 2 and 13 on the rem operation will autor	starts a heating ope n. peration. remote controller. note controller and s	set Frost protec				
	<ul> <li>A Frost protection of</li> <li>1) How to opera</li> <li>Pressing the temperature of</li> <li>Set Frost profector</li> <li>The remote of</li> <li>A set temperation</li> <li>2) Automatic sto</li> <li>The operation</li> <li>Longest period</li> <li>By entering the "ON", the operation has passed.</li> <li>The operation</li> <li>Related DN</li> </ul>	te remote controller [ []] button and then Fr of 15°C. tection "OFF" cancels the Frost protection ontroller displays "F" as the temperature d ature change during a Frost protection oper p of Frost protection operation n period of Frost protection can be set at D od available: 20 days and 23 hours ne operation period (day and hour) at DN_1 eration period is set and the Frost protection n period setting (day and hour) is stored in	operation. uring Frost protection ration cancels the op N_12 and 13 on the 2 and 13 on the rem n operation will autor the memory.	starts a heating ope n. peration. remote controller. note controller and s natically be finished	set Frost protec after the perio				
	A Frost protection of 1) How to opera Pressing the temperature of Set Frost pro The remote of A set temperator Longest period By entering th "ON", the operation has passed. The operation Related DN DN	te remote controller [ []] button and then Fr of 15°C. tection "OFF" cancels the Frost protection ontroller displays "F" as the temperature d ature change during a Frost protection oper p of Frost protection operation n period of Frost protection can be set at D od available: 20 days and 23 hours ne operation period (day and hour) at DN_1 eration period is set and the Frost protection n period setting (day and hour) is stored in Setting item	operation. uring Frost protection ration cancels the op N_12 and 13 on the 2 and 13 on the rem n operation will autor the memory.	starts a heating ope n. peration. remote controller. note controller and s natically be finished Default Setting	set Frost protec after the perio available range				
	A Frost protection of 1) How to opera Pressing the temperature of Set Frost pro The remote of A set temperator Longest period By entering th "ON", the operation has passed. The operation Related DN DN 3A	te remote controller [ []] button and then Fr of 15°C. tection "OFF" cancels the Frost protection ontroller displays "F" as the temperature d ature change during a Frost protection oper p of Frost protection operation n period of Frost protection can be set at D bd available: 20 days and 23 hours ne operation period (day and hour) at DN_1 eration period is set and the Frost protectior n period setting (day and hour) is stored in Setting item Frost protection Yes / No	operation. uring Frost protection ration cancels the op N_12 and 13 on the 2 and 13 on the rem n operation will autor the memory.	starts a heating ope n. peration. remote controller. note controller and s natically be finished Default Setting a 1: Yes	set Frost protec after the perio <b>available range</b> 0: No				
	A Frost protection of 1) How to opera Pressing the temperature of Set Frost provide the A set Frost provide the A set temperator Longest period By entering the "ON", the operation has passed. The operation Related DN DN 3A 3B	te remote controller [ []] button and then Fr of 15°C. tection "OFF" cancels the Frost protection ontroller displays "F" as the temperature d ature change during a Frost protection oper p of Frost protection operation n period of Frost protection can be set at D bd available: 20 days and 23 hours ne operation period (day and hour) at DN_1 eration period is set and the Frost protectior n period setting (day and hour) is stored in Frost protection Yes / No Frost protection Set temperature	operation. uring Frost protection ration cancels the op N_12 and 13 on the 2 and 13 on the rem n operation will autor the memory.	starts a heating ope n. peration. remote controller. note controller and s natically be finished <u>Default Setting</u> <u>1: Yes</u>	set Frost protec after the perio a <b>vailable range</b> 0: No 8 - 20°C				
	A Frost protection of 1) How to opera Pressing the temperature of Set Frost provide A set Frost provide A set temperator Longest period By entering th "ON", the operation has passed. The operation Related DN DN 3A 3B 12 (Remote controlle	te remote controller [ []] button and then Fr of 15°C. tection "OFF" cancels the Frost protection ontroller displays "F" as the temperature d ature change during a Frost protection oper p of Frost protection operation n period of Frost protection can be set at D bd available: 20 days and 23 hours ne operation period (day and hour) at DN_1 eration period is set and the Frost protectior n period setting (day and hour) is stored in Setting item Frost protection Yes / No	operation. uring Frost protection ration cancels the op N_12 and 13 on the 2 and 13 on the rem n operation will autor the memory.	starts a heating ope n. peration. remote controller. note controller and s natically be finished <u>Default Setting</u> <u>1: Yes 1 15°C 8</u> 0 0	set Frost protec after the perio <b>available range</b> 0: No				

	Operation flow and applicable data, etc.												
-2. peration Mode	12) Auto ope		tor tomporature TO		ing on the suited	air tomaarat	o TO						
d Control	An Auto ope	ration sets the Wa	iter temperature TSC	∠_r aepend	ing on the outside	an temperature	e IU.						
ethod	1) How to c	operate											
			roller [ 🕞 ] button a										
			setting Auto mode '				g operat	ion.					
		•	plays "A" as the temp itrol is enabled, the r		<b>U</b> 1								
			button in menu displ				e, enabl	ing the set Au					
	Curve w	ater temperature	to be shifted by ±5K	range (DN	_27). When using	the auto curve							
			ım water temperatur	e at 55 (65)	°C and 20°C resp	ectively.							
		1, 1101, 1401 the temperature se	etting is changed du	ring an Auto	operation the op	eration continu	les						
			with a heating opera					eration.					
	<zone1< td=""><td></td><td></td><td></td><td></td><td></td><td></td><td></td></zone1<>												
			set temperature of s	•		•		•					
	with the	outside temperati	ure T0°C, B°C with 1	1°C, C°C w	vith 12°C, D°C with	$h 13^{\circ}C$ , and $E^{\circ}$	C with 2	0°C.					
	T00 5 (00)			Related D	N								
	TSC_F (°C)	 	±5K adjustable (DN_27)	DN	Setting it	em	Default	range					
	A (40)			2C \$	Setting temperature	A at T0	40	20 - 55 (65) °C					
	B (35)		~	2D \$	Setting temperature I	B at T1	35	20 - 55 (65) °C					
	C (30)			2E \$	Setting temperature	C at T2 (= 0°C)	30	20 - 55 (65) °C					
	D (25)	````		2F \$	Setting temperature I	D at T3	25	20 - 55 (65) °C					
	E (20)		· · · · · · · · · · · · · · · · · · ·	. 30 \$	Setting temperature I	E at 20°C	20	20 - 55 (65) °C					
		T0 T1 T2		C) A1 (	Outside temperature	то	-20	-3020°C					
		(-20) (-10)	(10)	29 (	Outside temperature	T1	-10	-15 - 0°C					
				2B (	Outside temperature	Т3	10	0 - 15°C					
				27 \$	Set temperature shift with	heating set to auto	0	-5 to 5K					
	<zone2< th=""><th>&gt;</th><th></th><th></th><th>Set temperature shift with</th><th>heating set to auto</th><th>0</th><th>-5 to 5K</th></zone2<>	>			Set temperature shift with	heating set to auto	0	-5 to 5K					
	• Set temp is a fixed DN_A2 =	perature of the ZO d value. "0": Percentage m	NE2 can be selected nethod that is set by nethod that is set by	* ( ): 801, t from two m DN_31.	1101, 1401 nethods (DN_A2). (			<u> </u>					
	• Set temp is a fixed DN_A2 =	perature of the ZO d value. "0": Percentage m "1": Fixed value m		* ( ): 801, d from two m DN_31. DN_A3, A4	1101, 1401 nethods (DN_A2). ( and A5.	One is a percer	ntage of 2	ZONE1, the ot					
	• Set temp is a fixed DN_A2 =	perature of the ZO d value. "0": Percentage m "1": Fixed value m	nethod that is set by nethod that is set by	* ( ): 801, d from two m DN_31. DN_A3, A4	1101, 1401 nethods (DN_A2). ( and A5.	One is a percer	ntage of 2	ZONE1, the ot					
	• Set temp is a fixed DN_A2 =	perature of the ZO d value. "0": Percentage m "1": Fixed value m However, it is	nethod that is set by nethod that is set by automatically contro	* ( ): 801, d from two m DN_31. DN_A3, A4	1101, 1401 nethods (DN_A2). ( and A5. temperature of Z(	One is a percer	ntage of 2	ZONE1, the ot					
	• Set temp is a fixed DN_A2 =	perature of the ZO d value. "0": Percentage m "1": Fixed value m However, it is	nethod that is set by nethod that is set by	* ( ): 801, d from two m DN_31. DN_A3, A4	1101, 1401 nethods (DN_A2). ( and A5. temperature of Z(	One is a percer	ntage of 2	ZONE1, the ot					
	• Set temp is a fixed DN_A2 =	perature of the ZO d value. "0": Percentage m "1": Fixed value m However, it is	nethod that is set by nethod that is set by automatically contro	* ( ): 801, d from two m DN_31. DN_A3, A4 bolled the set	1101, 1401 nethods (DN_A2). ( and A5. temperature of Z(	One is a percer	ntage of 2	ZONE1, the ot					
	• Set tem is a fixed DN_A2 = DN_A2 =	perature of the ZO d value. "0": Percentage m "1": Fixed value m However, it is	nethod that is set by nethod that is set by automatically contro	* ( ): 801, d from two m DN_31. DN_A3, A4 bolled the set	1101, 1401 nethods (DN_A2). ( and A5. temperature of Z( DN_A	One is a percer	ntage of 2	ZONE1, the ot					
	• Set tem is a fixed DN_A2 = DN_A2 = TSC_F	perature of the ZO d value. "0": Percentage m "1": Fixed value m However, it is DN_A2 = (	nethod that is set by nethod that is set by automatically contro 0 Percentage method	* ( ): 801, t from two m DN_31. DN_43, A4 obled the set	1101, 1401 nethods (DN_A2). ( and A5. temperature of Z( 	One is a percer	ntage of 2	ZONE1, the ot					
	• Set tem is a fixer DN_A2 = DN_A2 = TSC_F A B	perature of the ZO d value. "0": Percentage m "1": Fixed value m However, it is DN_A2 = 0 (*C) (40)	nethod that is set by nethod that is set by automatically contro 0 Percentage method	* ( ): 801, t from two m DN_31. DN_43, A4 obled the set	1101, 1401 hethods (DN_A2). ( and A5. temperature of Z( DN_A "SC_F (°C) A' (40)	One is a percer	ntage of 2	ZONE1, the ot					
	• Set tem is a fixed DN_A2 = DN_A2 = TSC_F A B C	perature of the ZO d value. "0": Percentage m "1": Fixed value m However, it is DN_A2 = 0 (°C) (40) (35) (30)	nethod that is set by nethod that is set by automatically contro 0 Percentage method	* ( ): 801, t from two m DN_31. DN_43, A4 obled the set	1101, 1401 hethods (DN_A2). ( and A5. temperature of Z( DN_A "SC_F (°C) A' (40)	One is a percer	ntage of 2	ZONE1, the ot					
	• Set tem is a fixer DN_A2 = DN_A2 = TSC_F A B C D	perature of the ZO d value. "0": Percentage m "1": Fixed value m However, it is DN_A2 = 0 (°C) (40) (35) (30) (25)	nethod that is set by nethod that is set by automatically contro 0 Percentage method	* ( ): 801, t from two m DN_31. DN_43, A4 obled the set	1101, 1401 nethods (DN_A2). ( and A5. temperature of Z( DN_A 'SC_F (°C) A' (40) B' (35)	One is a percer	ntage of 2	ZONE1, the ot					
	• Set tem is a fixer DN_A2 = DN_A2 = TSC_F A B C D	perature of the ZO d value. "0": Percentage m "1": Fixed value m However, it is DN_A2 = 0 (°C) (40) (35) (30)	nethod that is set by nethod that is set by automatically contro 0 Percentage method	* ( ): 801, t from two m DN_31. DN_43, A4 obled the set	1101, 1401 hethods (DN_A2). ( and A5. temperature of Z( DN_A 'SC_F (°C) A' (40) B' (35) E' (20)	One is a percer	e zone2	ZONE1, the of 2 or more.					
	• Set tem is a fixer DN_A2 = DN_A2 = TSC_F A B C D	perature of the ZO d value. "0": Percentage m "1": Fixed value m However, it is DN_A2 = 0 (*C) (40) (35) (30) (25) (20) T0 T	0 Percentage method 20NE 1 20NE 1 20NE 1 20N 20N 20 20N 20N 20 20N 20N 20 20N 20N 20 20N 20N 20 20N 20N 20N 20 20N 20N 20N 20 20N 20N 20N 20N 20N 20N 20N 20N 20N 20N	* ( ): 801, t from two m DN_31. DN_43, A4 obled the set	1101, 1401 hethods (DN_A2). ( and A5. temperature of Z( DN_A "SC_F (°C) A' (40) B' (35) E' (20) T0	One is a percer	e zone2	ZONE1, the ot					
	• Set tem is a fixed DN_A2 = DN_A2 = TSC_F A B C D E	perature of the ZO d value. "0": Percentage m "1": Fixed value m However, it is $DN_A2 = 0$ (°C) (40) (35) (30) (25) (20) T0 T1(-20) (-10)	0 Percentage method 2 ONE 1 2 ONE 1	* ( ): 801, 1 from two m DN_31. DN_A3, A4 Diled the set 	1101, 1401 hethods (DN_A2). ( and A5. temperature of Z( DN_A 'SC_F (°C) A' (40) B' (35) E' (20) T0 (-20)	One is a percer ONE1 to be the 2 = 1 Fixed value T1 (-10)	e ZONE2	ZONE1, the of 2 or more.					
	• Set tem is a fixer DN_A2 = DN_A2 = TSC_F A B C D E	perature of the ZO d value. "0": Percentage m "1": Fixed value m However, it is $DN_A2 = 0$ (*C) (40) (35) (30) (25) (20) (20) TO T1 (-20) (-10)	0 Percentage method 20NE 1 20NE 1 20NE 1 20NE 1 20NE 1 20N 1 1 1 7 20N 1 20N 20N 20N 20N 20N 20N 20N 20N	* ( ): 801, t from two m DN_31. DN_43, A4 DIled the set 	1101, 1401 hethods (DN_A2). ( and A5. temperature of Z( $DN_A$ $SC_F (°C)$ A' (40) B' (35) E' (20) The ZONE2 set t	One is a percer	e ZONE2	ZONE1, the of 2 or more.					
	• Set tem is a fixer DN_A2 = DN_A2 = TSC_F A B C D E	perature of the ZO d value. "0": Percentage m "1": Fixed value m However, it is $DN_A2 = 0$ (*C) (40) (35) (30) (25) (20) (20) TO T1 (-20) (-10)	0 Percentage method 2 ONE 1 2 ONE 1	* ( ): 801, t from two m DN_31. DN_43, A4 DIled the set 	1101, 1401 hethods (DN_A2). ( and A5. temperature of Z( DN_A 'SC_F (°C) A' (40) B' (35) E' (20) T0 (-20)	One is a percer	e ZONE2	ZONE1, the of 2 or more.					
	• Set tem is a fixer DN_A2 = DN_A2 = TSC_F A B C D E Auto-Curve the water ter	perature of the ZO d value. "0": Percentage m "1": Fixed value m However, it is DN_A2 = 0 (°C) (40) (35) (30) (25) (20) T0 T1 (-20) (-10) in ZONE2 shows 8 mperature setting c	0 Percentage method 20NE 1 20NE 1 20NE 1 20NE 1 20NE 1 20N 1 1 1 7 20N 1 20N 20N 20N 20N 20N 20N 20N 20N	* ( ): 801, t from two m DN_31. DN_43, A4 DIled the set 	1101, 1401 hethods (DN_A2). ( and A5. temperature of Z( $DN_A$ $SC_F (°C)$ A' (40) B' (35) E' (20) The ZONE2 set t	One is a percer	e ZONE2	ZONE1, the of 2 or more.					
	• Set tem is a fixer DN_A2 = DN_A2 = TSC_F A B C D E	perature of the ZO d value. "0": Percentage m "1": Fixed value m However, it is DN_A2 = 0 (°C) (40) (35) (25) (20) (25) (20) TO T1 (-20) (-10) in ZONE2 shows 8 mperature setting c	0 Percentage method 20NE 1 20NE 1 20NE 1 20NE 1 20NE 1 20N 1 1 1 7 20N 1 20N 20N 20N 20N 20N 20N 20N 20N	* ( ): 801, t from two m DN_31. DN_43, A4 DIled the set 	1101, 1401 hethods (DN_A2). ( and A5. temperature of Z( $DN_A$ $SC_F (°C)$ A' (40) B' (35) E' (20) The ZONE2 set t	One is a percer	e ZONE2	ZONE1, the ot					
	Set temp is a fixer DN_A2 = DN_A2 = TSC_F A B C D E Auto-Curve the water tent <u>Related D</u>	perature of the ZO d value. "0": Percentage m "1": Fixed value m However, it is DN_A2 = 0 (°C) (40) (35) (25) (20) (25) (20) TO T1 (-20) (-10) in ZONE2 shows 8 mperature setting c	nethod that is set by nethod that is set by automatically control 0 Percentage method 20NE 1 20NE 1 20NE 1 20NE 1 20NG (DN) 30% (DN) 30% (DN) of that of Z does not fall below 200 30% (DN) of that of Z	* ( ): 801, 1 from two m DN_31. DN_A3, A4 billed the set 	1101, 1401 hethods (DN_A2). ( and A5. temperature of Z( DN_A "SC_F (°C) A' (40) B' (35) E' (20) The ZONE2 set t temperature T0°(	One is a percer	e ZONE2	ZONE1, the ot					
	Set temp is a fixed DN_A2 = DN_A2 = TSC_F A B C D E Auto-Curve the water ten Related D A2 A3	perature of the ZO d value. "0": Percentage m "1": Fixed value m However, it is DN_A2 = 0 (°C) (40) (35) (25) (20) (20) (25) (20) (20) (20) (20) (20) (20) (20) (20	nethod that is set by nethod that is set by automatically control 0 Percentage method 20NE 1 20NE 1 20NE 1 20NE 1 20NG (DN 3 1 T2=0 T3 20 30% (DN) of that of Zi does not fall below 20 20 20 20 20 20 20 20 20 20 20 20 20 2	* ( ): 801, * ( ): 801, I from two m DN_31. DN_A3, A4 billed the set 	1101, 1401 hethods (DN_A2). ( and A5. temperature of Z( DN_A 'SC_F (°C) A' (40) B' (35) E' (20) The ZONE2 set t temperature T0° ( range 0 or 1 20 - 55 (65) °C	One is a percer	e ZONE2	ZONE1, the ot					
	Set temp is a fixed DN_A2 = DN_A2 = TSC_F A B C D E Auto-Curve the water ten Related I DN A2 A3 A4	perature of the ZO d value. "0": Percentage m "1": Fixed value m However, it is DN_A2 = 0 (°C) (40) (35) (25) (20) (20) (20) (20) (20) (20) (20) (20	tting item to set ZONE2 e A' at T0 e B' at T1	* ( ): 801, 1 from two m DN_31. DN_A3, A4 billed the set 	1101, 1401 hethods (DN_A2). ( and A5. temperature of Z( DN_A 'SC_F (°C) A' (40) B' (35) E' (20) The ZONE2 set t temperature T0° ( 20 - 55 (65) °C 20 - 55 (65) °C	One is a percer	e ZONE2	ZONE1, the ot					
	Set temp is a fixed DN_A2 = DN_A2 = DN_A2 = TSC_F A B C D E Auto-Curve the water tent Related D A2 A3 A4 A5	perature of the ZO d value. "0": Percentage m "1": Fixed value m However, it is DN_A2 = 0 (°C) (40) (35) (30) (25) (20) (20) (20) (20) (20) (20) (20) (20	tting item to set ZONE2 e A' at T0 e B' at 20 °C	* ( ): 801, * ( ): 801, I from two m DN_31. DN_A3, A4 billed the set 	1101, 1401 hethods (DN_A2). ( and A5. temperature of Z( DN_A 'SC_F (°C) A' (40) B' (35) E' (20) The ZONE2 set t temperature T0° ( C 20 - 55 (65) °C 20 - 55 (65) °C 20 - 55 (65) °C	One is a percer	e ZONE2	ZONE1, the ot					
	Set temp is a fixer DN_A2 = DN_A2 = DN_A2 = TSC_F A B C D E Auto-Curve the water tent Related D N A2 A3 A4 A5 31	perature of the ZO d value. "0": Percentage m "1": Fixed value m However, it is DN_A2 = 0 (°C) (40) (35) (25) (20) (20) (20) (20) (20) (20) (20) (20	tting item to set ZONE2 e A' at T0 e B' at 20 °C	* ( ): 801, 1 from two m DN_31. DN_A3, A4 billed the set 	1101, 1401 hethods (DN_A2). ( and A5. temperature of Z( DN_A 'SC_F (°C) A' (40) B' (35) E' (20) The ZONE2 set t temperature T0° ( 20 - 55 (65) °C 20 - 55 (65) °C	One is a percer	e ZONE2	ZONE1, the of 2 or more.					

ltem				Opera	ation flo	ow and	applic	able da	ata, etc	•			
7-2. Operation Mode and Control Method	13)Night time low- A night time low-n period during nigh	oise ope	ration re					the num	ber of oi	utdoor fa	n rotatio	ons for a	certain
	Single phase (outdoor unit)	40	)1	60	01	8	01	11	01		14	01	
		Heating/ Hot water supply	Cooling	Heating/ Hot water supply	Cooling	Heating/ Hot water supply	Cooling	Heating/ Hot water supply	Cooling	Mode1( Heating/ Hot water supply	default) Cooling	Mo Heating/ Hot water supply	de2 Cooling
	Compressor Hz FAN rpm	42,6 320	50,4 400	55,2 320	50,4 400	56,4 410	48,0 540	64,2 410	48,0 540	42,0 450	44,4 600	52,8 450	51,0 600
	3 phase (outdoor unit)		8	01			11	101			14	01	
		Mode1( Heating/ Hot water	default) Cooling	Heating/ Hot water	ode2	Heating/ Hot water	(default) Cooling	Heating/ Hot water	de2 Cooling	Mode1( Heating/ Hot water	default) Cooling	Heating/ Hot water	de2 Cooling
	Compressor Hz	supply 36,6	33,6	supply 39,0	37,2	supply 36,6	37,2	supply 39,0	44,4	supply 42,0	44,4	supply 52,8	51,0
	FAN rpm * When ambi			450 is very l	600 low, corr	450 hpressor	600 frequen	450 and fa	600 an rotati	450 ons will g	600 get to hig	450 gh for pr	600 evention
	the product The night time lov	v-noise c	peratio			-	-	ng the re	emote co	ontroller I	DN_09.		
	<how set="" to=""> - Re Select "Silent mod</how>						g".						
	Mode 2 cannot be The night time low 0:mode1, 1:mode	v-noise c		-	•	• ·					101).		
7-3. Hydro Unit Control	<ol> <li>Capacity contr release, low-te</li> <li>This unit controls to output so that the remote controller so 1-1)Compressor of</li> </ol>	the comp water ou set temp	re relea pressor itlet tem	ise) frequenc iperature	cy and h	eater	Т	Remote emperat (TSC_H		ings		Hydro outlet te (THO, T	emperatu
	<ul> <li>Calculates t controller se water outlet Heating: TV</li> <li>Sets the Hz determines the tempera</li> <li>Detects the</li> <li>Compares t current ope output acco</li> <li>The contro supply, heat</li> </ul>	the differ et temper tempera VO). signal c the num ature differ number he Hz si ration Hz rding to I details	rature (' ature (H orrectio ber of c erence. of com gnal con z, and cl the diffe are the	TSC_H, ot water n amour ompressor r rrection a hanges t erence. same for	TSC_F) supply: nt that sor rotations amount a the comp	THO, ons by and the pressor			E	H-THO for TSC_F for heatin z signal mber of o rotation o	-TWO g/cooling correct compress detection	ion	
										verter out	compress	_	
		e phase oor unit 401 601 801 101 401		ompresso changeat 10 Hz to 10 Hz to 10 Hz to 10 Hz to 10 Hz to	ble range 5 80 Hz 5 99 Hz 5 89 Hz 5 99 Hz		۰ ٤ 1	outdoor ur 301 101 401		npressor hangeabl 10 Hz to 10 Hz to 10 Hz to	e range 53 Hz 68 Hz	У	

ltem			0	peratior	n flow a	nd applic	able da	ita, etc.
7-3. Hydro Unit Control	<ul> <li>For the detern depending of the compression of compression controller.</li> </ul>	operation cted tem on TWI. (S essor fre- uses the uses the the stop or abnor	is perform perature, <sup>-</sup> See the tai quency ins compress and TC < mal stop st	TC = TWC ble below struction fi sor to stop 3°C is no tops the o	D of a hea ) rom the h o abnorma t detected peration o	at pump op ydro unit is ally. When I for 20 min of heat pur	beration is s less tha the comp nutes, the mp, and fa	ding to the TC sensor detecting temperature s used. The values of T7 through T10 varies on 10 Hz, the compressor stops. pressor restarts when 140 seconds has e abnormal stop counter is cleared. 10 times ault code A11 is displayed on the remote mality detection counter is reset to 0.
							7000	Control energtion
	TC (TWO)	1	4	S (norma	al)		Zone R1	Control operation Increase compressor frequency by 0.8 Hz every
		slow up)	///	R2 (slow			R2	60 sec. Increase compressor frequency by 0.4 Hz every
	Т8 ——		<u> </u>	Q (kee	ep)		0	60 sec.
	т9 —			P (slow of			0	Decrease compressor frequency by 4.5 Hz every 10 sec.
	T10	$\leftarrow$	$\supset$	O (down	,		Р	Decrease compressor frequency by 2.4 Hz every 10 sec.
	T11			Forcible	ston		Q	Keep compressor frequency.
	TC = TWO					(°C)		
	тwi	T7	Т8	Т9	T10	T11		
	TWI < 10	8.0	6.0	4.0	3.0	2.5		
	10 ≤ TWI < 15	8.5	6.5	4.5	3.5	2.5		
	15 ≤ TWI < 20	9.0	7.0	5.0	4.0	2.5		
	20 ≤ TWI	9.5	7.5	5.5	4.5	2.5		
	to the calculat • If TC + TWC on the remo	vention, f ed values falls belo te contro	the compros of TC and ow -15 for a ller.	essor is co d TWO. a total of 1	ontrolled	he compre	essor stop	ration as shown in the table below according as abnormally and fault code A10 is displayed rmality detection counter is reset to 0.
	TC + TWO \		1	C. N		70	one	Control operation
	<sub>T7</sub> — — — —				ormal	S (normal)		Normal cooling operation
	'' \		Γ	P: Do	own			Decrease compressor frequency by approx.
	т8 ───े				014/2	P (slowdov	wn)	2.0 Hz every 10 sec.
	Т9	$\leq$				O (down)		Decrease compressor frequency by approx. 4.5 Hz every 10 sec.
				FUIC	ed stop	(Forced st	op)	Stop the compressor.
	TC + TWO	T7 6.0	T8 4.0	T9 -15				

ltem			Operation flo	ow and applicable data, e	etc.
-3. Iydro Unit Control	met. Note tha • When 120 • The water *( ):801, 11 • The hot wa • The HP_O	apply operation water heat pump of at when the hot wat minutes has passe inlet temperature ( 101, 1401 ater cylinder sensol	ter supply set te ed after the hot TWI) reaches 5 r reaches the H °C-DN) is reach	emperature (TSC_F) is reached water heat pump operation st	N).
	Heat pump_	(Heate	er off er on thout ater heat		Diff: 2K arget-4 with st or operation
	2-2)Heating oper				
	Object to The back select th every 10 heater o	b be controlled: Ba kup heater control s le ZONE (A-D). The minutes (DN) dep	starts when 13 r e backup heate bending on the c THO). When th ter.	minutes has passed after the h er control increases, decrease difference between the heatin le heating set temperature (TS rmality detection (A02 display	s, or maintains the number of heaters g set temperature (TSC_F) and the SC_F) is reached, the hydro stops
	Object to The back select th every 10 heater o energizin THO	b be controlled: Ba kup heater control s le ZONE (A-D). The minutes (DN) dep utlet temperature ( ng the backup heat	ckup heater starts when 13 r e backup heate pending on the c (THO). When th ter. Abnor Heat 5, 10	minutes has passed after the her control increases, decrease difference between the heatin he heating set temperature (TS mality detection (A02 display <u>Diff: 2K</u> Heater off ter output down every 0, 15, or 20 minutes <u>Diff: 2K</u> KEEP <u>Diff: 2K</u> Heater output up every	s, or maintains the number of heaters g set temperature (TSC_F) and the SC_F) is reached, the hydro stops
	<ul> <li>Object to The back select th every 10 heater o energizin</li> <li>THO</li> <li>75</li> <li>TSC_F-0</li> <li>TSC_F-2</li> <li>TSC_F-4</li> <li>TSC_F-4</li> <li>Status</li> <li>Heater 1</li> <li>Heater 2</li> <li>Heater 3</li> <li>(1) HWT-**M3</li> <li>(2) HWT-**T6</li> <li>Restriction When outd</li> </ul>	be controlled: Ba kup heater control s le ZONE (A-D). The minutes (DN) dep utlet temperature ( ng the backup heat E zone D zone C zone B zone A zone B ackup-heater B Backup-heater B Backup-heater B Backup-heater B Backup-heater B Backup-heater	ckup heater starts when 13 r e backup heate pending on the o THO). When th ter. Abnor Heater ON/OFF 3 kW = ON 6 kW = ON 9 kW = ON the backup heate energization du	minutes has passed after the her control increases, decrease difference between the heatin he heating set temperature (TS mality detection (A02 display <u>Diff: 2K</u> <u>Heater off</u> ter output down every 0, 15, or 20 minutes <u>Diff: 2K</u> <u>KEEP</u> <u>Diff: 2K</u> Heater output up every 10, 20, 30, or 40 minutes <u>Diff: 2K</u> Heater output up every 10, 20, 30, or 40 minutes <u>Calledo</u> er 1 of 3 kW only. er 2 of 3 kW. (Total 6 kW) ring heating mode (For energ	s, or maintains the number of heaters g set temperature (TSC_F) and the SC_F) is reached, the hydro stops ed)
	<ul> <li>Object to The back select th every 10 heater o energizin</li> <li>THO 75</li> <li>TSC_F-0</li> <li>TSC_F-2</li> <li>TSC_F-4</li> <li>TSC_F-4</li> <li>TSC_F-4</li> <li>Status Heater 1</li> <li>Heater 2</li> <li>Heater 3</li> <li>(1) HWT-**M3</li> <li>(2) HWT-**T6</li> <li>Restriction When outd</li> </ul>	be controlled: Ba kup heater control s le ZONE (A-D). The minutes (DN) dep utlet temperature ( ng the backup heat E zone D zone C zone B zone A zone B ackup-heater Backup-heater Backup-heater Backup-heater Backup-heater Backup-heater Backup-heater C zone B zone B zone C zone C zone B zone	ckup heater starts when 13 r e backup heate pending on the of (THO). When the ter. Abnor Heater ON/OFF 3 kW = ON 6 kW = ON 9 kW = ON he backup heate energization du higher than the	minutes has passed after the her control increases, decrease difference between the heatin re heating set temperature (TS mality detection (A02 display <u>Diff: 2K</u> Heater off ter output down every 0, 15, or 20 minutes <u>Diff: 2K</u> KEEP <u>Diff: 2K</u> Heater output up every 10, 20, 30, or 40 minutes er 1 of 3 kW only. er 2 of 3 kW. (Total 6 kW) ring heating mode (For energ reference valve, the backup h	g set temperature (TSC_F) and the SC_F) is reached, the hydro stops ed)
	<ul> <li>Object to The back select th every 10 heater o energizin</li> <li>THO</li> <li>75</li> <li>TSC_F-0</li> <li>TSC_F-2</li> <li>TSC_F-4</li> <li>TSC_F-4</li> <li>Status</li> <li>Heater 1</li> <li>Heater 2</li> <li>Heater 3</li> <li>(1) HWT-**M3</li> <li>(2) HWT-**T6</li> <li>Restriction When outd</li> <li>Related DN</li> <li>DN</li> </ul>	be controlled: Ba kup heater control s le ZONE (A-D). The minutes (DN) dep utlet temperature ( ng the backup heat E zone D zone C zone B zone A zone B ackup-heater B Backup-heater B Backup-heater B Backup-heater B Backup-heater B Backup-heater	ckup heater starts when 13 r e backup heate pending on the o THO). When th ter. Abnor Heater ON/OFF 3 kW = ON 6 kW = ON 9 kW = ON the backup heate energization du	minutes has passed after the her control increases, decrease difference between the heatin he heating set temperature (TS mality detection (A02 display <u>Diff: 2K</u> <u>Heater off</u> ter output down every 0, 15, or 20 minutes <u>Diff: 2K</u> <u>KEEP</u> <u>Diff: 2K</u> Heater output up every 10, 20, 30, or 40 minutes <u>Diff: 2K</u> Heater output up every 10, 20, 30, or 40 minutes <u>Calledo</u> er 1 of 3 kW only. er 2 of 3 kW. (Total 6 kW) ring heating mode (For energ	s, or maintains the number of heaters g set temperature (TSC_F) and the SC_F) is reached, the hydro stops ed)

ltem	Operation flow and applicable data, etc.							
7-3. Hydro Unit Control	<ul> <li>2) Control at the time of heating heater operation <ul> <li>Controlled Object: Backup heater, Booster heater</li> <li>The backup heater control starts when 3 minutes has passed after the heating heater operation star</li> <li>The backup heater control increases, decreases, or maintains the number of heaters every 10 minu</li> <li>depending on the difference between the heating set temperature (TSC_F) and the heater outlet ter</li> <li>(THO). Note that when the heating set temperature (TSC_F) +2K is reached, the unit stops energizi</li> </ul> </li> </ul>							
	TΗ	HO ,						
		E zone	\ Abnormality de	tection (A02 disp	plaved)			
	75	5 D zone	\	Diff: 2K	· /			
	TSC_F		Heater of Heater outpu	t ut down every				
	TSC_F	F-0	5, 10, 15, or					
	TSC_F	B zone	KEEP	Diff: 2K				
	100_1	A zone		Diff: 2K utput up every				
				0, or 40 minutes	3			
	Status	s Heater ON	I/OFF	7				
	Heater	1 Backup-heater 3 kW = ON		-				
	Heater	2 Backup-heater 6 kW = ON						
	Heater	3 Backup-heater 9 kW = ON	Backup-heater 9 kW = ON					
	Heater	4 Heater 3 + Booster heater						
	Related DN	Setting iten	1	Default	Setting available range			
		Hot water supply heat pump start		38°C	20 - 45°C			
	21 H	Hot water supply heat pump stop	temperature	52°C	40 - 65°C			
		Heater control of down time		1:10 min	0: 5 min 2: 15 min 3: 20 min			
	34	Heater control of up time		0:10 min	1: 20 min 2: 30 min 3: 40 min			
	<ul> <li>Object</li> <li>When a pump op accordin the set to</li> <li>1) When the ten heaten β can</li> </ul>	control at the time of defrostin t to be controlled: Backup hea defrosting operation starts du peration, the unit energizes a ng to the heater outlet tempera- emperature (TSC_F) as show the heater outlet temperature mperature of 2°C below the T r is energized. be changed for energy savin	ater Iring the heating h backup heater (3 ature sensor (THC /n in Figure. sensor (THO) drc SC_F-β, the back g.	kW) )) and TSC_F ips to	- β Heater OFF Heater ON Heater ON Heater ON/OFF			
	Defrosting ends according to the usual heater control.							
	DN	Setting item	Default	Setting availab	ple range			
	Βα β	β: 0 = 0K,, 4 = 40K Recommendation: $β = 2$ (20K)	ОК	0K - 40				
_	To preve operated • Object 1)Energ 2)Energ	heater energization ent freeze, the unit energizes d or in operation. t to be controlled: Backup hea jization start condition: TWO jization stop condition: TWO ng ends according to the usua	ater < 4 or TWI < 4 or <sup>-</sup> ≿ 5 and TWI ≥ 5 a	THO < 4	ter (3 kW) regardless of the unit status, no			

Item		C	Operation	flow an	d applicable dat	a, etc.			
7-3. Hydro Unit Control	According heater, and boos (Caution) All heater	and booster. For details, see 9-1. (Caution) All heater should be added to this Air to water system.							
		The system has been designed to operate with all electrical heaters energized.							
	One circu circulation	) Circulation pump controlObject to be controlled: Backup heater One circulation pump (external circulation pump P2) can be connected to the unit in addition to the built-in circulation pump P1. You can change the settings of the built-in pump P1 and the external circulation pump P2 using DN_5A, DN_6D							
		DN_6D1.Defrosting er							
	Item			Operatio			Initial value		
	Circulation	5A: Built-in circulation p	ump P1's acti	on during	hot water supply operation	ation:	0: HP operation only		
	pump Related DN	HP operation only / 6D0: Built-in circulation p	ump P1's acti	on during	heating operation:		0: Always energized		
		Always energized / 6B5: External circulation p			nsor detect over than 2	20°C.	1: Synchronous		
		Non-synchronous / \$ 6D1: Pump ON/OFF cycli	-		uilt-in circulation pump	P1	1 : Regular power		
					. ,				
	If the exte	rnal circulation pump F	2 is set to I	lon-sync	hronous, the pump	P2 is always en	ergized.		
	The pump • When the	g the built-in circulation operation starts under ne [ F2 ] or [ F1 ] button np speed changes to a	the condition is pressed.			ontrol period is <sup>2</sup>	1 [sec].		
	Basic flow Heating Cooling	/ Hot water supply: FL			0 / 4.15 [L/min] 0 / 4.19 [L/min]				
		Heating capacity	Hot water	suuply	Cooling capacity		mum flow rate		
		[kW]	capacity		[kW]	Heating/Hot wa supply mode[L/i	-		
	401	4.0	4.0		4.0	5.5	11.0		
	601	6.0	4.0		5.0	5.5	11.0		
	801	8.0	8.0		6.0	6.0	14.0		
	1101	11.0	8.0		8.0	6.0	14.0		
	1401	14.0	14.0	)	10.0	6.0	18.0		
	Target flo operation operation The minin The maxin	condition. And, target f noise. num target value (FL_n num target value (FL_n	the correction acce ected by DN_6A7 s rate) + 2 [L/min] 1, 601, 1101 01	ording to ambien etting, for examp	it temperature and other ole, considered pump				
		DN_6A6 to "0000", pu	• •	fixed, it		on DN:A0 setting	, 		
	DN	Setting item			Default		Setting available range		
	6A6	Pump speed control			ed speed 0001: Varia		0001: Variable speed		
	6A7	Pump speed control corre	ection	0000: 10	0% 0001: 90% 0002: 7	75% 0003: 50%	0000: 100%		
	DN cod	e A0 Pump flow rate							
	0 (Defa								
	1	90%							
	2	80%							
	3	70%							
	4	60%							
	5	50%							
	1								

Item		Operation flow and	applicable data, etc.
7-3.	Example of pump speed	d control (heating and hot wate	r supply mode including defrost operation)
Hydro Unit Control	Item		Status
	Target flow rate	Heating target considered TO X°C Heating target considered TO Y°C Hot water supply target FL_min	
	Defrost		
	Heating	Compressor ON Comp. OFF / Thermostat OFF Operation STOP	
	Hot water supply	Compressor ON Comp. OFF / Heater operation Operation STOP	
	Ambient temperature	TO: X°C TO: Y°C	
	noise by pump speed ch 3-2)Controlling the built-in c You can change the acti	nanging quickly. irculation pump P1 during the h ion of the built-in circulation pur ): The pump stops as the HP fo	np P1 during the hot water supply operation using DN_5A.
	You can change the act • DN_6D0 = "0" (Defaul	lt): The pump is always energiz	mp P1 during the heating operation using DN_6D0.
		ated voltage 220-240 V, conne the pump P2 is synchronized 2 is not synchronized.	ectable directly up to 200W rated power output. with the pump P1 using DN_6B5. The pump P2 is always
	NOTE: 2 zone temperature contro	ol by boiler with P1 OFF is requ	uired DN_6B5 OFF
	0	tion of the external circulation p t): The pump is always energiz	nump P2 during cooling operation by setting DN_64. ed.


ltem	Operation flow and applicable data, etc.							
7-3. Hydro Unit Control	<ul> <li>3-6) Controlling the built-in circulation pump P1 during cooling operation controlled with the room temperature thermostat or room temperature remote controller.</li> <li>You can change the action of the built-in circulation pump P1 by setting DN_65.</li> <li>DN_65 = "00" (Default): The pump is always energized.</li> <li>DN 65 = "01": The pump is stopped when the thermostat is turned off.</li> </ul>							
	lower that	iler is installed (DN_6B0 = "1"), do NOT set intermittent ope n the Boiler-heat pump switching temperature (DN_23). imit of TO during the heating operation, must be higher tha		· _ /				
	Because	when TO is lower than the Boiler-heat pump switching tem ps due to the intermittent operation, the boiler output is also	•	output is ON state. But if the				
	Because pump sto	when TO is lower than the Boiler-heat pump switching tem ps due to the intermittent operation, the boiler output is also	•					
	Because pump sto Related DN	when TO is lower than the Boiler-heat pump switching tem ps due to the intermittent operation, the boiler output is also	b turned OFF.	Setting value 1: Always energized				
	Because pump sto Related DN	when TO is lower than the Boiler-heat pump switching tem ps due to the intermittent operation, the boiler output is also Setting item	Default	Setting value				
	Because pump sto Related DN DN 5A	when TO is lower than the Boiler-heat pump switching tem ps due to the intermittent operation, the boiler output is also Setting item Control of the pump P1 during the hot water supply operation	Default 0: synchronized with HP	Setting value				
	Because pump sto Related DN 5A 64	when TO is lower than the Boiler-heat pump switching tem ps due to the intermittent operation, the boiler output is also Setting item Control of the pump P1 during the hot water supply operation Control of the pump P2 during in cooling operation Control of the pump P1 while using the room temperature control	Default 0: synchronized with HP 0: Always ON 0: Always ON	Setting value 1: Always energized 1: Always stopped 1: Stopped when the				


ltem	Operation flow and applicable data, etc.							
7-3.	4) Control by the flow sensor							
Hydro Unit Control	Whether water flows or not is judged with the valve of water flow sensor.							
	operation, T	he HP, backu	p heater and booster h	ensor after the hot water su eater are not energized. Si				
		ation of the flo	at water does not flow. ow sensor is the same i	in all model. The flow settin	g differs due to	the specification of pip		
	To set different control.	ent radiator ur		control) or floor heating supply ten trols Mixing Valve every 2 r				
				loor inlet water temperature				
	Т	SC_AT	2 < TSC_ΔT	-2 ≤ TSC_ΔT ≤ 2	-2 > TSC_Δ	т		
	Con	trol value	+ 1 step (Open)	± 0 step	- 2 step (Clos	se)		
	Initi	ial value	Driving range	1 step	Control cyc	le		
		9	0 - 60	3 WV move 3.75 degrees	2 min (DN)	)		
	2 zone te	emperature co	-	if 24 hours pass with the 1 OFF is required DN_6B	•	sed.		
	The mixin 2 zone te Related DN	emperature co	ontrol by boiler with P	1 OFF is required DN_6B	5 = "0".			
	The mixin 2 zone te Related DN	emperature co	ontrol by boiler with P Setting item	•	5 = "0".	sed. iilable range		
	The mixin 2 zone te Related DN DN 0C	emperature co	Setting item	1 OFF is required DN_6B	5 = "0". Setting ava 30 - 2	ilable range		
	The mixin 2 zone te Related DN 0C 59	Mixing Valve op Mixing Valve co	Setting item Setting item peration time introl time	1 OFF is required DN_6B Default 60	5 = "0". Setting ava 30 - 2	illable range 40 sec		
	The mixin 2 zone te Related DN 0C 59 6) Room te	Mixing Valve op Mixing Valve co Mixing Valve co	Setting item Setting item ntrol time ntrol	1 OFF is required DN_6B Default 60	5 = "0". Setting ava 30 - 2 30 sec, 7	<b>illable range</b> 140 sec 1 - 30 min		
	The mixin 2 zone te Related DN 0C 59 6) Room te You can 6-1) Installir • Wiring panel remot • Place Oppo	Mixing Valve op Mixing Valve op Mixing Valve co emperature co n install a sub ng the sub rem g with the main , connect the te controller, w to install (insi site to the rad	Setting item Setting item peration time introl time ntrol remote controller (sepa note controller n unit (See the figure of sub remote controller to /hich is connected with	Default         60         2         arately purchased) in a root         n the right): After detaching         o the right terminal on the n         the hydro unit. (No polarity         ht of 100 cm - 150 cm on a         d	5 = "0". Setting ava 30 - 2 30 sec, ~ m to control roo the front nain )	<b>illable range</b> 140 sec 1 - 30 min		
	The mixin 2 zone ter Related DN 0C 59 6) Room ter You car 6-1) Installin • Wiring panel remot • Place Oppo No as 6-2) Room t • Set of (Rem You c	Mixing Valve op Mixing Valve op Mixing Valve co emperature co n install a sub ng the sub rem g with the main , connect the si te controller, w to install (insi site to the rad ssignment whe emperature co ne of remote co ote controller an set "Heade	Setting item Setting item peration time ontrol time ntrol remote controller (sepanote controller n unit (See the figure of sub remote controller to <i>t</i> /hich is connected with de a room): At the heig iator or fan coil installer en floor heating is used control settings control settings controller as the header of Hydro unit is preset a er / Second" in "Initial se	Default         60         2         arately purchased) in a room         n the right): After detaching         o the right terminal on the n         the hydro unit. (No polarity         ht of 100 cm - 150 cm on a         on the room.         remote controller.	5 = "0". Setting ava 30 - 2 30 sec, 7 m to control roo the front hain wall	<b>illable range</b> 140 sec 1 - 30 min		

Item		Operation flow and appli	cable data, etc	2.				
'-3. Iydro Unit Control	<ul> <li>6-3) Control method</li> <li>The water temperature setting at starting operation is 40°C (DN_9D) at heating and 20°C (DN_96) at cooling. If the temperature setting calculated by Auto curve at starting operation will be used instead of the fixed temperature 40°C (DN_9D), DN_B5 should be set to "1".</li> <li>The target water outlet temperature is adjusted by 1deg every 30 minutes based on the TSC_rc, the temperature</li> </ul>							
	setting on the The adjustab	e remote controller, and the room temperature le range of water temperature is set with DN_1 ture set on the remote controller and actual roo	(temperature indi 8 - 1B.	cated on the remote controller: T_				
		ontroller or room space. In that case, adjust ter coling) on the remote controller.	nperature detecti	ion using DN_02 (for heating) and				
	Warm-mode	A' zone: Thermo off	Cool-mode					
		A' zone: Thermo off		D zone: Down water temp				
	TSC_rc + 1K - TSC_rc -	B zone: Down water temp	TSC_rc + 0.5K TSC_rc	C zone: Keep water temp				
	TSC_rc - 0.5K	C zone: Keep water temp	TSC_rc - 1.0K	B zone: Up water temp				
		D zone: Up water temp		A zone: Thermo off				
		n the temperature by remote controller DN_02 perature (remote controller) is higher than roon		kample. 1deg				
	Change remo • Ambient tem	bete controller DN_02, 03 = "-1K" to "-2K" berature (remote controller) is lower than room bte controller DN_02, 03 = "-1K" to "0"		1 0				
	T rc	Correction control						
	S S	leating etting is corrected upward. /ater temperature setting is up by 1deg every	Cooling Setting is corrected downward.					
	3	0 minutes.	30 minutes. No correction	e setting is down by 1deg every				
	B zone V	etting is corrected downward. /ater temperature setting is down by 1deg every 0 minutes.	Setting is correcte Water temperature 30 minutes.	d upward. e setting is up by 1deg every				
	A zone 3 T		Setting is corrected upward. Water temperature setting is up by 1deg every 30 minutes.					
	A' zone	eat pump restart. ietting is corrected downward. Vater temperature setting is down by 1deg every 0 minutes. hermo off.						
	Related DN							
	DN	Setting item	Default	U				
	18	Upper limit of cooling temperature setting	25	18 - 30°C				
	19 1A	Lower limit of cooling temperature setting Upper limit of heating temperature setting (Zone 1	7 ) 55 (65)	7 - 20°C 37 - 55 (65) °C				
	1A 1B	Lower limit of heating temperature setting (Zone 1		20 - 37°C				
	40	Room temperature control	0	0: Not permitted 1: Permitted				
	96	Initial water temperature setting when controlling cooling by the room temperature remote controller room temperature thermostat	and 20	5 - 30°C				
	9D	Initial water temperature setting when controlling heating by the room temperature remote controller room temperature thermostat	and 40	20 - 55 (65) °C				
	02 (Remote controlle		-1	-10K - +10K, 1K step				
	03 (Remote controlle	<u>, , , , , , , , , , , , , , , , , , , </u>	-1	-10K - +10K, 1K step				
	B2	Heat pump restart water condition in A zone.	25	20 - 37°C				
	B5	Choose of the initial setting temperature. Either use the temperature set in DN_9D, or use t temperature calculated by Auto curve. This applies heating operation only.	he 0	0: Use the temperature set in DN_9D 1: Use the temperature calculated by Auto curve				
	B5	temperature calculated by Auto curve.	he 0	1: Use the temperature				

ltem	Operation flow and applicable data, etc.							
7-3. Hydro Unit Control	You can install 7-1) Installing t • Connect • Thermos • Place to Opposite No assig	<ul> <li>Room temperature control with the thermostat</li> <li>u can install a commercially available thermostat to control room temperature.</li> <li>1) Installing the room temperature thermostat <ul> <li>Connect its connection cable to CN21 port on the PC board (MCC-1755) of the hydro unit.</li> <li>Thermostat for heating: Connect the input between the terminals (1) and (5).</li> <li>Thermostat for cooling: Connect the input between the terminals (2) and (5).</li> <li>Place to install (inside a room): At the height of 120 cm - 180 cm on a wall Opposite to the radiator or fan coil installed No assignment when floor heating is used on the room.</li> </ul> </li> <li>btional inputs to Hydro Unit is unit has eight input ports. 2 ports of them are selectable by DN. Table2 shows the selectable input functions a fault settings.</li> </ul>						
	Non-voltage co	ontacts						
	MCC-1755	CN21				In	put items (Default setting)	
	common line Common line Hydro Unit sul 7-2) Room tem • Setting c <u>I/P1 &amp; I/P2: Ro</u> • Setting c	perature ther of DN_6B3 = ' om thermosta of DN_6B3 = ' age contacts	II/P4	0	I I/P 1	/P 1  /P 2  /P 3  /P 4  /P 5  /P 6  /P 7 (DN_B6)  /P 8 (DN_B6)	Room thermostat input for heating Room thermostat input for cooling Hot water tank thermostat input Heating/cooling mode switching input Heating/cooling operation ON/OFF Hot water operation ON/OFF 0: Emergency shutdown input 0: None	
		Цо	ting	Cor	ling	7		
	CN21	Reach	iting Not reach	Reach	oling Not reach	-		
	1-5 (I/P1)	open	close	-	-	1		
	2-5 (I/P2)	-	-	close	open			
	heating sta not reached up 1 degred temperaturd When the h pump shifts by 1 degred	eating therm rts under the d the assigne e, and the sau e. The backup eating therm s to the "thern	ostat does not setting that wa d temperature ne action will o heater and b ostat reaches nostat off" ope nutes. The ba	ater temperati 30 minutes a be repeated e pooster heater the assigned tration. During	ure for heatir fter heating every 30 min are controll temperature the operatic	ng is 40°C (DN had started, the utes until the th ed in the same (the circuit bet on, the water te	cuit between (1) and (5) is closed), _9D). If the heating thermostat has a water temperature setting is turned termostat reaches the assigned way as in the normal HP operation. ween (1) and (5) is open), the heat mperature setting is turned down d off as the heat pump shifts to the	


ltem			Oper	ation flow and applicab	le data	, etc.		
7-3. Hydro Unit Control	7.	cooling starts und not reached the a down 1 degree, a temperature. When the cooling	operation nermostat does not reach the assigned temperature (the circuit between (2) and (5) is open), r the setting that water temperature for cooling is 20°C (DN_96). If the cooling thermostat has signed temperature 30 minutes after cooling had started, the water temperature setting is turned d the same action will be repeated every 30 minutes until the thermostat reaches the assigned nermostat reaches the assigned temperature (the circuit between (2) and (5) is closed), operation stat off" operation. During the operation, the water temperature setting is turned up by 1 degre					
		Room thermostat	Correction control	Heating operation			Cooling operation	
		CLOSE Setting is corrected upward Thermo on The water temperature setting is turned up by 1 degree every 30 minutes.					f temperature setting is turned gree every 30 minutes.	
		OPEN	Setting is corrected downward.	Thermo off The water temperature setting is turned down by 1 degree every 30 minutes.		Thermo on The water temperature setting is turned down by 1 degree every 30 minutes.		
	R	elated DN						
		DN	S	etting item	De	efault	Variable range	
		9D	Initial water temperature setting when controlling heating by the room temperature remote controller and room temperature thermostat.			40	20 - 55 (65) °C	
		96		re setting when controlling mperature remote controller and mostat.		20	5 - 30°C	
		B5	Choose of the initial s Either use the temper temperature calculate This applies heating o	ature set in DN_9D, or use the d by Auto curve.		0	0 : Use the temperature set in DN_9D 1 : Use the temperature calculated by Auto curve	
			1				*( ):801, 1101, 1401	

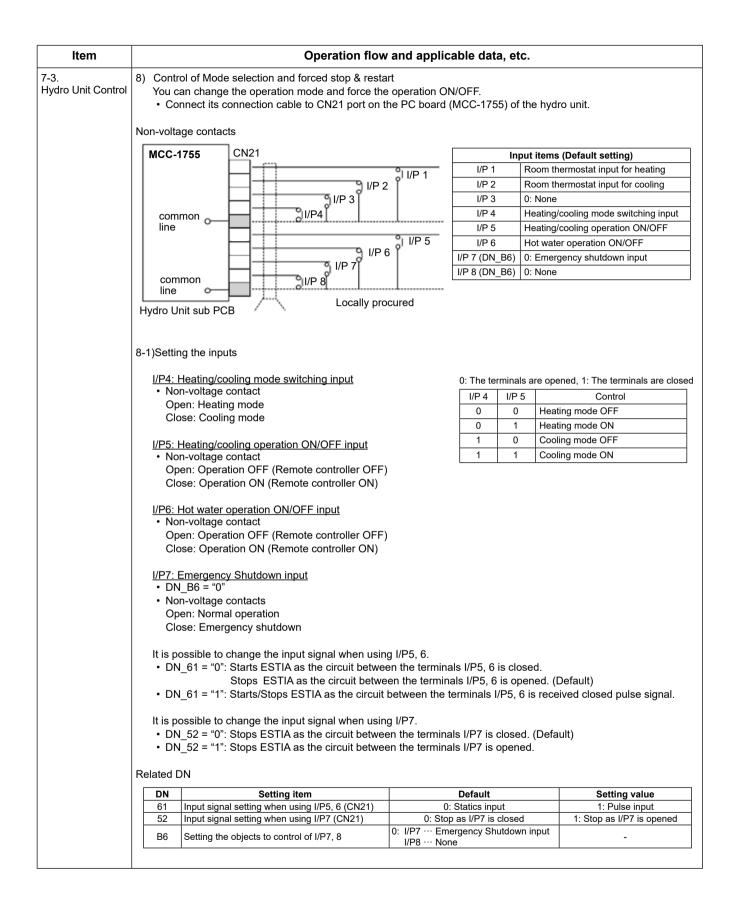

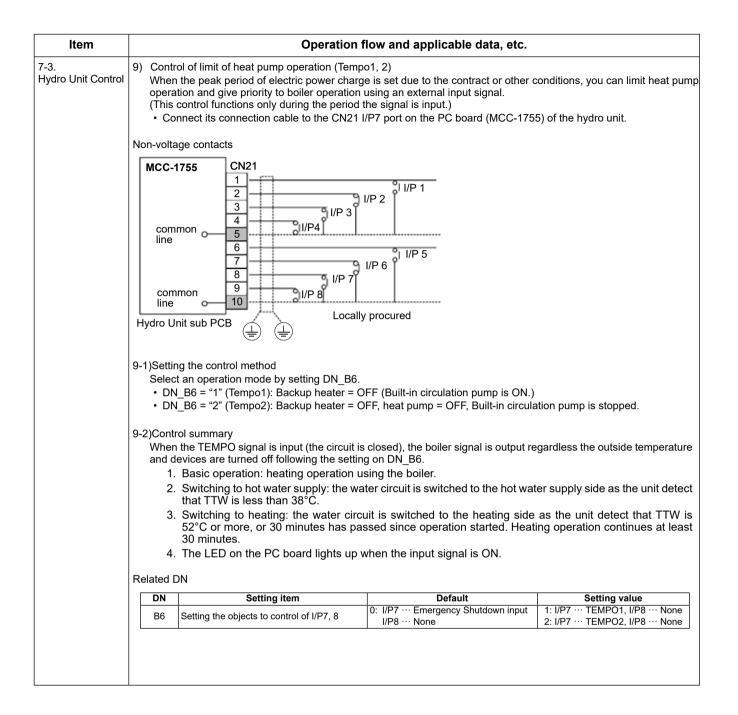

Item	Operation flow and applicable data, etc.								
7-3. Hydro Unit Control	10) Connection to a Smart Grid network (SG ready) The operating mode is controlled through volt free contacts incorporated into the energy meter.								
	Connect its connection cable to CN21 port on the PC board of the hydro unit.								
	This u			orts of them are selectable	by DN. Table2 sho	ws the selectable input functions a			
	Non-voltage contacts								
	MCC-	-	CN21	Input		t items (Default setting)			
	MCC-	1755		0	I/P 1	Room thermostat input for heating			
			2	i/P 2	I/P 2	Room thermostat input for cooling			
			3	ງi/P 3	I/P 3	None			
	com	mon		P4	I/P 4	Heating/cooling mode switching input			
	line			dddd		Heating/cooling operation ON/OFF			
			6	ال الP 5	I/P 6	Hot water operation ON/OFF			
			8	9 I/P 6	I/P 7 (DN_B6)	0: Emergency shutdown input			
				I/P 7	I/P 8 (DN_B6)	0: None			
	line	mon ~	10	P 8	-				
				Locally procured					
	Hydro U	nit sub F	PCB						
			$\bigcirc$ $\bigcirc$						
	10 1)The	Sotting	0						
	10-1)The	0		<u>rt Grid network (SG Ready)</u>					
			e contacts	IL GIU HELWOIK (SG Keauy)					
		0		ed through volt free contact	s incorporated into	o the energy meter.			
	• Setting: DN_B6 = "4"								
	• 36	ung. Dr	<b>1_</b> D0 = 4						
	DN_6	CE = "0	<ul> <li>": HP and backup</li> </ul>	heaters ON when "System		e			
	DN_6 DN_6	CE = "0 CE = "1	<ul> <li>": HP and backup</li> <li>": HP operation of</li> </ul>	nly when "System Forced C	N" mode				
	DN_6 DN_6	CE = "0 CE = "1	<ul> <li>": HP and backup</li> <li>": HP operation of</li> </ul>	nly when "System Forced C	N" mode	e when "System Forced ON" mode			
	DN_6 DN_6 DN_A	CE = "0 CE = "1 C = "0-7	": HP and backup ": HP operation of 10": Setting to incre	nly when "System Forced C ase the space heating set p	N" mode				
	DN_6 DN_6 DN_A 10-2)The	CE = "0 CE = "1 C = "0-7 operatio	<ul> <li>HP and backup</li> <li>HP operation of</li> <li>10": Setting to increasion</li> <li>on mode and control</li> </ul>	nly when "System Forced C ase the space heating set p I summary	N" mode				
	DN_6 DN_6 DN_A 10-2)The	CE = "0 CE = "1 C = "0-7 operatio	<ul> <li>HP and backup</li> <li>HP operation of</li> <li>10": Setting to increasion</li> <li>on mode and control</li> </ul>	nly when "System Forced C ase the space heating set p	N" mode				
	DN_6 DN_6 DN_A 10-2)The	CE = "0 CE = "1 C = "0-7 operatio	<ul> <li>HP and backup</li> <li>HP operation of</li> <li>10": Setting to increasion</li> <li>on mode and control</li> </ul>	nly when "System Forced C ase the space heating set p I summary	N" mode	when "System Forced ON" mode			
	DN_6 DN_6 DN_4 10-2)The 0: The	CE = "0 CE = "1 C = "0-" operation	<ul> <li>HP and backup</li> <li>HP operation of</li> <li>10": Setting to increasion mode and control</li> <li>als are opened , 1: T</li> </ul>	nly when "System Forced C ase the space heating set p I summary The terminals are closed	DN" mode point temperature Control summa	when "System Forced ON" mode			
	DN_6 DN_6 DN_4 10-2)The 0: The	CE = "0 CE = "1 C = "0-' operational terminal	HP and backup     HP operation o     HP operation o     Setting to incre     on mode and control     als are opened , 1: T     Mode	nly when "System Forced C ase the space heating set p I summary The terminals are closed	N" mode point temperature Control summa th maximum comp	when "System Forced ON" mode			
	DN_6 DN_6 DN_4 10-2)The 0: The	CE = "0 CE = "1 C = "0-" operation	<ul> <li>HP and backup</li> <li>HP operation of</li> <li>10": Setting to increasion mode and control</li> <li>als are opened , 1: T</li> </ul>	nly when "System Forced C ase the space heating set p I summary The terminals are closed • Normal operation but wi certain value (night time • Backup heater control is	ON" mode point temperature Control summa th maximum comp operation) s active	when "System Forced ON" mode			
	DN_6 DN_6 DN_4 10-2)The 0: The	CE = "0 CE = "1 C = "0-' operational terminal	HP and backup     HP operation o     HP operation o     Setting to incre     on mode and control     als are opened , 1: T     Mode	nly when "System Forced C ase the space heating set p I summary The terminals are closed • Normal operation but wi certain value (night time • Backup heater control is • Boiler output control act	ON" mode point temperature Control summa th maximum comp operation) s active ive	when "System Forced ON" mode ary pressor frequency limited to			
	DN_6 DN_6 DN_4 10-2)The 0: The	CE = "0 CE = "1 C = "0-' operational terminal	HP and backup     HP operation o     HP operation o     Setting to incre     on mode and control     als are opened , 1: T     Mode	nly when "System Forced C ase the space heating set p I summary The terminals are closed • Normal operation but wi certain value (night time • Backup heater control is • Boiler output control act • The heat pump and elect	ON" mode point temperature Control summa th maximum comp operation) s active ive ctric heaters are F	when "System Forced ON" mode			
	DN_6 DN_6 DN_4 10-2)The 0: The	CE = "0 CE = "1 C = "0-' operational terminal	HP and backup     HP operation o     HP operation o     Setting to incre     on mode and control     als are opened , 1: T     Mode	nly when "System Forced C ase the space heating set p I summary The terminals are closed • Normal operation but wi certain value (night time • Backup heater control is • Boiler output control act • The heat pump and elec 2 hours during this period	ON" mode point temperature Control summa th maximum comp operation) s active ive ctric heaters are F id.	when "System Forced ON" mode any pressor frequency limited to ORCED OFF for a maximum of			
	DN_6 DN_6 DN_4 10-2)The 0: The 0: The 0	CE = "0 CE = "1 C = "0-" operation termina I/P 8	<ul> <li>HP and backup</li> <li>HP operation of</li> <li>Setting to increation</li> <li>Setting to increation</li> <li>mode and control</li> <li>als are opened , 1: T</li> <li>Mode</li> <li>Restricted Operation</li> </ul>	nly when "System Forced C ase the space heating set p I summary The terminals are closed • Normal operation but wi certain value (night time • Backup heater control is • Boiler output control act • The heat pump and elec 2 hours during this perio • The space heating and	ON" mode point temperature Control summa th maximum comp operation) s active ive ctric heaters are F id.	when "System Forced ON" mode ary pressor frequency limited to			
	DN_6 DN_6 DN_4 10-2)The 0: The	CE = "0 CE = "1 C = "0-' operational terminal	HP and backup     HP operation o     HP operation o     Setting to incre     on mode and control     als are opened , 1: T     Mode	nly when "System Forced C ase the space heating set p I summary The terminals are closed • Normal operation but wi certain value (night time • Backup heater control is • Boiler output control act • The heat pump and elec 2 hours during this perio • The space heating and the remote controller.	ON" mode point temperature Control summa th maximum comp operation) s active ive ctric heaters are F pd. DHW set points w	when "System Forced ON" mode ary pressor frequency limited to ORCED OFF for a maximum of ill continue to be displayed on			
	DN_6 DN_6 DN_4 10-2)The 0: The 0: The 0	CE = "0 CE = "1 C = "0-" operation termina I/P 8	<ul> <li>HP and backup</li> <li>HP operation of</li> <li>Setting to increation</li> <li>Setting to increation</li> <li>mode and control</li> <li>als are opened , 1: T</li> <li>Mode</li> <li>Restricted Operation</li> </ul>	nly when "System Forced C ase the space heating set p I summary The terminals are closed • Normal operation but wi certain value (night time • Backup heater control is • Boiler output control act • The heat pump and elec 2 hours during this perio • The space heating and the remote controller. • System safety controls	ON" mode point temperature Control summa th maximum comp operation) s active ive ctric heaters are F pd. DHW set points w fe.g. freeze protect	when "System Forced ON" mode ary pressor frequency limited to ORCED OFF for a maximum of ill continue to be displayed on			
	DN_6 DN_6 DN_4 10-2)The 0: The 0: The 0	CE = "0 CE = "1 C = "0-" operation termina I/P 8	<ul> <li>HP and backup</li> <li>HP operation of</li> <li>Setting to increation</li> <li>Setting to increation</li> <li>mode and control</li> <li>als are opened , 1: T</li> <li>Mode</li> <li>Restricted Operation</li> </ul>	nly when "System Forced C ase the space heating set p I summary The terminals are closed • Normal operation but wi certain value (night time • Backup heater control is • Boiler output control act • The heat pump and elec 2 hours during this perio • The space heating and the remote controller. • System safety controls of • Boiler output control will	ON" mode point temperature Control summa th maximum comp operation) s active ive ctric heaters are F pd. DHW set points w fe.g. freeze protect remain active.	when "System Forced ON" mode ary pressor frequency limited to ORCED OFF for a maximum of ill continue to be displayed on stion) will remain active.			
	DN_6 DN_6 DN_4 10-2)The 0: The 0: The 0	CE = "0 CE = "1 C = "0-" operation termina I/P 8	<ul> <li>HP and backup</li> <li>HP operation of</li> <li>Setting to increation</li> <li>Setting to increation</li> <li>mode and control</li> <li>als are opened , 1: T</li> <li>Mode</li> <li>Restricted Operation</li> </ul>	nly when "System Forced C ase the space heating set p I summary The terminals are closed • Normal operation but wi certain value (night time • Backup heater control is • Boiler output control act • The heat pump and elec 2 hours during this perio • The space heating and the remote controller. • System safety controls ( • Boiler output control will • This signal is not a STA	ON" mode point temperature control summa th maximum comp operation) s active ive ctric heaters are F pd. DHW set points w fe.g. freeze protect remain active. RT signal – only a	when "System Forced ON" mode ary pressor frequency limited to ORCED OFF for a maximum of ill continue to be displayed on stion) will remain active.			
	DN_6 DN_6 DN_4 10-2)The 0: The 0: The 0	CE = "0 CE = "1 C = "0-" operation termina I/P 8	<ul> <li>HP and backup</li> <li>HP operation of</li> <li>Setting to increation</li> <li>Setting to increation</li> <li>mode and control</li> <li>als are opened , 1: T</li> <li>Mode</li> <li>Restricted Operation</li> </ul>	nly when "System Forced C ase the space heating set p I summary The terminals are closed • Normal operation but wi certain value (night time • Backup heater control is • Boiler output control act • The heat pump and elec 2 hours during this perio • The space heating and the remote controller. • System safety controls of • Boiler output control will • This signal is not a STA • The heat pump and elec	ON" mode point temperature control summa th maximum comp operation) s active ive ctric heaters are F pd. DHW set points w fe.g. freeze protect remain active. RT signal – only a ctric heaters are a	when "System Forced ON" mode ary pressor frequency limited to ORCED OFF for a maximum of ill continue to be displayed on stion) will remain active.			
	DN_6 DN_6 DN_4 10-2)The 0: The 0: The 0	CE = "0 CE = "1 .C = "0 operational e terminal 1/P 8 0	<ul> <li>HP and backup</li> <li>HP operation of 10": Setting to increasion mode and control als are opened , 1: T</li> <li>Mode</li> <li>Restricted Operation</li> <li>System OFF</li> </ul>	nly when "System Forced C ase the space heating set p I summary The terminals are closed • Normal operation but wi certain value (night time • Backup heater control is • Boiler output control act • The heat pump and elec 2 hours during this perio • The space heating and the remote controller. • System safety controls of • Boiler output control will • This signal is not a STA • The heat pump and elec control if there is a heat	ON" mode point temperature control summa th maximum comp operation) s active ive ctric heaters are F pd. DHW set points w fe.g. freeze protect remain active. RT signal – only a ctric heaters are a ng or DHW dema	when "System Forced ON" mode ary pressor frequency limited to ORCED OFF for a maximum of ill continue to be displayed on ction) will remain active. recommendation to start vailable to operate under normal nd			
	DN_6 DN_6 DN_4 10-2)The 0: The 0: The 1	CE = "0 CE = "1 C = "0-" operation termina I/P 8	<ul> <li>HP and backup</li> <li>HP operation of</li> <li>Setting to increation</li> <li>Setting to increation</li> <li>mode and control</li> <li>als are opened , 1: T</li> <li>Mode</li> <li>Restricted Operation</li> </ul>	nly when "System Forced C ase the space heating set p I summary The terminals are closed • Normal operation but wi certain value (night time • Backup heater control is • Boiler output control act • The heat pump and elec 2 hours during this perio • The space heating and the remote controller. • System safety controls of • Boiler output control will • This signal is not a STA • The heat pump and elec control if there is a heat • There is no restriction o	ON" mode point temperature control summa th maximum comp operation) active ive ctric heaters are F bd. DHW set points w fe.g. freeze protect remain active. RT signal – only a ctric heaters are a ng or DHW dema n the compressor	when "System Forced ON" mode ary pressor frequency limited to ORCED OFF for a maximum of ill continue to be displayed on stion) will remain active. recommendation to start vailable to operate under normal nd frequency – the compressor can			
	DN_6 DN_6 DN_4 10-2)The 0: The 0: The 1	CE = "0 CE = "1 .C = "0 operational e terminal 1/P 8 0	<ul> <li>HP and backup</li> <li>HP operation of 10": Setting to increasion mode and control als are opened , 1: T</li> <li>Mode</li> <li>Restricted Operation</li> <li>System OFF</li> </ul>	nly when "System Forced C ase the space heating set p I summary The terminals are closed • Normal operation but wi certain value (night time • Backup heater control is • Boiler output control act • The heat pump and elec 2 hours during this perio • The space heating and the remote controller. • System safety controls of • Boiler output control will • This signal is not a STA • The heat pump and elec control if there is a heat • There is no restriction o operate at maximum fre	ON" mode point temperature control summa th maximum comp operation) active ive ctric heaters are F bd. DHW set points w fe.g. freeze protect remain active. RT signal – only a ctric heaters are a ng or DHW dema n the compressor	when "System Forced ON" mode ary pressor frequency limited to ORCED OFF for a maximum of ill continue to be displayed on ction) will remain active. recommendation to start vailable to operate under normal nd			
	DN_6 DN_6 DN_4 10-2)The 0: The 0: The 1	CE = "0 CE = "1 .C = "0 operational e terminal 1/P 8 0	<ul> <li>HP and backup</li> <li>HP operation of 10": Setting to increasion mode and control als are opened , 1: T</li> <li>Mode</li> <li>Restricted Operation</li> <li>System OFF</li> </ul>	nly when "System Forced C ase the space heating set p I summary The terminals are closed • Normal operation but wi certain value (night time • Backup heater control is • Boiler output control act • The heat pump and elec 2 hours during this perio • The space heating and the remote controller. • System safety controls of • Boiler output control will • This signal is not a STA • The heat pump and elec control if there is a heat • There is no restriction o operate at maximum fre software	ON" mode point temperature control summa th maximum comp operation) s active ive ctric heaters are F id. DHW set points w fe.g. freeze protect remain active. RT signal – only a ctric heaters are a ng or DHW dema n the compressor quency if requested	when "System Forced ON" mode ary pressor frequency limited to ORCED OFF for a maximum of ill continue to be displayed on ction) will remain active. recommendation to start vailable to operate under normal nd frequency – the compressor can ed by the outdoor unit control			
	DN_6 DN_6 DN_4 10-2)The 0: The 0: The 1	CE = "0 CE = "1 .C = "0 operational e terminal 1/P 8 0	<ul> <li>HP and backup</li> <li>HP operation of 10": Setting to increasion mode and control als are opened , 1: T</li> <li>Mode</li> <li>Restricted Operation</li> <li>System OFF</li> </ul>	nly when "System Forced C ase the space heating set p I summary The terminals are closed • Normal operation but wi certain value (night time • Backup heater control is • Boiler output control act • The heat pump and elec 2 hours during this perio • The space heating and the remote controller. • System safety controls of • Boiler output control will • This signal is not a STA • The heat pump and elec control if there is a heat • There is no restriction o operate at maximum fre software • During this period the sy	ON" mode point temperature control summa th maximum comp operation) s active ive ctric heaters are F id. DHW set points w fe.g. freeze protect remain active. RT signal – only a ctric heaters are a ng or DHW dema n the compressor quency if requestor vstem is FORCED	when "System Forced ON" mode ary pressor frequency limited to ORCED OFF for a maximum of ill continue to be displayed on stion) will remain active. recommendation to start vailable to operate under normal nd frequency – the compressor can			
	DN_6 DN_6 DN_4 10-2)The 0: The 0: The 1	CE = "0 CE = "1 .C = "0 operational e terminal 1/P 8 0	<ul> <li>HP and backup</li> <li>HP operation of 10": Setting to increasion mode and control als are opened , 1: T</li> <li>Mode</li> <li>Restricted Operation</li> <li>System OFF</li> </ul>	nly when "System Forced C ase the space heating set p I summary The terminals are closed • Normal operation but wi certain value (night time • Backup heater control is • Boiler output control act • The heat pump and elec 2 hours during this perio • The space heating and the remote controller. • System safety controls of • Boiler output control will • This signal is not a STA • The heat pump and elec control if there is a heat • There is no restriction o operate at maximum fre software • During this period the sy backup heater to operate	ON" mode point temperature control summa th maximum comp operation) s active ive ctric heaters are F id. DHW set points w fe.g. freeze protect remain active. RT signal – only a ctric heaters are a ng or DHW dema in the compressor quency if requested vstem is FORCED e	when "System Forced ON" mode ary pressor frequency limited to ORCED OFF for a maximum of ill continue to be displayed on stion) will remain active. recommendation to start vailable to operate under normal nd frequency – the compressor can ed by the outdoor unit control ON to allow the heat pump and			
	DN_6 DN_6 DN_4 10-2)The 0: The 0: The 1	CE = "0 CE = "1 .C = "0 operational e terminal 1/P 8 0	<ul> <li>HP and backup</li> <li>HP operation of 10": Setting to increasion mode and control als are opened , 1: T</li> <li>Mode</li> <li>Restricted Operation</li> <li>System OFF</li> </ul>	nly when "System Forced C ase the space heating set p I summary The terminals are closed • Normal operation but wi certain value (night time • Backup heater control is • Boiler output control act • The heat pump and elec 2 hours during this perio • The space heating and the remote controller. • System safety controls of • Boiler output control will • This signal is not a STA • The heat pump and elec control if there is a heat • There is no restriction o operate at maximum fre software • During this period the sy backup heater to operate	ON" mode point temperature control summa th maximum comp operation) s active ive ctric heaters are F ad. DHW set points w fe.g. freeze protect remain active. RT signal – only a ctric heaters are a ng or DHW dema n the compressor quency if requested vstem is FORCED e ioint temperature i	when "System Forced ON" mode ary pressor frequency limited to ORCED OFF for a maximum of ill continue to be displayed on ition) will remain active. recommendation to start vailable to operate under normal nd frequency – the compressor can ed by the outdoor unit control ON to allow the heat pump and is increased during this period.			
	DN_6 DN_6 DN_4 10-2)The 0: The 0: The 1	CE = "0 CE = "1 .C = "0 operational e terminal 1/P 8 0	<ul> <li>HP and backup</li> <li>HP operation of 10": Setting to increasion mode and control als are opened , 1: T</li> <li>Mode</li> <li>Restricted Operation</li> <li>System OFF</li> </ul>	nly when "System Forced C ase the space heating set p I summary The terminals are closed • Normal operation but wi certain value (night time • Backup heater control is • Boiler output control act • The heat pump and elec 2 hours during this perio • The space heating and the remote controller. • System safety controls of • Boiler output control will • This signal is not a STA • The heat pump and elec control if there is a heat • There is no restriction o operate at maximum fre software • During this period the sp backup heater to operat • The space heating set p The temperature increase	Control summa th maximum compoperation) s active ive ctric heaters are F ad. DHW set points w fe.g. freeze protect remain active. RT signal – only a ctric heaters are a ng or DHW dema n the compressor quency if requested vstem is FORCED e ioint temperature is se can be adjusted	when "System Forced ON" mode ary pressor frequency limited to ORCED OFF for a maximum of ill continue to be displayed on ction) will remain active. Trecommendation to start vailable to operate under normal nd frequency – the compressor can ed by the outdoor unit control ON to allow the heat pump and is increased during this period. d using DN_AC.			
	DN_6 DN_6 DN_4 10-2)The 0: The 0: The 1	CE = "0 CE = "1 .C = "0 operational e terminal 1/P 8 0	<ul> <li>HP and backup</li> <li>HP operation of 10": Setting to increasion mode and control als are opened , 1: T</li> <li>Mode</li> <li>Restricted Operation</li> <li>System OFF</li> </ul>	nly when "System Forced C ase the space heating set p I summary The terminals are closed • Normal operation but wi certain value (night time • Backup heater control is • Boiler output control act • The heat pump and elec 2 hours during this period • The space heating and the remote controller. • System safety controls of • Boiler output control will • This signal is not a STA • The heat pump and elec control if there is a heat • There is no restriction o operate at maximum fre software • During this period the sy backup heater to operat • The space heating set p The temperature increas • If there is a DHW dema	Control summa th maximum compoperation) s active ive ctric heaters are F ad. DHW set points w fe.g. freeze protect remain active. RT signal – only a ctric heaters are a ng or DHW dema n the compressor quency if requested vstem is FORCED e oint temperature is se can be adjusted nd during this FOF	when "System Forced ON" mode ary pressor frequency limited to ORCED OFF for a maximum of ill continue to be displayed on stion) will remain active. Trecommendation to start vailable to operate under normal nd frequency – the compressor can ed by the outdoor unit control P ON to allow the heat pump and is increased during this period. d using DN_AC. RCED ON period then the DHW			
	DN_6 DN_6 DN_A 10-2)The 0: The 0 1	CE = "0 CE = "1 .C = "1	": HP and backup ": HP operation of 10": Setting to incre- on mode and control als are opened , 1: T Mode Restricted Operation System OFF Normal Operation	<ul> <li>nly when "System Forced C ase the space heating set p</li> <li>summary</li> <li>The terminals are closed</li> <li>Normal operation but will certain value (night time)</li> <li>Backup heater control is</li> <li>Boiler output control act</li> <li>The heat pump and elect 2 hours during this period</li> <li>The space heating and the remote controller.</li> <li>System safety controls if</li> <li>Boiler output control will</li> <li>This signal is not a STA</li> <li>The heat pump and elect control if there is a heati</li> <li>The remote control will</li> <li>This signal is not a STA</li> <li>The heat pump and elect control if there is a heati</li> <li>There is no restriction o operate at maximum free software</li> <li>During this period the sy backup heater to operational the temperature increase</li> <li>If there is a DHW demai set point is increased to</li> </ul>	Control summa th maximum compoperation) s active ive ctric heaters are F ad. DHW set points w fe.g. freeze protect remain active. RT signal – only a ctric heaters are a ng or DHW dema n the compressor quency if requested vstem is FORCED e oint temperature is se can be adjusted and during this FOF the set point used	when "System Forced ON" mode any pressor frequency limited to ORCED OFF for a maximum of ill continue to be displayed on ition) will remain active. Trecommendation to start vailable to operate under normal nd frequency – the compressor can ed by the outdoor unit control P ON to allow the heat pump and is increased during this period. d using DN_AC. RCED ON period then the DHW d for the DHW boost function			
	DN_6 DN_6 DN_A 10-2)The 0: The 0 1	CE = "0 CE = "1 .C = "1	": HP and backup ": HP operation of 10": Setting to incre- on mode and control als are opened , 1: T Mode Restricted Operation System OFF Normal Operation	<ul> <li>nly when "System Forced C ase the space heating set p</li> <li>summary</li> <li>The terminals are closed</li> <li>Normal operation but will certain value (night time)</li> <li>Backup heater control is</li> <li>Boiler output control act</li> <li>The heat pump and elect 2 hours during this period</li> <li>The space heating and the remote controller.</li> <li>System safety controls if</li> <li>Boiler output control will</li> <li>This signal is not a STA</li> <li>The heat pump and elect control if there is a heati</li> <li>The remote control will</li> <li>This signal is not a STA</li> <li>The heat pump and elect control if there is a heati</li> <li>There is no restriction o operate at maximum free software</li> <li>During this period the sy backup heater to operate</li> <li>The space heating set p</li> <li>The temperature increase</li> <li>If there is a DHW dema set point is increased to</li> <li>The hydro unit backup heater backup hea</li></ul>	Control summa control summa th maximum comp operation) active ive ctric heaters are F ad. DHW set points w fe.g. freeze protect remain active. RT signal – only a ctric heaters are a ng or DHW dema n the compressor quency if requested vstem is FORCED e oint temperature is se can be adjusted ad during this FOF the set point used reaters will continu	when "System Forced ON" mode any pressor frequency limited to ORCED OFF for a maximum of ill continue to be displayed on ition) will remain active. Trecommendation to start vailable to operate under normal nd frequency – the compressor can ed by the outdoor unit control P ON to allow the heat pump and is increased during this period. d using DN_AC. RCED ON period then the DHW d for the DHW boost function ue to operate with a modified			
	DN_6 DN_6 DN_A 10-2)The 0: The 0 1	CE = "0 CE = "1 .C = "1	": HP and backup ": HP operation of 10": Setting to incre- on mode and control als are opened , 1: T Mode Restricted Operation System OFF Normal Operation	<ul> <li>nly when "System Forced C ase the space heating set p</li> <li>summary The terminals are closed</li> <li>Normal operation but wi certain value (night time Backup heater control is Boiler output control act</li> <li>The heat pump and elec 2 hours during this period</li> <li>The space heating and the remote controller.</li> <li>System safety controls of Boiler output control will</li> <li>This signal is not a STA</li> <li>The heat pump and elec control if there is a heat</li> <li>There is no restriction o operate at maximum fre software</li> <li>During this period the sy backup heater to operat</li> <li>The space heating set p The temperature increased to</li> <li>The hydro unit backup h control where by the ON</li> </ul>	Control summa control summa th maximum comp operation) active ive ctric heaters are F ad. DHW set points w fe.g. freeze protect remain active. RT signal – only a ctric heaters are a ng or DHW dema n the compressor quency if requester vistem is FORCED e oint temperature i se can be adjuster nd during this FOF the set point used reaters will continu I/OFF heater dela	when "System Forced ON" mode any pressor frequency limited to ORCED OFF for a maximum of ill continue to be displayed on stion) will remain active. Trecommendation to start vailable to operate under normal nd frequency – the compressor can ed by the outdoor unit control P ON to allow the heat pump and is increased during this period. d using DN_AC. RCED ON period then the DHW d for the DHW boost function ue to operate with a modified y will be removed			
	DN_6 DN_6 DN_A 10-2)The 0: The 0 1	CE = "0 CE = "1 .C = "1	": HP and backup ": HP operation of 10": Setting to incre- on mode and control als are opened , 1: T Mode Restricted Operation System OFF Normal Operation	<ul> <li>nly when "System Forced C ase the space heating set p</li> <li>summary The terminals are closed</li> <li>Normal operation but wi certain value (night time Backup heater control is Boiler output control act</li> <li>The heat pump and elec 2 hours during this period</li> <li>The space heating and the remote controller.</li> <li>System safety controls of Boiler output control will</li> <li>This signal is not a STA</li> <li>The heat pump and elec control if there is a heat</li> <li>There is no restriction o operate at maximum fre software</li> <li>During this period the sy backup heater to operate</li> <li>The space heating set p The temperature increase</li> <li>If there is a DHW dema set point is increased to</li> <li>The hydro unit backup heater to</li> </ul>	Control summa the maximum component operation) active ive ctric heaters are F ad. DHW set points w fe.g. freeze protect remain active. RT signal – only a ctric heaters are a ng or DHW dema in the compressor quency if requester restem is FORCED e oint temperature is se can be adjuster and during this FOF the set point used reaters will continue (/OFF heater dela nain active (e.g. D	when "System Forced ON" mode any pressor frequency limited to ORCED OFF for a maximum of ill continue to be displayed on stion) will remain active. Trecommendation to start vailable to operate under normal nd frequency – the compressor can ed by the outdoor unit control P ON to allow the heat pump and is increased during this period. d using DN_AC. RCED ON period then the DHW d for the DHW boost function ue to operate with a modified y will be removed DN_22, DN_1A etc.)			

7.3.       11) Output signal control         Hydro Unit Control       (Connect its connection cable to the CN22 terminal on the PC board (MCC-1755) in the hydro unit.)         Additional Hydro Unit cottots       This unit has four output ports. They are selectable by DN. Tablet shows the selectable output functions and def settings.         Wolf feet contact - specification show belaw:       AC220 V. 0.5 4 (maximum)         DC24 V: 1 A (maximum)       DC24 V: 1 A (maximum)         DC24 V: 1 A (maximum)       DC24 V: 1 A (maximum)         DC4 UNIt set for the fourth output fourth output for the fourth output fourth output for the fourth output for the fourth output fourth output fourth output for the fourth output fourth outp	ltem	Operation flow and applicat	ole data, etc.
This unit has four output ports. They are selectable by DN. Table1 shows the selectable output functions and def settings.         Voit free contact – specification show below:         AC230 V: 0.5 A (maximum)         DD24 V: 1A (maximum)         Micro-17755         common line         Image: Setting and the setting of the sett			C board (MCC-1755) in the hydro unit.)
OP 1 (DN_5CC)       Defrest operation output         common line       5         a       a         common line       2         a       a         common line       2         a       a         b       a         common line       2         a       a         b       a         common line       a         a       a         common line       a         a       a         b       a         common line       a         a       a         common line       a         a       a         b       a         common line       a         a       a         a       a         common line       a         a       a         a       a         a       a         a       a         a       a         a       a         b       b         compressor operation output         compressor operation output         compressor operation output <t< th=""><th></th><th>This unit has four output ports. They are selectable by DN. Table1 settings. Volt free contact – specification show below: AC230 V; 0.5 A (maximum) DC24 V; 1 A (maximum)</th><th>shows the selectable output functions and default</th></t<>		This unit has four output ports. They are selectable by DN. Table1 settings. Volt free contact – specification show below: AC230 V; 0.5 A (maximum) DC24 V; 1 A (maximum)	shows the selectable output functions and default
common line       0       0       0       2       0       0       2       0 <td< th=""><th></th><th>MCC-1755</th><th></th></td<>		MCC-1755	
Or 3 (DN 2G)       Generation output         Or 3 (DN 2G)       Generation output         OP 3 (DN 2G)       Generation output         OP 4 (DN 2G)       Generation output         OP 4 (DN 2G)       Generation output         Hydro Unit sub PCB       Locally procured         Beller control output       3 Beller control output         Compressor operation output       3 Beller control output         Compressor operation output       3 Beller control output         Beller control output       3 Beller control output         Cose: Aarm       Cose: Cose control output         1 Compressor operation output       3 During backup heater running for heating         Cose: Aarm       Cose: Cose control output         1 Compressor is stopping       Close: Cose control output         2 Defrost operation output       3 During backup heater running for heating         Cose: Cose: Cose control output       3 During backup heater running for heating         Cose: Cose: Cost operation output       3 During backup heater running for heating         Cose: Cose: Cose cost operation       Cose: Cose cost operation         Cose: Release control running       Close: Release control running         Cose: Backup heater running for heating       Cose: Backup heater running for hot vater supply         Cose: Backup heater		(***)	
Common line       Image: Comparison of the second of the sec		5 UO/P 4 O/P 3	O/P 3 (DN_6CD) Boiler control output
Image: Control output       Image: Control output         Image: Control output       Image: Control output <th></th> <td>common line</td> <td>Salastable output items (DN SCA SCD)</td>		common line	Salastable output items (DN SCA SCD)
Image: start of the start			
Hydro Unit sub PCB       Locally procured         Hydro Unit sub PCB       Locally procured         4       Safety or protection control running         6       During backup heater running for heating         7       Heating operation output         8       Cooling operation output         9       Hot water operation output         9       Hot water operation output         0       Cooling operation output         0       Open: No alarm         0       Coise: Compressor is operating         2       Defines operation output         0       Open: Normal operation         0       Open		O/P 1	
Hydro Unit sub PCB       Image: Constraint of the start			
5       During backup heater running for heating         6       During backup heater running for hot water supply         7       Heating operation output         8       Cooling operation output         9       Hot water operation output         9       Hot water operation output         0       Open: No alarm         • Close: Alarm       .         1       Compressor operation output         • Open: Compressor is stopping       .         • Close: Compressor is operating       .         2: Defrost operation output       .         • Open: Unit is not defrost operating       .         • Close: Boiler operation output       .         • Open: Normal operation       .         • Close: Boiler operation output       .         • Open: Normal operation       .         • Close: Boiler operation output       .         • Open: Normal operation       .         • Close: Boiler operation output       .         • Open: Normal operation       .         • Close: Boiler operation unning       .         • Open: Backup heater running for heating       .         • Open: Backup heater running for hot water supply       .         • Open: Backup heater running       . <th></th> <th></th> <th>· · · · · · · · · · · · · · · · · · ·</th>			· · · · · · · · · · · · · · · · · · ·
6         During backup heater running for hot water supply           7         Heating operation output           8         Cooling operation output           9         Hot water operation output           9         Hot water operation output           9         Hot water operation output           9         Cose: Alarm           1: Compressor operation output         9           0: Open: Compressor is stopping         Close: Compressor is operating           2: Defrost operation output         0           9         Open: Unit is not defrost operating           2: Bolier control output         0           9         Open: Normal operation           • Close: Bolier operation output         • Open: Normal operation           • Close: Bolier operation output         • Open: Normal operation           • Close: Bolier operation output         • Open: Normal operation           • Close: Bolier peration output         • Open: Normal operation           • Close: Bolier control running         • Open: Normal operation           • Open: Backup heater running for heating         • Open: Backup heater running           • Close: Backup heater running         • Close: Backup heater running           • Close: Backup heater running         • Close: Cooling operation           • Open:		Hydro Unit sub PCB	, , , , , , , , , , , , , , , , , , , ,
8       Cooling operation output         9       Hot water operation output         •       Open: No alarm         •       Close: Alarm         1: Compressor operation output       •         •       Open: Compressor is stopping         •       Close: Compressor is stopping         •       Close: Compressor is stopping         •       Close: Unit is offerst operating         2: Defrost operation output       •         •       Open: Unit is defrost operating         •       Close: Unit is defrost operating         •       Close: Unit is defrost operating         •       Open: Normal operation         •       Close: Bailer control output         •       Open: Normal operation         •       Close: Bailer or protection control running (Only indoor unit safety or protection control)         •       Open: Normal operation         •       Close: Backup heater running for heating         •       Open: Backup heater running for hot water supply         •       Open: Backup heater running for hot water supply         •       Open: Backup heater running <b>2:</b> Leating operation       Close: Backup heater running <b>2:</b> Leating operation output       •			6 During backup heater running for hot water
9       Hot water operation output         • Open: No alarm       • Close: Alarm         • Close: Alarm       • Open: Compressor is stopping         • Open: Compressor is operating       • Open: Compressor is operating         • Open: Compressor is operating       • Open: Open: Open: Is not defrost operating         • Open: Unit is not defrost operating       • Open: Normal operation         • Open: Normal operation       • Open: Normal operation         • Close: Boiler operation output       • Open: Normal operation         • Open: Normal operation       • Close: Boiler operation output         • Open: Normal operation       • Close: Boiler operation output         • Open: Normal operation       • Close: Release control running (Only indoor unit safety or protection control)         • Open: Normal operation       • Close: Release control running         • During backup heater running for heating       • Open: Backup heater running         • Open: Backup heater running       • Open: Backup heater running         • Open: Not neating operation       • Open: Not neating operation         • Close: Backup heater running       • Open: Not neating operation         • Open: Not neating operation       • Open: Not neating operation         • Close: Heating operation       • Open: Not neating operation         • Open: Not coeling operation       • Open: Not coelin			7 Heating operation output
0: Alarm output         • Open: No alarm         • Close: Alarm         1: Compressor operation output         • Open: Compressor is stopping         • Close: Compressor is operating         2: Defrost operation output         • Open: Compressor is operating         2: Defrost operation output         • Open: Unit is not defrost operating         3: Boiler control output         • Open: Normal operation         • Close: Boiler operation output         4: During safety or protection control running (Only indoor unit safety or protection control)         • Open: Normal operation         • Close: Boiler operation output         4: During backup heater running for heating         • Open: Backup heater not running         • Open: Backup heater running for heating         • Open: Backup heater running         • Close: Backup heater running         • Open: Not heating operation         • Close: Backup heater running         • Open: Backup heater running         • Close: Backup heater running         • Open: Not heating operation         • Close: Backup heater running         • Close: Backup heater running			
<ul> <li>Open: No alarm</li> <li>Close: Alarm</li> <li>Compressor operation output</li> <li>Open: Compressor is stopping</li> <li>Close: Compressor is operating</li> <li>2: Defrost operation output</li> <li>Open: Unit is not defrost operating</li> <li>Close: Unit is defrost operating</li> <li>3: Boiler control output</li> <li>Open: Normal operation</li> <li>Close: Boiler operation output</li> <li>Close: Boiler operation output</li> <li>Open: Normal operation</li> <li>Close: Boiler operation output</li> <li>Close: Boiler operation output</li> <li>Close: Boiler operation output</li> <li>Close: Boiler operation control running (Only indoor unit safety or protection control)</li> <li>Open: Normal operation</li> <li>Close: Release control running</li> <li>S: During backup heater running for heating</li> <li>Open: Backup heater running for hot water supply</li> <li>Close: Backup heater running</li> <li>Close: Heating operation</li> <li>Close: Heating operation</li> <li>Close: Close control output</li> <li>Open: Not heating operation</li> <li>Close: Close control output</li> <li>Open: Not heating operation</li> <li>Close: Cooling operation</li> </ul>			9 Hot water operation output
<u>9: Hot water operation output</u> Open: Not hot water operation     Close: Hot water operation		<ul> <li>Close: Alarm</li> <li><u>1: Compressor operation output</u></li> <li>Open: Compressor is stopping</li> <li>Close: Compressor is operating</li> <li><u>2: Defrost operation output</u></li> <li>Open: Unit is not defrost operating</li> <li><u>3: Boiler control output</u></li> <li>Open: Normal operation</li> <li>Close: Boiler operation output</li> <li><u>4: During safety or protection control running (Only indoor unit saf</u></li> <li>Open: Normal operation</li> <li>Close: Release control running</li> <li><u>5: During backup heater running for heating</u></li> <li>Open: Backup heater running</li> <li><u>6: During backup heater running</u></li> <li>Close: Backup heater running</li> <li>Close: Close: Backup heater running</li> <li>Close: Cooling operation</li> <li>Close: Not hot water operation</li> <li>Close: Not hot water operation</li> </ul>	Tety or protection control)

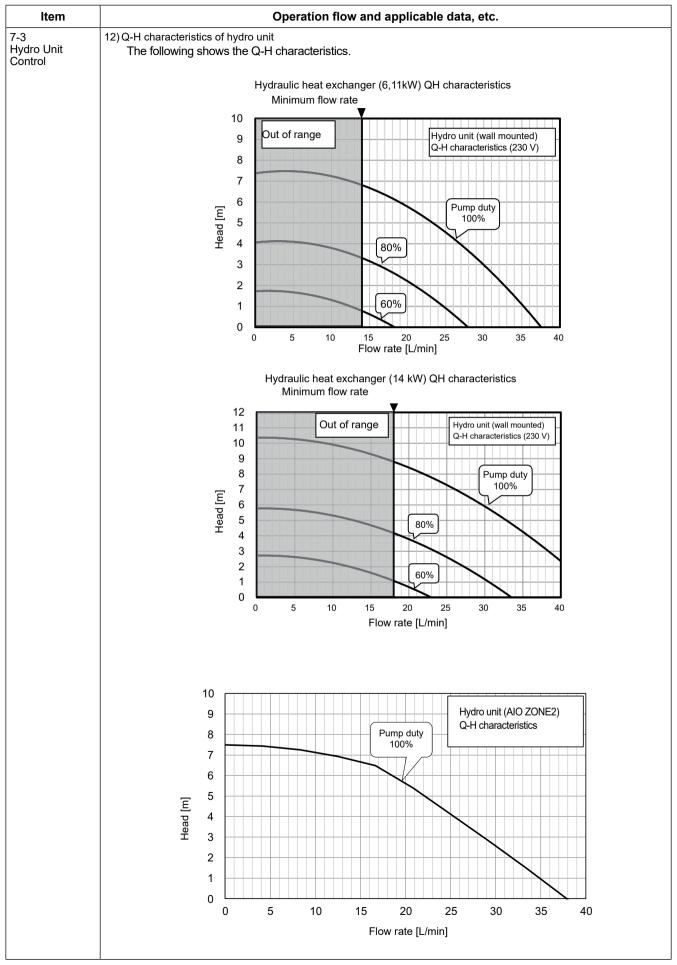

ltem	Operation flow and applicable data, etc.							
7-3. Hydro Unit Control	13) Automatic restart control The unit records operation information before a power outage and retrieves the information after the power is restored to restart automatically the operation with the information.							
	<ul> <li>13-1)Operation during remote controller</li> <li>The operation status before a power outage automatically restarts after the power is restored. (The merit functions are also enabled)</li> </ul>							
	<ul> <li>Approximately 6 hours or more after a power outage The operation status before a power outage automatically restarts after the power is restored. But the merit functions (Night setback, Anti bacteria) are disabled.</li> <li>The remote controller time displays "00:00". (The merit functions are disabled)</li> </ul>							
	13-2)Operation during forcible automatic operation A forcible automatic operation is performed when the power is restored after a power outage.							
	13-3) Operation during defrosting operation When the power is restored after a power outage, the usual operation restarts. Note: The operation details recorded before a power outage							
	Operation mode: Hot water supply, Heating, Cooling, Hot water supply + Heating, Hot water supply + Cooling Set temperature: Hot water set temperature, Heating set temperature, Cooling set temperature							
	Merit function: Hot water supply operation (Anti bacteria) Heating operation (Night setback)							
	<ul> <li>14) Piping freeze prevention control</li> <li>This control operates when the power is on regardless the remote controller setting ON or OFF.</li> <li>To prevent frost bursting of the water piping for hot water supply and heating, the unit flows water with the circulation pump when the temperature sensor value falls below a certain temperature.</li> </ul>							
	<ul> <li>14-1)Piping freeze prevention control 1</li> <li>1) Start condition: TWO &lt; 4°C or TWI &lt; 4°C or THO &lt; 4°C</li> <li>2) End condition: TWO ≥ 5°C and TWI ≥ 5°C and THO ≥ 5°C</li> <li>3)-1 How to operate (circulation pump)</li> <li>When the circulation pump is not in operation, if the sensor detects the freeze prevention control start temperature, the unit operate the circulation pump.</li> </ul>							
	<ul> <li>During a freeze prevention operation, a heat pump operation does not start.</li> <li>When neither [Hot water supply] nor [heating/cooling] is in operation, if the end condition is not met when 3 minutes has passed after an operation starts, the unit performs the operation in 3)-2 to prevent freeze.</li> <li>3)-2 How to operate (circulation pump + backup heater)</li> </ul>							
	<ul> <li>When neither [Hot water supply] nor [heating/cooling] is in operation, if the end condition is not met when 3 minutes has passed after an operation starts.</li> <li>End condition: TWO ≥ 5°C and TWI ≥ 5°C and THO ≥ 5°C</li> <li>Heating with the set temperature 30°C operates.</li> </ul>							
	<ul> <li>3)-3 Abnormal stop</li> <li>If a freeze prevention operation continues for 30 minutes and does not meet the end condition, the operation stops as abnormal stop. (Remote controller check code: A05)</li> <li>After failure occurring, it is cleared automatically when the end condition is met.</li> <li>End condition (After failure occurring): TWO ≥ 8°C and TWI ≥ 8°C</li> </ul>							
	<ul> <li>14-2)Piping freeze prevention control 2</li> <li>TC and TWO activates freeze prevention regardless of a heat pump operation mode.</li> <li>1) Determination condition: TWO &gt; 20°C. 2*TC + TWO &lt; -12°C is continuously detected for 180 (120) seconds or longe Or TWO ≤ 20°C. TC + TWO &lt; 4°C is continuously detected for 180 (120) seconds or longer.</li> <li>* (): Heating</li> </ul>							
	<ul> <li>2) Determination cancellation conditions <ul> <li>The stop or operation mode is changed by the remote controller</li> <li>The mode is defrosting at the time of determination</li> <li>At the next time of defrosting, the start condition is not met.</li> <li>The mode is other than defrosting at the time of determination</li> </ul> </li> </ul>							
	After cooling, heat pump restarts, the start condition is not met for 10 minutes. 3) Failure display • If freeze determination cancellation condition is not met, A04 failure is displayed							
	<ul> <li>14-3)Piping freeze prevention control 3 This control applies only when defrosting is in operation. <ol> <li>Determination condition: During defrosting, TWI ≤ 15°C is continuously detected for 30 seconds or longer (After the stop, the unit restarts.)</li> <li>Determination cancellation condition</li> </ol></li></ul>							
	<ul> <li>At the next time of defrosting, the start condition is not met.</li> <li>3) Failure display</li> <li>If freeze determination cancellation condition is not met, A04 failure is displayed.</li> </ul>							

Item		Operation flow	v and applicable data, etc	· ·
7-3. Hydro Unit Control	When the 1) Deterr 2) Deterr • After • At the 3) Failure	water supply operati nination cancellation condition a restart, the start condition is not met e next time of defrosting, the start condit	r detects PS < 0.2 MPa and 18 r detects PS < 0.2 MPa and 10 on) for 30 minutes. ion is not met. (Defrosting oper	30 seconds passes (defrosting and 0 minutes passes (heating and hot ration for heating or hot water supply)
	The hyd TWI, TW 75	n water protect control ro unit protects against high return w 'O, THO A02 failure dete 2 failure appeared, the built-in circulation	ct (Diff: 2K)	e boiler system.
	DN	Setting item	Default	Setting available range
	62	Activate/deactivate A02 failure detection	0: Activate	1: Deactivate
	This DN_62 f	unction is valid when DN_6B0 is "1". (S	ee 9.1. Hydro unit Setting)	·

ltem	Operation flow and applicable data, etc.							
7-4. Outdoor unit control	<ol> <li>PMV (Pulse motor valve) control Valve opening is controlled using the expansion valve with a pulse motor according to a heat pump operation status.</li> <li>PMV is controlled between 30 and 500 pulses during an operation.</li> <li>At the time of a cooling operation, PMV is controlled with the usual target value of 1 to 4 K temperature difference between TS sensor and TC sensor.</li> <li>At the time of a hot water supply or heating operation, PMV is controlled with the usual target value of -1 to 4 K temperature difference between TS sensor and TE sensor.</li> <li>For both cooling and heating, if the cycle is overheated, PMV is controlled using the TD sensor.</li> <li>A defective sensor may cause liquid back flow or abnormal overheat of the compressor, significantly shortening the compressor life. If the compressor or other equipment is repaired, first check that the resistance of each sensor or the refrigerant cycle has no problem, then start the operation.</li> </ol>							
	<ul> <li>2) Discharge temperature release control This control detects an abnormality of the refrigerant cycle or compressor to perform failure prevention. </li> <li>This control reduces operation frequency if the PMV control does not lower the outlet temperature or if the outlet temperature rapidly rises. The frequency control is broken down to the unit of 0.6 Hz to stabilize the cycle. <ul> <li>If the discharge temperature detects the abnormal stop zone, the compressor stops and then restarts after 150 seconds. The abnormality detection counter is cleared when the operation continues for 10 minutes. If detected 4 times, the check code is displayed and the compressor does not restart. </li> <li>* An abnormality could occur due to too less refrigerant, PMV defective, or cycle stuck.</li> <li>For details about an failure displayed, see the check code list.</li> </ul></li></ul>							
	$ \begin{array}{c c c c c c c c c c c c c c c c c c c $							

ltem	Operation flow and applicable data, etc.
7-4. Outdoor unit control	<ul> <li>3) Current release control</li> <li>The number of compressor rotation is controlled so that current value of the compressor drive circuit does not exceed the specified value.</li> </ul>
	<ul> <li>The outdoor unit detects the input current.</li> <li>The outside air temperature is detected and used to set the specified value of current.</li> <li>The number of compressor rotation instructed by the hydro unit is used to determine whether the current value exceeds the specified value.</li> <li>If exceeds, the number of compressor rotation is reduced to the most approximate number instructed by the hydro unit within the specified value range.</li> </ul>
	Outdoor unit current inverter Main circuit control current Current release point setting
	Operation current ≤ Settings No Yes Compressor operation Hz down
	Current degradation Capacity control continue

	Operation flow and applica		
Single phase outdoor unit Heating, Hot water supply			
	Oursent value of a state (A)	CT (A)	
Outside temperature TO (degree °C)	Current release value (A)	12.4	_
29 ≤ TO	<b>401 / 601</b> 8.0	12.4	$\searrow$
11 < TO < 29	0.0 12.4 - (TO - 11) × 4.4 / 18		
TO ≤ 11	12.4 - (10 - 11) × 4.47 18	8.0	
10311	12.4		11 29 TO (
Outside temperature	Current release value (A)	CT (A)	11 29 10(
TO (degree °C)	801 / 1101	20	
25 ≤ TO	16.0		
15 < TO < 25	20.0 - (TO - 15.0) × 0.4		
TO ≤ 15	20.0	16	
			15 25 TO
Outside temperature	Current release value (A)	CT (A)	
TO (degree °C)	1401	25.8	~
35 ≤ TO	16.0		
15 < TO < 35	25.8 - (To - 15) × 0.49		
TO ≤ 15	25.8	16	
Cooling			15 35 TO
		CT (A)	15 35 TO
Outside temperature TO (degree °C)	Current release value (A)		
44 ≤ TO	<b>401 / 601</b> 10.0	12.4	
44 ≤ 10 39 ≤ TO < 44	10.0	10.0	
10 ≤ TO < 39	12.4	10.8 10.0	
10 2 10 < 39	12.4	10.0	
		L	39 44 TO (
Outside temperature	Current release value (A)	CT (A)	
TO (degree °C)	801 / 1101	17 16	
44 ≤ TO	12.4	10	
39 ≤ TO < 44	16.0	12.5	
10 ≤ TO < 39	17.0	12.5	
			39 44 TO
Outside temperature	Current release value (A)	CT (A)	
TO (degree °C)	1401	25.8	
44 ≤ TO	13.0	20	
00 x T0 x 44	00.0	20	
39 ≤ TO < 44	20.0		
39 ≤ 10 < 44 10 ≤ TO < 39	25.8	12	1
10 ≤ TO < 39	25.8	13	
	25.8	13	39 44 TO
10 ≤ TO < 39	25.8	13	39 44 TO
 10 ≤ TO < 39 No cooling operation available	25.8		39 44 TO
 10 ≤ TO < 39	25.8	13	39 44 TO
 10 ≤ TO < 39 No cooling operation available f 3 phase outdoor unit Heating, Hot water supply	25.8 for TO < 10°C.	CT (A)	39 44 TO
 10 ≤ TO < 39	25.8 for TO < 10°C. Current release value (A)		39 44 TO
 $10 \le TO < 39$ No cooling operation available for the second state of the second stat	25.8 for TO < 10°C. Current release value (A) 801, 1101, 1401	CT (A)	39 44 TO
10 ≤ TO < 39	25.8 for TO < 10°C. Current release value (A) 801, 1101, 1401 5.0	CT (A)	
 10 $\leq$ TO < 39No cooling operation available3 phase outdoor unit Heating, Hot water supplyOutside temperature TO (degree °C)35 $\leq$ TO15 $<$ TO $<$ 35TO $\leq$ 15	25.8 for TO < 10°C. Current release value (A) 801, 1101, 1401 5.0 10.0 - (To - 15)×0.25	CT (A)	39 44 TO
$10 \le TO < 39$ No cooling operation available3 phase outdoor unit Heating, Hot water supplyOutside temperature TO (degree °C) $35 \le TO$ $35 \le TO$ $15 < TO < 35$ TO $\le 15$ Cooling	25.8 for TO < 10°C. Current release value (A) 801, 1101, 1401 5.0 10.0 - (To - 15)×0.25 10.0	CT (A) 10 5	
10 $\leq$ TO < 39No cooling operation available 13 phase outdoor unit Heating, Hot water supplyOutside temperature TO (degree °C) $35 \leq$ TO $35 \leq$ TO $15 <$ TO < 35	25.8 for TO < 10°C. Current release value (A) 801, 1101, 1401 5.0 10.0 - (To - 15)×0.25 10.0 Current release value (A)	CT (A)	
10 $\leq$ TO < 39No cooling operation available3 phase outdoor unit Heating, Hot water supplyOutside temperature TO (degree °C)35 $\leq$ TO35 $\leq$ TO15 < TO < 35	25.8 for TO < 10°C. Current release value (A) 801, 1101, 1401 5.0 	CT (A) 10 5	
10 $\leq$ TO < 39	25.8           for TO < 10°C.	CT (A) 10 5	
 10 $\leq$ TO < 39No cooling operation available3 phase outdoor unit Heating, Hot water supplyOutside temperature TO (degree °C)35 $\leq$ TO35 $\leq$ TO15 < TO < 35	25.8 for TO < 10°C. Current release value (A) 801, 1101, 1401 5.0 	CT (A) 10 5 CT (A)	

ltem				Operation flow and applicable data, etc.										
7-4. Outdoor unit control	<ul> <li>4) Outdoor fan control</li> <li>The outdoor side control part controls the number of fan motor rotations by receiving an operation instruction from the Hydro side (Hydro unit) control part.</li> <li>For sensing the true outside temperature, fan is operated without compressor operation.</li> <li>* Although the fan motor is a DC motor, which has non-step variable numbers of rotations, it is limited to some steps for convenience of control.</li> </ul>													
	The number of fan tap rotation allocation [rpm]													
	Single phase outdoor unit	w1 v	N2 W3	W4	w5 we	W7	W8	W9	WA	WB	wc	WD	WE	WF
		240 3	320 320	390	400 470	510	550	560	570	570	650	700	750	830
	801, 1101	200 2	200 200	230	260 290	330	360	410	450	480	500	540	570	600
	1401	200 2	200 200	200	230 290	370	450	490	550	600	660	720	760	800
	3 phase	w1 v	N2 W3	W4	w5 w6	W7	W8	W9	WA	WB	wc	WD	WE	WF
	outdoor unit 801, 1101, 1401	200 2	200 200	200	230 290	370	450	490	550	600	660	720	760	800
	the DC fan co • For 60 second	<ul> <li>4-1) Cooling fan control</li> <li>The TL sensor, TO sensor and operation frequency control the outdoor fan. The control is performed by 1 tap of the DC fan control (14 taps).</li> <li>For 60 seconds after the start, the maximum fan tap for each zone that is shown in the following table is fixed. After that, the fan is controlled according to the TL sensor (401, 601), TG (801,1101,1401). (TG: temperature converted from PD)</li> </ul>												
	Single phase ou	utdoor un	nit 401, 601											
	TL [ °C]													
	56 WF	tap												
	53 + 1 tap / 20 secs													
	+ 1 tap / 20				<b>.</b>		- )							
	+ 1 tap / 20 (Up to the	maximu		er of rotat	ion for ea	ch zon	e)							
	+ 1 tap / 20 (Up to the 38 Number of	maximu rotatior		er of rotal	ion for ea	ch zon	e)							
	+ 1 tap / 20 (Up to the Number of	maximu rotatior secs	n hold	_										
	+ 1 tap / 20 (Up to the 38 Number of - 1 tap / 20	maximu rotatior secs	n hold m numbe	er of rotat	on for eac	h zone			45 11-			]		
	+ 1 tap / 20 (Up to the 38 Number of - 1 tap / 20	maximu rotatior secs minimu nge	n hold m numbe Less th	er of rotati an 20 Hz	on for ead	h zone or mo	e) re to less 5 Hz	Mi	45 Hz		-			
	3835351 tap / 20(Up to the0 (Up to the1 tap / 20(Up to the	maximu rotatior secs minimu nge	n hold m numbe Less th linimum	er of rotati an 20 Hz	on for each 20 H: n Minin	h zone or mo than 45 um	e) re to less		nimum	Max	re imum VF			
	+ 1 tap / 20 (Up to the Number of - 1 tap / 20 (Up to the	maximu rotatior secs minimu nge	n hold m numbe Less th	er of rotati an 20 Hz	on for ead	or moi than 45	e) Fre to less 5 Hz Maximum		-	Max V	imum			
	$ \begin{array}{r} + 1 \text{ tap } / 20\\ (Up \text{ to the})\\ \hline \\ Number \text{ of}\\ - 1 \text{ tap } / 20\\ (Up \text{ to the})\\ \hline \\ \hline$	maximu rotatior secs minimu nge M	n hold m numbe Less th Iinimum W6	an 20 Hz	on for ead 20 H; n Minin	or moo than 45	e) 5 Hz Maximum WF		nimum WA	Max V V	<b>imum</b> VF			
	$ \begin{array}{r} + 1 \text{ tap } / 20\\ (Up \text{ to the})\\ \hline \\ Number \text{ of}\\ - 1 \text{ tap } / 20\\ (Up \text{ to the})\\ \hline \\ \hline \\ \textbf{Temperature ra}\\ \hline \\ \hline \\ 38^{\circ}\text{C} \leq \text{TO}\\ \hline \\ 29^{\circ}\text{C} \leq \text{TO} < 38\\ \hline \end{array} $	maximu rotatior secs minimu nge <u>M</u> *°C *°C	n hold m numbe Less th Iinimum W6 W5	an 20 Hz Maximu WC WB	on for each and a second secon	or moi than 45 um	e) Fre to less 5 Hz Maximun WF WD		nimum WA W9	Max V V V	<b>imum</b> VF VD			
	$ \begin{array}{c} + 1 \text{ tap } / 20\\ (Up \text{ to the})\\ \hline \\ Number \text{ of}\\ - 1 \text{ tap } / 20\\ (Up \text{ to the})\\ \hline \\ \hline \\ \textbf{Temperature ra}\\ \hline \\ 38^{\circ}\text{C} \leq \text{TO}\\ \hline \\ 29^{\circ}\text{C} \leq \text{TO} < 38\\ \hline \\ 15^{\circ}\text{C} \leq \text{TO} < 29\end{array} $	maximu rotatior secs minimu nge <u>M</u> *°C *°C	n hold m numbe Less th Iinimum W6 W5 W4	an 20 Hz Maximu WC WB W8	on for each 20 Ha Minin Wa Wa Wa	or moi than 45 um	e) Fre to less FHZ Maximum WF WD WA		nimum WA W9 W8	Max V V V	imum VF VD VC			
	$ \begin{array}{c} + 1 \text{ tap } / 20\\ (Up \text{ to the})\\ \hline \\ Number \text{ of}\\ - 1 \text{ tap } / 20\\ (Up \text{ to the})\\ \hline \\ \hline \\ \textbf{Temperature ra}\\ \hline \\ 38^{\circ}\text{C} \leq \text{TO}\\ \hline \\ 29^{\circ}\text{C} \leq \text{TO} < 38\\ \hline \\ 15^{\circ}\text{C} \leq \text{TO} < 29\end{array} $	maximu rotatior secs minimuu nge M *C *C *C	n hold m numbe Less th linimum W6 W5 W4 W3	an 20 Hz Maximu WC WB W8 W6	on for each 20 Ha Minin Wa Wa Wa	or moi than 45 um	e) Fre to less FHZ Maximum WF WD WA		nimum WA W9 W8	Max V V V	imum VF VD VC			
	$+ 1 \text{ tap } / 20$ $(Up \text{ to the})$ Number of $- 1 \text{ tap } / 20$ $(Up \text{ to the})$ $- 1 \text{ tap } / 20$ $(Up \text{ to the})$ $Temperature ra$ $38^{\circ}C \le TO$ $29^{\circ}C \le TO < 38$ $15^{\circ}C \le TO < 29$ $5^{\circ}C \le TO < 15^{\circ}$	maximu rotatior secs minimuu nge M *C *C *C	n hold m numbe Less th linimum W6 W5 W4 W3	an 20 Hz Maximu WC WB W8 W6	on for each 20 Ha Minin Wa Wa Wa	or moi than 45 um	e) Fre to less FHZ Maximum WF WD WA		nimum WA W9 W8	Max V V V	imum VF VD VC			
	$\begin{array}{c} + 1 \text{ tap } / 20\\ (Up \text{ to the}\\ \hline\\ \text{Number of}\\ 35\\\hline\\ - 1 \text{ tap } / 20\\ (Up \text{ to the}\\\hline\\ \hline\\ \text{Temperature ra}\\ \hline\\ 38^{\circ}\text{C} \leq \text{TO}\\ 29^{\circ}\text{C} \leq \text{TO} < 38\\\hline\\ 15^{\circ}\text{C} \leq \text{TO} < 29\\\hline\\ 5^{\circ}\text{C} \leq \text{TO} < 15\\\hline\\\hline\\ \hline\\ \text{Single phase out}\\ \hline\\ \text{TG [°C]}\\\hline\\ \hline\\ \text{WF}\\\hline\end{array}$	maximu rotatior secs minimuu nge M °C °C °C °C	n hold m numbe Less th linimum W6 W5 W4 W3	an 20 Hz Maximu WC WB W8 W6	on for each 20 Ha Minin Wa Wa Wa	or moi than 45 um	e) Fre to less FHZ Maximum WF WD WA		nimum WA W9 W8	Max V V V	imum VF VD VC			
	$\begin{array}{c} + 1 \text{ tap } / 20\\ (Up \text{ to the}\\ Number \text{ of}\\ 35\\ \hline \\ - 1 \text{ tap } / 20\\ (Up \text{ to the}\\ \hline \\ \hline \\ \textbf{Temperature ra}\\ \hline \\ 38^{\circ}\text{C} \leq \text{TO}\\ 29^{\circ}\text{C} \leq \text{TO} < 38\\ 15^{\circ}\text{C} \leq \text{TO} < 29\\ \hline \\ 5^{\circ}\text{C} \leq \text{TO} < 15^{\circ}\\ \hline \\ \hline \\ \hline \\ \textbf{Single phase ou}\\ \hline \\ \textbf{TG [°C]} \end{array}$	maximu rotatior secs minimuu nge M °C °C °C °C	n hold m numbe Less th linimum W6 W5 W4 W3	an 20 Hz Maximu WC WB W8 W6	on for each 20 Ha Minin Wa Wa Wa	or moi than 45 um	e) Fre to less FHZ Maximum WF WD WA		nimum WA W9 W8	Max V V V	imum VF VD VC			
	$\begin{array}{c} + 1 \text{ tap } / 20\\ (Up \text{ to the}\\ \hline \text{Number of}\\ 35\\ \hline -1 \text{ tap } / 20\\ (Up \text{ to the}\\ \hline \hline \text{Number of}\\ -1 \text{ tap } / 20\\ (Up \text{ to the}\\ \hline \hline 20^\circ \text{C} \leq \text{TO} < 38\\ \hline 15^\circ \text{C} \leq \text{TO} < 38\\ \hline 15^\circ \text{C} \leq \text{TO} < 29\\ \hline 5^\circ \text{C} \leq \text{TO} < 15\\ \hline \hline \text{Single phase ou}\\ \hline \text{TG } [^\circ \text{C}]\\ \hline 58\\ \hline 55\\ \hline \end{array}$	maximu rotatior secs minimuu nge M "°C "°C "°C "°C "°C "°C "°C "°C "°C "°C	n hold m numbe Less th linimum W6 W5 W4 W3	an 20 Hz Maximu WC WB W8 W6	on for each 20 Ha Minin Wa Wa Wa	or moi than 45 um	e) Fre to less FHZ Maximum WF WD WA		nimum WA W9 W8	Max V V V	imum VF VD VC			
	$+ 1 \text{ tap } / 20$ $(Up \text{ to the})$ Number of $- 1 \text{ tap } / 20$ $(Up \text{ to the})$ $- 1 \text{ tap } / 20$ $(Up \text{ to the})$ $Temperature ra$ $38^{\circ}C \le TO$ $29^{\circ}C \le TO < 38$ $15^{\circ}C \le TO < 29$ $5^{\circ}C \le TO < 15^{\circ}$ $Single \text{ phase out}$ $TG [^{\circ}C]$ $58$ $55$ $+ 1 \text{ tap } / 20$	maximu rotatior secs minimuu nge M *°C *°C *°C *°C *°C *°C *°C *°C *°C *°C	n hold m numbe Less th inimum W6 W5 W4 W3 w3	er of rotati an 20 Hz WC WB W8 W6	on for each 20 H: Minin Wi Wi Wi Wi	h zone	e) Maximum WF WD WA W8		nimum WA W9 W8	Max V V V	imum VF VD VC			
	$+ 1 \text{ tap } / 20$ $(Up \text{ to the})$ Number of $- 1 \text{ tap } / 20$ $(Up \text{ to the})$ $Temperature ra$ $38^{\circ}C \le TO$ $29^{\circ}C \le TO < 38$ $15^{\circ}C \le TO < 29$ $5^{\circ}C \le TO < 29$ $5^{\circ}C \le TO < 15^{\circ}$ $Single phase or TG [^{\circ}C] 58 55 + 1 \text{ tap } / 20 (Up \text{ to the}) 38$	maximu rotatior secs minimuu nge M °C °C °C r c c c c c c c c c c c c c c c c c c	n hold m numbe Less th M6 W5 W4 W3 iit 801, 110	er of rotati an 20 Hz WC WB W8 W6	on for each 20 H: Minin Wi Wi Wi Wi	h zone	e) Maximum WF WD WA W8		nimum WA W9 W8	Max V V V	imum VF VD VC			
	+ 1 tap / 20 (Up to the Number of - 1 tap / 20 (Up to the Temperature ra $38^{\circ}C \le TO$ $29^{\circ}C \le TO < 38$ $15^{\circ}C \le TO < 29$ $5^{\circ}C \le TO < 29$ $5^{\circ}C \le TO < 15^{\circ}$ Single phase ou TG [°C] 58 + 1 tap / 20 (Up to the $38^{\circ}C \le TO$ 58 + 1 tap / 20 (Up to the Number of 38 55 + 1 tap / 20 (Up to the) 55 + 1 tap / 20 (Up to the) 55 + 1 tap / 20 (Up to the) 35 55 + 1 tap / 20 (Up to the) 35 55 + 1 tap / 20 (Up to the) 35 55 + 1 tap / 20 (Up to the) 35 55 55 + 1 tap / 20 (Up to the) 55 + 1 tap / 20 (Up to the) 1 tap / 20 (Up to the) (Up	maximu rotatior secs minimuu nge M C C C C C C C C C C C C C C C C C C	n hold m numbe Less th M6 W5 W4 W3 iit 801, 110	er of rotati an 20 Hz WC WB W8 W6	on for each 20 H: Minin Wi Wi Wi Wi	h zone	e) Maximum WF WD WA W8		nimum WA W9 W8	Max V V V	imum VF VD VC			
	$\begin{array}{c c} + 1 \text{ tap } / 20\\ (Up \text{ to the}\\ \hline \\ Number \text{ of}\\ -1 \text{ tap } / 20\\ (Up \text{ to the}\\ \hline \\ \hline \\ \textbf{Number of}\\ -1 \text{ tap } / 20\\ (Up \text{ to the}\\ \hline \\ \hline \\ \textbf{Temperature ra}\\ \hline \\ 38^{\circ}C \leq TO\\ 29^{\circ}C \leq TO < 38\\ \hline \\ 15^{\circ}C \leq TO < 29\\ \hline \\ 5^{\circ}C \leq TO < 15\\ \hline \\ \hline \\ \textbf{Single phase or}\\ \hline \\ \textbf{TG } [^{\circ}C]\\ \hline \\ \textbf{S8}\\ \hline \\ \textbf{S5}\\ \hline \\ \textbf{-1}\\ \textbf{Tap } / 20\\ (Up \text{ to the}\\ \hline \\ \textbf{Number of}\\ \hline \end{array}$	maximu rotatior secs minimuu nge M °C °C °C r°C r°C r°C r°C r°C secs maximu rotatior	n hold m numbe Less th Minimum W6 W5 W4 W3 w4 w3 wit 801, 110 wit 801, 110 n hold	er of rotati an 20 Hz Maximu WC WB W8 W6 M6 M6 M7 M6	ion for each	h zone	e) <b>Maximum</b> WF WD WA W8 W8		nimum WA W9 W8	Max V V V	imum VF VD VC			
	$+ 1 \text{ tap } / 20$ $(Up \text{ to the})$ Number of $- 1 \text{ tap } / 20$ $(Up \text{ to the})$ $Temperature ra$ $38^{\circ}C \le TO$ $29^{\circ}C \le TO < 38$ $15^{\circ}C \le TO < 29$ $5^{\circ}C \le TO < 15^{\circ}$ $Single phase or TG [^{\circ}C] 58 + 1 \text{ tap } / 20 (Up \text{ to the}) 88 35 - 1 \text{ tap } / 20$	maximu rotatior secs minimuu nge M °C °C °C r°C r°C r°C r°C r°C secs maximu rotatior	n hold m numbe Less th W6 W5 W4 W3 wit 801, 110 um numbe	er of rotati an 20 Hz WC WB W8 W6 11	ion for each	h zone	e) re to less Hz Maximum WF WD WA W8 e) e) re to less		himum WA W9 W8 W7	Max V V	imum VF VD VC VA			
	$+ 1 \text{ tap } / 20$ $(Up \text{ to the})$ Number of $- 1 \text{ tap } / 20$ $(Up \text{ to the})$ $Temperature ra$ $38^{\circ}C \le TO$ $29^{\circ}C \le TO < 38$ $15^{\circ}C \le TO < 29$ $5^{\circ}C \le TO < 15^{\circ}$ $Single phase or TG [^{\circ}C] 58 + 1 \text{ tap } / 20 (Up \text{ to the}) 88 35 - 1 \text{ tap } / 20$	maximu rotatior secs minimum rotatior c c c c c c c c c c c c c c c c c c c	n hold m numbe Less th M6 W5 W4 W3 w4 w3 wit 801, 110 um numbe n hold um numbe Less th	er of rotati Maximu WC WB W8 W6 M6	ion for each on fo	h zone	e) re to less Hz Maximum WF WD WA W8 W8 e) e) re to less i Hz		himum WA W9 W8 W7 W7	Max V V V	imum VF VD VC VA			
	$+ 1 \text{ tap } / 20$ $(Up \text{ to the})$ Number of $- 1 \text{ tap } / 20$ $(Up \text{ to the})$ $Temperature ra$ $38^{\circ}C \le TO$ $29^{\circ}C \le TO < 38$ $15^{\circ}C \le TO < 29$ $5^{\circ}C \le TO < 15^{\circ}$ $Single phase of$ $TG [^{\circ}C]$ $58$ $55$ $+ 1 \text{ tap } / 20$ $(Up \text{ to the})$ $8$ $S5$ $- 1 \text{ tap } / 20$ $(Up \text{ to the})$ $S1$	maximu rotatior secs minimum rotatior c c c c c c c c c c c c c c c c c c c	n hold m numbe Less th W6 W5 W4 W3 wit 801, 110 um numbe	er of rotati an 20 Hz WC WB W8 W6 11	ion for each on fo	h zone	e) re to less Hz Maximum WF WD WA W8 e) e) re to less		himum WA W9 W8 W7	Max V V V V V	imum VF VD VC VA			
	+ 1  tap  / 20 $(Up  to the)$ Number of $- 1 \text{ tap } / 20$ $(Up \text{ to the})$ $Temperature ra$ $38^{\circ}C \le TO$ $29^{\circ}C \le TO < 38$ $15^{\circ}C \le TO < 29$ $5^{\circ}C \le TO < 15^{\circ}$ $Single phase outher of$ $55$ $+ 1 \text{ tap } / 20$ $(Up \text{ to the})$ $8$ $35$ $- 1 \text{ tap } / 20$ $(Up \text{ to the})$ $7$ $38$ $10^{\circ}C \le TO < 10^{\circ}$ $10^{\circ}C \le $	maximu rotatior secs minimul rotatior rotatior secs maximu rotatior secs maximu rotatior secs maximu rotatior	n hold m numbe Less th M6 W5 W4 W3 W3 w4 W3 w3 w4 w3 w4 w3 w4 w3 w4 w3 w4 w3 w4 w3 w4 w3 w4 w3 w4 w4 w3 w4 w4 w3 w4 w4 w3 w4 w4 w5 w4 w4 w5 w4 w4 w5 w4 w4 w6 w5 w4 w4 w6 w5 w4 w4 w6 w4 w5 w4 w4 w6 w4 w5 w4 w4 w6 w4 w4 w6 w4 w4 w4 w6 w4 w4 w4 w4 w4 w4 w4 w4 w4 w4 w4 w4 w4	er of rotati Maximu WC WB W8 W6 W6	ion for each 20 Hi Minin Wi Wi Wi Wi Wi Wi Wi Wi Wi Wi	h zone	e) me to less Hz Maximum WD WA W8 W8 W8 W8 W8 W8 W8 W8 W8 W8		himum WA W9 W8 W7 W7 45 Hz	Max V V V V V V V V V V V V V V V V V V V	imum VF VD VC VA			
	+ 1  tap  / 20 $(Up  to the)$ Number of $- 1 \text{ tap } / 20$ $(Up \text{ to the})$ $Temperature ra$ $38^{\circ}C \leq TO$ $29^{\circ}C \leq TO < 38$ $15^{\circ}C \leq TO < 29$ $5^{\circ}C \leq TO < 15^{\circ}$ $Single phase outher of$ $58$ $- 1 \text{ tap } / 20$ $(Up \text{ to the})$ $7G [^{\circ}C]$ $F = 1 \text{ tap } / 20$ $(Up \text{ to the})$ $7G = 1 \text{ tap } / 20$ $(Up \text{ to the})$ $7S = 1 \text{ tap } / 20$ $(Up  tap$	maximu rotatior secs minimu  nge  r°C  utdoor un tap  secs maximu  rotatior secs minimu  nge M  rotatior secs minimu  nge M  rotatior	n hold m numbe Less th W6 W5 W4 W3 w3 wit 801, 110 um numbe n hold im numbe Less th flinimum W6	er of rotati Maximu WC WB W8 W6 W6 M1 Maximu er of rotat an 20 Hz Maximu WC	ion for each on fo	h zone	e) re to less Hz Maximun WF WD WA W8 W8 e) re to less Hz Maximun WF		himum WA W9 W8 W7 W7 45 Hz himum WA	Max V V V V V V V V V V V V V V V V V V V	imum VF VD VC VA VA			

	Operation flow and applicable data, etc.									
Single TG [ °C 58	e phase outdoo [] WF tap	r unit 1401								
55		<u>`</u>								
	1 tap / 20 sec p to the max		er of rotation	for each zo	ne)					
38 Nu					,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,					
- 1	<ul> <li>Number of rotation hold</li> <li>- 1 tap / 20 secs</li> <li>(Up to the minimum number of rotation for each zone)</li> </ul>									
		Less than 20 Hz		20 Hz or more to less than 45 Hz		45 Hz c	or more			
Tempe	rature range	Minimum	Maximum	Minimum	Maximum	Minimum	Maximum			
38	3°C ≤ TO	W6	WC	W8	WF	WA	WF			
29°C :	≤ TO < 38°C	W5	WB	W7	WF	W9	WF			
15°C :	≤ TO < 29°C	W4	W8	W6	WA	W8	WC			
5°C ≤	≦ TO < 15°C	W3	W6	W5	W8	W7	WA			
	nase outdoor u									
38 (U	1 tap / 20 sec p to the max	imum numb	er of rotatior	n for each zo	one)					
38 35 - 1		imum numbo tion hold s mum numbe	er of rotation	for each zo	ne)					
38   Nu 35   - 1 (U	p to the max imber of rota tap / 20 sec	imum numb tion hold s mum numbe Less tha	er of rotation	for each zo 20 Hz or m than	ne) ore to less 45 Hz		or more			
38 35 - 1 (U) - 1 (U) - 1 (U) Tempe	p to the max imber of rota tap / 20 sec p to the minin rature range	imum numbo tion hold s mum numbe Less tha Minimum	er of rotation an 20 Hz	for each zo 20 Hz or m than Minimum	ne) ore to less 45 Hz Maximum	Minimum	Maximum			
38 35 - 1 (U) - 1 (U) - 38 - 38	p to the max imber of rota tap / 20 sec p to the mini	imum numbo tion hold s mum numbe Less tha Minimum W6	er of rotation an 20 Hz Maximum WC	for each zo 20 Hz or m than Minimum W8	ne) ore to less 45 Hz Maximum WF	<b>Minimum</b> WA	Maximum WF			
38 35 35 1 (U - 1 (U - 1 (U - 1 (U - 1 (U - 38 29°C :	p to the max imber of rota tap / 20 sec p to the minin rature range $3^{\circ}C \le TO$	imum numbo tion hold s mum numbe Less tha Minimum	er of rotation an 20 Hz	for each zo 20 Hz or m than Minimum	ne) ore to less 45 Hz Maximum	Minimum	Maximum			
38 35 - 1 (U - 1 (U - 1 (U - 1 (U - 1 (U - 1 (U - 1 (U) - 1 (U) (U) - (U) (U) - (U) (U) (U) (U) (U) (U) (U) (U) (U) (U)	p to the max imber of rota tap / 20 sec p to the minin rature range $3^{\circ}C \le TO$ ≤ TO < $38^{\circ}C$	imum numbe tion hold s mum numbe Less the Minimum W6 W5	an 20 Hz Maximum WC WB	for each zo 20 Hz or m than Minimum W8 W7	ne) ore to less 45 Hz Maximum WF WD	Minimum WA W9	Maximum WF WD			
38 38 35 - 1 (U - 1 (U - 1 (U) - 1 (U) - (U) - (U) - (U) - (U) - (U) - (U) - (U) - (U) - (U) (U) - (U) (U) (U) (U) (U) (U) (U) (U) (U) (U)	p to the max imber of rota tap / 20 sec p to the minin rature range $3^{\circ}C \le TO$ $\le TO < 38^{\circ}C$ $\le TO < 29^{\circ}C$ $\le TO < 15^{\circ}C$ $\le TO < 15^{\circ}C$	imum numbe tion hold s mum numbe Less tha Minimum W6 W5 W4 W3	an 20 Hz Maximum WC WB W8	for each zo 20 Hz or m than Minimum W8 W7 W6	ne) ore to less 45 Hz Maximum WF WD WA	Minimum WA W9 W8	Maximum WF WD WC			
38       Nu         38       Nu         38       Nu         -1       (U)         Tempe       38         29°C :       15°C :         5°C ≤       3         TG [°C       58         55	p to the max imber of rota tap / 20 sec p to the minin rature range $3^{\circ}C \le TO$ $\le TO < 38^{\circ}C$ $\le TO < 29^{\circ}C$ $\le TO < 15^{\circ}C$ phase outdoo C WF tap	imum numbe tion hold s mum numbe Less tha W6 W5 W4 W3 r unit 1401	an 20 Hz Maximum WC WB W8	for each zo 20 Hz or m than Minimum W8 W7 W6	ne) ore to less 45 Hz Maximum WF WD WA	Minimum WA W9 W8	Maximum WF WD WC			
38          38          38	p to the max imber of rota tap / 20 sec p to the minin rature range $3^{\circ}C \le TO$ $\le TO < 38^{\circ}C$ $\le TO < 29^{\circ}C$ $\le TO < 15^{\circ}C$ $\le TO < 15^{\circ}C$	imum numbe tion hold s mum numbe Less tha W6 W5 W4 W3 r unit 1401	er of rotation an 20 Hz Maximum WC WB W8 W6	for each zo 20 Hz or m than W8 W7 W6 W5	ne) ore to less 45 Hz WF WD WA W8	Minimum WA W9 W8	Maximum WF WD WC			
38       Nu         38       Nu         38       Nu         35       -1         (U)       -1         38       29°C =         15°C =       5°C ≤         5°C ≤       -1         38       -1         38       -1	p to the max imber of rota tap / 20 sec p to the minin rature range $3^{\circ}C \le TO$ $\le TO < 38^{\circ}C$ $\le TO < 29^{\circ}C$ $\le TO < 15^{\circ}C$ phase outdoo C WF tap 1 tap / 20 sec p to the max	imum numbe tion hold s mum numbe Less tha W6 W5 W4 W3 r unit 1401	er of rotation          an 20 Hz         Maximum         WC         WB         W8         W6	for each zo 20 Hz or m than W8 W7 W6 W5 n for each zo	ne) ore to less 45 Hz Maximum WF WD WA W8 one)	Minimum WA W9 W8	Maximum WF WD WC			
38          38	p to the max imber of rota tap / 20 sec p to the minin rature range $3^{\circ}C \le TO$ $\le TO < 38^{\circ}C$ $\le TO < 29^{\circ}C$ $\le TO < 15^{\circ}C$ $\Rightarrow$ phase outdoo C] WF tap 1 tap / 20 sec p to the max imber of rota tap / 20 sec p to the minin	imum numbe tion hold s mum numbe Less the W6 W5 W4 W3 r unit 1401 cs imum numbe tion hold s mum numbe	er of rotation          an 20 Hz         Maximum         WC         WB         W8         W6	for each zo 20 Hz or m than W8 W7 W6 W5 of for each zo for each zo 20 Hz or m	ne) ore to less 45 Hz Maximum WF WD WA W8 one)	Minimum WA W9 W8 W7	Maximum WF WD WC			
38          38	p to the max imber of rota tap / 20 sec p to the minin rature range $3^{\circ}C \le TO$ $\le TO < 38^{\circ}C$ $\le TO < 29^{\circ}C$ $\le TO < 15^{\circ}C$ phase outdoo C] WF tap 1 tap / 20 sec p to the max imber of rota tap / 20 sec	imum numbe tion hold s mum numbe Less the W6 W5 W4 W3 r unit 1401 cs imum numbe tion hold s mum numbe	er of rotation an 20 Hz Maximum WC WB W8 W6 er of rotation	for each zo 20 Hz or m than W8 W7 W6 W5 of for each zo for each zo 20 Hz or m	ne) ore to less 45 Hz Maximum WF WD WA W8 one) ore to less	Minimum WA W9 W8 W7	Maximum WF WD WC WA			
38          38	p to the max imber of rota tap / 20 sec p to the minin rature range $3^{\circ}C \le TO$ $\le TO < 38^{\circ}C$ $\le TO < 29^{\circ}C$ $\le TO < 15^{\circ}C$ $\Rightarrow$ phase outdoo C] WF tap 1 tap / 20 sec p to the max imber of rota tap / 20 sec p to the minin	imum numbe tion hold s mum numbe Less tha W6 W5 W4 W3 r unit 1401 s mum numbe tion hold s mum numbe	er of rotation WC WB W8 W6 W6 W6 W6 W6 W6 W6	for each zo 20 Hz or m than W8 W7 W6 W5 of for each zo for each zo 20 Hz or m than	ne) ore to less 45 Hz Maximum WF WD WA W8 one) ore to less 45 Hz	Minimum WA W9 W8 W7 45 Hz c	Maximum WF WD WC WA			
$ \begin{array}{c}                                     $	p to the max imber of rota tap / 20 sec p to the minin rature range $3^{\circ}C \le TO$ $\le TO < 38^{\circ}C$ $\le TO < 29^{\circ}C$ $\le TO < 15^{\circ}C$ phase outdoo C] WF tap 1 tap / 20 sec p to the max imber of rota tap / 20 sec p to the minin rature range	imum numbe tion hold s mum numbe Less tha W6 W5 W4 W3 r unit 1401 s mum numbe tion hold s mum numbe Less tha Minimum	er of rotation          an 20 Hz         Maximum         WC         WB         W8         W6	for each zo 20 Hz or m than W8 W7 W6 W5 M5 for each zo for each zo 20 Hz or m than Minimum	ne) ore to less 45 Hz Maximum WF WD WA W8 one) ore to less 45 Hz Maximum	Minimum WA W9 W8 W7 45 Hz o Minimum	Maximum WF WD WA WA			
38          38	p to the max imber of rota tap / 20 sec p to the minin rature range $3^{\circ}C \le TO$ $\le TO < 38^{\circ}C$ $\le TO < 29^{\circ}C$ $\le TO < 15^{\circ}C$ phase outdoo C] WF tap 1 tap / 20 sec p to the max imber of rota tap / 20 sec p to the minin rature range $3^{\circ}C \le TO$	imum numbe tion hold s mum numbe Less tha W6 W5 W4 W3 r unit 1401 s mum numbe tion hold s mum numbe Less tha Minimum W6	er of rotation Maximum WC WB W8 W6 W6 W6 W6 W6 W6 W6	for each zo 20 Hz or m than W8 W7 W6 W5 M5 for each zo for each zo 20 Hz or m than W8	ne) ore to less 45 Hz Maximum WF WD WA W8 one) ore to less 45 Hz Maximum WF	Minimum           WA           W9           W8           W7	Maximum WF WD WA WA			

ltem	Operation flow and applicable data, etc.									
7-4. Dutdoor unit	4-2) Hot water supply and heating fan control									
control	<ol> <li>The TE sensor, TO sensor and operation frequency control the outdoor fan. (The minimum W1 to the maximum are controlled according to the table below.)</li> <li>For 3 minutes after the start, the maximum fan tap for each zone that is shown in the following table is fixed. Af that, the fan is controlled according to the TE sensor temperature.</li> <li>If TE ≥ 24 (30)* °C continues for 5 minutes, the operation stops. No check code is displayed for this; the status is the same as the usual thermostat off. The operation restarts after 150 seconds. This intermittent running is not abnorma *():801, 1101, 1401</li> </ol>									
	NOTE									
	If the heat-pump was therm	<b>NOTE</b> If the heat-pump was thermo-off, the out-door fan motor (up/down) continue to run 10 min with W3 rotation. When the water pump of hydro unit turns on, the fan motor will operate sensing value of outside air temperature (TO								
	TE [°C]									
	-2 tap / 20 secs			401 601	801 1101 1401					
	A	<u> </u>	A	24	30					
	-2 tap / 20 secs	(to W1 (W5))	В	21	21					
	В		С	18	18					
	-1 tap / 20 secs	(to W1 (W5))	D	15	15					
	Number of revo	lutions hold								
	D + 1 tap / 20 sec									
	(Up to the maxi *( ): 3 phase outdoor unit	-								
		it.	20 Hz or more to lea	55						
	*( ): 3 phase outdoor unit Single phase outdoor un	it. Less than 20 Hz	20 Hz or more to les than 45 Hz	40	Hz or more	_				
	*( ): 3 phase outdoor unit Single phase outdoor un 401, 601 Temperature range	it. Less than 20 Hz Maximum	than 45 Hz Maximum	40	Maximum					
	*( ): 3 phase outdoor unit Single phase outdoor un 401, 601 Temperature range 30°C ≤ TO	it. Less than 20 Hz Maximum W5	than 45 Hz Maximum W5	40	<b>Maximum</b> W8					
	*( ): 3 phase outdoor unit Single phase outdoor un 401, 601 Temperature range $30^{\circ}C \le TO$ $25^{\circ}C \le TO < 30^{\circ}C$	it. Less than 20 Hz Maximum W5 W6	than 45 Hz Maximum W5 W6	40	Maximum W8 WA					
	*( ): 3 phase outdoor unit Single phase outdoor un 401, 601 Temperature range $30^{\circ}C \le TO$ $25^{\circ}C \le TO < 30^{\circ}C$ $20^{\circ}C \le TO < 25^{\circ}C$	it. Less than 20 Hz Maximum W5 W6 W8	than 45 Hz       Maximum       W5       W6       W9	40	Maximum W8 WA WC					
	*( ): 3 phase outdoor unit Single phase outdoor un 401, 601 Temperature range $30^{\circ}C \le TO$ $25^{\circ}C \le TO < 30^{\circ}C$	it. Less than 20 Hz Maximum W5 W6	than 45 Hz Maximum W5 W6	40	Maximum W8 WA					
	*( ): 3 phase outdoor unit Single phase outdoor un 401, 601 Temperature range $30^{\circ}C \le TO$ $25^{\circ}C \le TO < 30^{\circ}C$ $20^{\circ}C \le TO < 25^{\circ}C$ $10^{\circ}C \le TO < 20^{\circ}C$	it. Less than 20 Hz Maximum W5 W6 W8 W8 WA	than 45 Hz       Maximum       W5       W6       W9       WA	40	Maximum W8 WA WC WC					
	*( ): 3 phase outdoor unit Single phase outdoor unit 401, 601 Temperature range $30^{\circ}C \le TO$ $25^{\circ}C \le TO < 30^{\circ}C$ $20^{\circ}C \le TO < 25^{\circ}C$ $10^{\circ}C \le TO < 20^{\circ}C$ $5^{\circ}C \le TO < 10^{\circ}C$	it. Less than 20 Hz Maximum W5 W6 W8 WA WA WC	than 45 Hz       Maximum       W5       W6       W9       WA       WC	40	Maximum W8 WA WC WC WC					
	*( ): 3 phase outdoor unit Single phase outdoor unit 401, 601 Temperature range $30^{\circ}C \le TO$ $25^{\circ}C \le TO < 30^{\circ}C$ $20^{\circ}C \le TO < 25^{\circ}C$ $10^{\circ}C \le TO < 25^{\circ}C$ $10^{\circ}C \le TO < 10^{\circ}C$ $-3^{\circ}C \le TO < 5^{\circ}C$	t. Less than 20 Hz Maximum W5 W6 W8 WA WA WC WC	than 45 Hz       Maximum       W5       W6       W9       WA       WC	40	Maximum W8 WA WC WC WC WF					
	*( ): 3 phase outdoor unit Single phase outdoor unit 401, 601 Temperature range $30^{\circ}C \le TO$ $25^{\circ}C \le TO < 30^{\circ}C$ $20^{\circ}C \le TO < 25^{\circ}C$ $10^{\circ}C \le TO < 25^{\circ}C$ $10^{\circ}C \le TO < 20^{\circ}C$ $5^{\circ}C \le TO < 10^{\circ}C$ $-3^{\circ}C \le TO < 5^{\circ}C$ $-10^{\circ}C \le TO < -3^{\circ}C$	it. Less than 20 Hz Maximum W5 W6 W8 WA WC WC WF	than 45 Hz       Maximum       W5       W6       W9       WA       WC       WF	40	Maximum W8 WA WC WC WC WF WF					
	*( ): 3 phase outdoor unit Single phase outdoor unit 401, 601 Temperature range $30^{\circ}C \le TO$ $25^{\circ}C \le TO < 30^{\circ}C$ $20^{\circ}C \le TO < 25^{\circ}C$ $10^{\circ}C \le TO < 25^{\circ}C$ $10^{\circ}C \le TO < 20^{\circ}C$ $5^{\circ}C \le TO < 20^{\circ}C$ $-3^{\circ}C \le TO < 5^{\circ}C$ $-10^{\circ}C \le TO < -3^{\circ}C$ $TO < -10^{\circ}C$	it. Less than 20 Hz Maximum W5 W6 W8 WA WC WC WF WF	than 45 Hz       Maximum       W5       W6       W9       WA       WC       WF       WF	40	Maximum W8 WA WC WC WC WF WF WF					
	*( ): 3 phase outdoor unit Single phase outdoor unit 401, 601 Temperature range $30^{\circ}C \le TO$ $25^{\circ}C \le TO < 30^{\circ}C$ $20^{\circ}C \le TO < 25^{\circ}C$ $10^{\circ}C \le TO < 25^{\circ}C$ $10^{\circ}C \le TO < 20^{\circ}C$ $5^{\circ}C \le TO < 5^{\circ}C$ $-10^{\circ}C \le TO < 5^{\circ}C$ $-10^{\circ}C \le TO < -3^{\circ}C$ $TO < -10^{\circ}C$ $TO = 10^{\circ}C$ $TO = 10^{\circ}C$	it. Less than 20 Hz Maximum W5 W6 W8 WA WC WC WF WF	than 45 Hz       Maximum       W5       W6       W9       WA       WC       WF       WF		Maximum W8 WA WC WC WC WF WF WF					
	*( ): 3 phase outdoor unit Single phase outdoor unit 401, 601 Temperature range $30^{\circ}C \le TO$ $25^{\circ}C \le TO < 30^{\circ}C$ $20^{\circ}C \le TO < 25^{\circ}C$ $10^{\circ}C \le TO < 25^{\circ}C$ $10^{\circ}C \le TO < 20^{\circ}C$ $5^{\circ}C \le TO < 5^{\circ}C$ $-10^{\circ}C \le TO < -3^{\circ}C$ $TO < -10^{\circ}C$ TO abnormal	it. Less than 20 Hz Maximum W5 W6 W8 WA WC WC WF WF WF WF	than 45 Hz       Maximum       W5       W6       W9       WA       WC       WF       WF       20 Hz or more to less	35 45	Maximum W8 WA WC WC WC WF WF WF WF WF					
	*( ): 3 phase outdoor unit Single phase outdoor unit 401, 601 Temperature range $30^{\circ}C \le TO$ $25^{\circ}C \le TO < 30^{\circ}C$ $20^{\circ}C \le TO < 25^{\circ}C$ $10^{\circ}C \le TO < 25^{\circ}C$ $10^{\circ}C \le TO < 20^{\circ}C$ $5^{\circ}C \le TO < 5^{\circ}C$ $-10^{\circ}C \le TO < 5^{\circ}C$ $-10^{\circ}C \le TO < -3^{\circ}C$ $TO < -10^{\circ}C$ $TO = 10^{\circ}C$ $TO = 10^{\circ}C$	t. Less than 20 Hz Maximum W5 W6 W8 WA WC WC WF WF WF WF Less than 20 Hz	than 45 Hz       Maximum       W5       W6       W9       WA       WC       WF       WF       20 Hz or more to lest than 45 Hz	35 45	Maximum W8 WA WC WC WF WF WF WF WF Hz or more					
	*( ): 3 phase outdoor unit Single phase outdoor unit 401, 601 Temperature range $30^{\circ}C \le TO$ $25^{\circ}C \le TO < 30^{\circ}C$ $20^{\circ}C \le TO < 25^{\circ}C$ $10^{\circ}C \le TO < 25^{\circ}C$ $10^{\circ}C \le TO < 20^{\circ}C$ $5^{\circ}C \le TO < 10^{\circ}C$ $-3^{\circ}C \le TO < 5^{\circ}C$ $-10^{\circ}C \le TO < -3^{\circ}C$ $TO < -10^{\circ}C$ $TO = 10^{\circ}C$ $TO = 10^{\circ}C$ To abnormal 801 Temperature range	it. Less than 20 Hz Maximum W5 W6 W8 WA WC WC WF WF WF WF Less than 20 Hz Maximum	than 45 Hz       Maximum       W5       W6       W9       WA       WC       WF       WF       20 Hz or more to lest than 45 Hz       Maximum	35 45	Maximum W8 WA WC WC WF WF WF WF WF WF Hz or more Maximum					
	*( ): 3 phase outdoor unit Single phase outdoor unit 401, 601 Temperature range $30^{\circ}C \le TO$ $25^{\circ}C \le TO < 30^{\circ}C$ $20^{\circ}C \le TO < 25^{\circ}C$ $10^{\circ}C \le TO < 25^{\circ}C$ $10^{\circ}C \le TO < 20^{\circ}C$ $5^{\circ}C \le TO < 5^{\circ}C$ $-10^{\circ}C \le TO < -3^{\circ}C$ $TO < -10^{\circ}C$ $TO = 10^{\circ}C$ $TO = 10^{\circ}C$	it. Less than 20 Hz Maximum W5 W6 W8 WA WC WF WF WF WF WF Less than 20 Hz Maximum W4	than 45 Hz       Maximum       W5       W6       W9       WA       WC       WF	35 45	Maximum W8 WA WC WC WF WF WF WF WF WF WF WF WF WF					
	*( ): 3 phase outdoor unit Single phase outdoor unit 401, 601 Temperature range $30^{\circ}C \le TO$ $25^{\circ}C \le TO < 30^{\circ}C$ $20^{\circ}C \le TO < 25^{\circ}C$ $10^{\circ}C \le TO < 20^{\circ}C$ $5^{\circ}C \le TO < 20^{\circ}C$ $5^{\circ}C \le TO < 30^{\circ}C$ $-3^{\circ}C \le TO < 5^{\circ}C$ $-10^{\circ}C \le TO < -3^{\circ}C$ $TO < -10^{\circ}C$ $TO < -10^{\circ}C$ $TO = 10^{\circ}C$ $TO = 30^{\circ}C \le TO$ $30^{\circ}C \le TO$ $30^{\circ}C \le TO$ $25^{\circ}C \le TO < 30^{\circ}C$	it. Less than 20 Hz Maximum W5 W6 W8 WA WC WF WF WF WF WF WF WF WF WF WF	than 45 Hz       Maximum       W5       W6       W9       WA       WC       WF	35 45	Maximum W8 WA WC WC WF WF WF WF WF Atz or more Maximum W6 W7					
	*( ): 3 phase outdoor unit Single phase outdoor unit 401, 601 Temperature range $30^{\circ}C \le TO$ $25^{\circ}C \le TO < 30^{\circ}C$ $20^{\circ}C \le TO < 25^{\circ}C$ $10^{\circ}C \le TO < 25^{\circ}C$ $10^{\circ}C \le TO < 20^{\circ}C$ $5^{\circ}C \le TO < 10^{\circ}C$ $-3^{\circ}C \le TO < 5^{\circ}C$ $-10^{\circ}C \le TO < -3^{\circ}C$ $TO < -10^{\circ}C$ $TO < -10^{\circ}C$ $TO = 10^{\circ}C$ $TO = 10^{\circ}C$ T	it. Less than 20 Hz Maximum W5 W6 W8 WA WC WF WF WF WF WF WF WF WF WF WF	than 45 Hz           Maximum           W5           W6           W9           WA           WC           WF	35 45	Maximum W8 WA WC WC WF WF WF WF WF MF WF MF WF WF WF WF WF WF WF WF WF W					
	*( ): 3 phase outdoor unit Single phase outdoor unit 401, 601 Temperature range $30^{\circ}C \le TO$ $25^{\circ}C \le TO < 30^{\circ}C$ $20^{\circ}C \le TO < 25^{\circ}C$ $10^{\circ}C \le TO < 20^{\circ}C$ $5^{\circ}C \le TO < 10^{\circ}C$ $-3^{\circ}C \le TO < 5^{\circ}C$ $-10^{\circ}C \le TO < -3^{\circ}C$ $TO < -10^{\circ}C$ TO abnormal 801 Remperature range $30^{\circ}C \le TO$ $25^{\circ}C \le TO < 30^{\circ}C$ $20^{\circ}C \le TO < 25^{\circ}C$ $10^{\circ}C \le TO < 20^{\circ}C$	it. Less than 20 Hz Maximum W5 W6 W8 WA WC WF WF WF WF WF WF WF WF WF WF	than 45 Hz           Maximum           W5           W6           W9           WA           WC           WF	35 45	Maximum W8 WA WC WC WF WF WF WF WF MF WF MF WF WF WF WF WF WF WF WF WF W					
	*( ): 3 phase outdoor unit Single phase outdoor unit 401, 601 Temperature range $30^{\circ}C \le TO$ $25^{\circ}C \le TO < 30^{\circ}C$ $20^{\circ}C \le TO < 25^{\circ}C$ $10^{\circ}C \le TO < 20^{\circ}C$ $5^{\circ}C \le TO < 10^{\circ}C$ $-3^{\circ}C \le TO < 10^{\circ}C$ $-3^{\circ}C \le TO < 3^{\circ}C$ $-10^{\circ}C \le TO < -3^{\circ}C$ $TO < -10^{\circ}C$ $TO = -10^{\circ}$	it. Less than 20 Hz Maximum W5 W6 W8 WA WC WF WF WF WF WF WF WF WF WF WF	than 45 Hz           Maximum           W5           W6           W9           WA           WC           WF           WB	35 45	Maximum W8 WA WC WC WF WF WF WF WF MF WF MF WF WF WF WF WF WF WF WF WF W					
	*( ): 3 phase outdoor unit Single phase outdoor unit 401, 601 Temperature range $30^{\circ}C \le TO$ $25^{\circ}C \le TO < 30^{\circ}C$ $20^{\circ}C \le TO < 25^{\circ}C$ $10^{\circ}C \le TO < 25^{\circ}C$ $10^{\circ}C \le TO < 10^{\circ}C$ $-3^{\circ}C \le TO < 10^{\circ}C$ $-10^{\circ}C \le TO < -3^{\circ}C$ $TO < -10^{\circ}C$ TO abnormal 801 Temperature range $30^{\circ}C \le TO$ $25^{\circ}C \le TO < 30^{\circ}C$ $20^{\circ}C \le TO < 25^{\circ}C$ $10^{\circ}C \le TO < 25^{\circ}C$ $10^{\circ}C \le TO < 25^{\circ}C$ $10^{\circ}C \le TO < 20^{\circ}C$ $5^{\circ}C \le TO < 10^{\circ}C$ $-3^{\circ}C \le TO < 10^{\circ}C$	it. Less than 20 Hz Maximum W5 W6 W8 WA WC WF WF WF WF WF WF WF WF WF WF	than 45 Hz       Maximum       W5       W6       W9       WA       WC       WF       WB       WD	35 45	Maximum W8 WA WC WC WF WF WF WF WF MF WF MF WF WF WF WF WF WF WF WF WF W					

ltem		Operation	flow and applicable d	ata, etc.
7-4. Outdoor unit control	1101			
	Temperature range	Less than 20 Hz	20 Hz or more to less than 45 Hz	45 Hz or more
	lemperature range	Maximum	Maximum	Maximum
	30°C ≤ TO	W4	W4	W6
	25°C ≤ TO < 30°C	W5	W5	W7
	20°C ≤ TO < 25°C	W6	W7	W8
	10°C ≤ TO < 20°C	W7	W8	W9
	5°C ≤ TO < 10°C	W9	WB	WF
	-3°C ≤ TO < 5°C	WF	WF	WF
	-10°C ≤ TO < -3°C	WF	WF	WF
	TO < -10°C	WF	WF	WF
	TO abnormal	WF	WF	WF
	Temperature range	Less than 20 Hz	20 Hz or more to less than 45 Hz	45 Hz or more
		Maximum	Maximum	Maximum
	30°C ≤ TO	W6	W6	W7
	25°C ≤ TO < 30°C	W7	W7	W8
	20°C ≤ TO < 25°C	W7	W8	W9
	10°C ≤ TO < 20°C	W9	WA	WB
	5°C ≤ TO < 10°C	WB	WB	WF
	-3°C ≤ TO < 5°C	WB	WB	WF
		WF	WF	WF WF
	-10°C ≤ TO < -3°C		10/5	VVF
	TO < -10°C	WF	WF	
		WF WF	WF WF	WF
	TO < -10°C TO abnormal 3 phase outdoor unit. 801, 1101, 1401			WF 45 Hz or more
	TO < -10°C TO abnormal 3 phase outdoor unit.	WF	WF 20 Hz or more to less	
	TO < -10°C TO abnormal 3 phase outdoor unit. 801, 1101, 1401	WF Less than 20 Hz	WF 20 Hz or more to less than 45 Hz	45 Hz or more
	TO < -10°C TO abnormal 3 phase outdoor unit. 801, 1101, 1401 Temperature range	WF Less than 20 Hz Maximum	WF 20 Hz or more to less than 45 Hz Maximum	45 Hz or more Maximum
	TO < -10°C TO abnormal 3 phase outdoor unit. 801, 1101, 1401 Temperature range 30°C ≤ TO	WF Less than 20 Hz Maximum W6	WF 20 Hz or more to less than 45 Hz Maximum W6	<b>45 Hz or more</b> Maximum W7
	TO < -10°CTO abnormal3 phase outdoor unit.801, 1101, 1401Temperature range $30°C \le TO$ $25°C \le TO < 30°C$	WF Less than 20 Hz Maximum W6 W7	WF 20 Hz or more to less than 45 Hz Maximum W6 W7	45 Hz or more Maximum W7 W8
	TO < -10°CTO abnormal3 phase outdoor unit.801, 1101, 1401Temperature range $30°C \le TO$ $25°C \le TO < 30°C$ $20°C \le TO < 25°C$	WF Less than 20 Hz Maximum W6 W7 W7	WF       20 Hz or more to less than 45 Hz       Maximum       W6       W7       W8	45 Hz or more Maximum W7 W8 W9
	TO < -10°CTO abnormal3 phase outdoor unit.801, 1101, 1401Temperature range $30°C \le TO$ $25°C \le TO < 30°C$ $20°C \le TO < 25°C$ $10°C \le TO < 20°C$	WF Less than 20 Hz Maximum W6 W7 W7 W7 W7 W9	WF       20 Hz or more to less than 45 Hz       Maximum       W6       W7       W8       WA	45 Hz or more Maximum W7 W8 W9 WB
	TO < -10°CTO abnormal3 phase outdoor unit.801, 1101, 1401Temperature range $30°C \le TO$ $25°C \le TO < 30°C$ $20°C \le TO < 25°C$ $10°C \le TO < 20°C$ $5°C \le TO < 10°C$	WF Less than 20 Hz Maximum W6 W7 W7 W7 W9 W9 WB	WF       20 Hz or more to less than 45 Hz       Maximum       W6       W7       W8       WA       WB	45 Hz or more Maximum W7 W8 W9 WB WB WF
	TO < -10°CTO abnormal3 phase outdoor unit. $3 \text{ phase outdoor unit.}$ Temperature range $30^{\circ}C \le TO$ $25^{\circ}C \le TO < 30^{\circ}C$ $20^{\circ}C \le TO < 20^{\circ}C$ $20^{\circ}C \le TO < 20^{\circ}C$ $10^{\circ}C \le TO < 20^{\circ}C$ $5^{\circ}C \le TO < 10^{\circ}C$ $-3^{\circ}C \le TO < 5^{\circ}C$	WF Less than 20 Hz Maximum W6 W7 W7 W7 W9 W9 WB WB WB	WF       20 Hz or more to less than 45 Hz       Maximum       W6       W7       W8       WA       WB       WB	45 Hz or more Maximum W7 W8 W9 WB WB WF WF

Item			Operatio	n flow ar	nd applicabl	e data, etc.				
7-4. Outdoor unit control	determines from 1) During a h zones. 2) During det defrosting 3) After the o 4) Switching	peration afrosts the outdoo st formation, and neating operation frosting, when TE ends. Also, wher ends. defrosting, stop th	r heat exchang then defrosting , defrosting is p : sensor maintai n defrosting con ne compressor f 5" and "J806" of	er. The ter is perform erformed v ins 12°C o tinues for for approx	mperature sen ned in the 4-w when the TE s r higher for 3 s 10 minutes evo . 40 seconds b	sor (TE sensor) o ay valve reverse o ensor meets any o econds or 7°C ≤ <sup>-</sup> en if the TE senso pefore starting a h	f the outdoor heat exchanger defrosting method. of the conditions in A through E FE < 12°C for a minute, the r temperature is below 7°C, the eating operation. e time of d above mentioned.			
	Heating oper	ration starts								
	TE 0 [°C] -2 -5 -10 -23 (-30)* *():801, 110	10 15	39		zone	oper TE is	) to 15 minutes after the heating ation starts, the lowest value of s recorded as TEO, and the st temperature of To as ToO.			
	A Zone	To Normal           e         Maintain "(TEO - TE) - (ToO - To) ≥ 3°C" for 20 sec								
	B Zone				, ,	$(0) \ge 3^{\circ} \text{C}^{\circ}$ for 20 sec				
	C Zone		Ma		"TE ≤ -23 (-30)*	,				
	D Zone		Accumulat		. ,	tus of TE < -2°C for	150 min			
				1		÷ · · · ·				

Item			Operation flow and a	pplicable data, et	с.					
7-4. Dutdoor unit	Jumper switching	)	O: Short circuit ×: Open							
control	J805	J806	[d]							
	0	0	150 min (Factory default)							
	0	×	90 min							
	×	0	60 min							
	×	×	30 min							
	<ul> <li>When compressor temperature is low, defrosting preliminary operation will be carried out to carry defrosting smoothly in effect.</li> <li>1)Start condition of advance defrosting <ul> <li>TD &lt; 50°C and A, B, C or D zone detected.</li> </ul> </li> <li>2)Conditions for changing over from defrosting preliminary operation to defrosting.</li> <li>When TD ≥ 50°C is detected during defrosting preliminary operation.</li> <li>When thermostat is turned off during defrosting preliminary operation.</li> <li>When defrosting preliminary operation is carried out more than 10 minutes.</li> <li>3)Control details <ul> <li>Target SH during defrosting preliminary operation will be 6 to 10 K. (refer to 7-4-1)</li> </ul> </li> </ul>									
	• Operation	frequency will be	Advance defrosting	g (*1) Defrosting	g operation					
	Compresso	40 HZ OFF								
	Outdoor FA	N ON OFF								
	4-way valve	ON OFF								
		400 pulse 380 pulse								
	Outdoor PN	٨V			,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,					
		0 pulse 0s 10s 20s 30s 40s 0s 10s 20s 30s 40s								
			Dotted line shows a	an operating image.						

ltem	Operation flow and applicable data, etc.				
7-4. Outdoor unit control	<ul> <li>6) Winding heating control</li> <li>1) This control energizes the inactive compressor instead of the case heater to warm the compressor. The purpose is to prevent the refrigerant from staying inside the compressor.</li> <li>2) After the unit is installed, failure to perform energization for the given time period may cause the compressor to fail. Also, when starting an operation long after the power left off, first energize the compressor before starting the operation in the same way as a trial run.</li> <li>3) Energization is determined by the TD sensor and TO sensor.</li> <li>4) If TD is 30°C or higher, the energization stops.</li> </ul>				
	<ul> <li>(Usual)</li> <li>TO</li> <li>O'C</li> <li>Output "equal to 40(50)* W"</li> <li>Continuously energized</li> <li>Output "equal to 40(50)* W"</li> <li>*(): 3 phase outdoor unit.</li> </ul> Notes During winding energization, energizing noise may be heard, but this is not abnormal. (7) Short circuit operation prevention control <ul> <li>1) In 11 minutes after the operation start, the compressor may not stop for protection. This status is not abnormal. (The operation duration time of the compressor varies depending on an operation status.) 2) If the operation stops with the remote controller, the operation does not continue. 8) Over current protection control <ul> <li>1) A detection of abnormal current with the over current protection control stops the compressor.</li> <li>2) Set the abnormality detection control to to abnormal the outpret of the compressor varies depending on an operation status.)</li> <li>2) If the operation stops with the remote controller, the operation does not continue.</li> </ul> 8) Over current protection control <ul> <li>1) A detection of abnormal current with the over current protection control stops the compressor.</li> <li>2) Set the abnormality detection control control stops the compressor.</li> <li>3) When the stop by over current protection control counts 8 times, check code is displayed and the compressor does not restart. (Remote controller check code display: H01)</li></ul></li></ul>				

ltem	Operation flow and applicable data, etc.
7-4. Outdoor unit control	<ul> <li>9) High pressure release control <ol> <li>To prevent excessive high pressure rise, operating frequency is controlled by the PD sensor.</li> <li>If the PD sensor detects an abnormal stop zone pressure, the compressor stops and the abnormality detection counter increments.</li> <li>When the compressor stops in 2), the heat-pump operation restarts when the pressure decrease to zone "e" (normal operation) after 150 seconds passed.</li> <li>When the compressor stops in 2), the abnormality detection counter is cleared when the operation continues for 10 minutes. If the counter counts 10 times, check code is displayed on the remote-controller and the compressor does not restart.</li> <li>For details about an check code displayed, see the check code list. (8-3-4)</li> </ol> </li> </ul>
	Frequency normal down       Frequency slow down       Frequency hold       Frequency slow up up to the pointinstructed       Normal operation
	801, 1101, 1401
	<ul> <li>4.3 4.2 4.1 4.1 4.0 3.9 3.8 3.7 3.6 3.7 3.6 3.5 0 10 20 30 40 50 60 70 80 90</li> <li>10) High pressure switch The high pressure switch detects abnormal high pressure (higher than 4.15 MPa (4.60 MPa)*) in refrigeration cycle and protect the compressor.</li> <li>*():801, 1101, 1401</li> <li>• The high pressure switch stops the compressor as the pressure in the refrigeration cycle becomes higher than above value.</li> <li>• The compressor will restart three minutes after stopping.</li> <li>• If the high pressure switch functions again after restarting, the compressor stops and the "P04" check code is indicated.</li> </ul>
	<ul> <li>11) Compressor case thermostat The compressor case thermostat functions to protect the compressor when the blow-out temperature from the compressor is too high.</li> <li>The compressor case thermostat on the upper part of compressor stops the compressor.</li> <li>The compressor will restart three minutes after stopping.</li> <li>If the compressor case thermostat functions again after restarting (functions at 125°C), compressor stops and the "H04" check code is indicated.</li> <li>12) Bottom plate heater control Control ON and OFF of the bottom plate heater using the outdoor temperature sensor (TO).</li> <li>TO +2 0 Bottom plate heater is turned off</li> <li>Bottom plate heater is turned on</li> </ul>

ltem	Operation flow and applicable data, etc.
7-4. Outdoor unit control	<ul> <li>13) Start up from hibernation This control operates at startup, in order to warm up the compressor by the heat from the water. System is operated at a defrost cycle when the start condition is satisfied. System is switched to the normal heating operation when the end condition is satisfied. 13.) Start conditions This control is operated when starting the compressor in a state that all of the following conditions is satisfy. •Compressor off time is 2 hours (30 minute)* or more (Also start up at the first time after turn on the power.) •TD ≤ 40°C and TWI ≥ 25°C and TO ≤ 3°C • ():801, 1101, 1401 13-2)End conditions When one of the following conditions is satisfy, operation is switched to the normal heating. •10 minutes has passed since operation started. •TD ≥ TWI + 10°C •TG ≥ TWI + 10°C •</li></ul>
	<ul> <li>2)INJ_PMV control The operation start in the following cases. <ul> <li>* Heating operation and hot water supply operation only. (except defrost operation)</li> <li>• 20 sec passed since compressor ON and TD is in X zone.</li> <li>INJ_PMV is controlled between 5 and 300 pulses during an operation.</li> <li>INJ_PMV is controlled with temperature difference between TD sensor and target TD temperature TD0.</li> <li>TD0 is 85°C just after INJ_PMV control starts, and changes to 86°C, 87°C, 88°C,, up to 95°C in every minute.</li> <li>After TD0 reach to 95°C, INJ_PMV is controlled with temperature difference between TD sensor and target TD sensor and target TD0 95°C.</li> </ul> The operation stop in the following cases. <ul> <li>•When the compressor is stopped.</li> <li>•During defrost operation.</li> <li>•TD is in Y zone.</li> </ul></li></ul>

## **8** Method of failure diagnosis

In order to diagnose the defective part of the heat pump system, first understand the symptom of the failure. (1) Check the operation status. (It does not move, or it moves but stops, etc.)

(2) Flashing display on the display part of the hydro unit.

(3) Check the "check code" by the remote controller.

Please refer to the following procedure of failure diagnosis for the identification.

No.	Procedu	ire of failure diagnosis	Remark
8-1	Matters to be confirmed first	<ul> <li>8-1-1. Check the power supply voltage</li> <li>8-1-2. Check for any miswiring of the connection cables between the hydro unit and the outdoor unit</li> <li>8-1-3. About the installation of the temperature sensor</li> </ul>	Check the power supply for the heat pump hot water heater, the crossover between the hydro unit and the outdoor unit, and the installation of temperature sensors.
8-2	Non-defective operation (progra	m operation)	Non-defective program operations for the protection of the heat pump unit.
8-3	Outline of the determination diagram	<ul> <li>8-3-1. Procedure of failure diagnosis</li> <li>8-3-2. How to determine from the check code on the remote controller</li> <li>8-3-3. How to cancel a check code on the remote controller</li> <li>8-3-4. How to diagnose by check code</li> </ul>	With reference to the "check code", roughly identify the failure from the failure diagnosis for the heat pump hot water heater and determine the defective part from individual symptoms.
8-4	Diagnosis flow chart for each check code	<ul> <li>8-4-1. Hydro unit failure detection</li> <li>8-4-2. Outdoor unit failure detection</li> <li>8-4-3. Temperature sensor, temperature- resistance characteristic table</li> </ul>	
8-5	Operation check by PC board	8-5-1. Operation check mode	The operation check mode allows to determine good or not by checking the operation of the 4-way valve, 2-way valve and pulse motor valve.
8-6	How to diagnose by fault sympt	om	
8-7	Brief method for checking the key components	8-7-1. Hydro unit 8-7-2. Outdoor unit	How to determine the presence of any failure particularly in functional parts.

## 8-1. Matters to be confirmed first

### 8-1-1. Check the power supply voltage

Check that the power supply voltage is AC220-240  $\sqrt{\pm}$  10% (signal phase) or AC380-415 V± 10% (3 phase). If the power supply voltage is not in this range, it may not operate normally.

## 8-1-2. Check for any miswiring of the connection cables between the hydro unit and the outdoor unit

The hydro unit and the outdoor unit are connected with three connection cables. Make sure the interconnecting connections between the hydro unit and the outdoor unit terminal blocks are connected to the correct terminal numbers. If not connected correctly, the heat pump system does not operate. However, a miswiring would not cause damage to the equipment.

## 8-1-3. About the installation of the temperature sensor

If each sensor is removed due to the replacement of the water heat exchange or inverter board, or the replacement of the refrigeration cycle parts, make sure to put the sensor back to the position where it was before.

- Each sensor position has a marking. Make sure to put it back to the exact position.
- Make sure to install it with a sensor holder so that the temperature sensing part of the sensor and the straight part of the copper piping are attached with each other tightly.
- If the installation of the sensor is incomplete or the installed position is wrong, it will not perform a normal control operation and may cause a failure such as a malfunction of the equipment or an occurrence of an abnormal sound, etc.

# 8-2. Non-defective operation (program operation) ... No check code display appears.

In order to control the heat pump unit, there are the following operations as the built-in program operations in the microcomputer. If a claim occurs about the operation, please confirm whether it falls under any of the contents in the following table.

If it does, please understand that the symptom is not a failure of the equipment, and it is an operation necessary for the control and maintenance of the heat pump unit.

No.	Operation of the heat pump system	Explanation
1	The compressor sometimes does not operate even within the range of compressor "ON".	The compressor does not operate during the operation of the compressor reboot timer (3 min). Even after the power activation, the compressor reboot timer continues to be active.
2	During the hot water supply or heating operation, without reaching the set temperature, the compressor operation frequency stays at a frequency of less than the maximum Hz or lowers down.	It may be caused by the high temperature release control (release protection control by the temperature of the water heat exchanger) or the current release control, or the high pressure release control.
3	The "Stop" operation on the remote controller will not stop the circulation pump. (The same for hot water supply, heating and cooling)	In order to deal with the temperature increase in the heat exchanger after stopping, the operation continues for 1 min after the compressor is stopped.
4	"ON" on the remote controller will not operate the compressor. (It will not operate even after the reboot delay timer elapsed)	When the outdoor temperature (TO sensor detection temperature) is -20 (-25)* °C or lower, the heat pump will not operate in order to protect the compressor, and the heater will operate instead. *( ):801, 1101, 1401
5	When the power is turned on, it starts operation without operating the remote controller.	<ul> <li>The auto restart operation may be working.</li> <li>The antifreeze operation may be working.</li> <li>If the TWI, TWO or THO sensor detects a temperature below 4°C, the operation changes from circulation pump&gt;&gt; circulation pump + heater.)</li> </ul>


#### Table 8-2-1 Non-defective operation

## 8-3. Outline of the determination diagram

The first determination of whether a defective part is in the hydro unit or the outdoor unit can be performed by the following method.

## 8-3-1. Procedure of failure diagnosis

In the case of a defect, please apply the following procedure in order to find the defective part.

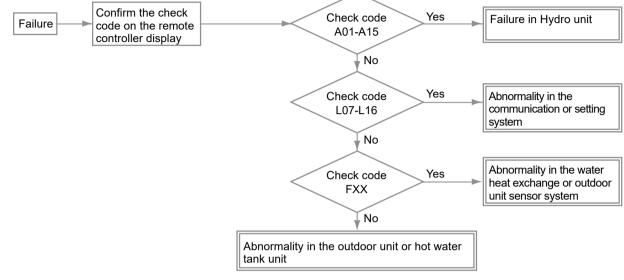


## 8-3-2. How to determine from the check code on the remote controller

If the failure is limited by the check code displayed on the remote controller, please repair the failure based on the table on the next page.

The check codes are separated into two groups: software and hardware failure.

Since a hardware failure cannot be cancelled without a part replacement etc., please perform a repair. If its abnormality is determined, the abnormality is noticed by indicating the check code on the remote controller check code display part while sounding off a buzzer.

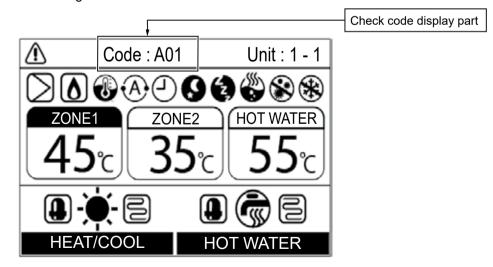

### 8-3-3. How to cancel a check code on the remote controller

Press [ F1 ] or [ F2 ] button (on the operation side) to clear the check code.

Although the above procedure cancels the check code, the hardware failure will be displayed again until the hardware repair is completed.

## 8-3-4. How to diagnose by check code

### Failure mode detected by the Hydro Unit

O ... Possible × .... Not possible

Ohad	Diagnostic functional oper	ation			Number of	
Check code	Operational cause	Backup operation	Automatic reset	Determination and action	abnormalities for confirmation	Detailed item
A01	Flowing quantity failure Detected by flow rate abnormality	Х	x	<ol> <li>Almost no or little water flow.</li> <li>Not enough vent air</li> <li>Dirt clogging in the water piping system.</li> <li>The water piping is too long.</li> <li>Installation of buffer tank and secondary pump</li> </ol>	8	106
A02	<b>Temperature increase failure</b> (heating) When one of the TWI, TWO and THO sensors exceeds 70°C.	х	0	<ol> <li>Check the water inlet, water outlet and heater outlet (TWI, TWO, THO) sensors.</li> <li>Failure of the backup heater (failure automatic reset thermostat).</li> </ol>	1	107
A03	<b>Temperature increase failure</b> (hot water supply) When the TTW sensor exceeds 85°C.	Heating O Hotwater X	о	<ol> <li>Check the hot water cylinder sensor (TTW).</li> <li>Check the hot water cylinder thermal cut-out.</li> </ol>	1	108
A04	Antifreeze operation (1) <ol> <li>TWO &gt; 20°C condition:</li> <li>X TC + TWO ≤ -12°C is detected.</li> <li>TWO ≤ 20°C condition:</li> <li>TC + TWO ≤ 4°C is detected.</li> <li>TWI ≤ 15°C is detected during defrosting.</li> </ol>	0	x	<ol> <li>Almost no or little water flow.</li> <li>Dirt clogging in the water piping system.</li> <li>The water piping is too long, or too short.</li> <li>Check the heater power circuit.</li> <li>Power supply voltage, breaker,</li> <li>power supply connection</li> <li>Set the presence of the backup heater.</li> <li>Check the water inlet, water outlet and heat exchange (TWI, TWO, TC) sensors and flow sensor.</li> </ol>	Heating 8 Hot water 8 Cooling 4	109
A05	<b>Piping antifreeze operation</b> Activating the heater under the condition of TWO < 4 or TWI < 4 or THO < 4 does not achieve TWO, TWI, THO $\ge$ 5°C after 30 min elapsed.	0	0	<ol> <li>Check the heater power circuit.         Power supply voltage, breaker, power supply connection         Check the water inlet, water outlet and heater outlet sensors (TWI, TWO, THO).         3. Disconnection of the backup heater.     </li> </ol>	1	110
A08	Low pressure sensor operation failure The low pressure sensor detected 0.2 MPa or less.	0	x	<ol> <li>Disconnection of the backup heater.</li> <li>Almost no or little water flow.</li> <li>Failure of the flow sensor.</li> <li>On-load cooling or prolonged defrosting (a lot of frost formation) under the above conditions.</li> <li>Failure in the low pressure sensor.</li> <li>Check the refrigeration cycle (gas leak)</li> </ol>	8	111

Check	Diagnostic functional oper	ation			Number of	Detailed
Check code	Operational cause	Backup operation	Automatic reset	Determination and action	abnormalities for confirmation	Detailed item
	Overheat protection operation When the thermostat of the backup heater activates during the operation of			<ol> <li>No water (heating without water) or no water flow.</li> <li>Failure of the flow sensor.</li> </ol>	2	
A09	the heat pump or backup heater. When the thermostat operation is activated while it has been stopped.	Х	X	3. Failure of the backup heater (poor automatic reset thermostat).	1	112
A10	Antifreeze operation (2) When TC + TWO < -15K detected in cooling mode.	0	x	<ol> <li>Almost few water flow.</li> <li>Failure of the flow sensor.</li> <li>Low refrigerant.</li> </ol>	10	113
A11	<b>Operation of the release protection</b> When the TWO release counts to 10.	Heating X Hotwater O	x	<ol> <li>Almost no water flow.</li> <li>Failure of the flow sensor.</li> <li>Check the water outlet temperature</li> <li>sensor (TWO).</li> </ol>	10	114
A12	Heating, hot water heater failure The antifreeze control is detected under the condition of TWI < 15°C while TWI $\ge$ 15°C, TTW $\ge$ 20°C is not detected after the heater backup.	0	0	<ol> <li>Activated by a large load of heating or hot water supply.</li> <li>Check the heater power circuit (backup or hot water cylinder heater).</li> <li>Power supply voltage, breaker, power supply connection</li> </ol>	1	115
A13	Pump failure	х	x	<ol> <li>Pump has stopped by a certain cause.</li> <li>Low supply voltage.</li> <li>High humidity around the electric box of the pump.</li> <li>Dew condensation to the electric board of the pump.</li> <li>Pump lock due to clogging or dust.</li> <li>Once turn off the power supply to the system and turn on again and operate the system.</li> </ol>	2	116
A14	Pump failure	x	x	<ul> <li>Mainly low voltage to the system.</li> <li>1. Pump has stopped by a certain cause.</li> <li>Low supply voltage.</li> <li>High humidity around the electric box of the pump.</li> <li>Dew condensation to the electric board of the pump.</li> <li>Pump lock due to clogging or dust.</li> <li>Once turn off the power supply to the system and turn on again and operate the system.</li> <li>Mainly except low voltage to the system.</li> </ul>	2	116

Check	Diagnostic functional oper	ation		Determination and action	Number of abnormalities	Detailed
code	Operational cause	Backup operation	Automatic reset	Determination and action	for confirmation	item
A15	Pump failure (for zone2)	ο	x	<ol> <li>Pump has stopped by a certain cause.</li> <li>Low supply voltage.</li> <li>High humidity around the electric box of the pump.</li> <li>Dew condensation to the electric board of the pump.</li> <li>Pump lock due to clogging or dust.</li> <li>Once turn off the power supply to the system and turn on again and operate the system.</li> </ol>	2	
E03	Regular communication failure between hydro unit and remote controller When there is no regular communication from the remote controller for 3 min, or when no remote controller is equipped.	x	0	1. Check remote controller connection. 2. Failure in the remote controller.	1	_
E04	Regular communication failure between hydro unit and outdoor unit The serial signal cannot be received from outdoor.	0	0	<ol> <li>Check the serial circuit.</li> <li>Miswiring of the crossover between the water heat exchanger and the outdoor unit</li> </ol>	1	117
E08	Duplicate address of Hydro unit, or Duplicate master Hydro unit during Group control	х	0	1. Set the address No. of DN_12 - 14 correctly for each Hydro unit.	1	_
E14	<b>Regular communication failure</b> <b>between hydro unit and 0-10 V-IF</b> When there is no regular communication from the 0-10 V interface for 3 min, or when no 0-10 V interface is equipped.	х	x	1.Check the 0-10 V-IF connection. 2.Failure in the 0-10 V-IF.	1	_
E18	Regular communication failure between master Hydro unit and slave Hydro unit during Group control	х	0	<ol> <li>Check the Hydro unit connection.</li> <li>Miswiring of the master and slave Hydro unit.</li> </ol>	1	_
F03	<b>TC sensor failure</b> Open or short circuit in the heat exchange temperature sensor.	0	0	1. Check the resistance value and connection of the heat exchange temperature sensor (TC).	1	117
F10	TWI sensor failure Open or short circuit in the water inlet temperature sensor.	0	0	1. Check the resistance value and connection of the water inlet temperature sensor (TWI).	1	119
F11	<b>TWO sensor failure</b> Open or short circuit in the water outlet temperature sensor.	х	0	1. Check the resistance value and connection of the water outlet temperature sensor (TWO).	1	119
F14	<b>TTW sensor failure</b> Open or short circuit in the hot water cylinder sensor.	Heating O Hotwater X	о	1. Check the resistance value and connection of the hot water cylinder sensor (TTW).	1	120
F17	<b>TFI sensor failure</b> Open or short circuit in the floor temperature sensor. (Only when zone 2 is used)	Heating X Hotwater O	0	1. Check the resistance value and connection of the floor-inlet temperature sensor (TFI).	1	120

Check	Diagnostic functional oper	ation			Number of abnormalities	Detailed
code	Operational cause	Backup operation	Automatic reset	Determination and action	for confirmation	item
F18	<b>THO sensor failure</b> Open or short circuit in the heater outlet temperature sensor.	x	о	1. Check the resistance value and connection of the heater outlet temperature sensor (THO).	1	120
F19	Detection of THO disconnection failure When TWO – THO > 15K is detected and 30 sec elapsed.	х	x	<ol> <li>Check for any disconnection of the heater outlet temperature sensor (THO).</li> <li>Failure of the flow sensor.</li> </ol>	1	121
F20	<b>TFI sensor failure</b> When TWO – TFI > 50K is detected and TFI < TWI – 5K is detected 20 min.	Heating X Hotwater O	x	1. Check the connection of the floorinlet temperature sensor (TFI).	1	122
F23	Low pressure sensor failure Open circuit in the low pressure sensor.	0	0	<ol> <li>Check the connection (body or connection wiring) of the low pressure sensor.</li> <li>Check the refrigeration cycle (gas leak)</li> </ol>	1	123
F30	Extended IC failure When the extended IC is abnormal.	х	x	1. Replace the water heat exchange control board.	1	123
F32	Flow sensor failure	х	0	<ol> <li>Check the connection of flow sensor.</li> <li>Check the flow rate detected by flow sensor and actual flow.</li> </ol>	1	124
F33	Flowing quantity failure 1)Detected by TC sensor $TC \ge 68^{\circ}C$ is detected in the heating or hot water supply heat pump operation (except for defrosting).	x	x	<ul><li>No or little water flow</li><li>Failure of the flow sensor</li></ul>	4	124
F33	2)Detected <b>by</b> flowing quantity When the stopped built-in circulation pump starts its operation, the flow sensor status is detecting "water flow".		^	<ul> <li>Failure of the flow sensor</li> <li>Misconnection of flow sensor and low pressure sensor</li> <li>Check the water flow from the external pump.</li> </ul>	2	124
L02	<b>Combination failure</b> Model name of the outdoor unit is different.	х	x	1. Check the model name of the outdoor unit.	1	125
L03	Duplicate main Hydro unit during Group control There are more than one header units in group.	х	x	<ol> <li>Check Hydro Unit addresses. (DN_14)</li> <li>Check for any change made to remote control connection (group / individual) since hydro address setting.</li> </ol>	1	_
L07	<b>Communication failure</b> Individual hydro units have a group line.	х	x	1. Replace the water heat exchange control board.	1	125
L08	Hydro Unit group / Address unset Address setting has not been performed for Hydro units.	x	x	1. Check Hydro Unit addresses. Note: This code is displayed when power is turned on for the first time after installation.	1	

Ohaah	Diagnostic functional oper	ation			Number of	Detelle d
Check code	Operational cause	Backup operation	Automatic reset	Determination and action	abnormalities for confirmation	Detailed item
L09	<b>Communication failure</b> The capability code for the hydro unit has not been set.	x	x	1. Check the setting of the DN_11 capability specifications. 601 Hydro = 0010 1101, 1401 Hydro = 0015	1	125
L16	Setting failure When ZONE1 has not been set, while ZONE2 has been set.	х	x	1. Check the DN_6B9, 6BA and set correctly.	1	125
L22	<b>0-10 V Setting failure</b> DN680 settings in group control are not the same for all units.	х	x	1. Check the 0-10 V setting for all units. (DN_680)	1	125
P31	Slave Hydro unit failure which occurs when failure occurs in master Hydro unit	x	0	<ol> <li>Check the remote controller connection.</li> <li>Failure in the remote controller.</li> <li>Set the address No. of DN_12 - 14 correctly for each Hydro unit.</li> </ol>	1	_

# Failure mode detected by the outdoor unit O ... Possible × .... Not possible

Check	Diagnostic functional oper	ation			Number of abnormalities	Detailed
code	Operational cause	Backup operation	Automatic reset	Determination and action	for confirmation	item
F04	<b>TD sensor failure</b> Open or short circuit in the discharge temperature sensor.	0	x	1. Check the resistance value and connection of the discharge sensor (TD).	4	118 135
F06	<b>TE sensor failure</b> Open or short circuit in the heat exchange temperature sensor.	0	x	1. Check the resistance value and connection of the heat exchange temperature sensor (TE).	4	118 135
F07	<b>TL sensor failure</b> Open or short circuit in the heat exchange temperature sensor.	0	x	1. Check the resistance value and connection of the heat exchange temperature sensor (TL).	4	118 135
F08	<b>TO sensor failure</b> Open or short circuit in the outdoor temperature sensor.	0	x	1. Check the resistance value and connection of the outdoor temperature sensor (TO).	1	119 135
F12	<b>TS sensor failure</b> Open or short circuit in the suction temperature sensor.	0	x	1. Check the resistance value and connection of the suction temperature sensor (TS).	4	136
F13	TH sensor failure Open or short circuit in the heat sink temperature sensor.	0	x	1.Replace the outdoor control board.	8	136
F15	<b>TE, TS sensors failure</b> TE, TS sensor connections are opposite.	0	x	1. Check for any wrong installation of the heat exchange temperature sensor (TE) and the suction temperature sensor (TS).	4	136
F24	<b>PD sensor failure</b> Open or short circuit the high pressure sensor.	0	x	<ol> <li>Check the value of PD sensor by the remote controller.</li> <li>Check the connection of PD sensor.</li> </ol>	4	136
F31	EEPROM failure	0	x	1. Replace the outdoor control board. PC board <401, 601> MCC-1768 <801, 1101, 1401> MCC-1675 <801, 1101, 1401>MCC-1781 (3 phase)	1	136
H01	<b>Compressor breakdown</b> Although operation has started, operation frequency decreases and operation stops.	0	x	<ol> <li>Check the power supply voltage (3 phase) &lt;801,1101,1401&gt; : AC380-415V ±10%</li> <li>Other than the above : AC220-240V ±10%</li> <li>Over-loaded condition of the refrigeration cycle.</li> <li>Check that the service valve is fully open.</li> </ol>	8	127
H02	<b>Compressor lock</b> Over-current detection after compressor start-up.	0	x	<ol> <li>Failure of compressor (lock)         <ul> <li>Replace the compressor.</li> </ul> </li> <li>Failure of compressor wiring (open phase).</li> </ol>	8	127

Check code	Diagnostic functional oper	ation	1		Number of abnormalities for confirmation	Detailed item
	Operational cause	Backup operation	Automatic reset	Determination and action		
H03	Failure in the current detection circuit	in the current detection circuit1. Check the connection of the connector and wiring.0X1. Check the connection of the connector and wiring.0X1. Check the power supply voltage and frequency. (3 phase) <801,1101,1401> : AC380-415V ±10% Other than the above : AC220-240V ±10% frequency 50Hz±5%3. Replace the outdoor control board. <401,601> MCC-1768 <801,1101> MCC-1705 <1401> MCC-1758		<ul> <li>connector and wiring.</li> <li>2. Check the power supply voltage and frequency.</li> <li>(3 phase) &lt;801,1101,1401&gt; : AC380-415V ±10%</li> <li>Other than the above : AC220-240V ±10%</li> <li>frequency 50Hz±5%</li> <li>3. Replace the outdoor control board.</li> <li>&lt;401,601&gt; MCC-1768</li> <li>&lt;801,1101&gt; MCC-1705</li> </ul>	8	_
H04	<b>Operation of case thermostat</b> When the case thermostat exceeds 125°C.	0	x	<ol> <li>Check the refrigeration cycle (gas leak).</li> <li>Check the case thermostat and connector.</li> <li>Check that the service valve is fully open.</li> <li>Failure of the pulse motor valve.</li> <li>Check for kinked piping.</li> </ol>	10	128
L10	<b>Unset service PC board jumper</b> Jumpers have not been cut.	0	x	1.Cut jumpers (3 phase) <801,1101,1401> : Cut J800-J802 of MCC-1781. Other than the above : Cut J800-J803.	1	128
L15	<b>Combination failure</b> Model name of the Hydro unit is different.	х	x	<ol> <li>Check the model name of the Hydro unit.</li> <li>Check the DN_6BD.</li> </ol>	1	128
L29	The communication between the outdoor PC board MCUs failure No communication signal between Interface CDB and Compressor, fan IPDU.	0	x	<ol> <li>Check the connection of connector and wiring.</li> <li>Check the outdoor control board.</li> </ol>	1	128
P02	Converter circuit failure	0	x	<ol> <li>Check the power supply voltage and frequency. (AC380 - 415 V±10%, frequency 50Hz±5%)</li> <li>Replace the outdoor control board. (3 phase)&lt;801,1101,1401&gt; MCC- 1780</li> </ol>	8	
P03	<b>Discharge temperature failure</b> 1)High temperature When the discharge temperature sensor (TD) exceeds 111°C.	0	x	<ol> <li>Check the refrigeration cycle (gas leak).</li> <li>Failure of the pulse motor valve.</li> <li>Check the resistance value of the discharge temperature sensor (TD).</li> </ol>	4	
	2)INJ_2-way valve failure (801, 1101, 1401) When the INJ_2-way valve opening is detected in heating or hot water supply mode even in situation INJ_2-way valve not working.			<ol> <li>Failure of the INJ_2-way valve.</li> <li>Dirt clogging in the refrigeration cycle.</li> </ol>	8	129
	3)INJ_PMV failure (801, 1101, 1401) When too big INJ_PMV opening value is detected in heating or hot water supply mode.			<ol> <li>Failure of the INJ_PMV.</li> <li>Dirt clogging in the refrigeration cycle.</li> </ol>	8	

Check code	Diagnostic functional oper	ration			Number of abnormalities	Detailed
	Operational cause	Backup operation	Automatic reset	Determination and action	for confirmation	item
P04	The high pressure switch failure	ο	x	<ol> <li>Almost no or little water flow.</li> <li>Failure of the flow sensor.</li> <li>Failure in the high pressure switch.</li> <li>Failure of a refrigerant valve to open.</li> </ol>		130
P05	The power supply voltage failure When the power supply voltage is extremely high or low.	ο	x	1. Check the power supply voltage. (3 phase) <801,1101,1401> : AC380-415V ±10% Other than the above : AC220-240V ±10%	8	131
P07	<b>Overheating of heat sink failure</b> When the heat sink exceeds 105°C.	0	x	<ol> <li>Check the thread fastening and heat sink grease between the outdoor control board and the heat sink.</li> <li>Check the heat sink fan duct.</li> </ol>	4	131
P15	Detection of gas leak When the discharge temperature sensor (TD) exceeds 106°C for consecutive 10 min. When the suction temperature sensor (TS) exceeds 60°C for cooling or 40°C for heating for 10 consecutive min. When TG ≤ TC -10 K is detected and TG ≤ TWI-15 K is detected 10min. (hot water supply, heating) When TG ≤ TE -12 K is detected for 10min. (cooling)	0	×	<ol> <li>Check the refrigeration cycle (gas leak).</li> <li>Check that the service valve is fully open.</li> <li>Failure of the pulse motor valve.</li> <li>Check for kinked piping.</li> <li>Check the resistance value of the discharge temperature sensor (TD) and the suction temperature sensor (TS).</li> <li>Check the PD sensor by remote controller.</li> </ol>	8	131
P19	The 4-way valve inversion failure When the heat exchange temperature sensor (TE) exceeds 30°C or the suction temperature sensor (TS) exceeds 50°C during the heat pump operation.	0	×	<ol> <li>Check the operation of the 4-way valve unit or the coil characteristics.</li> <li>Failure of the pulse motor valve.</li> <li>Check the resistance value of the heat exchange temperature sensor (TE) and the suction temperature sensor (TS).</li> </ol>	4	132
P20	<b>High pressure protection operation</b> When an abnormal stop occurs due to the high pressure release control. When the high pressure sensor (PD) detects 4.19 MPa.	0	×	<ol> <li>Check that the service valve is fully open.</li> <li>Failure of the pulse motor valve.</li> <li>Check the outdoor fan system (including clogging).</li> <li>Over-filling of refrigerant.</li> <li>Check the value of the high pressure sensor (PD).</li> <li>The water piping is too short. Install a buffer tank, or set the setting temperature lower.</li> </ol>	10	133
P22	Outdoor fan system failure When a DC fan rotor position detection NG, element short circuit, loss of synchronization, or abnormal motor current occurs.	0	×	<ol> <li>Check the lock status of the motor fan.</li> <li>Check the connection of the fan motor cable connector.</li> <li>Check the power supply voltage. (3 phase) &lt;801,1101,1401&gt; : AC380-415V ±10% Other than the above : AC220-240V ±10%</li> </ol>	8	134

Check code	Diagnostic functional operation				Number of	Detailed
	Operational cause	Backup	Automatic reset	Determination and action	abnormalities for confirmation	Detailed item
P26	Short circuit of the compressor driver element failure When an abnormal short circuit of IGBT is detected.	0	×	<ol> <li>P26 abnormality occurs when operating with the compressor wiring disconnected Check the outdoor control board.</li> <li>No abnormality occurs when operating with the compressor wiring disconnected Compressor rare short.</li> </ol>	8	134
P29	Compressor rotor position failure         The rotor position in the compressor         cannot be detected.         O		<ol> <li>Even if the connection lead wire of the compressor is disconnected, it stops due to an abnormality in the position detection Replace the outdoor control board.</li> <li>Check the wire wound resistor of the compressor. Short circuit  Replace the compressor.</li> </ol>	8	134	

Check code: H04, P04, P29


After the failure is detected, It takes approximately 40 - 50 minutes while the check code is displayed on the remote controller.


#### Failure mode detected by the remote controller

	Diagnostic func	Determination and action		
Check code	Operational cause Status of air to water heat pump Condition			
Not displaying at all (cannot operate by the remote controller)	<ul> <li>No communication between hydro unit an remote controller</li> <li>The remote controller wiring is not connected correctly.</li> <li>The hydro unit has not been turned on.</li> </ul>	Stop	_	<ul> <li>Failure in the remote controller power supply</li> <li>1. Check the remote controller wiring. Check the remote controller.</li> <li>2. Check the hydro unit power supply wiring.</li> <li>3. Check the water heat exchange control board.</li> </ul>
E01	<ul> <li>No communication between hydro unit and remote controller</li> <li>Disconnection of the crossover between the remote controller and the base unit of the Hydro unit (detected on the remote controller side).</li> </ul>	Stop (Automatic reset)	Displayed when the abnormality is detected.	<ul> <li>Failure in the reception of the remote controller</li> <li>1. Check the remote controller crossover.</li> <li>2. Check the remote controller.</li> <li>3. Check the hydro power supply wiring.</li> <li>4. Check the water heat exchanger board.</li> </ul>
E02	Failure in the signal transmission to the hydro unit. (Detected on the remote controller side)	Stop (Automatic reset)	Displayed when the abnormality is detected.	<ul><li>Failure in the transmission of the remote controller</li><li>1. Check the transmitter circuit inside the remote controller.</li><li> Replace the remote controller.</li></ul>
E09	Several remote controller base units (Detected on the remote controller side)	Stop (The handset continues)	Displayed when the abnormality is detected.	<ul><li>1.2 Check several base units with the remote controller</li><li> The base unit is only one, and others are handsets.</li></ul>

# 8-4. Diagnosis flow chart for each check code 8-4-1. Hydro unit failure detection


#### [A01] Flowing quantity failure

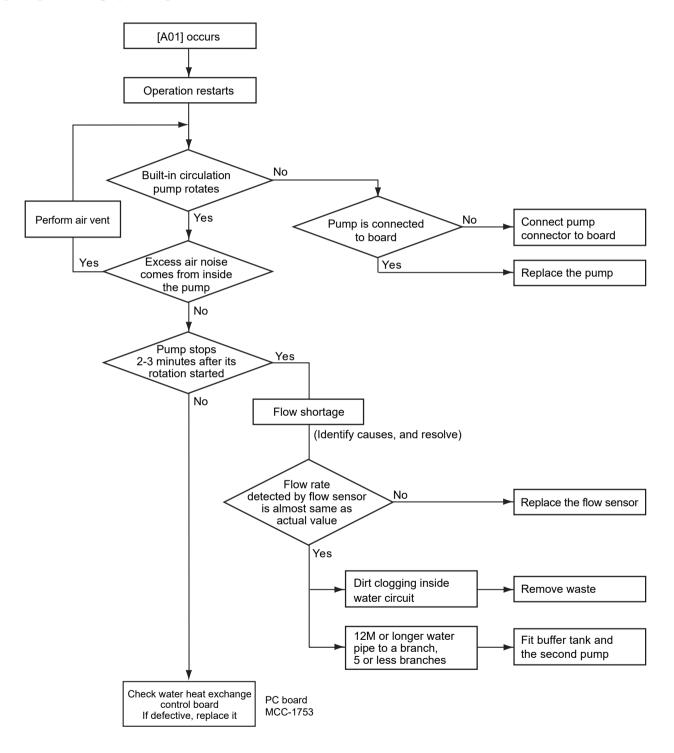

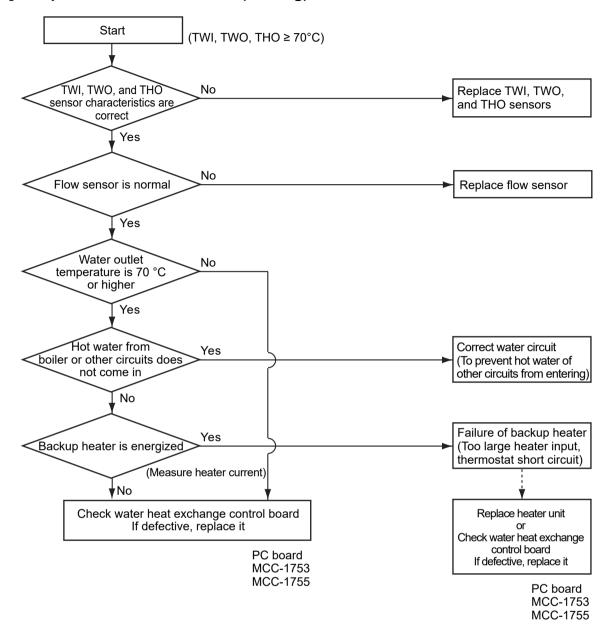

#### [A02] Temperature increase failure (heating)


If boiler setting is ON (DN\_6B0 is "1") and DN\_62 is "1" and actual boiler output is "ON", the A02 failure is not
detected.

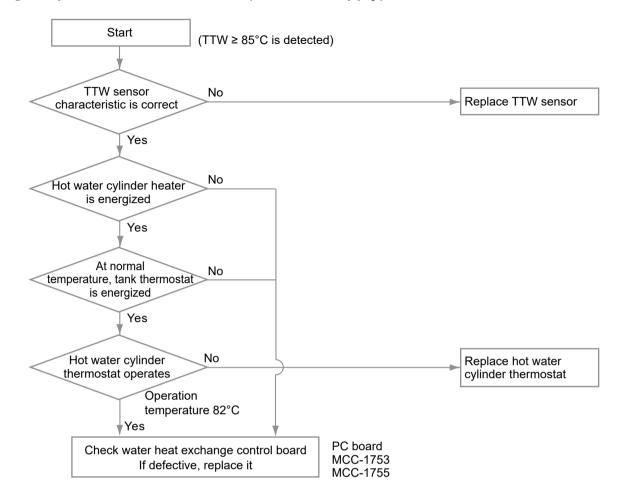


#### [A03] Temperature increase failure (hot water supply)

#### [A04] Antifreeze operation (1)


When the outside temperature and inlet water temperature is low (approx.  $20^{\circ}$ C or lower) and the room load is large (operation frequency  $\geq$  rating), the freeze prevention control may be activated.

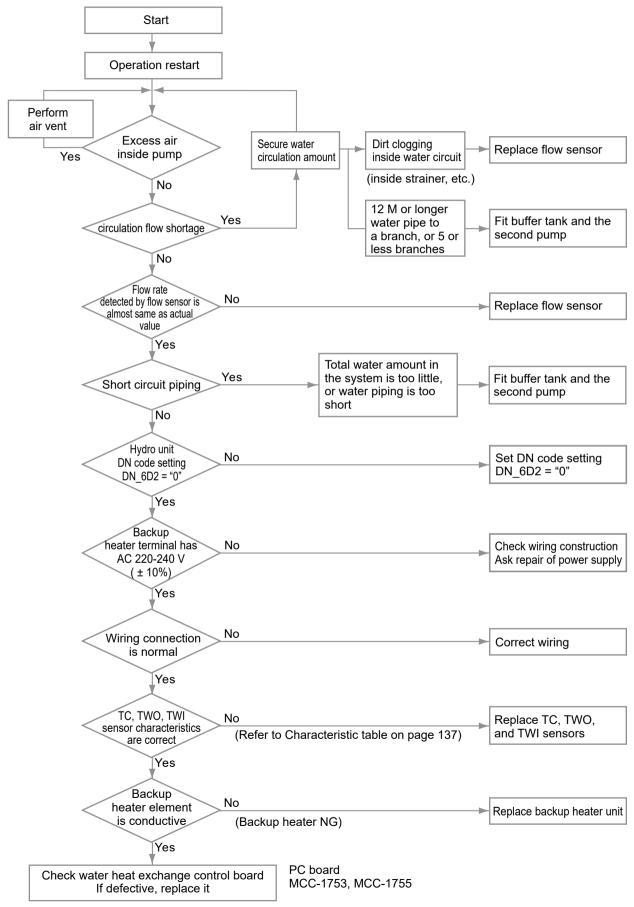


#### [A05] Piping antifreeze operation

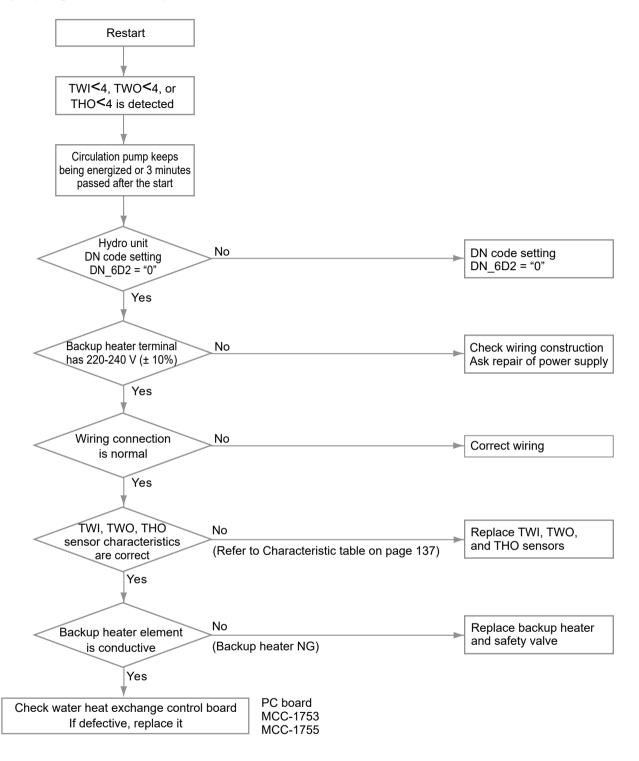

#### [A08] Low pressure sensor operation failure

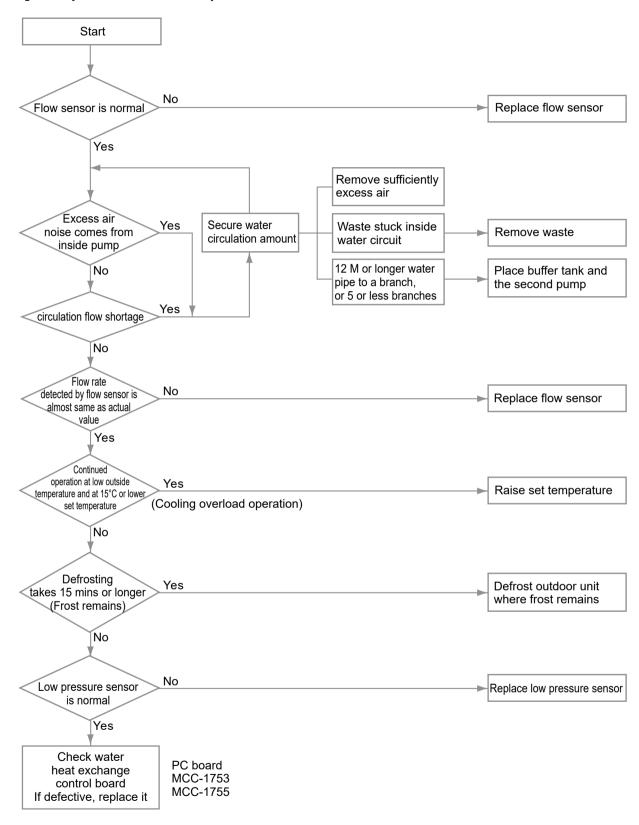


#### [A09] Overheat protection operation

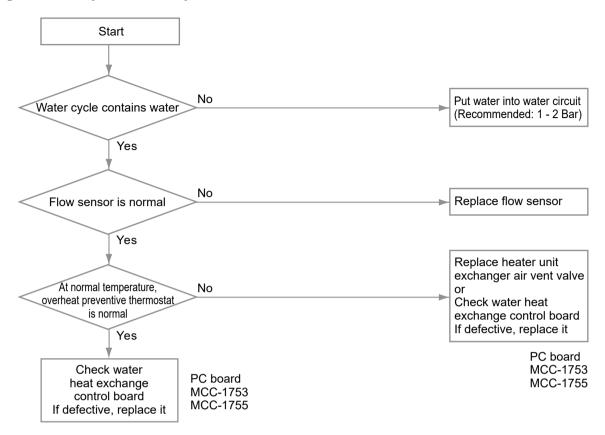


\* Replace water heat exchange control board or overheat preventive thermostat failure: After the control board is replaced, if the same operation repeats, the overheat preventive thermostat is determined as defective (does not operate at 75°C).


#### [A10] Antifreeze operation (2)

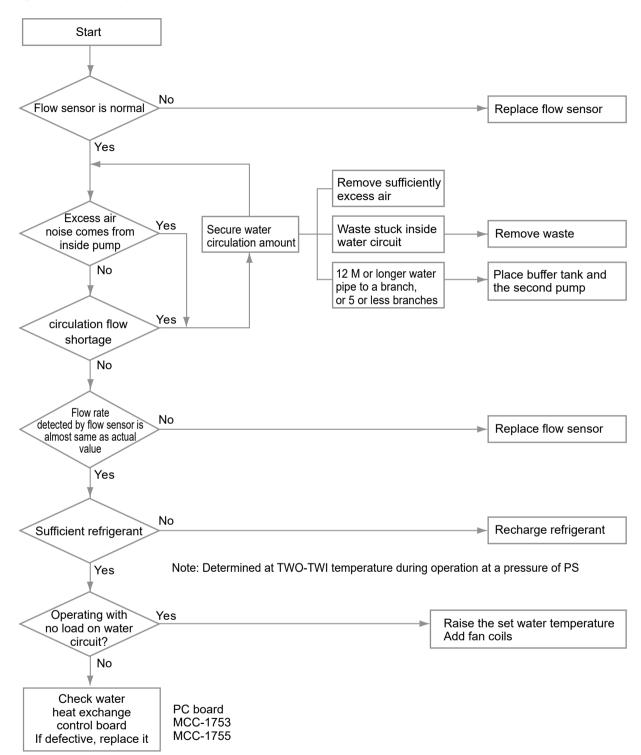


#### [A11] Operation of the release protection

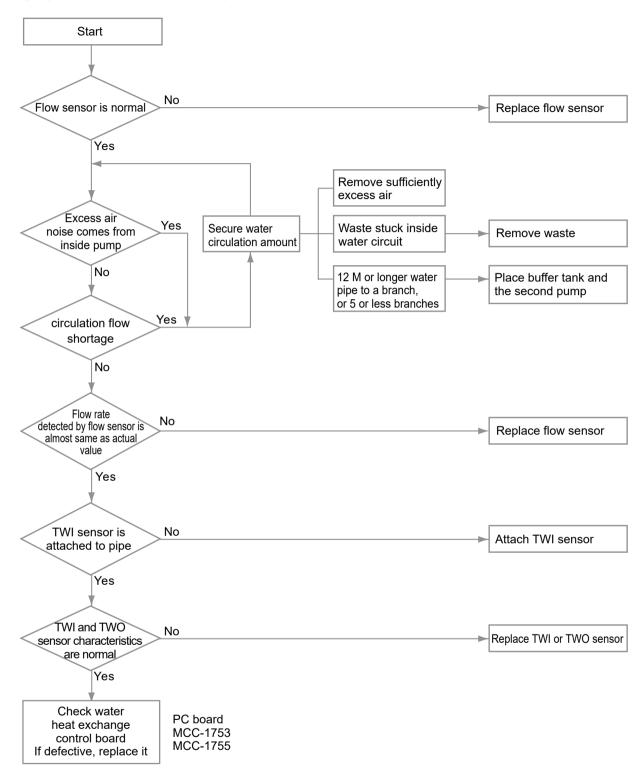


#### [A12] Heating, hot water heater failure

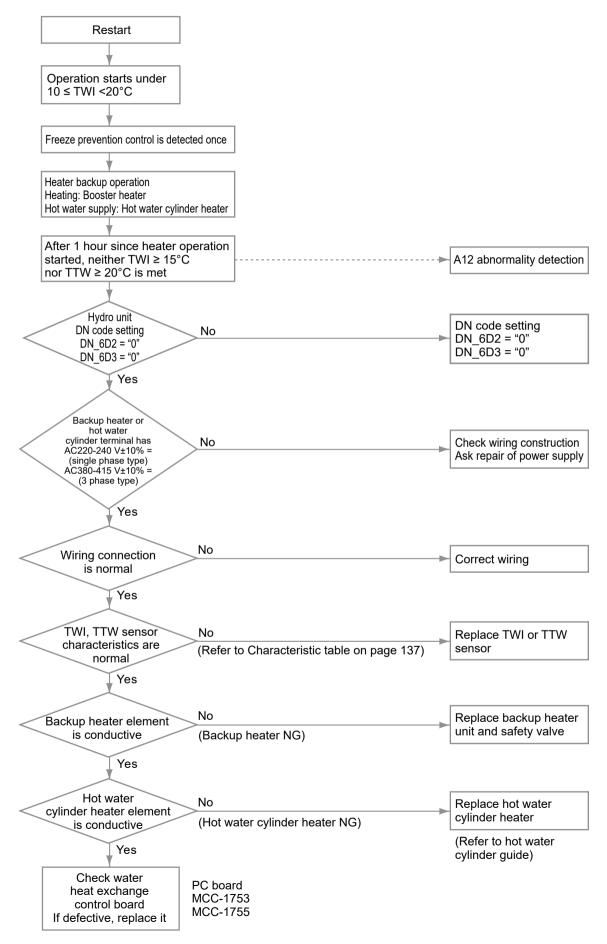


#### [A13] [A14] Pump failure

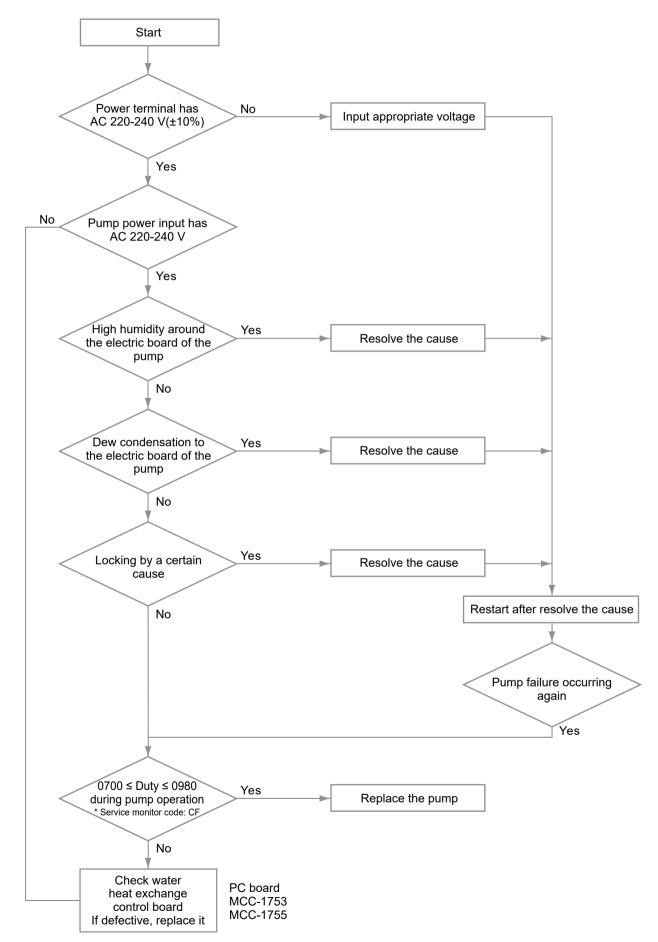

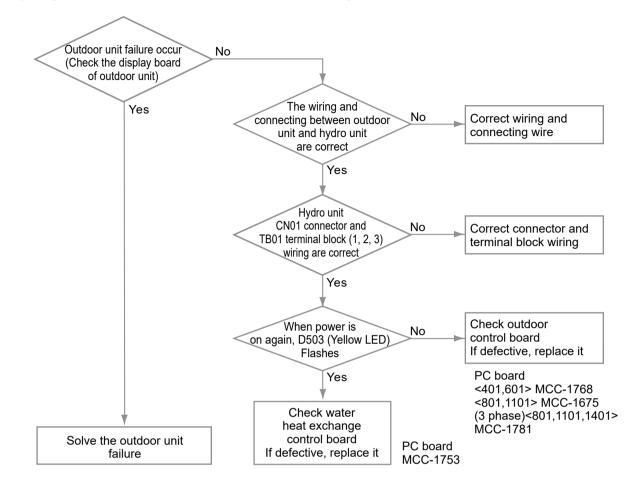


#### [E04] Regular communication failure between hydro unit and outdoor unit


#### [F03] TC sensor failure

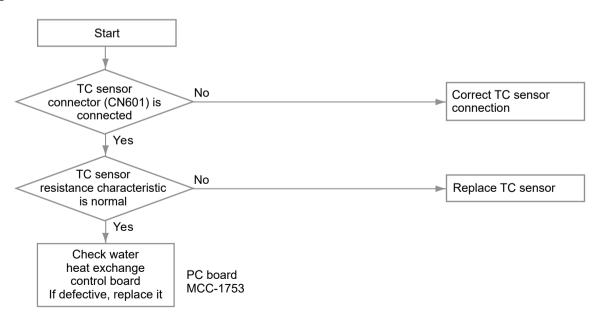

#### [F04] TD sensor failure

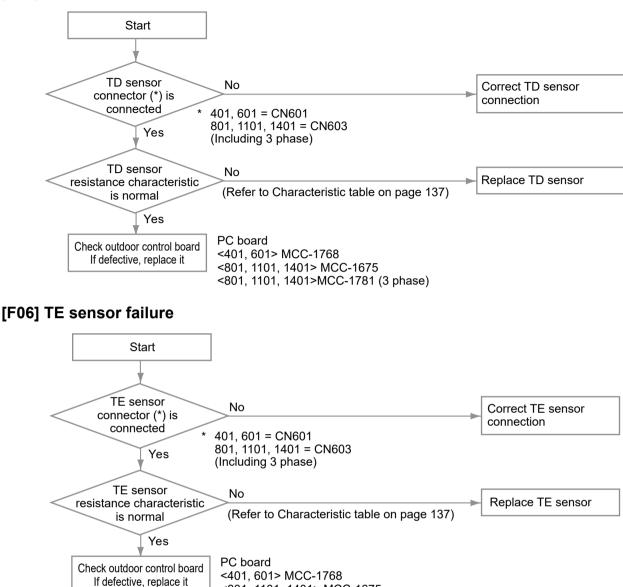


#### [F07] TL sensor failure

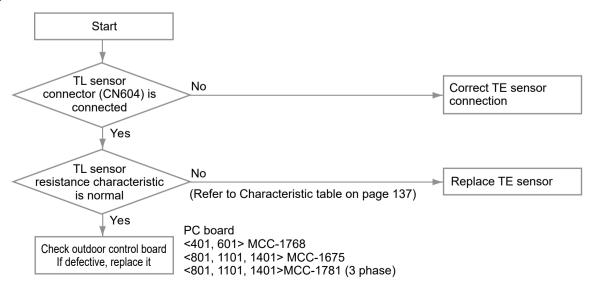


<801, 1101, 1401> MCC-1675


<801, 1101, 1401>MCC-1781 (3 phase)

#### [F08] TO sensor failure

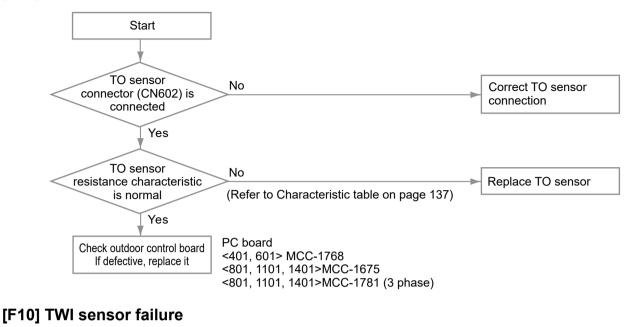


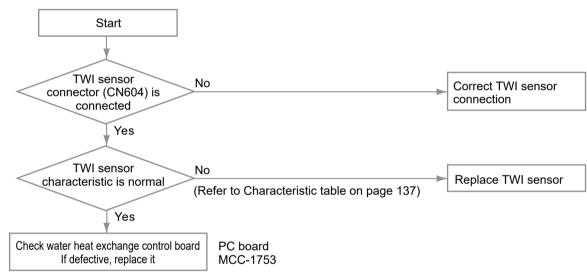


#### [F11] TWO sensor failure

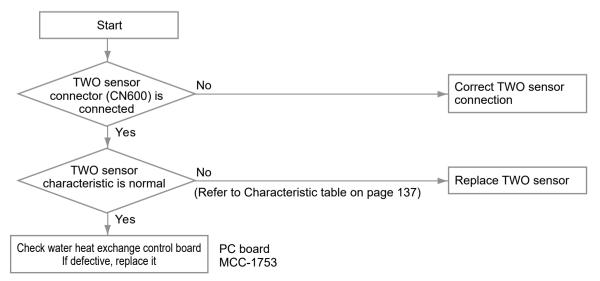


#### [F14] TTW sensor failure

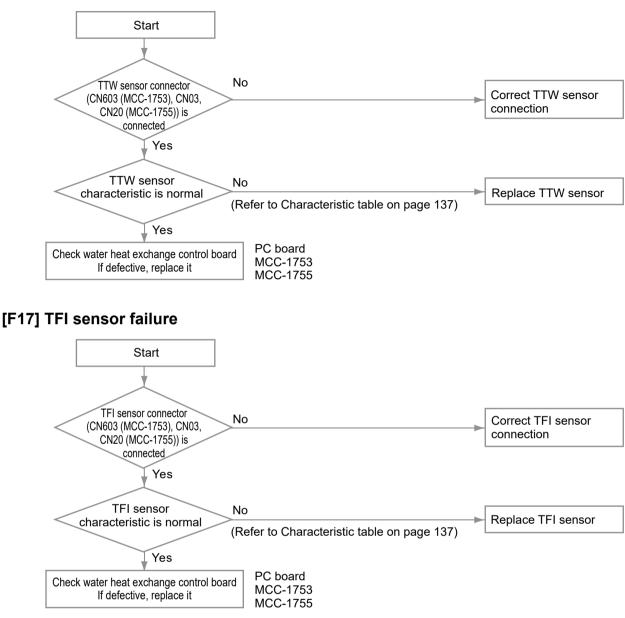


#### [F18] THO sensor failure

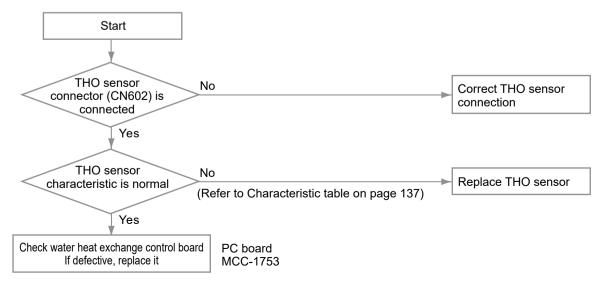


#### [F19] Detection of THO disconnection failure

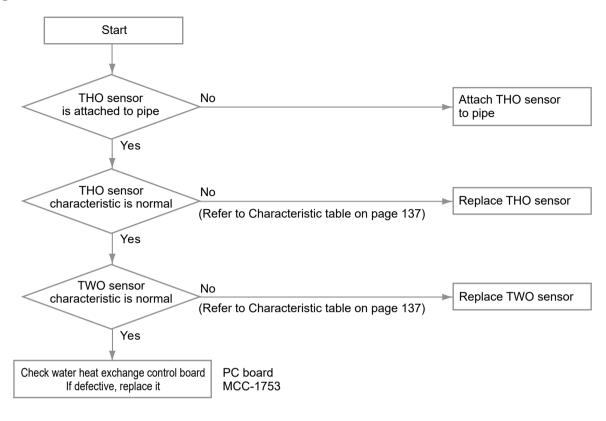

#### [F20] TFI detach failure

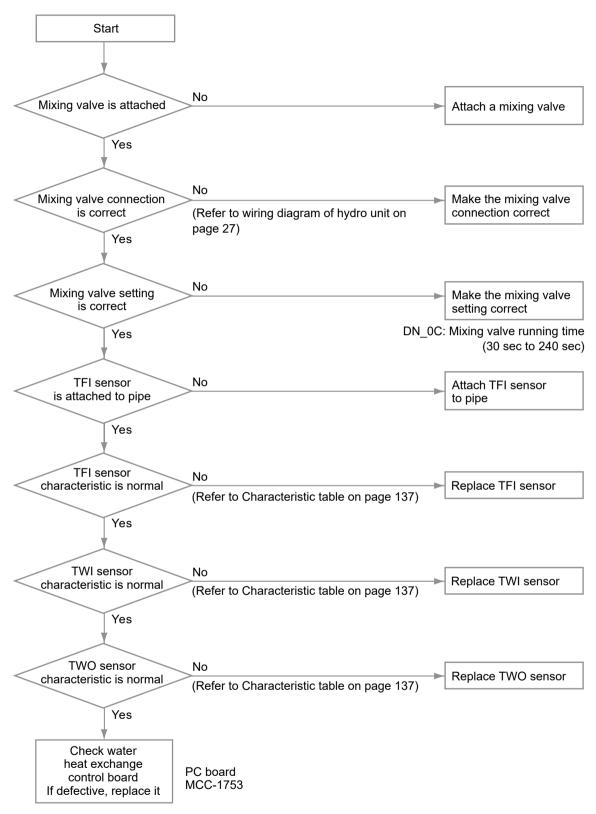


#### [F23] Low pressure sensor failure

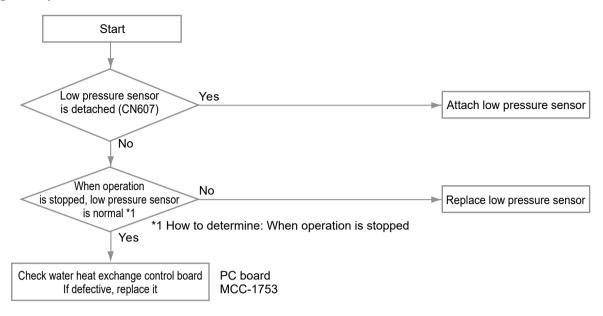


#### [F30] Enhanced IC failure

Enhanced IC on water heat exchanger control board is abnormal. Check water heat exchange control board. If defective, replace it. PC board MCC-1753

#### [F32] Flow sensor failure

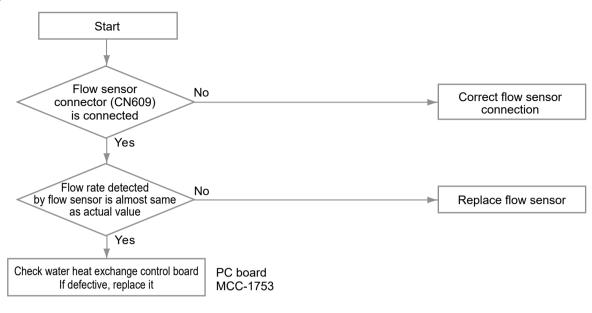

#### [F33] Flowing quantity failure

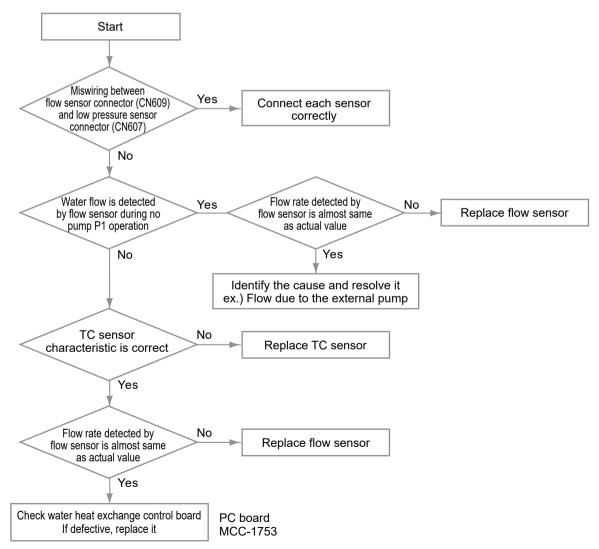

#### [L02] Combination failure

The model name of the outdoor unit is not HWT-xxxxH(8)(R)W-E. Replace the outdoor unit with the proper model. And check the combination of INJ type or not is correct.


#### [L07] Communication failure

At the time of power on, detecting the above failure automatically activates the automatic address setting mode.

(Check code is not output)

Note that if the above failure is detected in the automatic address setting mode, a check code may be output.

#### [L09] Communication failure

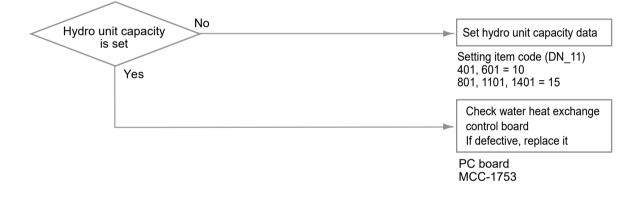

#### [L16] Failure

In DN\_6B9, 6BA of Hydro unit DN code, if ZONE1 is not set and ZONE2 is set, [L16] displays abnormality. Set correctly DN\_6B9, 6BA.

#### [L22] Failure

DN\_680 setting in group control are not the same for all units, [L22] displays abnormality. Set correctly DN\_680.

## 8-4-2. Outdoor unit failure detection

#### Diagnosis procedure for each check code

- One check code may indicate multiple symptoms. In such a case, see the LED indication on the outdoor board to narrow down the check details.
- The handy remote controller displays a check code only when the same failure repeatedly occurs while the LED
- on the outdoor board indicates an failure even if it occurs only once. This may cause indication inconsistency between the remote controller and LED.

#### How to check the LED display on the outdoor PC board

#### [Service switch operation]

#### Currently occurring trouble indication

If any of D800 to D804 is rapidly flashing, it indicates currently occurring trouble. If any of D800 to D804 is slowly flashing or D805 is flashing then press and hold down SW01 and SW02 at the same time for at least 5 seconds. Currently occurring trouble will be indicated.

D800 (YEL)	D801 (YEL)	D802 (YEL)	D803 (YEL)	D804 (YEL)	D805 (GRN)	
					0	No trouble
O	•	•	•	•		Trouble detected (Example. Discharge temp. sensor trouble) (Refer to (2) -1-1.Current trouble indication)


●: Off ⊖: Light ⊚: Flash (5 times/sec)


#### Latest trouble indication

- The following operation results in the latest trouble being indicated. It is retained in the memory and hence can be confirmed even when the power supply has been turned off.
  - 1. Confirm D800 to D804 are off (or rapidly flashing) and that D805 is lit up. If D800 to D804 are slowly flashing or D805 is flashing then push and hold down SW01 and SW02 at the same time for at least 5 seconds. D800 to D804 will turn off (or be rapidly flashing) and D805 will change to on.
  - 2. Push SW01 several times until reaching the LED indication (D800 to D805) of 'Latest (including current) trouble indication'.
  - 3. Push SW02. The latest trouble will be indicated.
  - 4. Confirm to carry out step 1) to set the LEDs to the initial state (current occurring trouble) when finished and then exit.


Latest (including current) trouble indication


D800 (YEL)	D801 (YEL)	D802 (YEL)	D803 (YEL)	D804 (YEL)	D805 (GRN)	
0	•	•	•	•	U U	Trouble detected (Example. Discharge temp. sensor trouble) (Refer to (2) -1-2.Latest (including current) trouble indication)
●: Off ⊖: Li	ght ⊚: Flash	n (5 times/sed	c)			

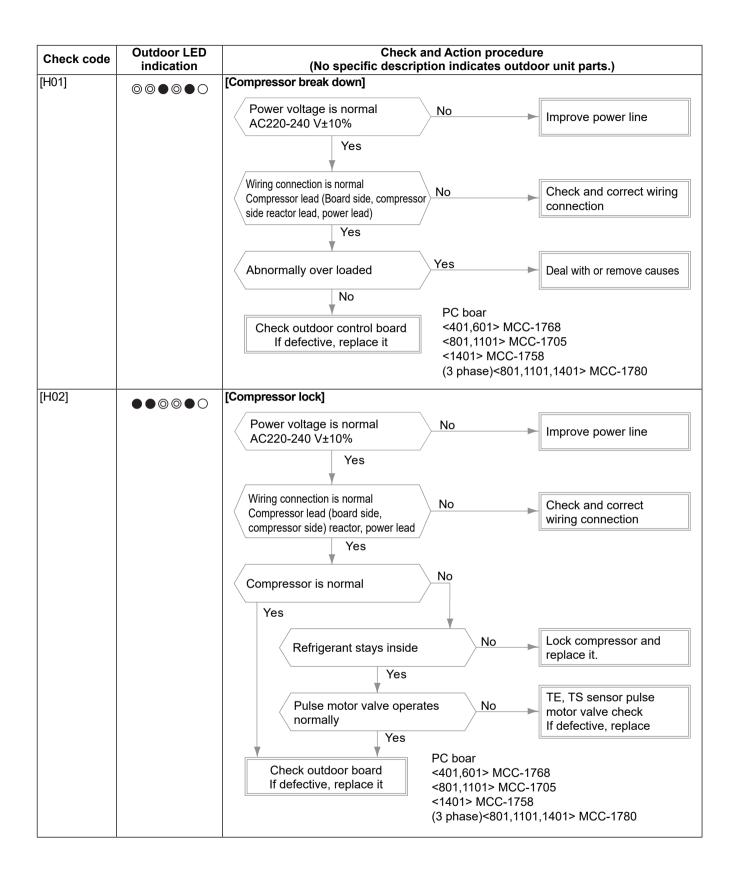


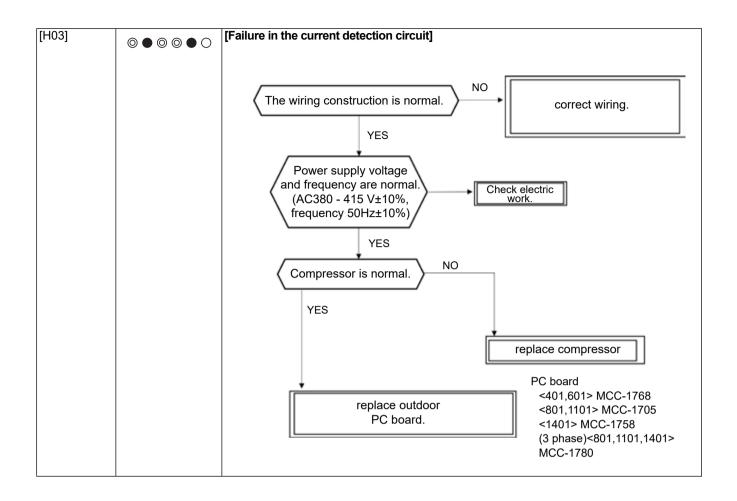

Check code	Outdoor LED indication	Check and Action procedure (No specific description indicates outdoor unit parts.)					
[H04]		[Case thermostat operation]					
	$\bullet \oslash \oslash \oslash \bullet \bigcirc$	<ul> <li>&lt;401, 601&gt; CN500</li> <li>&lt;801, 1101, 1401&gt; CN609 (Including 3 phase)</li> <li>No</li> <li>Correct connector</li> <li>Replace case thermostat</li> <li>Yes</li> </ul>					
		If case thermostat is short circuited, No Check outdoor board If defective, replace it					
		Yes PC boar <401,601> MCC-1768 <801,1101> MCC-1705 <1401> MCC-1758 (3 phase)<801,1101, 1401> MCC-1780					
		No gas leakage Enough Refrigerant Yes					
		Service valve is fully opened Ves					
		Pulse motor valve is normal     No     Correct defective portion Replace defective parts					
		Check for piping collapse and break If defective, repair or replace it					
[L10]		[Unset model type] Cut jumper line by following the instruction comes with the service board package					
[L15]	000000	[Combination failure between the hydro unit] Replace the hydro unit with the proper model					
[L29]	$\odot \bullet \bullet \bullet \odot \bigcirc$	[Communication trouble between MCUs]					
		Is the communication line between the • MCC-1705 and the MCC-1675 • MCC-1758 and the MCC-1675 • MCC-1780 and the MCC-1781 connected?					
		Check outdoor control board If defective, replace it PC board <801, 1101> MCC-1705, MCC-1675 <1401> MCC-1758, MCC-1675 (3 phase)<801,1101,1401> MCC-1780, MCC-1781					

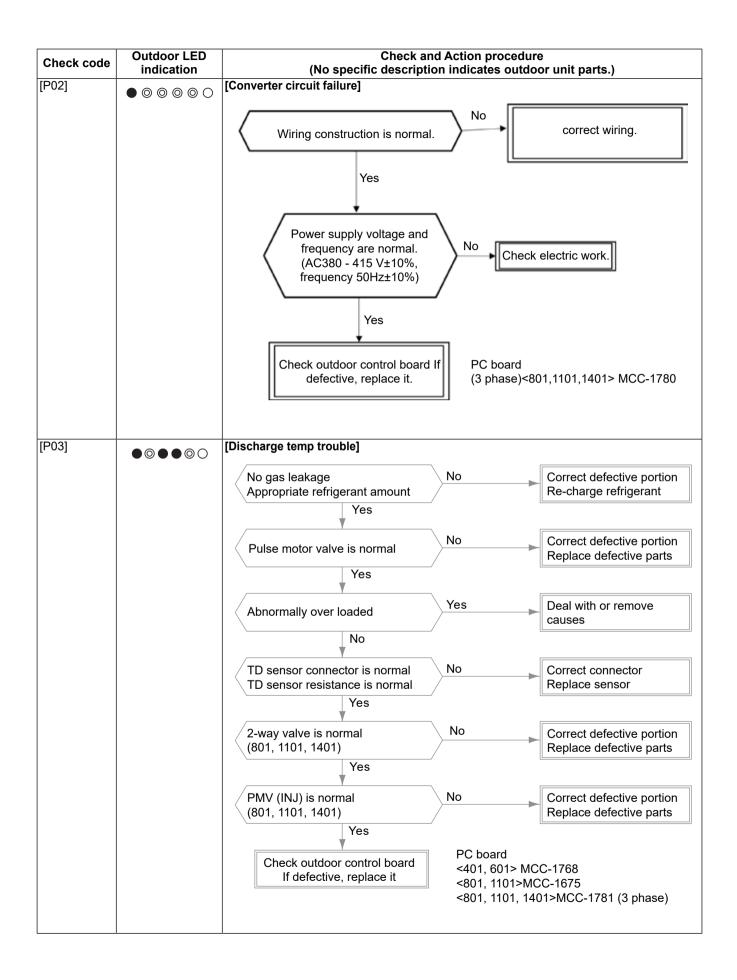

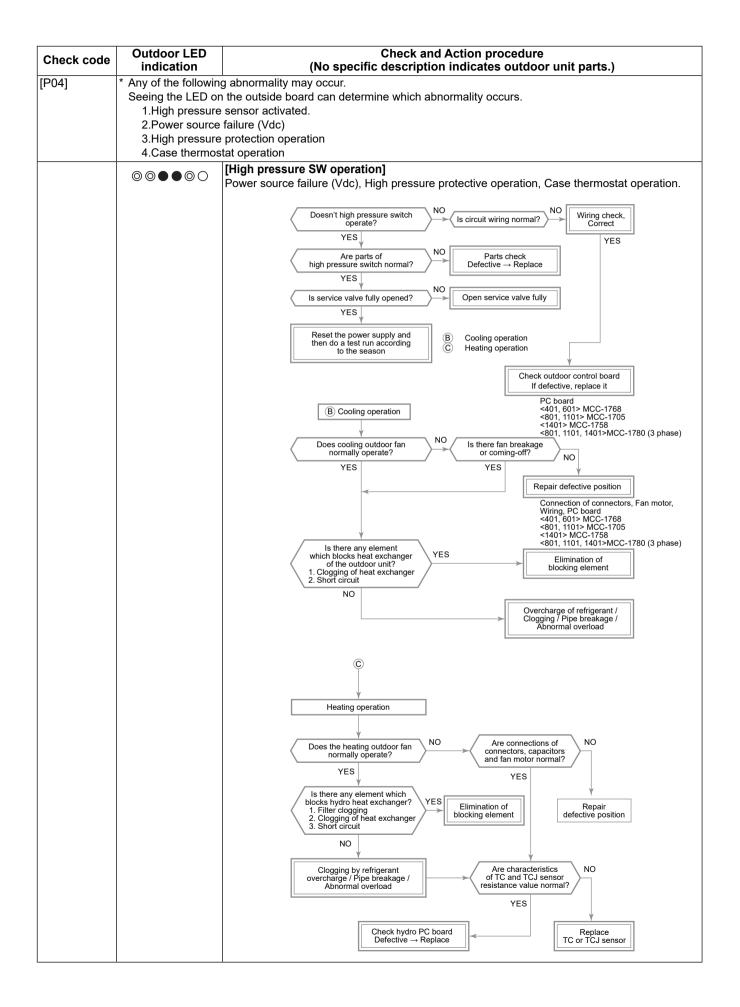


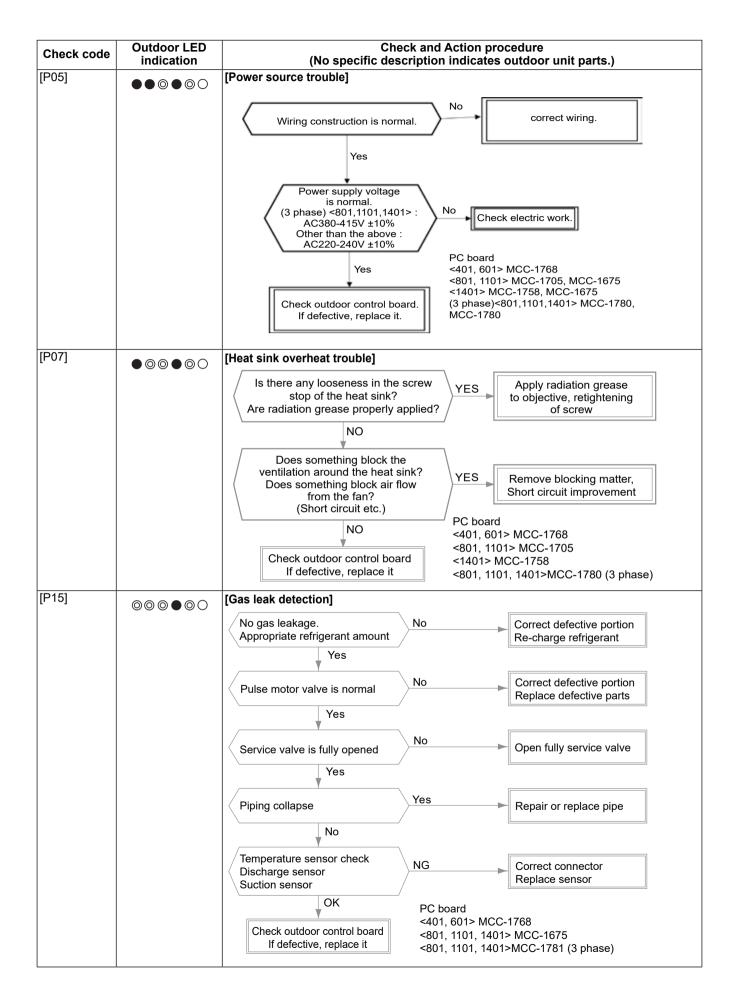


Check code	Outdoor LED indication	Check and Action procedure (No specific description indicates outdoor unit parts.)						
[P19]	indication ● ● ● ۞ ۞ ○	(No specific description indicates outdoor unit parts.)         [4-way valve reversal trouble]						
		3) Push SW01 until reaching the below [Self-preservation valve operation].						
		Self-preservation valve suck operation (Heating)     D800     D801     D802     D803     D804						
		Self-preservation valve secession operation         D800         D801         D802         D803         D804						
		●: Off ◯: Light ⊚: Flash (5 times/sec)						
		<ol> <li>4) Push SW02 until D805 starts rapidly flashing.</li> <li>5) Push and hold down SW02 for at least 5 seconds. D804 will start slowly flashing, D805 will turn on, and the 4-way valve will be operated.</li> <li>6) Push and hold down SW01 and SW02 at the same time for at least 5 seconds or wait 2 minutes to return to normal control.</li> </ol>						

Check code	Outdoor LED indication	Check and Action procedure (No specific description indicates outdoor unit parts.)
[P20]	$\bigcirc \bullet \bullet \odot \odot \bigcirc \bigcirc$	[High pressure protection operation]
		Service valve is fully opened No Open fully service valve
		Yes Heating season
		Reset the power source and perform       Heating operation         test run matching to the season
		Cooling season Cooling operation
		Outdoor PD sensor is normal No Replace sensor
		Yes
		Outdoor fan is free from crack No Check outdoor fan or looseness. If defective, replace or tighten it
		Yes
		Outdoor fan operates normally No Check the same item as those for [P22] abnormality
		Yes
		Something prevents outdoor unit heat exchange - Clogged heat exchanger - Short circuit
		No
		Check for refrigerant overcharged, clogged cycle, pipe break, abnormal overload, etc. If defective, repair defective portion
		Something prevents heat exchange of hydro unit - Clogged filter - Clogged heat exchanger - Short circuit
		No
		Check for refrigerant overcharged, clogged cycle, pipe break, abnormal overload, etc. If defective, repair defective portion

Check code	Outdoor LED indication	Check and Action procedure (No specific description indicates outdoor unit parts.)				
[P22]		[Fan system trouble]				
		Power voltage is normal AC220 - 240 V±10%				
		YES				
		Rotate shaft of the fan motor by hands during power-OFF. Can it rotate smoothly? Is coil resistance of fan motor correct? Between red and white lead wire: 12 to 20 Ω Between white and black lead wire: 12 to 20 Ω Between black and red lead wire: 12 to 20 Ω				
		YES				
		Is not the fuse (near the terminal block) NO Replace fuse				
		YES PC board <401, 601> MCC-1768 <801, 1101> MCC-1705 <1401>MCC-1758 <1401>MCC-1758 <1401>MCC-1758 <1401>MCC-1758 <1401>MCC-1758 <1401>MCC-1758 <1401>MCC-1758 <1401>MCC-1758 <1401>MCC-1758 <1401>MCC-1758 <1401>MCC-1758 <1401>MCC-1758 <1401>MCC-1758 <1401>MCC-1758 <1401>MCC-1758 <1401>MCC-1758 <1401>MCC-1758 <1401>MCC-1758 <1401>MCC-1758 <1401>MCC-1758 <1401>MCC-1758 <1401>MCC-1758 <1401>MCC-1758 <1401>MCC-1758 <1401>MCC-1758 <1401>MCC-1758 <1401>MCC-1758 <1401>MCC-1758 <1401>MCC-1758 <1401>MCC-1758 <1401>MCC-1758 <1401>MCC-1758 <1401>MCC-1758 <1401>MCC-1758 <1401>MCC-1758 <1401>MCC-1758 <1401>MCC-1758 <1401>MCC-1758 <1401>MCC-1758 <1401>MCC-1758 <1401>MCC-1758 <1401>MCC-1758 <1401>MCC-1758 <1401>MCC-1758 <1401>MCC-1758 <1401>MCC-1758 <1401>MCC-1758 <1401>MCC-1758 <1401>MCC-1758 <1401>MCC-1758 <1401>MCC-1758 <1401>MCC-1758 <1401>MCC-1758 <1401>MCC-1758 <1401>MCC-1758 <1401>MCC-1758 <1401>MCC-1758 <1401>MCC-1758 <1401>MCC-1758 <1401>MCC-1758 <1401>MCC-1758 <1401>MCC-1758 <1401>MCC-1758 <1401>MCC-1758 <1401>MCC-1758 <1401>MCC-1758 <1401>MCC-1758 <1401>MCC-1758 <1401>MCC-1758 <1401>MCC-1758 <1401>MCC-1758 <1401>MCC-1758 <1401>MCC-1758 <1401>MCC-1758 <1401>MCC-1758 <1401>MCC-1758 <1401>MCC-1758 <1401>MCC-1758 <1401>MCC-1758 <1401>MCC-1758 <1401>MCC-1758 <1401>MCC-1758 <1401>MCC-1758 <1401>MCC-1758 <1401>MCC-1758 <1401>MCC-1758 <1401>MCC-1758 <1401>MCC-1758 <1401>MCC-1758 <1401>MCC-1758 <1401>MCC-1758 <1401>MCC-1758 <1401>MCC-1758 <1001>MCC-1758 <1001>MCC-1758 <1001>MCC-1758 <1001>MCC-1758 <1001>MCC-1758 <1001>MCC-1758 <1001>MCC-1758 <1001>MCC-1758 <1001>MCC-1758 <1001>MCC-1758 <1001>MCC-1758 <1001>MCC-1758 <1001>MCC-1758 <1001>MCC-1758 <1001>MCC-1758 <1001>MCC-1758 <1001>MCC-1758 <1001>MCC-1758 <1001>MCC-1758 <1001>MCC-1758 <1001>MCC-1758 <1001>MCC-1758 <1001>MCC-1758 <1001>MCC-1758 <1001>MCC-1758 <1001>MCC-1758 <1001>MCC-1758 <1001>MCC-1758 <1001>MCC-1758 <1001>MCC-1758 <1001>MCC-1758 <100				
		<ul> <li>&lt;801, 1101, 1401&gt;MCC-1780 (3 phase)</li> <li>[Single operation check for outdoor fan]</li> <li>A single operation of the outdoor fan can be confirmed by handling the service switches SW01 and SW02. Use this method to check whether there is trouble on the fan or not.</li> </ul>				
		<ul> <li>[Method of operation]</li> <li>1) Confirm D800 to D804 are off (or rapidly flashing) and that D805 is lit up.</li> <li>If D800 to D804 are slowly flashing or D805 is flashing then please</li> <li>push and hold down SW01 and SW02 at the same time for at least 5 seconds.</li> <li>D800 to D804 will turn off (or rapidly flash) and D805 turn on.</li> <li>2) Push and hold down SW01 for at least 5 seconds. D804 will start slowly flashing.</li> <li>3) Push SW01 until reaching the below [Forced fan motor operation] LED indication.</li> </ul>				
		D800         D801         D802         D803         D804           Image: Second state of the second				
		●: Off ◯: Light ◎: Flash (5 times/sec)				
		<ul> <li>4) Push SW02 until D805 starts rapidly flashing.</li> <li>5) Push and hold down SW02 for at least 5 seconds. D804 will start slowly flashing, D805 will turn on, and the fan rotates.</li> <li>6) Push and hold down SW01 and SW02 at the same time for at least 5 seconds or wait 2 minutes to return to normal control.</li> </ul>				
[P26]		[Short-circuit of compressor drive element]				
[]	©©●©©○	The connection between compressor lead and reactor is correct (Check with wiring diagram)				
		Does the same failure occur in operation without compressor lead?				
		Yes <				
		V     <801, 1101, 1401>MCC-1780       Compressor check     (3 phase)       If defective, replace it				
[P29]		[Compressor motor position detection circuit trouble]				
	$\bullet \bullet \circ \circ \circ \circ$	Check outdoor control board If defective, replace itPC board <401, 601> MCC-1768 <801, 1101> MCC-1705 <1401>MCC-1758 <801, 1101, 1401>MCC-1780 (3 phase)				

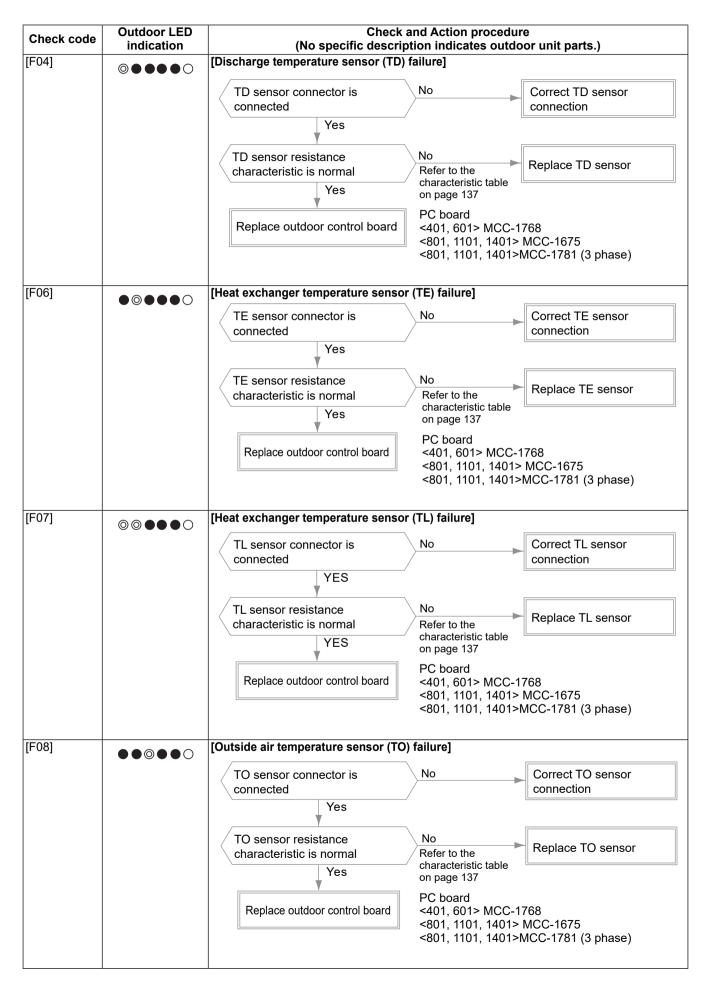


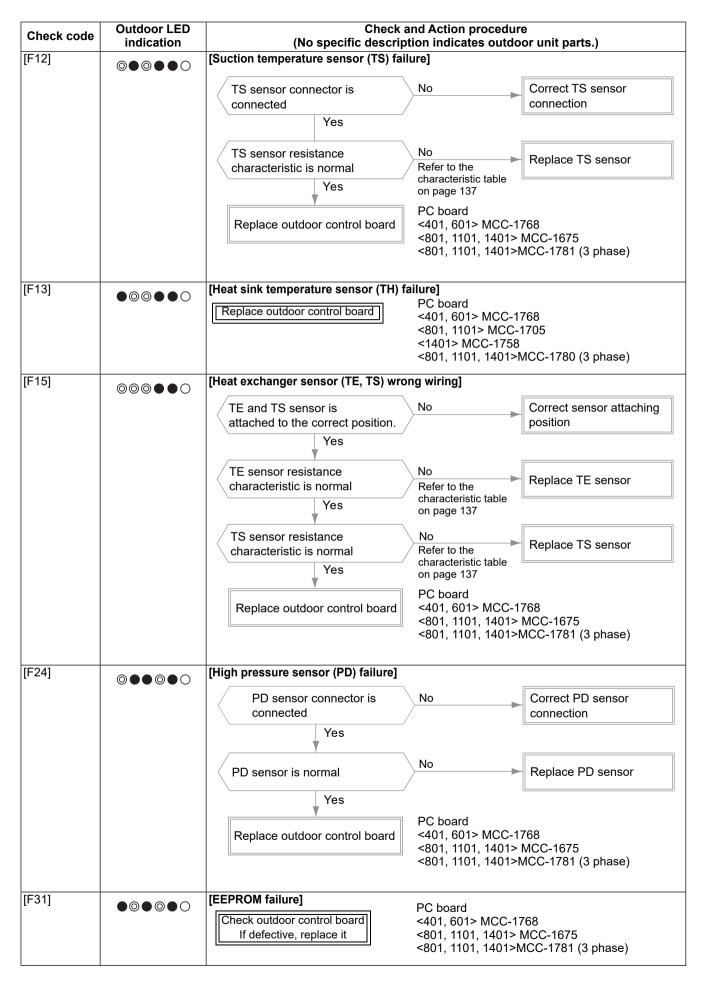

# 8-4-3. Temperature sensor, temperature-resistance characteristic table

Typical value						
Temperature	Resistance value (kΩ)					
(°C)	(Minimum)	(Standard)	(Maximum)			
0	31.18	32.82	34.46			
10	19.12	19.95	20.78			
20	12.08	12.50	12.92			
25	9.700	10.00	10.30			
30	7.808	8.050	8.291			
40	5.155	5.314	5.474			
50	3.482	3.590	3.698			
60	2.380	2.478	2.583			
70	1.659	1.744	1.838			


#### TWI, TFI, TTW sensors

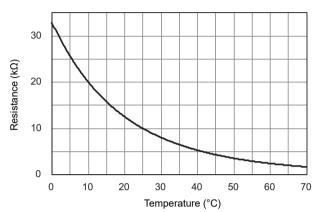


TC, TWO, THO, TE, TS, TO sensors

#### **Typical value**


Temperature	Re	sistance value (l	<u>κ</u> Ω)			
(°C)	(Minimum)	(Standard)	(Maximum)			
-30	172.0	184.8	198.5			
-20	95.54	101.7	108.1			
-10	54.77	57.73	60.82			
0	32.33	33.80	35.30			
10	19.63	20.35	21.09			
20	12.23	12.59	12.95			
25	9.750	10.00	10.25			
30	7.764	7.990	8.218			
40	5.013	5.192	5.375			
50	3.312	3.451	3.594			
60	2.236	2.343	2.454			
70	1.540	1.623	1.709			

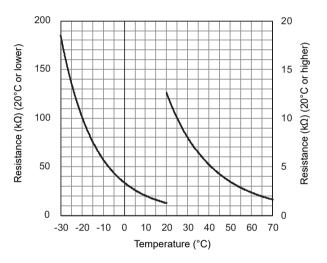

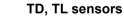

#### **Typical value**

Temperature	Re	sistance value (	kΩ)	
(°C)	(Minimum)	(Standard)	(Maximum)	
0	150.5	161.3	172.7	
10	92.76	99.05	105.6	
20	58.61	62.36	66.26	
25	47.01	49.93	52.97	
30	37.93	40.22	42.59	
40	25.12	26.55	28.03	
50	17.00	17.92	18.86	
60	11.74	12.34	12.95	
70	8.269	8.668	9.074	
80	5.925	6.195	6.470	
90	4.321	4.507	4.696	
100	3.205	3.336	3.468	
110	2.411	2.504	2.598	
120	1.838	1.905	1.972	

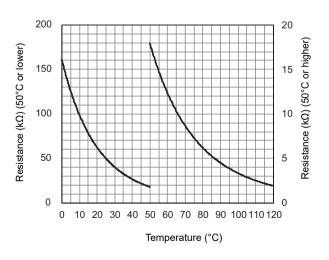

## 8-5. Operation check by PC board switch

### 8-5-1. Operation check mode

This mode allows to check the operations of the water 2-way valve, water 3-way valve, mixing valve, and circulation pump. This operation is valid when the hydro unit and the outdoor unit are turned on the power.

#### **Operation check mode**

#### (1) Preparation

- 1) Turn all of the remote controllers "OFF" for the hot water supply and heating.
- 2) Turn off the hydro unit and the outdoor unit.
- 3) Remove the front panel of the hydro unit.
- 4) Set DIP\_SW705\_3 "ON".

#### (2) Operation check

- 1) Turn on the hydro unit and the outdoor unit.
- 2) Rotate the rotary SW700 to position "0" and press tactile switch SW703 for 5 sec. or longer.
- 3) Rotating the rotary SW700 allows to check each operation.
- 4) Set the DIP\_SW705\_3 "OFF" to finish.

Rotary switch	Che	eck contents	Remark
0	None		OP.CH
1	2WV_W	Alive for approx. 2 sec, not alive for 3 sec	2.ON ↔ 2.OFF
2	3WV_W	Alive for 4 min in the heating / cooling direction Alive for 4 min in the hot water direction	7 segment display ON $\rightarrow$ heating, OFF $\rightarrow$ hot water 3.ON $\leftrightarrow$ 3.OFF
3	Mixing valve	Alive for 30 sec in the forward direction Alive for 30 sec in the reverse direction	F.ON ↔ F.OFF
4	Built-in circulation pump	Alive / not alive for 20 sec	P.ON ↔ P.OFF
5	External circulation pump 2	Alive / not alive for 20 sec	P2.ON ↔ P2.OFF
6	None		
7	Water heat exchange backup heater	Repeat heater 1, heater 2, and OFF every 20 sec	The built-in circulation pump operates. H.ON $\leftrightarrow$ H.OFF
8	Hot water cylinder heater	Alive / not alive for 20 sec	$dH.ON \leftrightarrow dH.OFF$
9	Booster heater	Alive / not alive for 20 sec	The built-in circulation pump and external circulation pump operate. bH.ON ↔ bH.OFF
А	Check the alarm output.	Output for 20 sec / no output for 20 sec	01.ON ↔ 01.OFF
В	Check the boiler output.	Output for 20 sec / no output for 20 sec	02.ON ↔ 02.OFF
С	Check the defrost output.	Output for 20 sec / no output for 20 sec	03.ON ↔ 03.OFF
D	Check the operation output.	Output for 20 sec / no output for 20 sec	04.ON ↔ 04.OFF
E	None		
F	Built-in circulation pump continuous operation	Continuously alive	Do not operate the circulation pump alive continuously without any water in hydro unit. P1.ON ↔ Flow rate display

## 8-6. How to diagnose by fault symptom

Symptom	Possible cause	Corrective action			
	Incorrect remote controller setting	Check remote controller operation and temperature setting			
	Incorrect function code setting	Check function code setting with the function code table.			
Room is not heated	Backup heater disconnected	Check backup heater and bimetal thermostat.			
or cooled. Water is not hot	Insufficient capacity	Check selection of equipment.			
enough.	Sensor failure	Check whether temperature sensor is installed at the normal position.			
	Malfunction of actuator	Check the output from the P.C board (MCC-1755) and the working of each actuator.			
Nothing is displayed	Power is not supplied.	Check power supply wiring.			
on the remote controller.	Incorrect setting	Check the setting with the DN codes.			
Hot water leaks from	Excessive hydraulic pressure	Set hydraulic pressure considering pipe height, and replenish wate until manometer shows a value of set hydraulic pressure or more.			
overpressure preventive valve.	Insufficient capacity of expansion tank	Check expansion tank capacity compared to total water amount. If it is insufficient, install another expansion tank.			
	Expansion tank failure	Check the air pressure of the expansion tank.			

# 8-7. Brief method for checking the key components 8-7-1. Hydro unit

No.	Component name	Check procedure						
	Water heat exchange temperature	Remove the connector and measure the resistance value with a tester. (Normal temperature)						
	(TC) sensor Water inlet temperature (TWI) sensor	Temperature Sensor (kΩ)	0°C	10°C	20°C	30°C		
1	Water outlet temperature (TWO) sensor Water heater outlet temperature	Water heat exchange temperature (TC) sensor Water outlet temperature (TWO) sensor Water heater outlet temperature (THO) sensor	33.8	20.4	12.6	8.0		
	(THO) sensor Hot water cylinder temperature (TTW) sensor Floor inlet temperature (TFI) sensor	Water inlet temperature (TWI) sensor Hot water cylinder temperature (TTW) sensor Floor inlet temperature (TFI) sensor	32.8	20.0	12.5	8.1		

## 8-7-2. Outdoor unit

			Check procedure		
	Compressor Type	Measure the resistance value of e Red I	each winding with a teste 401HW-E, 601HW-E	er.	
	DX150A1T-21F (401HW-E, 601HW-E)		Location	Resistance value	
	NX220A1FJ-20N		Red – White	1.04 - 1.16 Ω	
	(801HW-E, 1101HW-E) DX380A2TJ-20M		White – Black	1.04 - 1.16 Ω	
	(1401HW-E)	X an ely	Black – Red	1.04 - 1.16 Ω	At 20°C
	RX380A2TJ-20M(801H8R-E,	White Black	801HW-E, 1101HW-E		
	1101H8R-E, 1401H8W-E)		Location	Resistance value	
			Red – White	1.16 - 1.28 Ω	
			White – Black	1.16 - 1.28 Ω	
			Black – Red	1.16 - 1.28 Ω	At 20°C
1			1401HW-E	1	1
			Location	Resistance value	
			Red – White		
			White – Black	0.34 - 0.37 Ω	
			Black – Red		At 20°C
			801H8W-E, 1101H8W-E,	1401H8W-E	
			Location	Resistance value	
			Red – White		
			White – Black	 1.35 - 1.49 Ω	
			Black – Red	1	At 20°C
	Outdoor fan motor Type	Measure the resistance value of e	each winding with a teste 401HW-E, 601HW-E	er.	
	ICF-140-A43-1		Location	Resistan	ce value
	(401HW-E, 601HW-E)	/ 죓 \	Red – White		
	ICF-280-A60-1		White - Black	21.00 ±	1.05 Ω
	(801HW-E, 1101HW-E) ICF-280-A100-1		Black – Red		
	(1401HW-E)	White	801HW-E, 1101HW-E		
	ICF-280-A100-1(801H8W-E,	Didok	Location	Resistance v	alue
2	1101H8W-E, 1401H8W-E, 1401HW-E)		Red – White		
			White – Black	32.6 ±	3.3 Ω
			Black – Red		
			801H8W-E, 1101H8W-E, 1	1401H8W-E, 140	1HW-E
			Location	Resistance v	alue
			Red – White		
			White – Black	14.8 ±	1.5 Ω
			Black – Red		
3	4-way valve coil Type DXQ-1233	Measure the resistance value. 9 $\pm$ 0.9 $\Omega$		3	

No.	Component name	Check proc	edure			
4	Pulse motor valve coil Type PQ-M10012-000313 (401, 601) UKV-A040 FAM-MD12TF-1 (801, 1101, 1401) UKV-25D302 (801H8W-E, 1101H8W-E, 1401H8W-E, 1401HW-E)	PQ-M10012-000313          1 White       Image       I	w, Blue	46 Resist	ance valu $\pm 3.7 \Omega$ ance valu $\delta \pm 3 \Omega$	
	2-way valve coil	FAM-MD12TF-1 1 White $M$ $M$ $H$	-		ance valu δ ± 3 Ω	IE
5	Type TEV-SMOAJ2170A1 (801, 1101, 1401)	2163 ± 151 Ω				
6	Suction temperature (TS) sensor Heat exchange temperature (TE) sensor Outdoor temperature (TO) sensor	Remove the connector and measure the resistant         10-20 kΩ (Normal temperature)         Temperature         Sensor (kΩ)         Suction temperature (TS) sensor         Heat exchange temperature (TE) sensor         Outdoor temperature (TO) sensor		ith a teste	r. 20°C 12.6	30°C 8.0
7	Discharge temperature (TD) sensor Heat exchanger coil temperature (TL) sensor	Remove the connector and measure the resistar Temperatu Sensor (kΩ) Discharge temperature (TD) sensor		/ith a teste	r. 20°C	30°C
		Heat exchanger coil temperature (TL) sensor	— 161.3	99.0	62.4	40.2

## **9** Hydro unit and outdoor unit settings

#### Hydro unit

#### 1. Hydro unit Setting

DN code	DN Description	Default	After Commissioning	Change 1	Change 2	Change 3
6B0	Used to activate external boiler output. 0 = external boiler output de-activated; 1 = external boiler output activated	0				
6B3	Used to when an external room thermostat is connected 0 = No external room thermostat; 1 = External room thermostat connected	0				
6B5	<ul> <li>Synchronisation of Pump P2.</li> <li>0 = P2 continuous operation (pump off when remote controller switched off)</li> <li>1 = Pump P2 off during heating and cooling mode is off or hot water HP operation.</li> </ul>	1				
6B8	Used when a hot water cylinder is connected to system. 0 = hot water cylinder connected; 1 = hot water cylinder not connected	0				
6B9	Used to activate Zone 1 Operation. 0 = Zone 1 activated; 1 = Zone 1 de-activated	0				
6BA	Used to activate Zone 2 Operation. 0 = Zone 2 de-activated; 1 = Zone 2 activated	Model 1 zone: 0 2 zone: 1				
6D0	P1 Pump operation for heating 0 = Normally run 1 = Stopped at the outside temperature over 20°C	0				
6D1	Pump ON/OFF cycling (During long periods of system OFF) 0 = None operation 1 = regular power	1				
6D2*	Used to activate Hydro Unit backup heaters. 0 = Backup heaters activated; 1 = Backup heaters de-activated	0				
6D3	Used to activate hot water cylinder electrical heater. 0 = hot water cylinder heater activated; 1 = hot water cylinder heater de-activated	0				
6D4	Used to activate external booster heater output. 0 = external booster heater output activated; 1 = external booster heater output de-activated	0				
28	Used to activate system auto restart after power failure. 0 = auto restart de-activated 1 = auto restart activated	1				
5A	P1 Pump operation for hot water 0 = synchronised with heat pump 1 = Normally run	0				
B6	Setting the objects to control of I/P 7, 8 0 = I/P 7 Emergency shutdown input, I/P 8 None 1 = I/P 7 TEMPO 1 input, I/P 8 None 2 = I/P 7 TEMPO 2 input, I/P 8 None 3 = I/P 7 Forcibly turn off the backup heater, I/P 8 Forcibly turn off the hot water tank heater 4 = I/P 7 SG network input 1, I/P 8 SG network input 2	0				

\*Please note that when the heater is set to OFF, freeze protection may not be possible if the temperature drops abnormally.

#### 2. DN Setting


- Hydro unit DN code setting is available only for the header remote controller.
- Set DN codes for various operation modes with the remote controller.

#### 2-1. How to set hydro unit DN

<Procedure> Perform the following when no operation is in progress.

Press the [ ] button and the [ ] button at same time for 4 seconds or longer on the top screen to display the "FIELD SETTING MENU".



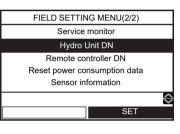




- 2 Press the [ ∧ ] / [ ∨ ] button to select "Hydro Unit DN" on the FIELD SETTING MENU screen, then press the [ [F2] ] button.
- 3 Press the [ F1 ] / [F2 ] button to select DN or Data, then press the
  [ ∧ ] / [ ∨ ] button to set the value.
- 4 Press the [ **[]**] button. The set value is registered.


2-2. How to set remote controller DN

<Procedure> Perform the following when no operation is in progress.

- **1** Press the [ ] button and the [ ] button at same time for 4 seconds or longer on the top screen to display the "FIELD SETTING MENU".
- 2 Press the [ ∧ ] / [ ∨ ]button to select "Remote controller DN" on the FIELD SETTING MENU screen, then press the [ (F2) ] button.
- **3** Press the [F] / [F2] button to select DN or Data, then press the [ ] / [ ] button to set the value.
- **4** Press the [ **[]** ] button. The set value is registered.



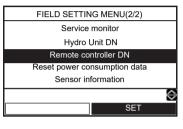

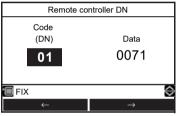

#### DN table

DN	Item		Deta	ails	Factory default
02	Cooling/Non-cooling switching	0000: Cooling		0001: Not cooling	0000: Cooling
03	Central control address	0001	-	0128	None
80	Hot water boost operation time (operating time)	0003: 30 min	-	0018: 180 min	0006: 60 min
09	Hot water boost set temperature	0040: 40°C	-	0065: 65°C	0065: 65°C
0A	Anti bacteria set temperature	0060: 60°C	-	0065: 65°C	0065: 65°C
0B	Anti bacteria holding time	0000: 0 min	-	0250: 250 min	0030: 30 min
0C	Mixing valve drive time	0003: 30 sec	-	0024: 240 sec	0006: 60 sec
0F	Hot water HP allowance while cooling + hot water supply	0000: Not allow	-	0001: Allow	0001: Allow
10	Type setting	0070: Wall mounted ty 0071: AIO type	pe		Depend on type
11	Water heat exchanger capacity	0010: 601		0015: 1101	Depend on type
12	Line address	0001	-	0128	None
13	Indoor address	0001	-	0128	None
14	Group address	0000: Individual (Not g 0001: Header unit 0002: Follower unit	roup	control)	None
18	Upper limit of cooling set temperature	0018: 18°C	-	0030: 30°C	0025: 25°C
19	Lower limit of cooling set temperature	0007: 7°C	-	0020: 20°C	0007: 7°C
1A	Upper limit of heating (ZONE1) set temperature	0037: 37°C	-	0055: 55°C (401 / 601), 0065: 65°C (801 / 1101)	0055: 55°C (401 / 601) 0065: 65°C (801 / 1101)
1B	Lower limit of heating (ZONE1) set temperature	0020: 20°C	-	0037: 37°C	0020: 20°C
1C	Upper limit of heating (ZONE2) set temperature	0037: 37°C	-	0055: 55°C (401 / 601), 0065: 65°C (801 / 1101)	0055: 55°C (401 / 601) 0065: 65°C (801 / 1101)
1D	Lower limit of heating (ZONE2) set temperature	0020: 20°C	-	0037: 37°C	0020: 20°C
1E	Upper limit of hot water set temperature	0060: 60°C	-	0065: 65°C	0065: 65°C
1F	Lower limit of hot water set temperature	0040: 40°C	-	0060: 60°C	0040: 40°C
20	Hot water HP start temperature	0020: 20°C	-	0045: 45°C	0038: 38°C
21	Hot water HP stop temperature	0040: 40°C	-	0065: 65°C	0052: 52°C
23	Boiler output enable switching temperature	-0020: -20°C	-	0020: 20°C	-0010: -10°C
24	Outside air temperature for hot water temperature compensation start	-0020: -20°C	-	0010: 10°C	0000: 0°C
25	Hot water temperature compensation value	0000: 0K	-	0015: 15K	0003: 3K
26	Night setback change temperature range	0003: 3K	-	0020: 20K	0005: 5K
27	Set temperature shift with heating Auto	-0005: -5K	-	0005: 5K	0000: 0K
28	Auto Restart of power outage after system power failure	0000: No		0001: Yes	0001: Yes
29	Outside air temperature T1 temperature	-0015: -15°C	-	0000: 0°C	-0010: -10°C
2B	Outside air temperature T3 temperature	0000: 0°C	-	0015: 15°C	0010: 10°C
2C	Set temperature A with outside air temperature of T0	0020: 20°C	-	0055: 55°C (401 / 601), 0065: 65°C (801 / 1101)	0040: 40°C
2D	Set temperature B with outside air temperature of T1	0020: 20°C	-	0055: 55°C (401 / 601), 0065: 65°C (801 / 1101)	0035: 35°C
2E	Set temperature C with outside air temperature of 0°C	0020: 20°C	-	0055: 55°C (401 / 601), 0065: 65°C (801 / 1101)	0030: 30°C
2F	Set temperature D with outside air temperature of T3	0020: 20°C	-	0055: 55°C (401 / 601), 0065: 65°C (801 / 1101)	0025: 25°C
30	Set temperature E with outside air temperature of 20°C	0020: 20°C	-	0055: 55°C (401 / 601), 0065: 65°C (801 / 1101)	0020: 20°C
31	Zone2 ratio with Zone1 as Auto	0000: 0%	-	0100: 100%	0080: 80%
33	Hydro unit backup heater down time	0000: 5 min 0002: 15 min		0001: 10 min 0003: 20 min	0001: 10 min
DN_	11, 6B8, 6BA, 6BC are needed for PCB replacement or l	DN code reset procedur	e ha	s been completed.	
DN	Item		Deta	ails	Factory default

34	Hydro unit backup heater up time	0000: 10 min 0002: 30 min	0001: 20 min 0003: 40 min	0000: 10 min
ЗA	Frost protection function Invalid/Valid	0000: Invalid	0001: Valid	0001: Valid
3B	Frost protection set temperature	0008: 8°C -	0020: 20°C	0015: 15°C
3C	2-way valve operation (logical reverse) control		0000: Activate during cooling 0001: Deactivate during cooling	
3E	Heating HP/Boiler priority switching when using boiler	0000: Priority on HP	0001: Priority on boiler	0000: Priority on HP
40	Activate/deactivate room temperature control	0000: Deactivate	0001: Activate	0000: Deactivate
42	P2 pump display on Wireless Adapter screen (NOT on remote controller screen)	0000: Invalid	0001: Valid	0000: Invalid
52	External input setting when using I/P 7, 8 (CN21) as Emergency shutdown input (DN_B6 = "0")	0000: CLOSE to stop system 0001: OPEN to stop system		0000: CLOSE to stop
54	Logic of 3-way valve's action when powered (Single return only)	0000: Not reversed (Hot wa 0001: Reversed (Heating wi		0000: Not reversed (Hot water mode whe powered)
58	Night setback is activated	0000: Zone 1 & 2 0001: Zone 1 only		0000: Zone1 & 2
59	Interval of Mixing Valve control	0000: 30 seconds 0001: 1 minute -	0030: 30 minutes	0002: 2 minutes
5A	P1 setting while in hot water supply mode	0000: While running HP onl 0001: P1 continues running		0000: While running HP only
5B	Boiler running setting	0000: Boiler and HP 0001: Boiler only with pump 0002: Heater 0003: Boiler only (Pump sto	pping)	0003: Boiler only
61	External input setting when using I/P 5, 6 (CN21)	0000: Starts as the circuit is Stops as the circuit is opene 0001: Starts / stops as the c pulse signal	0000: Closed: Starts Opened: Stops	
62	Activate/deactivate A02 failure detection	0000: Activate 0001: Deactivate	0000: Activate	
64	Continuously run or stop the P2 pump while cooling	0000: Continuously run P2 0001: Stop P2		0000: Continuous running
65	P1 pump setting when the thermostat is deactivated in the room temperature remote controller and room temperature thermostat settings	0000: Continuously run P1 0001: Stop P1 when the the	rmostat is OFF	0000: Continuous running
6E	TO diff temperature, when pump P1 stop at TO 20°C	0001: 1K	0005: 5K	0002: 2K
73	Hot water tank heater start time of heat-pump while operating	0000: 30 min passed	0003: 120 min passed	0003: 120 min passe
92	Upper room temperature limit when cooling	- 0000: 0°C	0055: 55°C	0029: 29°C
93	Lower room temperature limit when cooling	0000: 0°C -	0055: 55°C	0018: 18°C
94	Upper room temperature limit when heating	0000: 0°C -	0055: 55°C	0029: 29°C
95	Lower room temperature limit when heating	0000: 0°C -	0055: 55°C	0018: 18°C
96	Initial water temperature setting when controlling cooling by the room temperature remote controller and room temperature thermostat	0005: 5°C	0030: 30°C	0020: 20°C
9D	Initial water temperature setting when controlling heating by the room temperature remote controller and room temperature thermostat	0020: 20°C	0055: 55°C (401 / 601), 0065: 65°C (801 / 1101)	0040: 40°C
9E	TO temperature setting to stop the P1 pump during the middle period heating	0010: 10°C -	0030: 30°C	0020: 20°C
A0	P1 pump speed control changes the percentage duty of the PWM control	0000: 100%	0005: 50%	0000: 100%
A1	Outside air temperature T0 temperature	-0020: -20°C (401 / 601), -0030: -30°C (801 / 1101)	-0015: -15°C (401 / 601), -0020: -20°C (801 / 1101)	-0020: -20°C
A2	Zone2 temperature setting method	0000: Percentage (DN_31) 0001: Fixed value (DN_A3 -	A5)	0000: Percentage
A3	Set temperature A' with outside temperature of T0	0020: 20°C -	0055: 55°C (401 / 601), 0065: 65°C (801 / 1101)	0040: 40°C

\* DN\_11, 6B8, 6BA, 6BC are needed for PCB replacement or DN code reset procedure has been completed.

DN	ltem		Details	Factory default
A4	Set temperature B' with outside temperature of T1	0020: 20°C	<ul> <li>0055: 55°C (401 / 601),</li> <li>0065: 65°C (801 / 1101)</li> </ul>	0035: 35°C
A5	Set temperature E' with outside temperature of 20°C	0020: 20°C	<ul> <li>0055: 55°C (401 / 601),</li> <li>0065: 65°C (801 / 1101)</li> </ul>	0020: 20°C
AB	Group control	0000: TTW value of 0001: TTW value tr	f each Hydro Unit ansmitted from Master Unit	0000: each Hydro Unit
AC	The temperature increase during "Forced ON" mode (SG Ready control)	0000: 0K	- 0010: 10K	0000: 0K
B2	HP restart water temperature in A zone. (Valid only room temp control using 2nd remote controller)	0020: 20°C	- 0037: 37°C	0025: 25°C
B5	Initial water temperature setting method when controlling heating by the room temperature remote controller and room temperature thermostat		nperature by DN_9D ed temperature by Auto curve	0000: The fixed
B6	Setting the objects to control of I/P 7, 8	0001: I/P 7 TEMPO 0002: I/P 7 TEMPO 0003: I/P 7 Forcibly		0000: I/P 7 Emergency shutdown input, I/P 8 None
B8	Forcibly heater off at T0 ≥ A°C	0000: no restriction 0002: 15°C, •••, 000		0000: no restriction
B9	Backup heater energization temperature during defrosting.	Correction coefficie 0000: 0K, ••••, 0004:		0000: 0K
680	0 - 10 V input setting	0003: Capacity sett	ing of Heating / Cooling ing of Hot water supply ing of Heating / Cooling +	0000: Not use
681	0 - 10 V Hot water supply temperature setting	0000: Not use Al 0002: Al 2	0001: AI 1 0003: AI 3	0000: Not use Al
682	0 - 10 V Heating ZONE1 temperature setting	0000: Not use Al 0002: Al 2	0001: AI 1 0003: AI 3	0000: Not use Al
683	0 - 10 V Heating ZONE2 temperature setting	0000: Not use Al 0002: Al 2	0001: AI 1 0003: AI 3	0000: Not use Al
684	0 - 10 V Cooling temperature setting	0000: Not use Al 0002: Al 2	0001: AI 1 0003: AI 3	0000: Not use Al
685	0 - 10 V Hot water supply temperature upper limit	0040: 40°C	- 0080: 80°C	0065: 65°C
686	0 - 10 V Heating ZONE1 temperature upper limit	0020: 20°C	<ul> <li>0055: 55°C (401 / 601),</li> <li>0065: 65°C (801 / 1101)</li> </ul>	0055: 55°C
687	0 - 10 V Heating ZONE2 temperature upper limit	0020: 20°C	<ul> <li>0055: 55°C (401 / 601),</li> <li>0065: 65°C (801 / 1101)</li> </ul>	0055: 55°C
688	0 - 10 V Cooling temperature upper limit	0007: 7°C	- 0029: 29°C	0020: 20°C
689	0 - 10 V Hot water supply temperature setting resolution	0001: 1°C	- 0005: 5°C	0005: 5°C
68A	0 - 10 V Heating ZONE1 temperature setting resolution	0001: 1°C	- 0005: 5°C	0003: 3°C
68B	0 - 10 V Heating ZONE2 temperature setting resolution	0001: 1°C	- 0005: 5°C	0003: 3°C
68C	0 - 10 V Cooling temperature setting resolution	0001: 1°C	- 0005: 5°C	0001: 1°C
6A6	P1 pump speed control	0000: P1 pump fixe setting) 0001: P1 pump vari	0001: Variable speed	
6A7	Pump speed control correction	0000: 100% 0002: 75%	0001 :90% 0003: 50%	0000: 100%
6AC	Hot water supply mode operation cycle to prevent water temperature drop	0000: Invalid 0001: 1H	- 0050: 50H	0024: 24H

\* DN\_11, 6B8, 6BA, 6BC are needed for PCB replacement or DN code reset procedure has been completed.

DN	Item	Det	ails	Factory default
6B0	Boiler output enabled	0000: No	0001:Yes	0000: No
6B3	External room thermostat connected	0000: No	0001: Yes	0000: No
6B5	Synchronisation of pump P1 and P2	0000: Non-synchronous 0001: Synchronous		0001: Synchronous
6B8	Hot water supply is using	0000: Yes	0001: No	0000: Yes
6B9	ZONE1 operation is using	0000: Yes	0001: No	0000: Yes
6BA	ZONE2 operation is using	0000: No	0001: Yes	0000: No
6BC	Backup heater capacity	0000: 3 kW 0002: 9 kW	0001: 6 kW	Depend on type
6BD	Outdoor unit type setting	0000: 401 / 601 0002 - 0003: None	0001: 801 / 1101	Depend on type
6CA	Output1 item	0000: Alarm	0001: Compressor	0000: Alarm
6CB	Output4 item	0002: Defrost 0004: Release	0003: Boiler 0005: Backup heater	0001: Compressor
6CC	Output2 item	0004: Kelease 0006: Cylinder heater	0007: Heating	0002: Defrost
6CD	Output3 item	0008: Cooling	0009: Hot water supply	0003: Boiler
6CE	SG ready forced operation heater control	0000: Heater output allowed 0001: Heater output not allowed		0000: Heater output allowed
6D0	P1 pump stop or not using outside air temperature	0000: Continuous run 0001: Pump P1 stop when TO > 20°C (Available to change the temperature setting by DN 9E)		0000: Continuous run
6D1	Pump ON/OFF cycling (During long periods of system OFF)	0000 : None operation	0001 : Regular power	0001 : Regular power
6D2	Hydro unit backup heater energized Yes / No	0000: Energized	0001: Not energized	0000: Energized
6D3	Hot water cylinder heater energized Yes / No	0000: Energized	0001: Not energized	0000: Energized
6D4	External booster heater output enabled Yes / No	0000: Enabled	0001: Not enabled	0000: Enabled
6D6	Pump ON/OFF cycling (During long periods of system OFF) Pump ON cycle	0000 : 1day, 0006 : 7days,…,	0001 : 2days,, 0015 : 16days	0006 : 7days
6D7	Pump ON/OFF cycling (During long periods of system OFF) Pump ON time	0000 : 1min 0002 : 5min	0001 : 3min 0015 : 31min	0002 : 5min
6F1	Temperature difference for mixing valve opening value changing	0001: 1K 0003: 3K	0002: 2K	0002: 2K
6F2	Mixing valve maximum steps	0012: 12 step -	0060: 60 step	0060: 60 step
6FC	CDU Night Time Low Noise Operation	"Mode select for silent mode 0 = mode1 1 = mode2 2 = Do not use"		0000: mode1
6FD	Cooling Zone2 set temperature	Shift value from Zone1 set	temperature (K)	0010: 10K
		0000: 0K	- 0023: 23K	

\* DN\_11, 6B8, 6BA, 6BC are needed for PCB replacement or DN code reset procedure has been completed.

DI	Item	Details	Fist shipment
02	Temperature correction by the room temperature sensor (heating)	-10K - +10K: By 1K steps	-1: -1K correction
03	Temperature correction by the room temperature sensor (cooling)	-10K - +10K: By 1K steps	-1: -1K correction

#### Remote controller DN table

09	Night time low-noise mode	0: Invalid	1: Valid	0: Invalid
0A	Night time low-noise start time	0 - 23 (0:00 to 23:00)		22: 22:00
0B	Night time low-noise end time	0 - 23 (0:00 to 23:00)		06: 06:00
0C	Anti bacteria start time	0 - 23 (0:00 to 23:00)		22: 22:00
0D	Anti bacteria start cycle	1 - 10 (Every day to 10-c	lay cycle)	07: 7-day cycle
0E	Starting time of Night setback	0 - 23 (0:00 to 23:00)		22: 22:00
0F	Ending time of Night setback	0 - 23 (0:00 to 23:00)		06: 06:00
11	Remote controller Alarm Tone.	0: Alarm Tone OFF	1: Alarm Tone ON	1: Alarm Tone ON
12	Frost running period (days)	(0 days – 20 days)		00: No setting
13	Frost running period (hours)	(0 hours – 23 hours)		00: No setting
14	Start and End temperature	20 - 55 (20°C - 55°C)		00: No setting
15	Max temperature	20 - 55 (20°C - 55°C)		00: No setting
16	Continuation days for every step up to Max temperature	1 - 7 (1 day - 7 days)		00: No setting
17	Temperature difference for every step up to Max temperature	1 - 10 (1 K - 10 K)		00: No setting
18	Continuation days for every step down to End temperature	1 - 7 (1 day - 7 days)		00: No setting
19	Temperature difference for every step down to End temperature	1 - 10 (1 K - 10 K)		00: No setting
1A	Continuation days in Max temperature	1 - 50 (1 day - 50 days)		00: No setting
1B	Power consumption function is using	0000: No	0001: Yes	0001: Yes
1C	Language setting	0000: English 0002: French 0004: Spanish 0006: Dutch 0008: Czech 0010: Croatian 0012: Portuguese 0014: Danish	0001: Turkish 0003: German 0005: Italian 0007: Finnish 0009: Hungarian 0011: Slovenian 0013: Polish 0015: Swedish	0000: English
1D	Floor drying setting	0000: OFF	0001: ON	0000: OFF
1E	Temperature sensor using in room temperature control	0000: OFF	0001: ON	0000: OFF

\* 14-1A: for floor drying function

#### 2-3. How to reset hydro DN

#### (1) Procedure

- 1) Proceed the hydro DN setting screen. \* See 9-2-1. Hydro DN setting
- 2) Press the [ ] [ ] [ ] long time in DN setting screen, and select "YES".

#### NOTE

- After DN reset, it will take few minutes to back normal screen. First communication screen will continue for few minutes, but it is NOT trouble.
- After DN reset, it is necessary to confirm and set again some item below.

DN	Item		Details	Factory default
11	Water heat exchanger capacity	0010: 601	0015: 1101	Depend on type
6B8	Hot water supply is using	0000: Yes	0001: No	0000: Yes
6BA	ZONE2 operation is using	0000: No	0001: Yes	Depend on type
6BC	Backup heater capacity	0000: 3 kW 0002: 9 kW	0001: 6 kW	Depend on type

#### 2-4. How to reset remote controller DN

#### (1) Procedure

- 1) Proceed the remote controller DN setting screen. \* See 9-2-2. Remote controller DN setting
- 2) Press the [ ^ ] [ V ] [ ] long time in DN setting screen, and select "YES".


#### 3. Test run


- Even if the outside air temperature or water temperature is outside the setting value range, Heating, Cooling and Hot water supply operation become possible.
- Since the protection setting is disabled in the TEST mode, do not continue a test run longer than 10 minutes.


#### <Procedure>

Press the [ ] button and the [ ] button at same time for 4 seconds or longer on the top screen to display the "FIELD SETTING MENU".



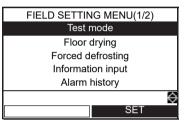

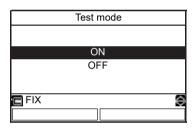

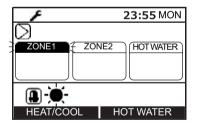

- 2 Press the [ ∧ ]/[ ∨ ] button to select "Test mode" on the FIELD SETTING MENU screen, then press the [ F2 ] button.
- **3** Press the [ ] button to select ON, then press the [ ] button. The *F* mark appears on the top screen.
- **4** Start the heating or cooling or Hot water operation on the top screen, then the selected mode mark is blinking during Test mode.
- The pump is activated in 30 seconds. If air is not released completely, the flow sensor value is activated to stop operation. Release air again according to the piping procedure. Little air entrainment is discharged from the purge valve.
- Check that the hydraulic pressure has become the predetermined pressure 0.1 to 0.2 MPa (1 to 2 bar). If the hydraulic pressure is insufficient, replenish water.
- · Heating operation starts. Check that the hydro unit starts heating.
- Press the [ [1]] button to select the Cooling operation, in a few second, the operation starts.
- Check that the hydro unit starts cooling and that the floor heating system is not cooled.
- Press the [ 🗊 ] button to stop the operation.
- Press the [ 2] button to start the Hot water supply operation.
- Check that there is no air entrainment.
- Check that hot water is present at the connection port of the hot water cylinder.
- Press the [ F2 ] button or [ () ON/OFF] button to stop the operation.


#### 4. Auto Curve Setting


- This function is available only for the header remote controller.
- Set DN for various operation modes with the remote controller.

#### <Procedure> Perform the following when no operation is in progress.

- **1** Press the [ ] button and the [ ] button at same time for 4 seconds or longer on the top screen to display the "FIELD SETTING MENU".
- 2 Press the [ ∧ ] / [ ∨ ] button to select "Hydro Unit DN" on the FIELD SETTING MENU screen, then press the [ (F2) ] button.
- **3** Press the [ F1 ] / [ F2 ] button to select DN number or Data, then press the [ ∧ ] / [ ∨ ] button to set the value.
- **4** Press the [ **1**] button. The set value is registered.




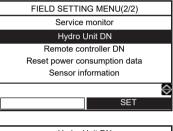

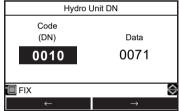

<ZONE1>

An operation starts at the set temperature of straight -line approximation for the following: water temperature A°C with the outside temperature T0°C, B°C with T1°C, C°C with T2°C, D°C with T3°C, and E°C with 20°C.

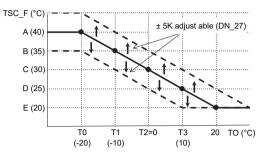


Related	DN		
DN	Setting item	Default	range
2C	Setting temperature A at T0	40	20 - 55 (65)* °C
2D	Setting temperature B at T1	35	20 - 55 (65)* °C
2E	Setting temperature C at T2 (= 0°C)	30	20 - 55 (65)* °C
2F	Setting temperature D at T3	25	20 - 55 (65)* °C
30	Setting temperature E at 20°C	20	20 - 55 (65)* °C
A1	Outside temperature T0	-20	-3020°C
29	Outside temperature T1	-10	-15 - 0°C
2B	Outside temperature T3	10	0 - 15°C
27	Set temperature shift with heating set to auto	0	-5 to 5K
		* (	): 801, 1101, 1401


<ZONE2>

• Set temperature of the ZONE2 can be selected from two methods (DN A2). One is a percentage of ZONE1, the other is a fixed value.  $DN_A2 = "0"$ : Percentage method that is set by  $DN_31$ .  $DN_A2 = "1"$ : Fixed value method that is set by  $DN_3$ , A4 and A5.



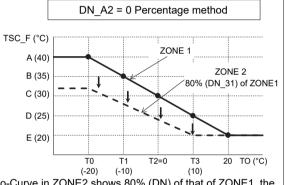

However, it is automatically controlled the set temperature of ZONE1 to be the ZONE2 or more.

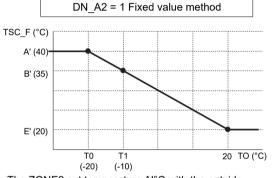

Auto-Curve in ZONE2 shows 80% (DN) of that of ZONE1, the water temperature setting does not fall below 20°C.


The ZONE2 set temperature A'°C with the outside temperature T0°C, B'°C with T1°C, E'°C with 20°C.

Related DN

DN	Setting item	Default	range
A2	The choice of how to set ZONE2	0	0 or 1
A3	Setting temperature A' at T0	40	20 - 55 (65)* °C
A4	Setting temperature B' at T1	35	20 - 55 (65)* °C
A5	Setting temperature E' at 20 °C	20	20 - 55 (65)* °C
31	Auto-Curve ratio of ZONE2	80	0 - 100%
		* (	): 801, 1101, 1401

#### Auto-Curve temperature shift


- This function is available only for the header remote controller.
- The set temperature can be shifted in the range of ±5K of the current setting.
- **1** Press the [ ∧ ] / [ ∨ ] button to select "Auto mode" on the MENU screen.

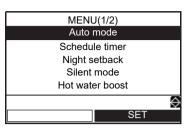

2 Press the [ []] button for 4 seconds or longer to enter the setting mode. The DN code setting screen appears.


DN\_27: Shifted temperature (Range: -5 - +5, Default: 0)


- **3** Press the [ F₂ ] button to select Data value, then press the [ ∧ ] / [ ∨ ] button to adjust the temperature between -5K to +5 K.
- **4** Press the [ ] button. The set temperature is registered.

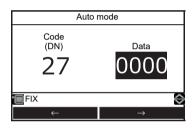


#### 5. Clock Setting


- Setting for the clock (date, month, year, time)
- **1** Press the [ ∧ ] / [ ∨ ] button to select "Setting" on the MENU screen, then press the [ 🖂 ] button.
- 2 Press the [ ∧ ] / [ ∨ ] button to select "Initial setting" on the Setting screen, then press th [ F2 ] button.
- **3** Press the [ ∧ ] / [ ∨ ] button to select "Clock" on the Initial setting screen, then press the [ [ ] button.

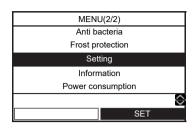

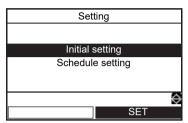

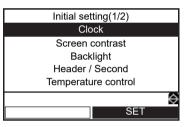

- **4** Press the  $[r_1] / [r_2]$  button to select the date, month, year, and, time.
- 5 Press the [ ∧ ] / [ ∨ ] button to set the value, then press the [ □] button.
  - The clock display appears on the top screen.
  - The clock display blinks if the clock setting has been reset due to power failure or other cause.

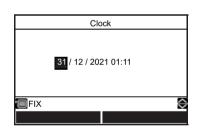

#### 6. Scheduled Operation Setting


#### 6-1. How to set scheduled operation


- This function is available only for the header remote controller.
- Schedule setting makes the following modes to be flexibly set: hot water supply, heating, cooling, hot water supply and heating, hot water supply and cooling, and stop, and set temperature.
- · Set the unit clock and the schedule condition setting before schedule timer setting.

#### <Preparation>

Set the remote controller time at first.


- **1** Press the [ ∧ ] / [ ∨ ] button to select "Setting" on the MENU screen, then press the [ F2 ] button.
- 2 Press the [ ∧ ] / [ ∨ ] button to select "Schedule setting" on the setting screen, then press th [ F2 ] button.

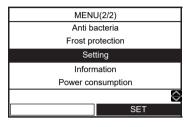

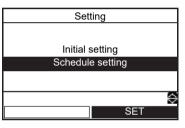

#### **Condition setting**

- Up to 6 different running patterns per day can be programmed.
- **1** Press the [ ∧ ] / [ ∨ ] button to select "Condition setting" on the Schedule setting screen, then press the [ [F2] ] button.

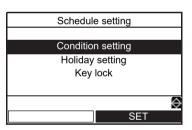


	Condition setting(1/2)										
ALL MON TUE WED THU FRI SAT SUN											
Mode	Z1	Z2	НW	Start	End						
				:	:						
				:	:						
				:	:						
	PΥ		QR	RESET							
	DAY	<i>′</i>		SE	ΞT						

	Condition setting(1/2)										
ALL MO	ALL MON TUE WED THU FRI SAT SUN										
Mode	Z1	Z2	HW	Start	End						
HEAT	55	45		08:00	22:00						
COOL	25			23:00	:						
HW			65	18:00	19:00						
FIX		RESET									
	↓			$\rightarrow$							

- 2 Press the [ 🗊 ] button to select the day, then press the [ 🖻 ] button to input running pattern.
- **3** Press [ [-1] / [ [-2] ] button to select the change item, then press the [  $\land$  ] / [  $\checkmark$  ] button.

#### 4 Press the [ ] button.

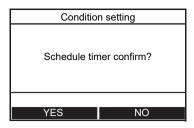

#### **5** Press the [ **F**] ] button to Fix.

Mode : Operation mode (HEAT, COOL, HW (Hot water))

- Z1 : ZONE1 setting temperature
- Z2 : ZONE2 setting temperature

HW : Hot water supply operation setting temperature

- Start : Operation start time (0:00 23:59)
- End : Operation end time (0:00 24:00, -- : --)
- "-- : --" means the operation continues.

If End time is set earlier than Start time, an failure is displayed.


#### To set up ranging over a day

There are two methods.

- 1.If "24:00" is set to "END" and "00:00" is set to "START" next day, the previous operation status will be continued. And set the time you want to stop to "END".
- 2.If "---" is set to "END", the previous operation status will be continued next day. And set the time you want to stop to "END". Any "START" time is sufficient if it is earlier than "END" time.

In the case of heating operation from 21:00 of Monday night to 3:00 of Tuesday morning.

Example of set up (1)

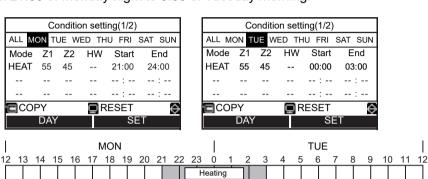


#### Example of set up (2)

	Condition setting(1/2)					]		Сс	onditio	on sett	ing(1/2)					
ALL MO	ON TUE	E WE	ED TH	IU FRI	SAT SUN		ALL M	DN T	UE W	ED TH	IU FRI	SAT S	UN			
Mode	Z1	Z2	HW	Start	End	1	Mode	Z1	Z2	HW	Start	Enc	k			
HEAT	55	45		21:00	:		HEAT	55	45		02:30	03:0	0	*1		
				:	:						:	: -				
				:	:						:	: -				
COF	PY		۹	RESET	÷.	÷	COF	PY		QR	ESET		÷			
	DAY			SE	ΞT			DAY	·		SE	ΞT				
I			Ν	10N							TUE					
12 13	14 15	16	17	18 19	20 21 2	22 23	0 1	2	3	4 5	6	78	9	10	11	12
							leating									

#### Example of set up (3) (ALL DAY)

Co	onditic	n sett	ing(1/2)												
ON TI	JE W	ED TH	IU FRI :	SAT SUN											
Z1	Z2	HW	Start	End											
55	45		21:00	24:00											
55	45		00:00	03:00											
			:	:											
		QR	RESET	Ŷ											
DAY			SE	Т											
14 1	5 16	17	18 19	20 21 2		I 0 1	2	3	4	5	6	7	8	9	10
	ON TI Z1 55 55 	ON TUE W Z1 Z2 55 45	ON TUE WED TH Z1 Z2 HW 55 45 55 45  F	Z1         Z2         HW         Start           55         45          21:00           55         45          00:00	ON TUE         WED         THU         FRI         SAT         SUN           Z1         Z2         HW         Start         End           55         45          21:00         24:00           55         45          00:00         03:00                  E         RESET         E         E	ON TUE         WED         THU         FRI         SAT         SUN           Z1         Z2         HW         Start         End           55         45          21:00         24:00           55         45          00:00         03:00                  ■ RESET         ●         ■         ■	ON         TUE         WED         THU         FRI         SAT         SUN           Z1         Z2         HW         Start         End           55         45          21:00         24:00           55         45          00:00         03:00                  ■ RESET         ●         ●         ●	ON         TUE         WED         THU         FRI         SAT         SUN           Z1         Z2         HW         Start         End           55         45          21:00         24:00           55         45          00:00         03:00                  ■ RESET         ●	ON TUE         WED         THU         FRI         SAT         SUN           Z1         Z2         HW         Start         End           55         45          21:00         24:00           55         45          00:00         03:00                  ERSET         E         E	ON TUE       WED       THU       FRI       SAT       SUN         Z1       Z2       HW       Start       End         55       45        21:00       24:00         55       45        00:00       03:00                Image: RESET       Image: Reset       Image: Reset       Image: Reset	ON       TUE       WED       THU       FRI       SAT       SUN         Z1       Z2       HW       Start       End         55       45        21:00       24:00         55       45        00:00       03:00                Image: RESET       Image: Reset       Image: Reset       Image: Reset	ON TUE         WED         THU         FRI         SAT         SUN           Z1         Z2         HW         Start         End           55         45          21:00         24:00           55         45          00:00         03:00                  ERSET         E	ON TUE         WED         THU         FRI         SAT         SUN           Z1         Z2         HW         Start         End           55         45          21:00         24:00           55         45          00:00         03:00                  ERSET         S	ON TUE       WED       THU       FRI       SAT       SUN         Z1       Z2       HW       Start       End         55       45        21:00       24:00         55       45        00:00       03:00                Image: RESET       Image: Reset       Image: Reset       Image: Reset	ON       TUE       WED       THU       FRI       SAT       SUN         Z1       Z2       HW       Start       End         55       45        21:00       24:00         55       45        00:00       03:00                RESET       Set       Set       Set

#### Example of set up (4) (ALL DAY)

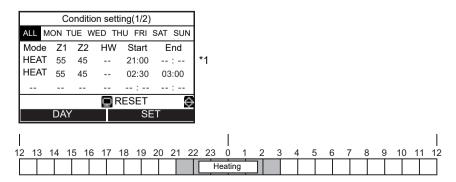

\*1: "START" time is permissible 00:00 - 02:59 in this example.

To copy the settings of the previous day

- **1** Press the [F] ] button to select the day, then press the [F] ] button to copy the settings of the previous day.
- **2** Press the [ ] button, then the contents of the setting is displayed.

• If the [ ] button is pressed in the state where "MON" is selected, the contents of the setting of "SUN" is copied.

To reset the settings for each day.

2


**1** Press the [ ] button to select the day, then press the [ ] button to reset the settings of the day.

Press the [F] ] button, then the contents of the setting is cleared.


Mode	Z1	Z2	HW	Start	End			
HEAT	55	45		08:00	22:00			
COOL	25			23:00	:			
НW			65	18:00	19:00			
	Ϋ́		QR	ESET	$\diamond$			
	DAY		SET					

Condition setting(1/2)

ALL MON TUE WED THU FRI SAT SUN

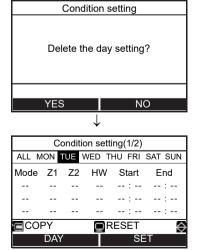

	Condition setting(1/2)											
ALL N	ALL MON TUE WED THU FRI SAT SUN											
Mode	Z1	Z2	HW	Start	End							
				:	:							
				:	:							
				:	:							
CO	۶Y		QR	🗐 RESET 🛛 👸								
	DAY	·		SE	Т							

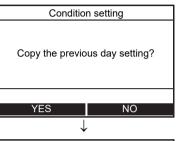

	Condition setting(1/2)										
ALL MO	DN T	UE W	ED TH	U FRI S	SAT SUN						
Mode	Z1	Z2	HW	Start	End						
HEAT	55	45		08:00	22:00						
COOL	25			23:00	:						
HW			65	18:00	19:00						
<b>E</b> COF	νY		QR	RESET							
	DAY			SET							

#### Holiday setting

- Set the days of the week when the schedule timer not used.
- **1** Press the [ ∧ ] / [ ∨ ] button to select "Holiday setting" on the Schedule setting screen, then press the [ F2 ] button.

## Schedule setting Condition setting Holiday setting Key lock


- 2 Press the [F] ] button to select the day, then press the [F] ] button to set.
  - •: Schedule timer is not used.

		LL-R-I		41								
	Holiday setting											
MON	TUE	WED	THU	FRI	SAT	SUN						
					•	•						
EF	🖻 FIX											
	DA	ſ		5	SET							

#### **3** Press the [ ] button to Fix.

#### Key lock

- Select whether to "LOCK" / "UNLOCK" for "ON/OFF", "Temp.", "Mode" during the schedule timer.
- 1 Press the [ ∧ ] / [ ∨ ] button to select "Key lock" on the Schedule setting screen, then press the [ F2 ] button.
- Press the [ F] ] button to select object, then press the [ F2 ] button to select LOCK or UNLOCK.
   ●: LOCK

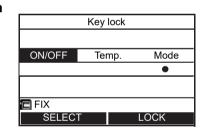



#### **3** Press the [ **III** ] button to Fix.

- When "LOCK" is selected, the key cannot be used during Key lock and schedule timer.
- The factory default is "UNLOCK".

#### To enable the Schedule timer function

1 Press the [ ∧ ] / [ ∨ ] button to select "Schedule timer" on the MENU screen, then press the [ F2 ] button.

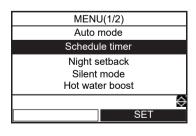


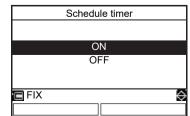



2 Press the [ ▲ ] button to select "ON" on the Schedule timer screen, then press the [ ■ ] button. The ④ mark appears on the top screen.

# 7. Frost protection Setting

- This function performs operation with the minimum capacity (target water temperature:15°C) to prevent pipes from freezing in case the unit is not used for a long period due to absence.
- Cancel schedule timer to start Frost protection operation. When Frost protection is operated with schedule timer on, it may stop during its operation.
- The minimum capacity can be changed, ask the installation company to make the required changes to the settings.
- This function takes precedence over the Night setback operation that is set separately.
- Start the heating operation before making the setting. It may not be able to go to the setting screen immediately after start. In that case, select "Frost protection" again after tens of seconds.
- 1 Press the [ ∧ ] / [ ∨ ] button to select "Frost protection" on the MENU screen, then press the [ F2 ] button.
- **3** The temperature indication change to "F" and (\*) mark appears on the top screen.
  - When the set period has passed, the Frost protection operation ends automatically.

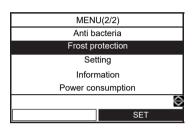


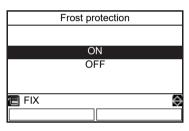

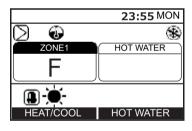

#### <How to set Frost protection operation end time>


- This function is available only for the header remote controller.
- 1 Press the [ ∧ ] / [ ∨ ] button to select "Frost protection" on the MENU screen.

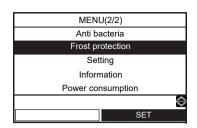

**2** Press the [F] ] button for 4 seconds or longer to enter the setting mode. The DN code setting screen appears.


```
DN_12: End days (Range: 0-20, Default: 0)
13: End times (Range: 0-23, Default: 0)
ex)
Code No. 12: 05
13: 13 = 5 days 13 hours
```

- **3** Press the [ F₁ ] / [ F₂ ] button to select DN or Data, then press the [ ∧ ] / [ ∨ ] button to set the value.
- **4** Press the [ ] button. The set value is registered.

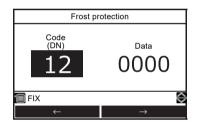

# 8. NIGHT Operation Setting


- This function is used for energy saving during specified time zone (sleeping hours, etc.).
- For night time hours (sleeping hours, etc.), this function shifts the set temperature of heating or cooling by 5K.
- **1** Press the [ ∧ ] / [ ∨ ] button to select an "Night setback" on the MENU screen, then press the [ <sub>F2</sub> ] button.
- **2** Press the [ ] button to select "ON" on the Night setback screen, then press the [ ] button.
- MENU(1/2) Auto mode Schedule timer Night setback Silent mode Hot water boost

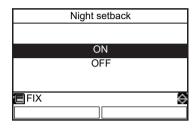

**3** Start the heating or cooling operation, then the **(**) mark appears on the top screen.

#### <How to set NIGHT operation start and end time>

- · This function is available only for the header remote controller.
- 1 Press the [ ∧ ] / [ ∨ ] button to select an "Night setback" on the MENU screen.

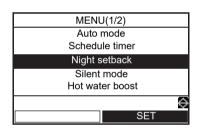


2 Press the [F1] button for 4 seconds or longer to enter the setting mode. The DN code setting screen appears.
DN 05: Stort time (Denne: 0.22, Default: 22)

DN\_0E: Start time (Range: 0-23, Default: 22) 0F: End time (Range: 0-23, Default: 06)

3 Press the [ □] / [ □] button to select DN or Data, then press the [ ∧ ] / [ ∨ ] button to set the value.

The same value cannot be set to 0E and 0F.

**4** Press the [ ] button. The set time is registered.

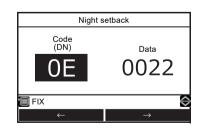

# 9. Anti bacteria Setting

- This setting regularly raises the hot water cylinder temperature to prevent bacteria from growing.
- The Anti bacteria operation is performed to maintain the temperature (60°C) for the period (30 minutes) when the preset start time (22:00) comes according to the preset cycle (7 days).
- The maintain temperature and the period can be changed, ask the installation company to make the required changes to the settings.
- 1 Press the [ ∧ ] / [ ∨ ] button to select "Anti bacteria" on the MENU screen, then press the [ F2] ] button.
- **2** Press the [ ] button to select "ON" on the Anti bacteria screen, then press the [ ] button.
- **3** Start the hot water operation, then the 🛐 mark appears on the top screen.

# <How to set Anti bacteria temperature and holding time>


In DN\_0A or 0B, the set temperature and holding time can be changed. DN\_0A: Set temperature change range 60 to 70°C (65°C: default) DN\_0B: Holding time change range 0 to 250 minutes (30 minutes: default)


# <How to set Anti bacteria start time and cycle>


- This function is available only for the header remote controller.
- 1 Press the [ ∧ ] / [ ∨ ] button to select "Anti bacteria" on the MENU screen.
- **2** Press the [F] ] button for 4 seconds or longer to enter the setting mode. The DN code setting screen appears.

DN\_0C: Start time (Range: 0-23, Default: 22) 0D: cycle (Range: 1-10, Default: 07)

- **3** Press the [ □ ] / [ □ ] button to select DN or Data, then press the [ ∧ ] / [ ∨ ] button to set the value.
- **4** Press the [ **1**] button. The set value is registered.

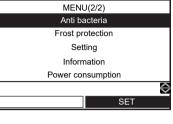


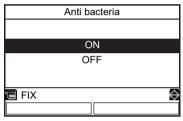

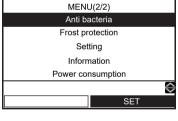

# 10. Hot water boost Setting

- This function is used when temporarily giving priority to the hot water supply operation. The hot water supply operation is performed in preference to other operations with a target of the preset time (60 minutes) or the preset temperature (60°C). Use this function when hot water is not used for a long time or before using a large amount of hot water.
- The preset time and temperature settings can be changed to values with in a range of 30 to 180 minutes and 40 to 80°C. Ask the installation company to make the required changes to the settings.
- Start the hot water operation before making the setting. It may not be able to go to the setting screen immediately after start. In that case, select "Hot water boost" again after tens of seconds.
- Press the [ ∧ ] / [ ∨ ] button to select "Hot water boost" on the MENU screen, then press the [ [F2] ] button.

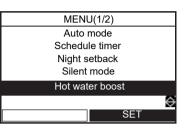

- st Hot water boost the S OFF E FIX
- 2 Press the [ ] button to select "ON" on the Hot water boost screen, then press the [ ] button. The mark appears on the top screen.
  When the set time period has passed or the water temperature has
  - When the set time period has passed or the water temperature has reached the set temperature, the Hot water boost operation ends automatically.


Hot water boost operation with the heat pump and heater ends when the water temperature reaches 60°C; however, the normal hot water supply operation automatically starts after 60 minutes even if the temperature is not as high as 65°C.


#### <How to set Hot water boost operation time and temperature>

In DN\_08 or 09, the operation time and set temperature can be changed. DN\_08: Operation time change range 30 to 120 minutes (60 minutes: default) DN\_09: Set temperature change range 40 to 65°C (65°C: default)

# 11. Night time Low-noise Setting

- This function is available only for the header remote controller.
- This setting is used to reduce noise output, from the outdoor unit, during night time for neighbors. Night time lownoise operates with lower operation frequency and fan tap than normal operation only for the set time period.
- 1 Press the [ ∧ ] / [ ∨ ] button to select "Silent mode" on the MENU screen, then press the [ [F2] ] button.
- **2** Press the [ ] button to select "ON" on the Silent mode screen, then press the [ ] button.

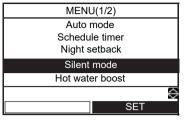


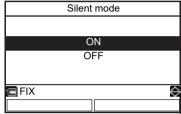

**3** Start the heating, cooling or hot water operation. The **(a)** mark appears on the top screen during the set-up time zone.

<How to enable, set start time and end time of night time low-noise>

- This function is available only for the header remote controller.
- 1 Press the [ ∧ ] / [ ∨ ] button to select "Silent mode" on the MENU screen.

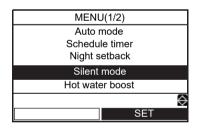


Press the [F] ] button for 4 seconds or longer to enter the setting mode. The DN code setting screen appears.
 DN 0A: Start time (Range: 0-23, Default: 22)

0B: End time (Range: 0-23, Default: 06)

**3** Press the [ □] / [ □] button to select DN or Data, then press the [ ∧ ] / [ ∨ ] button to set the value.

The same value cannot be set to 0A and 0B.

**4** Press the [ **1**] button. The set time is registered.

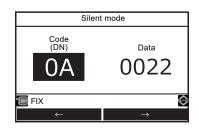

# 12. Forced Defrosting Setting

- This function is available only for the header remote controller.
- This function can active the forced defrosting mode for the outdoor unit.
- Press the [ ] button and the [ ] button at same time for 4 seconds or longer on the top screen to display the "FIELD SETTING MENU".
- 2 Press the [ ∧ ] / [ ∨ ] button to select "Forced defrosting" on the FIELD SETTING MENU screen, then press the [ <sub>F2</sub> ] button.


#### 


# **4** Start the heating operation on the top screen.

# (Operation)

- Press the F1 button.
- Set the operation to the heating mode.
- After a while, forced defrosting signals are transmitted to the outdoor unit, and the unit starts defrosting. (Forced defrosting lasts for up to 10 minutes.)
- After the defrosting, the heating operation starts.
- To perform defrosting again, start with **1** above. (Performing the forced defrosting once cancels the forced defrosting setting above described.)



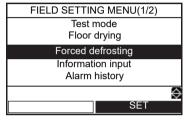

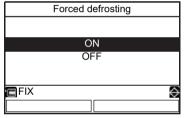

# 13. Display Function of Set Temperature and Other Settings

- The sensor sensing temperature is displayed on the remote controller.
- This function allows you to make sure whether the sensor is installed properly.

# ▼ Sensor temperature display calling <Procedure>


2

**1** Press the [ ] button and the [ ] button at same time for 4 seconds or longer on the top screen to display the "FIELD SETTING MENU".

Press the [ ] / [ ] button to select "Service monitor" on the

FIELD SETTING MENU screen, then press the [ 12] button.



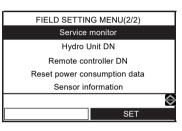

**3** Press the [ F] ] button to select the unit, then press the [ F2 ] button to display the status.

Service monitor						
1 - 1	1 - 4	1 - 7				
1 - 2	1 - 5	1 - 8				
1 - 3	1 - 6					
UNIT		SET				

Service monitor					
Code	0024				
RETURN	÷				

### 187

	Item code	Data name	Unit
	00	Target temperature for hot water supply	°C
	01	Target water temperature for Zone1	°C
	02	Target water temperature for Zone2	°C
	03	Remote controller sensor temperature	°C
m	04	Condensed temperature (TC)	°C
data	06	Water inlet temperature (TWI)	°C
	07	Water outlet temperature (TWO)	°C
Hydro unit	08	Water heater outlet temperature (THO)	°C
ydr	09	Floor inlet temperature (TFI)	°C
Ť	0A	Hot water cylinder temperature (TTW)	°C
	0B	Mixing valve position	step
	0E	Low pressure (Ps) × 1/10	kPa
	0F	Hydro soft Ver.	-
	10	Control temperature (Hot water cylinder)	°C
	11	Control temperature (Zone1)	°C
	12	Control temperature (Zone2)	°C

	Item code	Data name	Unit			
	60	Heat exchange temperature (TE)	°C °C			
ŋ	61	Outside air temperature (TO)				
data	62	Discharge temperature (TD)	°C			
unit	63	Suction temperature (TS)	°C			
l n	65	Heat sink temperature (THS)	°C			
Outdoor	6A	Current × 10				
Out	6D	Heat exchanger coil temperature (TL)				
	70	Compressor operation Hz	Hz			
	72	Number of revolutions of outdoor fan (lower or 1 fan model)				
	73 Number of revolutions of outdoor fan (upper)		rpm			
	74	Outdoor PMV position × 1/10	pls			
	/4		pis			

	Item code	Data name				
- m	F0	Micro computer energized accumulation time × 1/100				
data	F1	Hot water compressor ON accumulation time × 1/100				
l e	F2 Cooling compressor ON accumulation time × 1/100					
Service	F3 Heating compressor ON accumulation time × 1/100		h			
s	F4	Built-in circulation pump operation accumulation time × 1/100	h			
	F5	Hot water cylinder heater operation accumulation time × 1/100	h			
	F6	Backup heater operation accumulation time × 1/100	h			
	F7	Booster heater operation accumulation time × 1/100	h			

• Some sensors (temperature / pressure) or fan are not displayed, because not connected.

# MENU".

14. Failure History Calling Function

<Procedure>

1

2 Press the  $[ \land ]/[ \lor ]$  button to select "Alarm history" on the FIELD SETTING MENU screen, then press the [ 2] button.

• List of latest 10 alarm data: failure information of check code, date and time is displayed.


To reset the alarm history

1 Press the [ 🔳 ] button to reset the alarm history.

**2** Press the [ [-] ] button, then all alarm data is cleared.

# NOTE


If the current failure is the same as the one occurred last time before deleted, the history may not record the current failure.

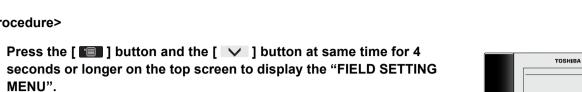

Ð

Ξ

5

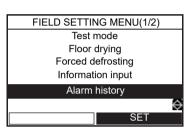

F1


~

 $\checkmark$ 

F2

Ģ




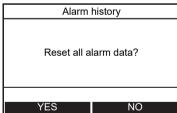

# 15. Floor drying

- This function is available only for the header remote controller.
- This function is used for drying concrete etc.
- Service personnel must operate the unit after setting the related DN code.
- Operation is not started unless All the related DN codes are set.
- Refer to the following for the settings of the related items. Please setup on the responsibility for an installer. An unsuitable setup may cause a crack of concrete etc.
- When the operation starts, the unit operates as follows.
- **1** Press the [ ■] button and the [ ∨ ] button at same time for 4 seconds or longer on the top screen to display the "FIELD SETTING MENU".



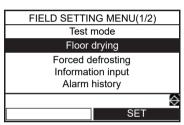

- 2 Press the [ ∧ ] / [ ∨ ] button to select "Floor drying" on the FIELD SETTING MENU, then press the [ 🗐 ] button for 4 seconds or longer.
  - DN\_14 setting start and End temperature [20-55°C]
  - DN\_15 setting Max temperature [20-55°C]


DN\_16 continuation days for every step up to Max temperature [1-7 days]

DN\_17 temperature difference for every step up to Max temperature [1-10 K]


DN 18 continuation days for every step down to End temperature [1-7 days] DN 19 temperature difference for every step down to End temperature [1-10 K]

DN\_1A Continuation days in Max temperature [1-50 days]

setting temperature

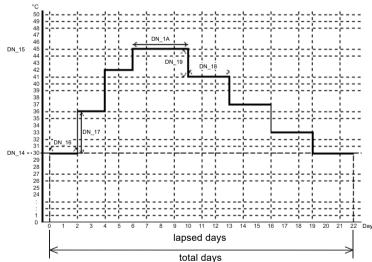

3 Press the [ F1 ] / [ F2 ] button to select DN or Data, then press the
[ ∧ ] / [ ∨ ] button to set the value.

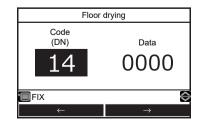



**4** Press the [ **1**] button. The set value is registered.


To start the operation

- Press the [ ] button and the [ ] button at same time for 4 seconds or longer on the top screen to display the "FIELD SETTING MENU".
- 2 Press the [ ∧ ] / [ ∨ ] button to select "Floor drying" on the FIELD SETTING MENU, then press the [ F2 ] button.
- - Check the total days for Floor drying operation, then press [ 🗊 ] button. The 🖋 mark and ④ mark appears on the Top screen.
- 4 Start the heating operation on the top screen.
  - Then ZONE1 mark blinks during Floor drying operation and lapsed days are displayed.
- If some abnormalities occur during Floor drying operation, the System stops and Alarm history screen is displayed.
- After heating operation is stopped by operating the remote controller during Floor drying operation, if heating operation is again started within 30 minutes, Floor drying operation is started from the time of stopping.



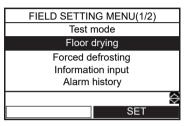


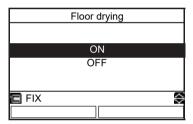


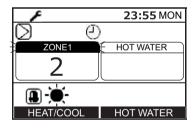


## 16. Power consumption

- Shows latest power consumption.
- This function is available only for the header remote controller.
- **1** Press the [ ∧ ] / [ ∨ ] button to select "Power consumption" on the MENU screen, then press the [ F2] ] button.
- $\label{eq:2} \textbf{Press the [} \textbf{F1} \textbf{] / [} \textbf{F2} \textbf{] button to change display pattern.}$

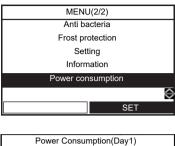

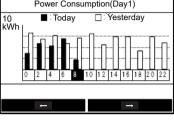


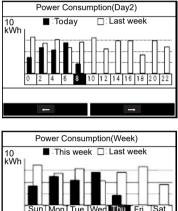

## 17. Reset power consumption data

- This function is available only for the header remote controller.
- **1** Press the [ ] button and the [ ] button at same time for 4 seconds or longer on the top screen to display the "FIELD SETTING MENU".
- 2 Press the [ ∧ ] / [ ∨ ] button to select "Reset power consumption data" on the FIELD SETTING MENU, then press the [ [F2] ] button.
- $\textbf{3} \quad \textbf{Press the [} \textbf{ [r] ] button, then power consumption data is cleared.}$



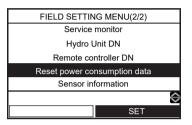



Reset power consumption data						
Do you want t	o reset data?					
YES	NO					

# 18. Sensor information

- Shows the value of sensor.
- Press the [ ] button and the [ ] button at same time for 4 seconds or longer on the top screen to display the "FIELD SETTING MENU".
- 2 Press the [ ∧ ] / [ ∨ ] button to select "Sensor information" on the FIELD SETTING MENU, then press the [ F2 ] button.



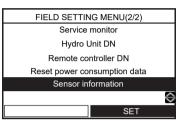

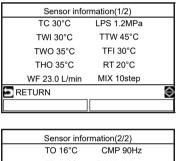

0011001 111101		
TO 16°C	CMP 90Hz	
TD 80°C	FAN1 600rpm	
TE 12°C	FAN2 600rpm	
TS 15°C	PMV 250pls	
CT 15.0A	HPS 4.0MPa	
E RETURN		$\ominus$

# **3** Select display number.

- Display 1 is Hydro Unit sensor
- Display 2 is Outdoor Unit sensor

# **Outdoor unit**

# 19. Outdoor Unit Setting

## 19-1. Refrigerant recovery control

Although HFC refrigerant is "Ozone depletion potential = 0", emission control is applied to it as a greenhouse effect gas.


This model has a switch for the outdoor unit to perform an environment-friendly refrigerant recovery operation (pump down) when the model is replaced or discarded.

### [How to operate]

#### **1** Remove the water in the hydro unit.

(With the water remained in the hydro unit, performing refrigerant recovery may freeze the water and burst the unit.) \*1

2 Confirm the LED display of the outdoor unit shows the initial state. If not then please return it to the initial state (\*2). Push and hold down SW01 for at least 5 seconds. D804 will start slowly flashing. Push SW01 several times until the LED display becomes as follows. Push SW02, then D805 will start flashing. Push and hold down SW02 for at least 5 seconds. D804 will start slow flashing and D805 will change to on. The air to water heat pump enters the forced cooling mode.

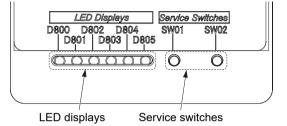

D800	D801	D802	D803	D804
0			•	$\bigcirc$

●: Off ◯: Light ⊚: Flash (5 times/sec)

**3** After 3 minutes has passed, close the liquid-side valve.

### **4** After the refrigerant recovery is completed, close the gas-side valve.

- **5** Press and hold down SW01 and SW02 at the same time for at least 5 seconds to stop operation.
- \*1: If can not remove the water

Operate the circulation pump, to prevent freezing.

1. Turn off the power. (hydro and outdoor unit)

2.Set DIP\_SW705\_3 "ON" on the hydro control board.

3. Turn on the power. (hydro and outdoor unit)

4.Rotate the rotary SW700 to position "1" and press tactile switch SW703 for 5 sec, or longer.

5.Rotating the rotary SW700 to position "F".

6.If you finish refrigerant recovery operation, set DIP\_SW705\_3 "OFF".

\*2: Hold down the SW01 and SW02 simultaneously for at least 5 seconds.

# **19-2. Service support functions (LED indication, Switch operation method)** The following settings are available with switches.

#### (1) Overview

Using 2 push-button switches (SW01, SW02) can make settings available and confirm operations.

#### For operation

Part number Specification		Operation details
SW01	Press button switch	This switch switches the indications of LED (D800 to D804) on the outdoor control board.
SW02	Press button switch	This switch enables users to perform a special operation for maintenance and inspection.

#### For display

Part number	Specification	Operation details			
	Yellow LED	Abnormality indication			
D800 to D804		The lit status of any of D800 to D804 indicates that the outdoor control unit detects an abnormality.			
	Green LED	Energization indication			
D805		This LED lights when the outdoor unit is energized.			
		During a special operation this LED flashes.			

Note: All the LEDs have no colour when off.

#### (2) LED indication switching

(2) -1. Abnormality indication

▼ HWT-401HW-E, HWT-601HW-E, HWT-801H(R)W-E, HWT-1101H(R)W-E HWT-1401H(R)-E, HWT-801H8(R)W-E, HWT-1101H8(R)W-E, HWT-1401H8(R)W-E

## **Diagnostic Procedure for Each Check Code (Outdoor Unit)**

- 1) This section describes the diagnostic method for each check code displayed on the wired remote controller.
- 2) In some cases, a check code indicates multiple symptoms.
- In this case, confirm the LED display of the outdoor unit to narrow the contents to be confirmed.
- 3) The check code on the remote controller is displayed only when the same trouble occurred continuously by multiple times while the LED display of the outdoor unit displays even an trouble which occurred once. Therefore the display on the remote controller may differ from that of LED.

# How to check the LED display on the outdoor PC board

# [Service switch operation]

# Currently occurring trouble indication

If any of D800 to D804 is rapidly flashing, it indicates currently occurring trouble. If any of D800 to D804 is slowly flashing or D805 is flashing then press and hold down SW01 and SW02 at the same time for at least 5 seconds. Currently occurring trouble will be indicated.

D800 (YEL)	D801 (YEL)	D802 (YEL)	D803 (YEL)	D804 (YEL)	D805 (GRN)	
					0	No trouble
O	•	•	•	•		Trouble detected (Example. Discharge temp. sensor trouble) (Refer to (2) -1-1.Current trouble indication)

●: Off ⊖: Light ⊚: Flash (5 times/sec)

### Latest trouble indication

- The following operation results in the latest trouble being indicated. It is retained in the memory and hence can be confirmed even when the power supply has been turned off.
  - 1) Confirm D800 to D804 are off (or rapidly flashing) and that D805 is lit up. If D800 to D804 are slowly flashing or D805 is flashing then push and hold down SW01 and SW02 at the same time for at least 5 seconds. D800 to D804 will turn off (or be rapidly flashing) and D805 will change to on.
  - 2) Push SW01 several times until reaching the LED indication (D800 to D805) of 'Latest (including current) trouble indication'.
  - 3) Push SW02. The latest trouble will be indicated.
  - 4) Confirm to carry out step 1) to set the LEDs to the initial state (current occurring trouble) when finished and then exit.

Latest (including current) trouble indication

D800 (YEL)	D801 (YEL)	D802 (YEL)	D803 (YEL)	D804 (YEL)	D805 (GRN)	
0	•	•	•	•	0	Trouble detected (Example. Discharge temp. sensor trouble) (Refer to (2) -1-2.Latest (including current) trouble indication)

•: Off  $\bigcirc$ : Light  $\bigcirc$ : Flash (5 times/sec)

# (2) -1-1.Current trouble indication

	ndicati		1			Name of trouble	Wired remote
D800	D801	D802	D803	D804	D805		control trouble code
					0	Normal	
0					0	Discharge temp. sensor (TD) trouble	F04
	$\odot$				0	Heat exchanger temp. sensor (TE) trouble	F06
$\bigcirc$	$\odot$				0	Heat exchanger temp. sensor (TL) trouble	F07
		$\bigcirc$			0	Outside temp. sensor (TO) trouble	F08
$\bigcirc$		$\bigcirc$			0	Suction temp. sensor (TS) trouble	F12
	$\odot$	$\bigcirc$			0	Heat sink temp. sensor (TH) trouble	F13
$\bigcirc$	$\odot$	$\bigcirc$			0	Miswiring of heat exchanger temp. sensor (TE, TS)	F15
			$\odot$		0	Low pressure sensor (Ps) trouble	F23
	$\odot$		$\odot$		0	EEPROM trouble	F31
$\bigcirc$	$\odot$		$\bigcirc$		0	Compressor break down	H01
		$\bigcirc$	$\bigcirc$		0	Compressor lock	H02
$\bigcirc$		$\bigcirc$	$\odot$		0	Current detection circuit trouble	H03
	$\odot$	$\bigcirc$	$\odot$		0	Case thermostat operation	H04
$\bigcirc$	$\odot$	$\bigcirc$	$\bigcirc$		0	Low pressure protective operation	H06
				$\odot$	0	Unset model type	L10
$\bigcirc$				$\odot$	0	Communication trouble between MCUs	L29
	$\odot$			$\odot$	0	Discharge temp. trouble	P03
0	$\odot$			$\odot$	0	High pressure SW operation	P04
		0		$\odot$	0	Power supply trouble	P05
	$\bigcirc$	$\bigcirc$		$\odot$	0	Heat sink overheat trouble	P07
$\bigcirc$	$\odot$	$\odot$		$\odot$	0	Gas leak detection	P15
			0	$\odot$	0	4-way valve reversal trouble	P19
0			$\odot$	0	0	High pressure protective operation	P20
	0		$\odot$	0	0	Fan system trouble	P22
0	$\odot$		$\odot$	$\odot$	0	Short-circuit of compressor drive element	P26
		0	$\odot$	0	0	Compressor motor position detection circuit trouble	P29
0			$\odot$		0	High pressure sensor (Pd) trouble	F24
0	$\odot$	0	0	0	0	Combination failure between the hydro unit	L15

●: Off ○: Light ◎: Flash (5 times/sec)

	LED indication					Name of trouble	
D800	D801	D802	D803	D804			
					$\diamond$	Normal	
$\bigcirc$					$\diamond$	Discharge temp. sensor (TD) trouble	
	$\bigcirc$				$\diamond$	Heat exchanger temp. sensor (TE) trouble	
$\bigcirc$	$\odot$				$\diamond$	Heat exchanger temp. sensor (TL) trouble	
		$\bigcirc$			$\diamond$	Outside temp. sensor (TO) trouble	
$\bigcirc$		$\odot$			$\diamond$	Suction temp. sensor (TS) trouble	
	$\odot$	$\odot$			$\diamond$	Heat sink temp. sensor (TH) trouble	
$\bigcirc$	$\odot$	$\odot$			$\diamond$	Miswiring of heat exchanger temp. sensor (TE, TS)	
			$\bigcirc$		$\diamond$	Low pressure sensor (Ps) trouble	
	$\odot$		$\bigcirc$		$\diamond$	EEPROM trouble	
$\bigcirc$	$\odot$		$\bigcirc$		$\diamond$	Compressor break down	
		$\odot$	$\bigcirc$		$\diamond$	Compressor lock	
$\bigcirc$		$\bigcirc$	$\bigcirc$		$\diamond$	Current detection circuit trouble	
	$\odot$	$\odot$	$\bigcirc$		$\diamond$	Case thermostat operation	
$\bigcirc$	$\bigcirc$	$\odot$	$\odot$		$\diamond$	Low pressure protective operation	
				$\odot$	$\diamond$	Unset model type	
$\bigcirc$				0	$\diamond$	Communication trouble between MCUs	
	$\odot$			$\bigcirc$	$\diamond$	Discharge temp. trouble	
$\bigcirc$	$\bigcirc$			$\bigcirc$	$\diamond$	High pressure SW operation	
		$\odot$		$\bigcirc$	$\diamond$	Power supply trouble	
	$\bigcirc$	$\bigcirc$		$\odot$	$\diamond$	Heat sink overheat trouble	
$\bigcirc$	$\bigcirc$	$\bigcirc$		0	$\diamond$	Gas leak detection	
			0	0	$\diamond$	4-way valve reversal trouble	
$\bigcirc$			$\bigcirc$	$\bigcirc$	$\diamond$	High pressure protective operation	
	$\odot$		$\bigcirc$	$\bigcirc$	$\diamond$	Fan system trouble	
$\bigcirc$	$\bigcirc$		$\bigcirc$	$\bigcirc$	$\diamond$	Short-circuit of compressor drive element	
		$\odot$	$\odot$	$\bigcirc$	$\diamond$	Compressor motor position detection circuit trouble	
$\bigcirc$			$\bigcirc$		$\diamond$	High pressure sensor (Pd) trouble	
$\bigcirc$	$\bigcirc$	$\bigcirc$	$\bigcirc$	$\bigcirc$	$\diamond$	Combination failure between the hydro unit	

# (2) -1-2.Latest (including current) trouble indication

●: Off ○: Light ◎: Flash (5 times/sec) ◇: Flash (1 time/sec)

(2)-2. Sensor, Current, Compressor operation frequency, PMV position indication

The values detected by controller, such as temperature sensor or current values, can be easily checked.

#### [Method of Operation]

- 1) Confirm D800 to D804 are off (or rapidly flashing) and that D805 is lit up. If D800 to D804 are slowly flashing or D805 is flashing then push and hold down SW01 and SW02 at the same time for at least 5 seconds. D800 to D804 will turn off (or be rapidly flashing) and D805 will change to on.
- 2) Push SW01 several times until the LED indication (D800 to D805) reaches the desired display item (Refer to (2) -2-1.).

LED display	Control content
D800         D801         D802         D803         D804         D805           ●         ●         ●         ●         ●         ○	Trouble indication (Current trouble) Displays the current trouble. Will not appear if no trouble has occurred. (Refer to (2)-1-1)
D800         D801         D802         D803         D804         D805           Image: Constraint of the state of the s	Trouble indication (Latest trouble: latest and including current trouble) Previous trouble can be checked using this setting, for example, after previous trouble has been resolved (and even after the power has been turned off). * If trouble is currently occurring then the same content will be displayed.
D800         D801         D802         D803         D804         D805           O         O         O         O         O         O         O	Discharge temperature sensor (TD) indication Displays the discharge temperature sensor (TD) value. (Refer to (2)-2-2)
D800         D801         D802         D803         D804         D805           O	Outdoor heat exchanger temperature sensor (TE) indication Displays the outdoor heat exchanger temperature sensor (TE) value. (Refer to (2)-2-2)
D800         D801         D802         D803         D804         D805           Image: Constraint of the state of the s	Outdoor heat exchanger temperature sensor (TL) indication Displays the outdoor heat exchanger sensor (TL) value. (Refer to (2)-2-2)
D800         D801         D802         D803         D804         D805           •	Inlet temperature sensor (TS) indication. Displays the inlet temperature sensor (TS) value. (Refer to (2)-2-2)
D800         D801         D802         D803         D804         D805           O	Outside temperature sensor (TO) indication. Displays the outside temperature sensor (TO) value. (Refer to (2)-2-2)
D800         D801         D802         D803         D804         D805           O	Heat sink temperature sensor (TH) indication. Displays the heat sink temperature sensor (TH) value. (Refer to (2)-2-2)
D800         D801         D802         D803         D804         D805           O         Image: Constraint of the second s	Current indication. Displays the outdoor unit current sensor (CT) detected value. (Refer to (2)-2-2)
D800         D801         D802         D803         D804         D805           •         ·         •         ·         •         ·	Compressor operation frequency indication. Displays the operating frequency of the compressor. (Refer to (2)-2-2)
D800         D801         D802         D803         D804         D805           O         O         O         O         O         O         O	PMV opening indication. Displays the degree to which the PMV is open. (Refer to (2)-2-2)
D800         D801         D802         D803         D804         D805           •         •         ·	Indoor suction temperature sensor (TA) indication. Displays the indoor suction temperature sensor (TA) value. TA = TWI (Refer to (2)-1-1)
D800         D801         D802         D803         D804         D805           Image: Constraint of the state of the s	Indoor heat exchange temperature sensor (TC) indication. Displays the indoor heat exchange temperature sensor (TC) value. Heating, hot water supply: TC = TWO + 2 Cooling: TC = TWO
D800         D801         D802         D803         D804         D805           ●         ○         ○         ●         ○	Cooling: TC = TWO       (Refer to (2)-2-2)         Indoor heat exchanger sensor (TCJ) indication.       Displays the indoor heat exchanger sensor (TCJ) value.         TCJ is actual water heat exchange temperature (TC) sensor value.       (Refer to (2)-2-2)
D800         D801         D802         D803         D804         D805           O	_
D800         D801         D802         D803         D804         D805           ●         ●         ●         ○         ●         ○	_
D800         D801         D802         D803         D804         D805           ●         ●         ●         ○         ○	High pressure sensor (Pd) indication. Displays the High pressure sensor (Pd) value.

•: Off  $\bigcirc$ : Light  $\bigcirc$ : Flash (5 times/sec)

3) Push SW02 to switch to the desired display item (Refer to (2) -2-2.).

4) To access the other display items repeat steps 1) to 3).

5) Before exiting ensure to perform step 1) and set the LED to the initial state (current abnormality indication).

		D indic				Temperature	Current	Compressor	Degree of PMV	Pressure
D800 (YEL)		D802 (YEL)		D804 (YEL)		(°C)	(A)	frequency (rps)	opening (pls)	(MPa)
					$\diamond$	Less than -25	0 -	0 -	0 - 19	0 -
0					$\diamond$	-25 -	1 -	5 -	20 - 39	0.2 -
	0				$\diamond$	-20 -	2 -	10 -	40 - 59	0.4 -
0	0				$\diamond$	-15 -	3 -	15 -	60 - 79	0.6 -
		0			$\diamond$	-10 -	4 -	20 -	80 - 99	0.8 -
0		0			$\diamond$	-5 -	5 -	25 -	100 - 119	1.0 -
	0	0			$\diamond$	0 -	6 -	30 -	120 - 139	1.2 -
0	0	0			$\diamond$	5 -	7 -	35 -	140 - 159	1.4 -
			0		$\diamond$	10 -	8 -	40 -	160 - 179	1.6 -
0			0		$\diamond$	15 -	9 -	45 -	180 - 199	1.8 -
	0		0		$\diamond$	20 -	10 -	50 -	200 - 219	2.0 -
0	0		0		$\diamond$	25 -	11 -	55 -	220 - 239	2.2 -
		0	0		$\diamond$	30 -	12 -	60 -	240 - 259	2.4 -
0		0	0		$\diamond$	35 -	13 -	65 -	260 - 279	2.6 -
	0	0	0		$\diamond$	40 -	14 -	70 -	280 - 299	2.8 -
0	0	0	0		$\diamond$	45 -	15 -	75 -	300 - 319	3.0 -
				0	$\diamond$	50 -	16 -	80 -	320 - 339	3.2 -
0				0	$\diamond$	55 -	17 -	85 -	340 - 359	3.4 -
	0			0	$\diamond$	60 -	18 -	90 -	360 - 379	3.6 -
0	0			0	$\diamond$	65 -	19 -	95 -	380 - 399	3.8 -
		0		0	$\diamond$	70 -	20 -	100 -	400 - 419	4.0 -
0		0		0	$\diamond$	75 -	21 -	105 -	420 - 439	4.2 -
	0	0		0	$\diamond$	80 -	22 -	110 -	440 - 459	4.4 -
0	0	0		0	$\diamond$	85 -	23 -	115 -	460 - 479	4.6 -
			0	0	$\diamond$	90 -	24 -	120 -	480 - 499	4.8 -
0			0	0	$\diamond$	95 -	25 -	125 -	500	5.0 -
	0		0	0	$\diamond$	100 -	26 -	130 -	—	5.2 -
0	0		0	0	$\diamond$	105 -	27 -	135 -		5.4 -
		0	0	Ó	$\diamond$	110 -	28 -	140 -		5.6 -
0		Ó	Õ	Ó	$\diamond$	115 -	29 -	145 -		5.8 -
	0	0	0	0	$\diamond$	120 -	30 -	150 -		6.0 -
Õ	Õ	Ó	Õ	Õ	$\diamond$	Sensor trouble	31 or more	155 or more		6.2 or more

(2) -2-2.

•: Off  $\bigcirc$ : Light  $\diamondsuit$ : Flash (1 time/sec)

(3) Special operation for maintenance and inspection

#### [Method of Operation]

1) Confirm the LED display shows the initial state. If not then return it to the initial state.

2) Push and hold down SW01 for at least 5 seconds. D804 will start slowly flashing.

3) Push SW01 until reaching the LED display function you wish to set.

Special operations	LED display	Control content
Refrigerant recovery operation	D800         D801         D802         D803         D804           O         •         •         •         •	The outdoor unit performs cooling operations. The indoor units do not operate with just this operation and hence do any pump only operations in advance.
PMV fully open operation	D800         D801         D802         D803         D804           O         Image: Constraint of the second se	PMV (Pulse Motor Valve) fully opens. Perform step 6) below or returns to normal control after 2 minutes. $(\rightarrow Note 1)$
PMV fully close operation	D800         D801         D802         D803         D804           ●         ○         ○         ●         ●	PMV (Pulse Motor Valve) fully opens. Perform step 6) below or returns to normal control after 2 minutes. $(\rightarrow Note 1)$
PMV intermediate open operation	D800         D801         D802         D803         D804           ○         ○         ○         ●         ●	Sets the PMV (Pulse Motor Valve) to intermediate open (250 pulses). Perform step 6) below or returns to normal control after 2 minutes. $(\rightarrow Note 1)$
Indoor heating test command	D800         D801         D802         D803         D804           ○         ●         ●         ○         ●	Performs a heating test run. Carrying out step 6) below returns to normal control. $(\rightarrow \text{Note 2})$
Indoor heating test command	D800         D801         D802         D803         D804           ●         ○         ●         ○         ●	Performs a cooling test run. Carrying out step 6) below returns to normal control. $(\rightarrow \text{Note 2})$
Forced fan motor operation	D800         D801         D802         D803         D804           ○         ○         ●         ○         ●	Forcibly operates the fan motor. Perform step 6) below or returns to normal control after 2 minutes. $(\rightarrow Note 1)$
4 way valve position operation (Heating position)	D800         D801         D802         D803         D804           O         Image: Constraint of the second se	Forces the 4 way value to move to the heating position. After 15 seconds returns to normal control. $(\rightarrow Note 1)$
4 way valve position operation (Heating position)	D800         D801         D802         D803         D804           ●         ○         ○         ○         ○	Forces the 4 way value to move to the cooling position. After 15 seconds returns to normal control. $(\rightarrow Note 1)$
INJ_2-way valve opening / closing (801, 1101, 1401)	D800         D801         D802         D803         D804           ●         ●         ●         ●         ●	Forces the INJ_2-way valve to move to the opposite position to the current position. After 2 minutes returns to normal control. $(\rightarrow Note 1)$
Heater output relay operation	D800         D801         D802         D803         D804           ∅         ●         ∅         ●         ∅	Turns on the heater output relay. $(\rightarrow \operatorname{Note} 2)$

●:Off ○:Light ◎:Flash (5 times/sec)

**Note 1:** The operations can take place while the equipment is on but it is better if it has been turned off first. A sudden change in pressure could occur while the operations are taking place, which can be dangerous.

Note 2: Trial indoor cooling operation request/trial indoor heating operation request

**Caution)** Forced test operations using this setting cannot be cancelled using the indoor remote control. Refer to (6) below.

- 4) Push SW02, and D805 will start rapidly flashing.
- 5) Push and hold down SW02 for at least 5 seconds. D804 will start slowly flashing and D805 will turn on and the special operation will take effect.
- 6) To invalidate any of the various settings push and hold down SW01 and SW02 at the same time for at least 5 seconds. D800 to D804 will be off (or rapidly flashing) and D805 lit up (initial state: current trouble indication) and the special operation will have been disabled (normal control).
- \* If any uncertainty arises then push and hold down SW01 and SW02 at the same time for at least 5 seconds. You will return to step 1).

# **10** Replacement of the service PC board

# 

Don't open the PC board cover before 1 minute after power has been turned off beacuse an electric shock may be occurred.

In the case of replacing the PC board, also confirm the chapter "11 How to exchange main parts".

# 1. Hydro unit

# ■ Setting the DN code (MCC-1753)

In the memory of the Hydro unit Main PC board before replacement, the type and the capacity code of the model have been stored at the factory, and the customer setup data have been stored after installation. Set the DN code according to the "PC board replacement Procedure Manual" which included in the package of the service PC board.

# 2. Outdoor unit

# ■ Setting the jumper wires (MCC-1768, MCC-1675, MCC-1781)

Since the service PC board is available for several models, cut the jumper wires according to the "PC board replacement Procedure Manual" which included in the package of the service PC board. If they are not cut correctly, a certain failure code appears on the remote controller and the operation is disabled.

\* The contents of the "PC board replacement Procedure Manual" are also described in item 15 Appendix.

# **11** How to exchange main parts

# 

#### <Turn off the power breaker>

Because the electrical components are energized with high voltage, always turn off the power breaker before starting to work.

#### <Check>

Ensure that no water pressure is present when replacing the water circuit (circulation pump, heater unit, flow sensor, etc). After a repair is complete, perform a test run (after attaching the front panel, upper and lower cabinets, and side cabinet) and check that no abnormality including smoke or abnormal noise occurs. Failure to do so may cause a fire or an electric shock. Place the cabinets before making a test run.

#### <Watch out for fire>

#### Observe the following instructions when repairing the refrigerant cycle.

- (1) Watch out for surrounding fire. Always put out the fire of stove burner or other devices before starting the repair.
- Should the fire fail to be put out, the oil mixed with refrigerant gas could catch fire.
- (2) Do not use a welder in a closed room.
- A room with no ventilation may cause carbon monoxide poisoning.
- (3) Keep away flammable materials.
- The materials may catch the fire of a welder.



#### <Wear gloves>

#### Wear gloves (\*) when performing repair.

Failure to do so may cause an injury when accidentally contacting the parts.

\*: Thick gloves such as cotton work gloves

<Remove the ground wire>

The ground wire is connected between the product body and the front cabinet, so do not pull it too hard. <Change O-ring>

If you disconnect the O-ring connection, be sure to replace it with a new O-ring. It may cause water leakage.

# 1. Hydro Unit

No.	Exchange parts name	Work procedure	Remarks
<u>No.</u>	Exchange parts name Front panel	NOTE           Wear gloves when performing the work.           Failure to do so may cause an injury when accidentally contacting the parts.           1. Detachment           1. After stop the hydro unit operation, turn off the power breaker after the pump has stopped. The pump will stop 1 minute after the remote	Remarks Front panel
		control is turned off. 2. Unscrew the two screws. 3. Pull out the top of the front panel. <b>2. Attachment</b> 1. Reassembly in reverse order. 2. Align and adjust the panel gaps before tightening the screws.	Screws

No.	Exchange parts name	Work procedure	Remarks
0	Top panel	<ul> <li>1. Detachment <ol> <li>Perform No. (Front panel).</li> <li>Unscrew the four screws.</li> <li>Lift up the top panel.</li> </ol> </li> <li>2. Attachment <ol> <li>Reassembly in reverse order.</li> </ol> </li> </ul>	Top panel screws
3	Remote cotrol	<ol> <li>Detachment         <ol> <li>Perform No. ① (Front panel) ② (Top panel).</li> <li>Remove the cushion around the remote control.</li> <li>Remove the D-tape on the left and right of the remote control.</li> <li>Remove the remote control panel by applying a flathead screwdriver to the gap at the bottom of the remote control.</li> <li>Remove the two screws.</li> <li>Cut the binding band on the bottom right of the remote control. Remove the remote control connector and replace with a new remote control.</li> </ol> </li> </ol>	Remote control D-tape Flathead screwdriver
		2. Detachment 1. Reassembly in reverse order.	Screws Remote control panel Remote control wiring Remote control Wiring

No.	Exchange parts name	Work procedure	Remarks
No. ④	Exchange parts name Circulation pump (ZONE1) 6,11kW	<ul> <li>*1) To replace wate circuit parts, open the drain cock and reduce (Check that the water puressure 0 bar on the meter.)</li> <li>Wait about 5 minutes to drain the warer in the Hydro unit.</li> <li>* Even if drained, remaining water may come out from the connect</li> <li><b>1. Detachment</b> <ol> <li>Perform No. ① (Front panel) ② (Top panel).</li> <li>Turn off the power supplies, depressurize and drain the water curcuit.</li> <li>Cut the binding band.</li> <li>Unscrew the two screws from the pump cover.</li> <li>Remove the pump cover.</li> <li>Disconnect both pump cables.</li> <li>Disconnect the clips and water connection pipes.</li> <li>Remove and replace the pump.</li> </ol> </li> <li><b>2. Aetachment</b> Reassembly in reverse order. (Brass A tightening brass A , apply evenly to the entire liquid gasket.) * Binding band are for protection during transportation and are not required after</li></ul>	e the water puressure in the Hydro unit.
		* Binding band are for protection during	Clip Pump cables

No.	Exchange parts name	Work procedure	Remarks
No. ④	Exchange parts name Circulation pump (ZONE1) 14kW	Work procedure         NOTE         Please be sure to read No. ④ *1         1. Detachment         1. Detachment         1. Perform No. ① (Front panel) ② (Top panel).         2. Turn off the power supplies, depressurize and drain the water curcuit.         3. Remove the pump cover after removing the two screws.         4. Cut the binding band that binds the pipe assembly and the pump fixing plate.         5. Disconnect the pump power wire.         6. After raising the stopper, disconnect the pump signal wire.         7. Disconnect the clips and water connection pipes.         8. Remove and replace the pump assembly.         2. Attachment         Reassembly in reverse order.         (Brass A tightening torque : 55±5 N•m         Before tightening Brass A, apply evenly to the entire liquid gasket.)         * Binding bands are for protection during transportation and are not required after installation.         NOTE         Please be sure to read No. ④ *2	Remarks Screws Clips Fump cover Pump cover Pump ginal wire Pump power wire Pump signal wire Pump power wire Wire Pump power wire Pump signal wire Pump power wire Pump p

No.	Exchange parts name	Work procedure	Remarks
5	Circulation pump	NOTE	Connection pipe
	(ZONE2)	Please be sure to read No. ④ *1	Clip
		<ol> <li>Detachment         <ol> <li>Perform No. ① (Front panel) ② (Top panel).</li> <li>Turn off the power supplies, depressurize and drain the water curcuit.</li> <li>Unscrew the four screws.</li> <li>Remove the clip from the connecting pipe.</li> <li>Hook the remote control unit. (Figure 1)</li> <li>Unscrew the two screws from the pump cover.</li> <li>Remove the pump cover.</li> <li>Disconnect both pump cables.</li> <li>Disconnect the two clips and water connection pipe.</li> <li>Remove and replace the pump.</li> </ol> </li> </ol>	Screws Figure 1
		When connecting the pump cable to the E-BOX, be careful of connection mistakes between pump 1 and pump 2.	Clip Clip Clip Connection pipe
		2. Attachment Reassembly in reverse order (Brass A tightening torque : 55±5 N⋅m Before tightening Brass A, apply evenly to the entire liquid gasket.)	Brass A Pump cables
		NOTE Please be sure to read No. ④ *2	
6	Mixing valve (for 2 zone)	NOTE Please be sure to read No. ④ *1	Motor switch Screw Cushion
		<ol> <li>Detachment         <ol> <li>Perform No. ① (Front panel) ② (Top panel).</li> <li>Turn off the power supplies, depressurize and drain the water curcuit.</li> <li>Peel off the cushion, remove the motor switch, unscrew the internal screw, and separate the mixing valve into the actuator and valve body. (See Figure 1)</li> <li>Cut the bindnig band securing the pipe cover at the L-joint. (See Figure 2)</li> <li>Remove the four clips securing the connected pipe.                 * When removing the clips and pipe assembly, please set tray under the L-joint to avoid spilling remaining water. (See Figure 2)</li> <li>Loosen the three nuts on compression fittings on the Mixing valve. (See Figure 3)</li> <li>Replace the Mixing valve.</li> </ol> </li> </ol>	Actuator Actuator Figure 1 Clip Clip Valve body Clip Clip Valve body
			Clip Figure 2

No.	Exchange parts name	Work procedure	Remarks
6	Mixing valve (for 2 zone)	<ul> <li>2. Attachment Reassembly in reverse order * Tighten the nuts on compression fittings. (3/4 to 1 turn) * When installing the actuator, follow the procedure below after installing the compression fitting. 1. Set Gear on the Valve body. (See Figure 4) 2. Rotate gear as figure 4's position. (See Figure 4) (Gear concave should be fit body's rib same as figure4.) 3. Remove motor switch from motor. (See Figure 5) 4. Put on the motor to the Valve body fully and tight by the screw. (See Figure 5) Motor position has already decided gear's position (Align the protrusion (green part) with the center and check that it is fixed.) (Align the groove (red part) with the center.) 5. Put on motor switch to motor. (See Figure 6) Motor switch position had already decided motor position. (In this time motor switch floated up a little bit.) 6. Rotate motor switch as right figure 7's position. (See Figure 7) (In this time motor swich will be sink correct position) 7. Align the adhesive sides of the cushion (A) and cushion (B) at the center and paste them together. (See Figure 8) 8. Align the pasted cushions along the shape of the actuator and the red line and paste. (See Figure 9) * Be sure to set the actuator before attaching the cushion. NOTE Please be sure to read No. ④ *2</li></ul>	Gear Concave Body's rib Figure 4 Green part Red part Screw Motor switch Screw Motor switch Figure 5 Motor switch Figure 6 Figure 6 Cushion (B) Cushion (A) Figure 8 Cushion (A) Cushion (B) Cushion (Cushion (B) Cushion (Cushion (Cushion (Cushion (Cushion (Cushio
	Check valve (for 2 ZONE)	NOTE         Please be sure to read No. ④ *1         1. Detachment         1. Perform No. ① (Front panel) ② (Top panel).         2. Turn off the power supplies, depressurize and drain the water curcuit.         3. Remove the two clips securing the connected pipe.         4. Remove the check valve from the L joint.         2. Attachment         Reassemble in reverse order, please note that the check valve has to be inserted with the O-ring in back.         NOTE         Please be sure to read No. ④ *2	Clips Check valve L joint Connected pipe

No.	Exchange parts name	Work procedure	Remarks
8	Flow heater subassembly 3kW, 6kW, 9kW	NOTE Please be sure to read No. ④ *1 1. Detachment <ol> <li>Perform No. ① (Front panel) ② (Top panel).</li> <li>Turn off the power supplies, depressurize and drain the water curcuit.</li> <li>Remove the E-box cover, make sure the power supplies are off.</li> <li>Unscrew the screw from the Flow heater cover.</li> <li>Remove the Flow heater cover.</li> <li>Remove the two clips from the Flow heater and the L-joint.</li> </ol> * When removing the clip and the L-joint, please remove set tray under the L-joint to avoid spilling remaining water. 7. Remove the wires from the flow heater in the E-box, note the exact location of each wire. WARNING Connect the connectors on the side with the wire marks (1, 2, 3) to CN41, 42, 43. (Note the connection position on the L NOTE Please be sure to read No. ④ *2	Flow heater Clip Clip Clip Clip Clip E-box Clip Flow heater cover L-joint
9	3-way valve	NOTE         Please be sure to read No. ④ *1         1. Detachment         1. Perform No. ① (Front panel) ② (Top panel).         2. Turn off the power supplies, depressurize and drain the water curcuit.         3. Remove the three clips securing the connected pipe.         4. Remove the 3-way valve.         2. Attachment         Reassemble in reverse order.         NOTE         Please be sure to read No. ④ *2	3-way valve Clip Clip Clip

No.	Exchange parts name	Work procedure	Remarks
0	Expansion vessel	NOTE Please be sure to read No. ④ *1	Expansion vessel
		<ol> <li>Detachment         <ol> <li>Perform No. ① (Front panel) ② (Top panel).</li> <li>Turn off the power supplies, depressurize and drain the water curcuit.</li> <li>Unscrew the two screws from the upper bar.</li> <li>Remove the upper bar.</li> <li>Remove the clip securing the connected pipe.</li> <li>Slide the pipe of the expansion vessel.</li> </ol> </li> <li>Attackment</li> </ol>	Upper bar Screws Clip Clip Connected pipe
		2. Attachment Reassemble in reverse order. (Brass B tightening torque : 12±1 N·m) NOTE Please be sure to read No. ④ *2	
	Pressure gauge	NOTE Please be sure to read No. ④ *1 1. Detachment <ol> <li>Perform No. ① (Front panel) ② (Top panel).</li> <li>Turn off the power supplies, depressurize and drain the water curcuit.</li> <li>Remove the clip securing the connected pipe.</li> <li>After removing the four screws, remove the remote control fixing plate.</li> <li>Remove the cushion on the right side of the remote control.</li> <li>After removing the two screws, remove the pressure gauge assembly.</li> </ol> 2. Attachment Reassemble in reverse order. NOTE Please be sure to read No. ④ *2	Remote control fixing plate Cushion Clip Connected pipe Screws Screws Screws


No.	Exchange parts name	Work procedure	Remarks
	Flow sensor	NOTE         Please be sure to read No. ④ *1         1. Detachment         1. Perform No. ① (Front panel) ② (Top panel).         2. Turn off the power supplies, depressurize and drain the water curcuit.         3. After removing the two clips fixing the flow sensor, remove the flow sensor.         2. Attachment         Reassemble in reverse order         NOTE         Please be sure to read No. ④ *2	Flow sensor Clip Clip
	Pressure relief valve	NOTE         Please be sure to read No. ④ *1         1. Detachment         1. Perform No. ① (Front panel) ② (Top panel).         2. Turn off the power supplies, depressurize and drain the water curcuit.         3. Cut the binding band securing the drain hose and remove the drain hose.         4. Remove the drain hose connecting the pressure relief valve.         5. Remove the clip securing the connected pipe.         6. Remove the pressure relief valve.         2. Attachment         Reassemble in reverse order.         (Brass C tightening torque : 12±1 N·m         Brass D tightening torque : 15±1 N·m)         NOTE         Please be sure to read No. ④ *2	Pressure relief valve Brass C Connected pipe Connected pipe Crips


No.	Exchange parts name	Work procedure	Remarks
(4)	Safety valve DHW	NOTE         Please be sure to read No. ④ *1         1. Detachment         1. Perform No. ① (Front panel) ② (Top panel).         2. Turn off the power supplies, depressurize and drain the water curcuit.         3. Unscrew the two screws from the pipe fixture cover.	Safety valve DHW Nut Drain hose
		<ol> <li>Remove the pipe fixture cover.</li> <li>After removing the crip, remove the pipe assembly.</li> <li>Loosen the nuts on compression fittings on the safety valve DHW.</li> <li>Loosen the nut securing drainhose.</li> <li>Remove the safety valve DHW.         <ul> <li>If necessary, remove the subassembly from the product and then remove the nut.</li> </ul> </li> </ol>	Crip Pipe assembly Screws Pipe fixture cover
		2. Attachment Reassemble in reverse order. * Tighten the nuts on compression fittings. (3/4 to 1 turn) NOTE Please be sure to read No. ④ *2	
(5)	Strainer	NOTE         Please be sure to read No. ④ *1         1. Detachment         1. Perform No. ① (Front panel) ② (Top panel).         2. Turn off the power supplies, depressurize and drain the water curcuit.         3. Use a spanner (SW17) to hold the brazed fitting, use a spanner (SW14) to loosen the air vent valve.         4. Remove the two clips securing the connected pipe and the 3-way valve.         5. Remove the Strainer.         2. Attachment         Reassemble in reverse order.         (Brass E/F tightening brags E/F, apply evenly to the entire liquid gasket)	Strainer Brass F Connected pipe Strainer Brass E S-way valve
		Reassemble in reverse order. (Brass E/F tightening torque : 15±1 N·m Before tightening Brass E/F, apply evenly to the entire liquid gasket)	

No.	Exchange parts name	Work procedure	Remarks
No. 19	Exchange parts name Access valves	Work procedure         NOTE         Please be sure to read No. ④ *1         1. Detachment         1. Perform No. ① (Front panel) ② (Top panel).         2. Turn off the power supplies, depressurize and drain the water curcuit.         3. Remove the access valves.         2. Attachment         1. Set the Seal tape about 4 times around the screw of Access valve.         2. Set the Access valve to the connection pipe. (Tightening torque : 15±1 N·m)         NOTE         Please be sure to read No. ④ *2	Access valve-1
		Please be sure to read No. (4) *2	Acess valve-2

No.	Exchange parts name	Work procedure	Remarks
	Side cabinet	<ol> <li>Detachment         <ol> <li>Perform No. ① (Front panel) ② (Top panel).</li> <li>Turn off the power supplies, depressurize and drain the water curcuit.</li> <li>For right hand side panel: Remove the six screws from the support bracket.</li> <li>Remove the side panel.</li> <li>For left hand side panel: Remove the six screws from the flow heater cover.</li> <li>Remove the side panel.</li> </ol> </li> <li>Attachment         Reassemble in reverse order.         Please note that the left and right panels are different, so be careful not to make a mistake.         </li> </ol>	Screws Side cabinet Support bracket
(1)	Back cabinet, Drain joint	<ul> <li>1. Detachment <ol> <li>Perform No. ① (Front panel) ② (Top panel)</li> <li>⑦ Side cabinet</li> <li>Remove the two screws.</li> <li>Remove the drain joint.</li> <li>Remove the two screws.</li> <li>Remove the back canbinet.</li> <li>Pull out the lower edge of the back cabinet.</li> <li>Silde the panel downwards and remove it.</li> </ol> </li> <li>2. Attachment Reassemble in reverse order.</li></ul>	Screws Back cabinet

No.	Exchange parts name	Work procedure	Remarks
19	BPHE + Low press. sensor Small, Large	NOTE Please be sure to read No. ④ *1	low pressure sensor
		<ol> <li>Detachment         <ol> <li>Perform No. ① (Front panel) ② (Top panel).</li> <li>Turn off the power supplies, depressurize and drain the water curcuit.</li> <li>Evacuate the refrigerant from BPHE and disconnect the lines.</li> <li>Unscrew the two screws from the pipe fixture cover.</li> <li>Remove the pipe fixture cover.</li> <li>Remove the two clips and the from BPHE.</li> <li>Remove the BPHE from the flowsensor.</li> <li>Remove the two nuts securing the BPHE to the support bracket.</li> <li>Remove the low pressure sensor cable from the E-box.</li> <li>Remove the BPHE unit.</li> </ol> </li> </ol>	for the series of the series o
		2. Attachment Reassemble in reverse order. NOTE Please be sure to read No. ④ *2	support bracket nuts
2	TFI sensor	<ul> <li><b>1. Detachment</b> <ol> <li>Perform No. ① (Front panel) ② (Top panel).</li> <li>Detachment the pump cover of ZONE2 after cutting the binding band for bundling the sensor cable above the ZONE2 pump cover. (Φ4×8, 2screws)</li> <li>Remove the sensor fix pin and TFI sensor.</li> <li>If possible, you can remove the right side panel to replace the sensor.</li> </ol> </li> <li><b>2. Attachment</b> Attache new TFI sensor in the reverse process of "1. Detachment". Image: The ZONE2 pump cover screw binding binding the ZONE2 pump cover screw</li></ul>	

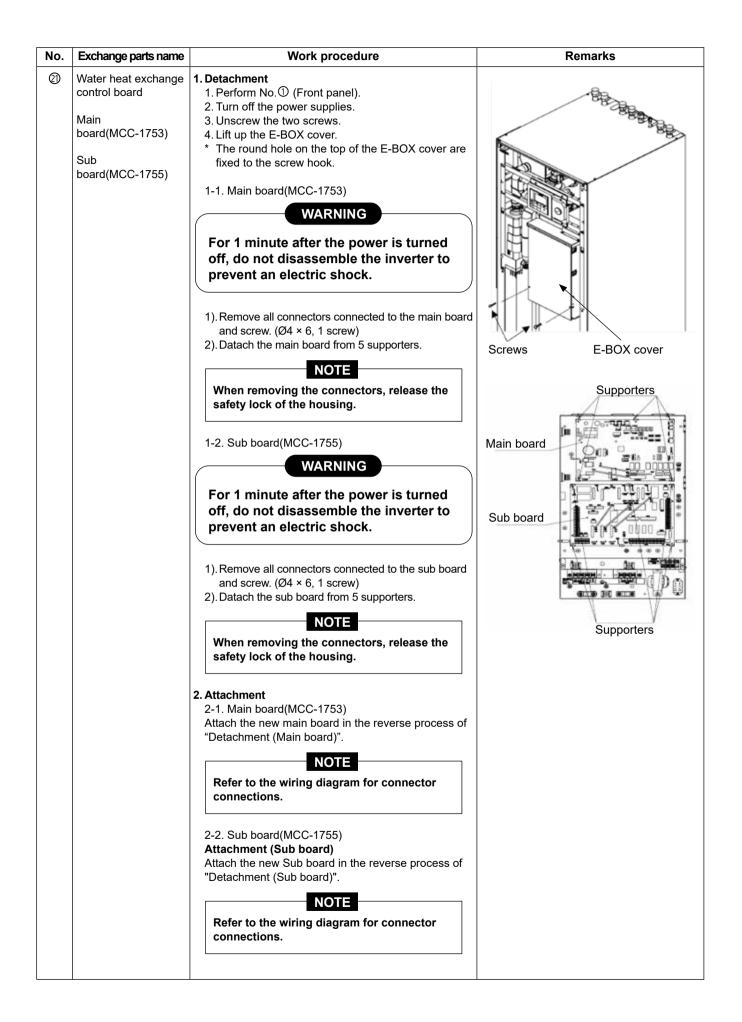

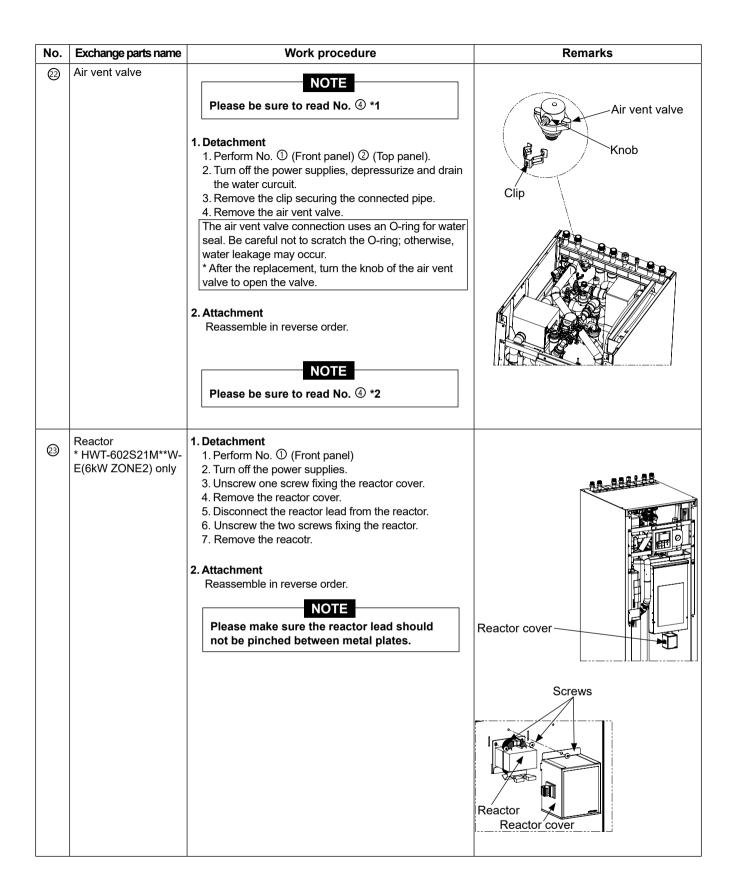

### 2. Outdoor Unit

# 2-1. HWT-401HW-E(TR), HWT-601HW-E(TR)

No.	Exchange parts name	Work procedure	Remarks		
1	Common procedure	1. Detachment <b>NOTE</b> Wear gloves for this job. Otherwise, you may injure your hands on the parts, etc.	Valve cover		
		<ol> <li>Stop operation of the Air to water heat pump system and turn off the power breaker.</li> <li>Remove the valve cover. (Φ4 × 10, 3 hexagon screws)</li> </ol>			
		<ul> <li>After removing screw, remove the valve cover pulling it downward.</li> <li>3) Remove the wiring cover. (Φ4 × 10, 1 screw)</li> <li>* It is fixed with a special screw. Be careful not to make a mistake.</li> </ul>	Wiring cover		
		<ul> <li>After removing screw, remove the wiring cover pulling it upward.</li> <li>4) Remove cord clamp (Φ4 × 14, 3 screws) and then remove connecting cable.</li> </ul>	Upper cabinet		
					<ul> <li>5) Remove the upper cabinet. (Φ4 × 10, 5 hexagon screws)</li> <li>• After removing screws, remove the upper cabinet pulling it upward.</li> <li>2. Attachment <ol> <li>1) Attach the water-proof cover.</li> </ol> </li> </ul>
		NOTEThe water-proof cover must be attached without fail in order to prevent rain water, etc. from entering inside the indoor unit.2) Attach the upper cabinet.	Front cabinet Water-proof cover These 2 bending parts shall be put inside of a unit by bending these 2 ports.		
		<ul> <li>(Φ4 × 10, 5 hexagon screws)</li> <li>3) Perform cabling of connecting cable, and attach the cord clamp.</li> <li>Fix the cord clamp by tighteningsthe screws (Φ4 × 14, 3 screws)</li> </ul>	This part shall be put on the side cabinet. Fit the corner of		
			<ul> <li>fitting 2 concave parts of the cord clamp to each connecting cables.</li> <li>4) Attach the valve cover.</li> <li>(Φ4 × 10, 3 hexagon screws)</li> <li>Insert the upper part into the square</li> </ul>	This line shall be parallel to the front cabinet This part shall cover the	
		hole of the side cabinet, set hook claws of the valve cover to square holes (at three positions) of the main unit, and attach it pushing upward.	gap between the inverter box and the front cabinet.		

No.	Exchange parts name	Work procedure	Remarks
2	Front cabinet	<ol> <li>Detachment         <ol> <li>Perform step 1 in ①.</li> <li>Remove the fixing screws (Φ4 × 8, 1 screw) used to secure the front cabinet and inverter cover, the screws                 (Φ4 × 10, 4 hexagon screws) used to secure the front cabinet at the bottom, and the fixing screws (Φ4 × 8, 2 screws) used to secure the motor base.                 <ul> <li>The front cabinet is fitted into the side cabinet (left) at the front left side so pull up the top of the front cabinet to remove it.</li> <li>The front cabinet to</li> </ul> <li>The front cabinet to</li> </li></ol></li></ol>	Corner holes
		<ol> <li>Attachment         <ol> <li>Insert the claw on the front left side into the side cabinet (left).</li> <li>Hook the bottom part of the front right side onto the concave section of the bottom plate. Insert the claw of the side cabinet (right) into the square hole in the front cabinet.</li> <li>Return the screws that were removed their original positions and attach them.</li> </ol> </li> </ol>	Corner holes

No.         Exchange parts name         Work procedure	Remarks
Inverter       "Detachment (Inverter)"         1       Perform step 1 in 0.         2) Remove the fixing screws (Ф4 × 8, 1 screw) securing PL-COVER-PCB and the inverter box.         3) Remove the fixing screws (Ф4 × 8, 2 screws) for securing the motor base and the inverter box.         4) Remove various lead wires from the holder at upper part of the inverter box.         5) Cut Binding bands that fix the leads.         6) Pull the inverter box upward.         7) Disconnect connectors of various lead wires.         8) Remove the inverter. <b>Requirement</b> As each connected to compressor: Disconnect the connector 3P.         • Lead connected to reactor: Disconnect the two connector (2P).         CN300: Outdoor fan motor (3P: white) CN500: Binestal thermostat (2P: blue) CN501: High pressure switch (2P: green) CN500: High pressure switch (2P: green) CN500: To sensor (3P: white) CN602: TO sensor (3P: white) CN604: TL sensor (3P: white) CN704: 4 Way valve (2P: white)         "Attachment (Inverter)"       Attach new inverter in the reverse process of "Detachment (Inverter)".	Remarks     Inverter     Notor base     Notor base     Inverter     Inverter

No.	Exchange parts name	Work procedure	Remarks
3	Inverter assembly	<ul> <li>"How to check outdoor control board"</li> <li>1) Perform step ② in "Detachment (Inverter)".</li> <li>2) Remove the fixing screws (Φ4 × 8, 2 screws) for securing the motor base and the inverter box.</li> <li>WARNING</li> <li>Be careful to check the inverter because high-voltage circuit is incorporated in it.</li> <li>3) Perform discharging by connecting ⊕, ⊙ polarity by discharging resistance (approx. 100Ω40W) or plug of soldering iron to ⊕, ⊙ terminals of C10 (printed "WARNING HIGH VOLTAGE" is attached.) electrolytic capacitor (500µF) on P.C. board.</li> <li>WARNING</li> <li>Be careful to discharge the capacitor because the electrolytic capacitor cannot naturally discharge and voltage remains according to trouble type in some cases.</li> <li>INOTE</li> <li>This capacitor is one with mass capacity. Therefore, it is dangerous that a large spark generates if short-circuiting between ⊕, ⊙.</li> </ul>	

No.	Exchange parts name	Work pro	cedure		Remarks
4	Control board assembly	<ul> <li>"Detachment (outdoor control</li> <li>1) Remove the screws (Φ4 × inverter box and P.C. boa</li> <li>2) Remove the earth screw free earth lead. And remove the inverter box</li> <li>NO</li> <li>Use a flat-blade screwdrive box from P.C. board base for the box from P.C. board base for the blade screwdriver.</li> </ul>	< 10, 2 screws) fixing rd base. fixing inverter box and box. <b>TE</b> er to remove the inve nook.	rter	P.C board base P.C. board base hook Inverter box
		3) Remove the outdoor cont board base. (Remove the outdoor control board ass them screwed together.) NO Disengage hooks of the P heat sink, and lift to remove	heat sink and the embly while keeping IE C. board base, hold		Earth lead
		<ol> <li>Remove the two fixing sci used to secure the heat s And remove the heat sink</li> </ol>	ink and sub heat sink		
		"Attachment (outdoor control Attach the new outdoor cont process of "Detachment".	board)" trol board in the reve	se	
		When mounting new outc confirm that outdoor cont properly into the P.C. boa Coat the heat sink on the heat sink silicone uniform heat sink. Please following below tig	loor control board, trol board is inserted rd base. outdoor board with t ily before installing t	ie	
			Tightening torqu		
		Heat sink $\leftrightarrow$ Sub heat sink	1.3-1.5 N•M		
		Earth screw	0.8-0.9 N•M		

No.	Exchange parts name	Work procedure	Remarks
\$	Side cabinet	<ol> <li>Detachment Side cabinet (right)         <ol> <li>Perform step 1 in ②.</li> <li>Remove the fixing screw (Φ4 × 8, 3 screws) used for securing the side cabinet (right) to the bottom plate and valve fixing plate.</li> <li>Side cabinet (left)                 <ol> <li>Perform step 1 in ③.</li> <li>Remove the fixing screw (Φ4 × 8, 2 screws, and Φ4 × 10, 1 hexagon screw) used for securing the side cabinet to the bottom plate and heat exchanger.</li> </ol> </li> </ol> </li> </ol>	Side cabinet (right) Valve fixing plate Bottom plate Heat exchanger Side cabinet (left)
	Side cab Hock Bottom plate	inet (right) Hock Bottom Bottom Detail B Bottom plate Hock Side cabinet (left) Hock Detail C Bottom plate	Bottom plate Bottom plate
6	Fan motor	<ol> <li>Detachment         <ol> <li>Perform step 1 in ②</li> <li>Remove the flange nut fixing the fan motor and the propeller.                 <ul> <li>Flange nut is loosened by turning clock-wise. (To tighten the flange nut, turn counterclockwise.)</li> <li>Remove the propeller fan.</li> <li>Disconnect the connector for fan motor from the inverter.</li> <li>Remove the fixing screws (Φ4 × 20, 3 screws) holding by hands so that the fan motor does not fall.</li> <li>Precautions when assembling the fan motor Tighten the flange nut using a tightening torque of 4.9 N•m.</li> </ul> </li> </ol></li> </ol>	Propeller fan Bottom plate Fan motor Motor base

No.	Exchange parts name	Work procedure	Remarks
	Compressor	<ol> <li>Detachment         <ol> <li>Perform step 1 in ①, ②, ③, ④, ⑤.</li> <li>Extract refrigerant gas.</li> <li>Remove the partition plate. (Φ4 × 8, 4 screws)</li> </ol> </li> <li>Remove the sound-insulation material.</li> <li>Remove terminal cover of the compressor, and disconnect lead wire of the compressor from the terminal.</li> </ol>	Partition plate Compressor
		<ul> <li>Note</li> <li>Never reuse the compressor lead which you disconnected. Use the new one. If you reuse it, it may malfunction.</li> <li>6) Remove pipe connected to the compressor with a burner. <ul> <li>Take care to keep the 4-way valve away from naked flames. (Otherwise, it may malfunction.)</li> </ul> </li> <li>7) Remove the fixing screw of the bottom plate and heat exchanger. (Φ4 × 8, 1 screw)</li> <li>8) Remove the fixing screw of the bottom plate and valve fixing plate. (Φ4 × 8, 2 screws)</li> <li>9) Pull upward the refrigeration cycle.</li> <li>10) Remove Comp bolt (3 pcs.) fixing the compressor to the bottom plate.</li> </ul>	Valve fixing plate
8	Reactor	<ol> <li>Detachment         <ol> <li>Perform step 1 in ② and ③.</li> <li>Remove screws fixing the reactor. (Φ4 × 8, 2 screws)</li> </ol> </li> </ol>	Partition plate Reactor

No.	Exchange parts name	Work procedure	Remarks
9	Electronic expansion valve coil	<ul> <li>1. Detachment <ol> <li>Perform step 1 in ② and ③ side cabinet (right).</li> <li>Remove the coil by pulling it up from the electronic control valve body.</li> </ol> </li> <li>2. Attachment <ol> <li>When assembling the coil into the valve body, ensure that the coil anti-turn lock is installed properly in the pipe.</li> </ol> </li> <li><handling precaution=""> When handling the parts, do not pull the leads. When removing the coil from the valve body, use your hand to secure the body in order to prevent the pipe from being bent out of shape.</handling></li></ul>	Coil-PMV Body-PMV Fotate Body-PMV Hocks Hocks Coil-PMV
	Fan guard	<ol> <li>Detachment         <ol> <li>Perform step 1 in <sup>(2)</sup>.</li> <li>Remove the front cabinet, and put it down so that fan guard side directs downward.</li> </ol> </li> <li>Perform work on a corrugated card board, cloth, etc. to prevent flaw to the product.</li> <li>Remove the hooking claws by pushing minus screwdriver according to the arrow mark in the right figure, and remove the fan guard.</li> <li>Attachment         <ol> <li>Insert claws of the fan guard in the holes of the front cabinet. Push the hooking claws (9 positions) by hands and fix the claws.</li> </ol> </li> <li>Check that all the hooking claws are fixed to the specified positions.</li> </ol>	Flat head screwdriver Front cabinet

No.	Exchange parts name	Work procedure	Remarks
1	TE sensor (outdoor	<sup>-</sup> heat exchanging temperature sensor)	
	• Attachment Install the sensor onto the straight pipe part of the condenser outlet pipe. TE sensor lead Straight part		
12	• Attachment Install the sensor	pipe temperature sensor) onto the straight pipe part of the suction for the lead direction of the sensor.	
13	Attachment Install the sensor	rge pipe temperature sensor) onto the straight pipe part of the discharge or the leas direction of the sensor.	
14	Attachment Insert the outdoor	e air temperature sensor) air temperature sensor into the holder, and onto the heat exchanger.	TO sensor holder
	TS sensor lead Straight part	Detail A TS sensor	Detail D (back side view) TO sensor
	the sensor leads	CAUTION lation work (and on its completion), take care n s on the edges of the metal plates or other parts damaged since damage may cause electric sho	s. It is dangerous for these
	proper positions	CAUTION he parts, check whether the positions where the as instructed. The product will not be controlle ave not been installed in their proper positions.	


No.	Exchange parts name	Work procedure	Remarks
15	TL sensor (outdoor	heat exchanging temperature sensor)	
	Attachment     Install the sensor     outlet pipe.	onto the straight pipe part of the condenser	
	Dutiet pipe.	estraight part h Escretaria	

#### Exchange No Work procedure Remarks parts name 1 Common Front panel procedures Stop operation of the Air to water heat pump system and turn off breaker switch. Front panel Top cover Ensure wearing of gloves when performing any work in order to avoid injury from parts, etc. Left claws 1. Detachment Right claws 1) Stop operation of the Air to water heat pump system, and turn off the main switch of the breaker for Air to water heat pump system. 2) Remove the front panel. ( $\Phi$ 4 × 10, 3 hexagon screws) (1) After removing the screws slide the front panel downwards. (2) Pull the front panel forwards and then loosen the right claw. Claw Screws (3) Pull the front panel to the right, loosen the left claw, and then remove the front panel. 3) Remove the terminal cover. ( $\Phi$ 4 × 8, 2 screws and claw) 4) Remove the power and indoor/outdoor connection wires from the terminals. 5) Remove the top cover. ( $\Phi$ 4 × 10, 6 hexagon screws) 2. Attachment 1) Attach the top cover. ( $\Phi$ 4 × 10, 6 hexagon screws) 2) Connect the power and indoor/outdoor connection Terminal cover wires to the terminal. NOTE Top cover The power and indoor/outdoor connection wires should be fixed in place along the crossing pipes using commercially available code clamps so as to avoid any contact with the compressor, gas side valve, gas side piping, and discharge pipe. 3) Attach the terminal cover. ( $\Phi$ 4 × 8, 2 screws and claw) 4) Attach the front panel. ( $\Phi$ 4 × 10, 3 hexagon screws)

### 2-2. HWT-801HW-E(TR), HWT-1101HW-E(TR), HWT-801HRW-E, HWT-1101HRW-E

No.	Exchange parts name	Work procedure	Remarks
2	Plate stay	1. Detachment	Plate stay
		1) Following to work of Detachment of $①$ .	3
		<ol> <li>Remove the plate stay and base plate screws.</li> <li>(Φ4 × 10, 2 hexagon screws)</li> </ol>	
		3) Remove plate stay.	
		2. Attachment	
		Attach the plate stay in the reverse process of	
		"1. Detachment".	
			Base plate
3	Air-outlet cabinet	1. Detachment	Heat exchanger
	Cabinet	1) Following to work of Detachment of ①.	
		<ol> <li>Remove the screws from the Air-outlet cabinet and separate plate. (Φ4 × 8, 3 screws)</li> </ol>	
		<ol> <li>Remove the screws from the Air-outlet cabinet and base plate. (Φ4 × 10, 2 hexagon screws)</li> </ol>	Motor/base
		<ol> <li>Remove the screws from the Air-outlet cabinet and motor base. (Φ4 × 8, 2 screws)</li> </ol>	
		<ol> <li>Remove the screws from the Air-outlet cabinet and heat exchanger. (Φ4 × 8, 3 screws)</li> </ol>	Separate plate
		5 (* * * * * )	Ceparate plate
		2. Attachment	Air-outlet
		Attach the Air-outlet cabinet in the reverse process of "1. Detachment".	
			Base plate
<b>A</b>	Cida aabi	4. Detechment	
4	Side cabi- net (right)	<ol> <li>Detachment</li> <li>Following to work of Detachment of ①.</li> </ol>	Heat exchanger
		<ul> <li>2) Remove the screws securing the inverter assembly and side cabinet (right). (Φ4 × 8, 2 screws)</li> </ul>	
		<ul> <li>3) Remove the screws form the side cabinet (right) and valve fixing plate. (Φ4 × 8, 2 screws)</li> </ul>	The second secon
		<ol> <li>Remove the screws form the side cabinet (right) and piping panel (rear). (Φ4 × 10, 2 hexagon screws)</li> </ol>	Inverter
		<ol> <li>Remove the screws form the side cabinet (right) and base plate. (Φ4 × 10, 1 hexagon screw)</li> </ol>	assembly
		<ol> <li>Remove the screws from the side cabinet (right) and heat exchanger. (Φ4 × 10, 3 hexagon screws)</li> </ol>	Side cabinet (right)
			Professor
		2. Attachment	
		Attach the side cabinet (right) in the reverse process of "1. Detachment".	piping panel
			Valve fixing plate (rear)

No.	Exchange parts name	Work pr	ocedure	Remarks
5	Electrical	1. Compressor, Fan IPD	OU (MCC-1705)	Fig. 5-1
	IPDU (MCC-1705)	"Detachment (Compressor, 1).Following to work of Deta	Fan IPDU)" achment of ①.	
		WAF	RNING	
		For 1 minute after the powers semble the inverter to prevent	er is turned off, do not disas- vent an electric shock.	erter box
		<ol><li>Remove all connectors of</li></ol>		Screws
		NOTE		
		When removing the connect of the housing.	tors, release the safety lock	
		<ul> <li>box hooks. [Fig. 5-4]</li> <li>6).Remove the screws and (Φ4 × 8, 4 screws) [Fig. 5</li> <li>7).Remove the screws and (Φ3 × 14, 3 screws) [Fig. 8).Remove the heat sink sc sink. [Fig. 5-7]</li> <li>"Attachment (Compressor,</li> </ul>	5-5] remove the heat sink duct. 5-6] rews and remove the heat Fan IPDU)" I in the reverse process of "De-	Fig. 5-2 Fig. 5-2 Binding band (A) Binding band (C) Binding band (D) Binding band (E)
		NOTE		
		Coat the heat sink on the IP silicone uniformly before ins Fix cables with binding band binding band". Please following below tight	talling the heat sink. I as shown fig "Fix cables with	Fig. 5-3
			Tightening torque	CN300 CN609
		Heat sink screw (Φ3)	0.5 N • M	CN690
		Screw of Φ4	1.2 N • M	
		Screw of Φ6	2.5 N • M	CN20
				CN22
				Compressor lead connector

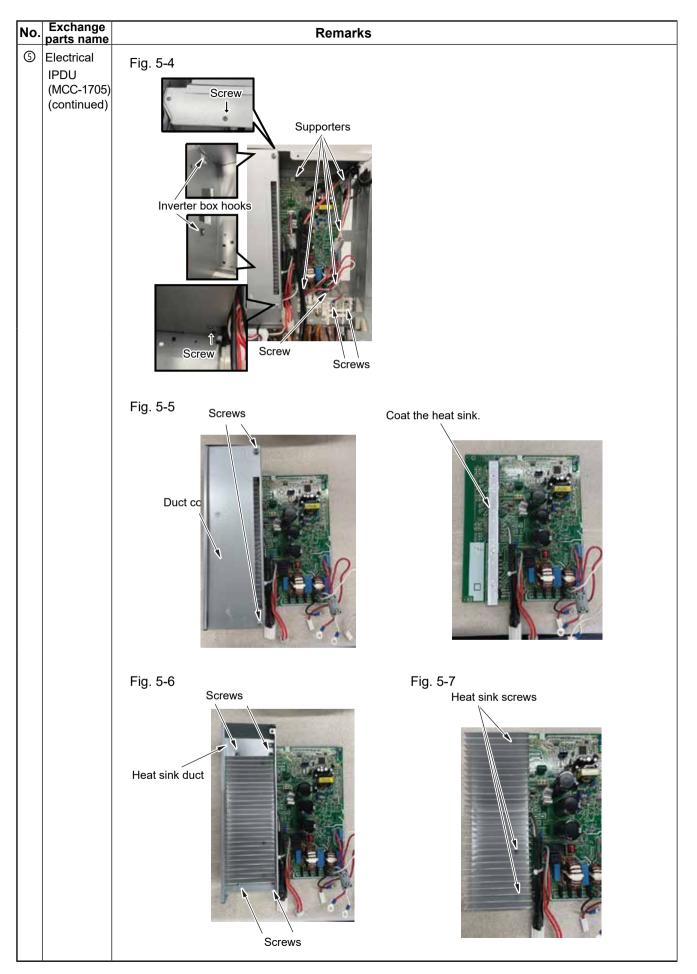

No.	Exchange parts name	Remarks	
\$	Electrical IPDU (MCC-1705) (continued)	"Fix cables with binding band"	
	(continued)	<b>[Binding band (A)]</b> Fix cables. (Board wires (P200, P201, P202) and connecters (CN300, CN609)	<b>[Binding band (B)]</b> Fix cables. (Board wires (P01, P11, P12) and input power supply wires)
			Input power supply wires
		<b>[Binding band (C)]</b> Fix cables. (Board wires (P20, P21, P22 - P23, P200, P201, P202) and connecters (CN20, CN300, CN609)	<b>[Binding band (D)]</b> Fix cables. (Board wires (P05, P11, P12) and input power supply wires)
			Input power supply wires
		<b>[Binding band (E)]</b> Fix cables. (Board wires (P20, P21, P200, P201, P202) and connecters (CN20, CN22)	

Exchange parts name	Work procedure	Remarks
Electrical part	1. Interface CDB (MCC-1675)	Fig. 6-1 Screws
(MCC-1675) P.C.board	"Detachment (Interface CDB)" 1).Following to work of Detachment of ①.	
	WARNING	
	For 1 minute after the power is turned off, do not disas- semble the inverter to prevent an electric shock.	
	<ul> <li>2).Remove the fixed screws of the COVER-EP and remove the COVER-EP. (Φ4 × 8, 3screws) [Fig. 6-1]</li> <li>3).Remove all connectors connected to the Interface CDB. [Fig. 6-2]</li> <li>4) Detach the Interface CDB from 4 supporters [Fig. 6-3]</li> </ul>	Fig. 6-2
		CN02 CN805 CN807
	When removing the connectors, release the safety lock of the housing.	(CN709) CN707 CN707
	"Attachment (Interface CDB)" Attach the new Interface CDB in the reverse process of the "Detachment (Interface CDB)".	CN602 CN601 CN607 CN710 CN711 CN711 CN701
		Fig. 6-3 Supporters
Reactor	<ol> <li>Detachment (Reactor)         <ol> <li>Following to work of Detachment of ④</li> <li>Remove the connector of the reactor lead wire connected to the reactor. (2 positions)</li> <li>Remove the reactor. (Φ4 × 8, 2 screws)</li> </ol> </li> <li>Attachment (Reactor)         <ol> <li>Attach the reactor in the reverse process of the "1. Detachment (Reactor)".</li> </ol> </li> </ol>	Reactor Lead × 2
	parts name Electrical part CDB (MCC-1675) P.C.board	parts name       Work procedure         Electrical part CDB (MCC-1675)       *Detachment (Interface CDB)" 1).Following to work of Detachment of ①.         WARNING       For 1 minute after the power is turned off, do not disas- semble the inverter to prevent an electric shock.         2).Remove the fixed screws of the COVER-EP and remove the COVER-EP. (04 × 8, 3screws) [Fig. 6-1]         3).Remove all connectors connected to the Interface CDB. [Fig. 6-2]         4).Detach the Interface CDB from 4 supporters. [Fig. 6-3]         NOTE         When removing the connectors, release the safety lock of the housing.         "Attachment (Interface CDB)" Attach the new Interface CDB in the reverse process of the "Detachment (Interface CDB)"         Reactor       1. Detachment (Reactor) 1) Following to work of Detachment of ④         2) Remove the connector of the reactor lead wire connected to the reactor. (04 × 8, 2 screws)         2) Remove the reactor. (04 × 8, 2 screws)         2. Attachment (Reactor) Attach the reactor in the reverse process of the

No.	Exchange parts name	Work procedure	Remarks
8	Fan motor	<ol> <li>1.Detachment         <ol> <li>Following to work of Detachment of ③.</li> <li>Make sure that the fan motor and the propeller fan stop. Remove the flange nut from the fan motor and propeller fan.                 <ul> <li>Loosen the flange nut by turning clock wise. (To tighten the flange nut, turn it counter clockwise)</li> <li>Remove the propeller fan.</li> <li>Following to work of Detachment of ⑤, 1) to 3).</li> </ul> </li> </ol></li> </ol>	Propeller fan Fan motor
		<text><section-header><text><text></text></text></section-header></text>	<complex-block></complex-block>

No.	Exchange	Work procedure	Remarks
<b>No.</b> ⑧	Exchange parts name Fan motor (continued)	<ul> <li>9) Cut the binding bands for the air duct fixing fan motor and the motor base (2 position ).</li> <li>10) Loosen the two claws on the motor base.</li> <li>11) Remove the fixing screws (4 positions) while holding the fan motor so as not to fall it. (Shoulder screw with captive washer Φ4 × 20, 4 screws)</li> <li>2. Attachment Attach the Fan motor in the reverse process of "1. Detachment". * Precautions when assembling the fan motor • Tighten the flange nut to 4.95 N*m (50 kgf-cm). • To prevent the fan motor leads from coming in contact</li></ul>	Remarks Claws Claws Claws Motor base Binding bands
		<ul> <li>To prevent the fan motor leads from coming in contact with the propeller fan ensure to adjust the length of the fan motor lead fixing rubber so that the fan motor lead has no slack.</li> <li>Attach the fan motor lead fixing rubber to the separate plate so that the projection is on the refrigeration cycle side.</li> <li>Ensure to bundle in the part where a binding band was removed with a commercially available binding band.</li> <li>Fix the clamp filter again in the place where it has been removed.</li> </ul>	<image/>

No.	Exchange parts name	Work procedure	Remarks			
9	Compressor and compressor lead	1.Detachment	Piping panel (front) Piping panel (rear)			
		When removing the brazing part of the suction / discharge pipe of the compressor, remove the brazing part in a well- ventilated place after recovering the refrigerant. If recovery is insufficient, the refrigerant and refrigerating machine oil may blow, causing injury.				
		<ol> <li>Recover refrigerant gas.</li> <li>Following to work of Detachment of ④.</li> <li>Remove the piping panel (front). Remove the screws from piping panel (front) and base plate. (Φ4 × 10, 2 hexagon screws) Remove the screws from the piping panel (front) and piping panel (rear). (Φ4 × 10, 1 hexagon screw)</li> <li>Remove the piping panel (rear). Remove the screws on the piping panel (rear) and the bottom plate. (Φ4 × 10, 2 hexagon screws)</li> <li>Remove the valve fixing plate Remove the screws for the valve fixing plate and partition plate. (Φ4 × 8, 1 screw) Remove two bolts at liquid valve side and valve fixing plate. (DELTITE screw M6 × 15: 2 pcs) Remove two bolts at gas valve side and valve fixing plate. (DELTITE screw M6 × 15: 2 pcs)</li> <li>Remove the pipe cover and TD sensor fixed with the discharge pipe with a binding band.</li> <li>Remove the sound insulation board (upper, inner, and outer).</li> </ol>	Screw Valve fixing screws Liquid valve Gassvalve The sound insulation board (inner ring) board (inner ring) Compressor lead connector Binding Nerter Compressor lead connector Compressor lead connector			
		<ul> <li>8) Remove the compressor' terminal cover (two claws) and compressor lead and compressor case thermostat (one claw).</li> <li>9) Cut the binding band fixing to the inverter box.</li> <li>10) Remove the connector for the compressor lead to remove the compressor lead. (Keep the ferrite core attached to the electric parts box.)</li> <li>11) Remove the discharge and suction pipes connected to the compressor using a burner.</li> </ul>	Pipe cover Discharge pipe TD sensor The sound insulation The sound insulation			
						Ensure extreme caution when removing piping by melting the weld with a burner as fire may result if there is any oil within the piping.
		NOTE				
		Carefully avoid contact with the 4-way valve and 2-way valve and PMV with the flame (could result in a malfunction).	Compressor lead Compressor case (Red • White • Black) thermostat			
			<ul> <li>12) Remove the refrigeration cycle discharge and suction pipes by pulling them upwards.</li> <li>13) Remove the compressor bolts securing the compressor to the base plate. (H13 × 3 positions)</li> <li>14) Pull the compressor forwards.</li> </ul>	Discharge pipe (Remove here) Suction pipe (Remove here) tere tere tere tere tere tere tere		
		The compressor weighs at least 15 kg. Ensure two people carry out the work.				

No.	Exchange parts name	Work procedure	Remarks	
9		2. Attachment	Compressor lead connector	
	compressor lead	lead	<ol> <li>Attach the compressor in the reverse process of "1. Detachment".</li> </ol>	
	(continued)	<ul> <li>Also ensure to replace the compressor lead after replacing the compressor.</li> </ul>		
		<ul> <li>Install the sound insulation board (inner and outer) through the space between the compressor and the piping, and between the pipes and separate plate as shown on the right.</li> </ul>	Ferrite core	
		3. Vacuum		
		<ol> <li>Connect the vacuum pump to the charge port of the liquid and gas pipe valves and the check joint on the high pressure side, and then operate the vacuum pump.</li> </ol>	Pull out the compressor lead and compressor case thermostat lead from this gap.	
		<ol> <li>Vacuum until the vacuum low pressure gauge reaches 1 (mmHg).</li> </ol>		
		NOTE		
		Fully open the electronic control valve before the vacuum process. If closed the vacuum pipe between the liquid pipe valve and electronic control valve of the outdoor unit may not be able to be drawn through.		
		Method for forcibly fully opening the electronic control valve	Wrap the seam of the sound insulation	
		<ul> <li>Turn on the power supply breaker.</li> <li>Ensure that D805 of the LED indication of the outdoor is</li> </ul>	(inner) and sound insulation (outer) about this position.	
		<ul> <li>Push and hold SW01 down for at least 5 seconds or to</li> </ul>		
		<ul> <li>Push and hold SW01 down for at least 3 seconds of to confirm that D804 is slowly flashing (once/second).</li> <li>Push SW01 several times until the LED indications (D800 to D804) become the following.</li> </ul>		
		D800 D801 D802 D803 D804		
		○     ●     ○       ○: Go ON,     ●: Go OFF,     ◎: flash (5 times/sec.)		
		Push SW02 and D805 will start rapidly flashing.	Push redundant compressor lead,	
			<ul> <li>Push and hold SW02 down for at least 5 seconds and D804 will start slowly flashing.</li> <li>Once D805 lights up the PMV will start to open.</li> <li>After 30 seconds turn off the power breaker.</li> </ul>	compressor case thermostat lead into a clearance between sound insulation board (inner) and sound insulation board (outer).
		LED indicator	Pull out the compressor lead, the compressor case thermostat lead	
		The solution must be serviced with a finger.	from the gap of the sound insulation	
		D800-D805 SW01 SW02		
		4. Refrigerant encapsulation	Push the sound insulation plate (inner and	
		<ol> <li>Add the amount of refrigerant determined by the pipe length using the charge port of the valve.</li> </ol>	upper) into the inside of the sound insulation (outer) securely so that there is no clearance between sound insulation (upper) and sound insulation(outer)	

No.	Exchange parts name	Work procedure	Remarks
0	PMV coil	<ol> <li>Detachment         <ol> <li>Following to work of Detachment of ④.</li> <li>Cut the binding band (4 positions) on the back surface</li> <li>Pull the connector for PMV coil out of CDB</li> <li>Remove the coil from the PMV body by rotating the coil (about 45°) while drawing the coil upward.</li> </ol> </li> <li>Attachment         Attachment"         <ol> <li>Fix the coil positioning protrusions securely in the concavities of the PMV body. (Fix the coil in the direction where lead wire comes out at the body's left diagonally behind.)</li> </ol> </li> </ol>	Cut the binding band
		2) Attach the PMV coil connector to the CDB P.C. board.	Cut the binding band
1	4-way valve coil	<ul> <li>1. Detachment <ol> <li>Following to work Detachment ④</li> <li>Cut the binding band (5 positions) on the back surface.</li> <li>Pull the connector for 4-way valve coil out of CDB P.C.board.</li> <li>Remove the 4-way valve coil.(M5 screw)</li> </ol> </li> <li>2. Attachment Attachment the 4-way valve coil in the reverse process of "1.Detachment" *Fix the 4-way valve coil with its lead wire upward. *Be sure to fix it with the removed screw. 4-way valve coil lead wire (Upper side) Cut the binding band Cut the binding band Cut the binding band Cut the binding band Attachment *Content of the top of top of the top of top of the top of the</li></ul>	Cut the binding band Cut the binding band Cut the binding band Cut the binding band

No.	Exchange parts name	Work procedure	Remarks
	Liquid injection line PMV coil	<ol> <li>Detachment         <ol> <li>Following to work of Detachment of ④.</li> <li>Cut the binding band (4 positions) on the back surface</li> <li>Pull the connector for PMV coil out of CDB P.C. board.</li> </ol> </li> <li>Attachment         Attach the PMV coil in the reverse process of             "1. Detachment"         <ol> <li>Fix the coil positioning protrusions securely in the concavities of the PMV body.</li> <li>(Fix the coil in the direction where lead wire comes out at the body's left diagonally behind.)</li> </ol> </li> <li>Attach the PMV coil connector to the CDB P.C. board.</li> </ol>	Cut the binding band
		Liquid injection line PMV coil	<text></text>
	2-way valve coil	<ul> <li><b>1. Detachment</b> <ol> <li>Following to work Detachment (a)</li> <li>Cut the binding band (4 positions) on the back surface.</li> <li>Pull the connector for 2-way valve coil out of CDB P.C.board.</li> <li>Remove the 2-way valve coil.(M4 screw)</li> </ol> </li> <li><b>2. Attachment</b> Attachment the 2-way valve coil in the reverse process of "1.Detachment" <b>2. Attachment</b> Constrained by the process of "1.Detachment" <b>2. Provide the process of a state of the process of th</b></li></ul>	

No.	Exchange parts name	Work procedure	Remarks
()	Fan guard	<ul> <li><b>1. Detachment</b></li> <li>1) Following to work of Detachment of ③</li> <li><b>NOTE</b></li> </ul>	Screws
		Do the work on a cardboard or a cloth to prevent the product from being scratched.	
		<ul> <li>2) Remove the 4 screws that secure the fan guard. (Φ4 × 10, hexagonal screws)</li> <li>3) Remove the Air outlet cabinet and place the fan guard side facing down.</li> <li>4) Remove the craws (4 places) of the fan guard.</li> <li>2. Attachment <ol> <li>Hook the hooking claws from the front side and press the craws (4 places) by hand to fix them in place.</li> <li>Fix the fan guard to the air outlet cabinet with 4 screws. (Φ 4 × 10, hexagon screws)</li> </ol> </li> </ul>	Screws
		NOTE	Hooking craws
		Ensure that all the claws are fixed in their specified position.	Hooking craws
6	[Reference] Sensor mount positions	<ul> <li>1) TD sensor: discharge pipe</li> <li>2) TL sensor: heat exchanger upside</li> <li>3) TS sensor: 4-way valve - between accumulator</li> <li>4) TE sensor: lowest capillary joint</li> <li>5) TO sensor: Heat exchange surface</li> <li>1) TD sensor</li> <li>2) TL sensor</li> <li>3) TD sensor</li> <li>2) TL sensor</li> <li>3) TD sensor</li> <li>2) TL sensor</li> <li>3) TD sensor</li> <li>3) TD sensor</li> <li>3) TD sensor</li> <li>3) TD sensor</li> <li>4) TD sensor</li> <li>4) TD sensor</li> <li>2) TL sensor</li> <li>3) TL sensor</li> <li>3) TL sensor</li> <li>3) TL sensor</li> <li>3) TL sensor</li> <li>4) TD sensor</li> <li>4) TD sensor</li> <li>4) TD sensor</li> <li>5) TD sensor</li> <li>5) TD sensor</li> <li>6) TD sensor</li> <li>7) TL sensor</li> <li>7) TL sensor</li> <li>7) TL sensor</li> <li>7) TL sensor</li> <li>8) TL sensor</li> <li>9) TL sensor</li> <li>9)</li></ul>	2) TL sensor 2) TL sensor 5) TO sensor 1) TD sensor 3) TS sensor 4) TE sensor
		3) TS sensor 4) TE sensor	

# 2-3. HWT-1401HW-E(TR), HWT-1401HRW-E

Common procedures Front panel Top cover	WARNING     Stop operation of the Air to water heat pump system and turn off breaker switch.	Front panel			
Front panel					
	Ensure wearing of gloves when performing any work in order to avoid injury from parts, etc.	Left claws			
	1. Detachment	Right claws			
	<ol> <li>Stop operation of the Air to water heat pump system, and turn off the main switch of the breaker for Air to water heat pump system.</li> </ol>				
	2) Remove the front panel. (Φ4 x 10, 3 hexagon screws)				
	(1)After removing the screws slide the front panel downwards.				
	(2)Pull the front panel forwards and then loosen the right claw.	Screws			
	(3)Pull the front panel to the right, loosen the left claw, and then remove the front panel.				
	3) Remove the inverter cover. (Φ4 x 8, 2 screws)				
	<ol> <li>Remove the power and indoor/outdoor connection wires from the terminals.</li> </ol>				
				5) Remove the top cover. (Φ4 x 10, 6 hexagon screws)	Inverter cover
	2. Attachment				
	1) Attach the top cover. (Φ4 x 10, 6 hexagon screws)				
	<ol> <li>Connect the power and indoor/outdoor connection wires to the terminal.</li> </ol>				
	NOTE	Top cover			
	The power and indoor/outdoor connection wires should be fixed in place along the crossing pipes using commercially available code clamps so as to avoid any contact with the compressor, gas side valve, gas side piping, and discharge pipe.				
	3) Attach the terminal cover. (Φ4 x 8, 2 screws and claw)				
	4) Attach the front panel. (Φ4 x 10, 3 hexagon screws)				
		<ul> <li>order to avoid injury from parts, etc.</li> <li><b>1. Detachment</b> <ol> <li>Stop operation of the Air to water heat pump system, and turn off the main switch of the breaker for Air to water heat pump system.</li> <li>Remove the front panel. (Φ4 x 10, 3 hexagon screws)</li> <li>After removing the screws slide the front panel downwards.</li> <li>Pull the front panel forwards and then loosen the right claw.</li> <li>Pull the front panel to the right, loosen the left claw, and then remove the front panel.</li> <li>Remove the inverter cover. (Φ4 x 8, 2 screws)</li> <li>Remove the top cover. (Φ4 x 10, 6 hexagon screws)</li> </ol> </li> <li>Attachment <ol> <li>Attach the top cover. (Φ4 x 10, 6 hexagon screws)</li> <li>Connect the power and indoor/outdoor connection wires to the terminal.</li> </ol> </li> <li>MOTE The power and indoor/outdoor connection wires should be fixed in place along the crossing pipes using commercially available code clamps so as to avoid any contact with the compressor, gas side valve, gas side piping, and discharge pipe. 3) Attach the terminal cover. (Φ4 x 8, 2 screws and claw)</li></ul>			

No.	Exchange parts name	Work procedure	Remarks
2	Plate stay	<ol> <li>Detachment         <ol> <li>Following to work of Detachment of ①.</li> <li>Remove the plate stay and base plate screws. (Φ4 × 10, 2 hexagon screws)</li> <li>Remove plate stay.</li> </ol> </li> <li>Attachment         Attach the plate stay in the reverse process of "1. Detachment".     </li> </ol>	Plate stay
3	Air-outlet cabinet	<ol> <li>Detachment         <ol> <li>Following to work of Detachment of ①.</li> <li>Remove the screws from the Air-outlet cabinet and separate plate. (Φ4 × 8, 3 screws)</li> <li>Remove the screws from the Air-outlet cabinet and base plate. (Φ4 × 10, 2 hexagon screws)</li> <li>Remove the screws from the Air-outlet cabinet and motor base. (Φ4 × 8, 2 screws)</li> <li>Remove the screws from the Air-outlet cabinet and heat exchanger. (Φ4 × 8, 3 screws)</li> </ol> </li> <li>Attachment         Attach the Air-outlet cabinet in the reverse process of "1. Detachment".     </li> </ol>	Heat exchanger Motor/base Air-outlet cabinet Base plate
•	Side cabi- net (right)	<ol> <li>Detachment         <ol> <li>Following to work of Detachment of ①.</li> <li>Remove the screws securing the inverter assembly and side cabinet (right). (Φ4 × 8, 2 screws)</li> <li>Remove the screws form the side cabinet (right) and valve fixing plate. (Φ4 × 8, 2 screws)</li> <li>Remove the screws form the side cabinet (right) and piping panel (rear). (Φ4 × 10, 2 hexagon screws)</li> <li>Remove the screws form the side cabinet (right) and base plate. (Φ4 × 10, 1 hexagon screw)</li> <li>Remove the screws from the side cabinet (right) and base plate. (Φ4 × 10, 3 hexagon screws)</li> </ol> </li> <li>Remove the screws from the side cabinet (right) and base plate. (Φ4 × 10, 3 hexagon screws)</li> </ol>	Heat exchanger

No.	Exchange parts name	Work pro	ocedure	Remarks	
5	Electrical	1. Compressor, Fan IPDI	U (MCC-1705)	Fig. 5-1	
	IPDU (MCC-1705)	"Detachment (Compressor, 1).Following to work of Deta	Fan IPDU)" chment of ①.	Screws (Compres- sor lead) Spacer & CN201 (White) Reactor lead CN200 CN202 connector (Black) CN300 CN	
		WAR	NING		
		For 1 minute after the power semble the inverter to prevent			
		<ul> <li>φ4 × 8, 1 screw, φ4 × 15, (compressor lead)) [Fig. 5-1</li> <li>3).Remove 6 supporters. [Fi</li> <li>4).Remove 2 clamp filters (Z</li> <li>ZCAT3035-1330 [Fig.5-1]</li> <li>5) Remove 2 spacers. [Fig.5</li> <li>6) Remove all Fan IPDU par</li> </ul>	4 screws, φ3 × 20, 1 screw, 2 screws, φ4 × 8, 3 screws [] g. 5-2] CCAT2132-1130 [Fig.5-2], ]) 5-1]		
		NOTE		Spacer / CDB supply wire Indoor supply wire Power supply wire	
		When removing the connect of the housing.	ors, release the safety lock		
		tachment (Compressor, Fan	in the reverse process of "De-	Fig. 5-2	
		NOTE Coat the heat sink on the IPE silicone uniformly before insta Please following below tighte	alling the heat sink.		
			Tightening torque		
		Heat sink screw (Φ3)	0.5 N • M		
		Heat sink screw (Φ4)	1.2 N • M		
		Screw of Φ4	1.2 N • M	ZCAT2132-1130	
			Screw of Φ4 (Compressor lead)	1.2 N • M	Supporters
				Screw of Φ6	2.5 N • M
				Fig. 5-3 Fan heat sink	
				Spacer (Bush)	
				Fan-IPM Screws Spacer (Collar)	

No.	Exchange parts name	Work procedure	Remarks
6	Electrical part CDB	1. Interface CDB (MCC-1675)	Fig. 6-1 CN01 CN707 CN709
	(MCC-1675) P.C.board	"Detachment (Interface CDB)" 1).Following to work of Detachment of ①.	
		WARNING	CN02
		For 1 minute after the power is turned off, do not disas- semble the inverter to prevent an electric shock.	CN607
		<ul> <li>2).Remove all connectors connected to the Interface CDB. [Fig. 6-1]</li> <li>3).Detach the Interface CDB from 4 supporters. [Fig. 6-2]</li> </ul>	CN710 CN711 CN807 CN701 CN604
		NOTE	CN600 CN603 CN600 CN602
		When removing the connectors, release the safety lock of the housing.	CN601
		"Attachment (Interface CDB)" Attach the new Interface CDB in the reverse process of the "Detachment (Interface CDB)".	Fig. 6-2
	Reactor	<ol> <li>Detachment (Reactor)         <ol> <li>Cut the binding band (A) (Thickness: 1.0 mm, Width: 3.5 mm) bundling the reactor leads.</li> <li>Remove the connector of the reactor lead wire connect- ed to the reactor. (each 2 positions)</li> <li>Remove the reactor. (Φ4 × 8, each 2 screws)</li> </ol> </li> <li>Attachment (Reactor Attach the reactor in the reverse process of the "1. De- tachment (Reactor)".</li> </ol>	Reactor lead × 2 Reactor lead × 2 Binding band (A)

No.	Exchange parts name	Work procedure	Remarks
8	Fan motor	<ol> <li>Detachment         <ol> <li>Following to work of Detachment of ③.</li> <li>Make sure that the fan motor and the propeller fan stop. Remove the flange nut from the fan motor and propeller fan.                 <ul> <li>Loosen the flange nut by turning clock wise. (To tighten the flange nut, turn it counter clockwise)</li> <li>Remove the propeller fan.</li> <li>Following to work of Detachment of ⑤, 1) to 3).</li> <li>Cut the binding band (A) (Thickness: 1.0 mm, Width: 3.5 mm) bundling the leads.</li> <li>Remove the connector for the fan motor lead. (The clamp filter is removed and used when installing)</li> <li>Remove the fan motor lead from the fixing rubber for</li> <li>Remove the fan motor lead from the fixing rubber for</li> </ul> </li> </ol></li> </ol>	Propeller fan Fan motor
		separate plate.	Binding band (A)
			Fan motor lead fixing rubber Separate plate

No.	Exchange parts name	Work procedure	Remarks
8	Fan motor (continued)	<ul> <li>8) Cut the binding bands for the air duct fixing fan motor and the motor base (2 position ).</li> <li>9) Loosen the two claws on the motor base.</li> <li>10) Remove the fixing screws (4 positions) while holding the fan motor so as not to fall it. (Shoulder screw with captive washer Φ4 × 20, 4 screws)</li> <li>2. Attachment Attach the Fan motor in the reverse process of "1. Detach- ment".</li> </ul>	Motor base Claws Claws Separate plate Binding bands
		<ul> <li>* Precautions when assembling the fan motor</li> <li>Tighten the flange nut to 4.95 N*m (50 kgf-cm).</li> <li>To prevent the fan motor leads from coming in contact with the propeller fan ensure to adjust the length of the fan motor lead fixing rubber so that the fan motor lead has no slack. Attach the fan motor lead fixing rubber is on the refrigeration cycle side.</li> <li>Ensure to bundle in the part where a binding band was removed with a commercially available binding band.</li> <li>Fix the clamp filter again in the place where it has been removed.</li> </ul>	<text></text>

No.	Exchange parts name	Work procedure	Remarks
9	-	1.Detachment	HU.
	lead	When removing the brazing part of the suction / discharge pipe of the compressor, remove the brazing part in a well- ventilated place after recovering the refrigerant. If recovery is insufficient, the refrigerant and refrigerating machine oil may blow, causing injury.	Piping panel (front) Piping panel (rear) Screw Valve fixing screws
		<ol> <li>Recover refrigerant gas.</li> <li>Following to work of Detachment of ④.</li> <li>Remove the piping panel (front). Remove the screws from piping panel (front) and base plate. (Φ4 × 10, 2 hexagon screws) Remove the screws from the piping panel (front) and piping panel (rear). (Φ4 × 10, 1 hexagon screw)</li> <li>Remove the piping panel (rear). Remove the screws on the piping panel (rear) and the bottom plate. (Φ4 × 10, 2 hexagon screws)</li> <li>Remove the valve fixing plate Remove the screws for the valve fixing plate and partition plate. (Φ4 × 8, 1 screw) Remove two bolts at liquid valve side and valve fixing plate. (DELTITE screw M6 × 15: 2 pcs) Remove two bolts at gas valve side and valve fixing plate. (DELTITE screw M6 × 15: 2 pcs)</li> <li>Remove the pipe cover and TD sensor fixed with the discharge pipe with a binding band.</li> <li>Remove the sound insulation board (upper, inner, and</li> </ol>	The sound insulation board (top)
		<ul> <li>outer).</li> <li>8) Remove the compressor' terminal cover (two claws) and compressor lead and compressor case thermostat (one claw).</li> <li>9) Cut the binding band fixing to the inverter box.</li> <li>10) Remove the compressor lead. (Keep the ferrite core attached to the electric parts box.)</li> <li>11) Remove the discharge and suction pipes connected to the compressor using a burner.</li> </ul>	Fipe cover TD sensor Discharge Pipe Pipe Pipe Pipe Pipe Pipe Pipe Pip
		NOTE	
		Carefully avoid contact with the 4-way valve and 2-way valve and PMV with the flame (could result in a malfunction).	Compressor lead (Red White Black) thermostat
		<ul> <li>12) Remove the refrigeration cycle discharge and suction pipes by pulling them upwards.</li> <li>13) Remove the compressor bolts securing the compressor to the base plate. (H13 × 3 positions)</li> <li>14) Pull the compressor forwards.</li> <li><b>NOTE</b></li> <li>The compressor weighs at least 15 kg. Ensure two people carry out the work.</li> </ul>	(Remove here) Suction pipe (Remove here) Compressor bolts (H13 × 3 positions)

No.	Exchange parts name	Work procedure	Remarks
9		2. Attachment	
		<ol> <li>Attach the compressor in the reverse process of <b>"1. Detachment".</b> </li> </ol>	
		<ul> <li>Also ensure to replace the compressor lead after replacing the compressor.</li> </ul>	
		<ul> <li>Install the sound insulation board (inner and outer) through the space between the compressor and the piping, and between the pipes and separate plate as shown on the right.</li> </ul>	Ferrite core
		3. Vacuum	
		<ol> <li>Connect the vacuum pump to the charge port of the liquid and gas pipe valves and the check joint on the high pressure side, and then operate the vacuum pump.</li> </ol>	Pull out the compressor lead and compressor case thermostat lead from this gap.
		<ul> <li>2) Vacuum until the vacuum low pressure gauge reaches 1 (mmHg).</li> <li>NOTE</li> </ul>	
		Fully open the electronic control valve before the vacuum process. If closed the vacuum pipe between the liquid pipe valve and electronic control valve of the outdoor unit may not be able to be drawn through.	
		Method for forcibly fully opening the electronic control valve	Wrap the seam of the sound insulation
		• Turn on the power supply breaker.	(inner) and sound insulation (outer) about this position.
		<ul> <li>Ensure that D805 of the LED indication of the outdoor is lit up. If D805 is not lit up (off or flashing) then push and hold down SW01 and SW02 at the same time for at</li> </ul>	
		least 5 seconds and check that D805 lights up.	
		<ul> <li>Push and hold SW01 down for at least 5 seconds or to confirm that D804 is slowly flashing (once/second).</li> </ul>	
		<ul> <li>Push SW01 several times until the LED indications (D800 to D804) become the following.</li> </ul>	
		D800 D801 D802 D803 D804	
		○     ●     ○     ●     ○       ○: Go ON, ●: Go OFF, ○: flash (5 times/sec.)	
		• Push SW02 and D805 will start rapidly flashing.	Push redundant compressor lead,
		<ul> <li>Push and hold SW02 down for at least 5 seconds and D804 will start slowly flashing.</li> <li>Once D805 lights up the PMV will start to open.</li> <li>After 30 seconds turn off the power breaker.</li> </ul>	compressor case thermostat lead into a clearance between sound insulation board (inner) and sound insulation board (outer).
		LED indicator	Pull out the compressor lead, the compressor case thermostat lead from the gap of the sound insulation
		CAUTION The solution must be specialized with a frager to a solution of the	
		D800-D805 SW01 SW02	4
		4. Refrigerant encapsulation	Push the sound insulation plate (inner and
		<ol> <li>Add the amount of refrigerant determined by the pipe length using the charge port of the valve.</li> </ol>	upper) into the inside of the sound insulation (outer) securely so that there is no clearance between sound insulation (upper) and sound insulation(outer)

No.	Exchange parts name	Work procedure	Remarks
	PMV coil	<ul> <li>1. Detachment <ol> <li>Following to work of Detachment of ④.</li> <li>Cut the binding band (B) (Thickness: 1.5 mm, Width: 4.6 mm) bundling the leads.</li> <li>Pull the connector for PMV coil out of CDB</li> <li>Remove the coil from the PMV body by rotating the coil (about 45°) while drawing the coil upward.</li> </ol> </li> <li>2. Attachment Attach the PMV coil in the reverse process of "1. Detachment" <ol> <li>Fix the coil positioning protrusions securely in the concavities of the PMV body. (Fix the coil in the direction where lead wire comes out at the body's left diagonally behind.)</li> <li>Attach the PMV coil connector to the CDB P.C. board.</li> </ol> </li> </ul>	PMV coil connector         Image: Second se
	4-way valve coil	<ul> <li><b>1. Detachment</b> <ol> <li>Following to work Detachment</li> <li>Cut the binding band (B) (Thickness: 1.5 mm, Width: 4.6 mm) bundling the leads.</li> <li>Pull the connector for 4-way valve coil out of CDB P.C.board.</li> <li>Remove the 4-way valve coil.(M5 screw)</li> </ol> </li> <li><b>2. Attachment</b> Attachment the 4-way valve coil in the reverse process of "1.Detachment" <ul> <li>*Fix the 4-way valve coil with its lead wire upward.</li> <li>*Be sure to fix it with the removed screw.</li> </ul></li></ul>	4-way valve coil connector <b>The second seco</b>

No.	Exchange parts name	Work procedure	Remarks
	Liquid injection line PMV coil	<ul> <li>1. Detachment <ol> <li>Following to work of Detachment of ④.</li> <li>Cut the binding band (B) (Thickness: 1.5 mm, Width: 4.6 mm) bundling the leads.</li> <li>Pull the connector for PMV coil out of CDB P.C. board.</li> </ol> </li> <li>2. Attachment Attach the PMV coil in the reverse process of "1. Detachment" <ol> <li>Fix the coil positioning protrusions securely in the concavities of the PMV body.</li> <li>(Fix the coil in the direction where lead wire comes out at the body's left diagonally behind.) </li> <li>2) Attach the PMV coil connector to the CDB P.C. board.</li> </ol></li></ul>	Liquid injection line PMV coil connector   Function of the binding band (B) Liquid injection line PMV coil
	2-way valve coil	<ol> <li>Detachment         <ol> <li>Following to work Detachment ④</li> <li>Cut the binding band (B) (Thickness: 1.5 mm, Width: 4.6 mm) bundling the leads.</li> <li>Pull the connector for 2-way valve coil out of CDB P.C.board.</li> <li>Remove the 2-way valve coil.(M4 screw)</li> </ol> </li> <li>Attachment         Attachment the 2-way valve coil in the reverse process of "1.Detachment"     </li> </ol>	<text></text>

No.	Exchange parts name	Work procedure	Remarks
1	Fan guard	<ul> <li><b>1. Detachment</b></li> <li>1) Following to work of Detachment of <sup>③</sup></li> <li><b>NOTE</b></li> </ul>	Screws
		Do the work on a cardboard or a cloth to prevent the product from being scratched.	
		<ol> <li>2) Remove the 4 screws that secure the fan guard. (Φ4 × 10, hexagonal screws)</li> <li>3) Remove the Air outlet cabinet and place the fan guard side facing down.</li> <li>4) Remove the craws (4 places) of the fan guard.</li> <li>2. Attachment         <ol> <li>1) Hook the hooking claws from the front side and press the craws (4 places) by hand to fix them in place.</li> <li>2) Fix the fan guard to the air outlet cabinet with 4</li> </ol> </li> </ol>	
		screws. (Ф4 × 10, hexagon screws)	Screws
		NOTE	Hooking craws
		Ensure that all the claws are fixed in their specified position.	Hooking craws
6	[Reference] Sensor mount positions	<ul> <li>1) TD sensor: discharge pipe</li> <li>2) TL sensor: heat exchanger upside</li> <li>3) TS sensor: 4-way valve - between accumulator</li> <li>4) TE sensor: lowest capillary joint</li> <li>5) TO sensor: Heat exchange surface</li> <li>1) TD sensor</li> <li>2) TL sensor</li> <li>2) TL sensor</li> <li>2) TL sensor</li> <li>3) TD sensor</li> <li>3) TS sensor</li> <li>3) TS sensor</li> <li>4) TE sensor</li> <li>2) TL sensor</li> <li>3) TS sensor</li> <li>4) TE sensor</li> </ul>	2) TL sensor 5) TO sensor 1) TD sensor 3) TS sensor 4) TE sensor

No.	Exchange parts name	Work procedure		Remarks						
1	Common procedures Front panel Top cover		o procedure No.① of "2 401HRW-E".	2-3. HWT-1401HW-E(T						
0	Plate stay		o procedure No. <sup>®</sup> of "2 401HRW-E".	2-3. HWT-1401HW-E(T						
3	Air-outlet cabinet		o procedure No.③ of "2 401HRW-E".	2-3. HWT-1401HW-E(T	ΈR),					
4	Side cabinet (right)		o procedure No.④ of "2 401HRW-E".	2-3. HWT-1401HW-E(T	R),					
5	Electrical IPDU (MCC-1780)	"Detachment(Compressor IPDI I)" - MCC-1780" for the location of each								
				RNING		Spacer Screw [Fig. 5-1]				
			ff the power supply of least 5 minutes for th	the outdoor unit and e capacitor to discharg	ge.					
		́scre (Φ3	ews.	nected to the IPDU bo 1 screw, Φ4×16, 4 scre						
		3) Rer 4) Rer	nove 6 suppoters. [Fig nove 3 clamp filters.	. 5-2] Г3035-1330×1) [Fig. 5-	1]					
		5) Rer	nove 2 spacers. [Fig. 5 nove Compressor IPD	5-1]	-					
		NOTE								
		When return the hou	emoving the connector sing.	s, release the safety lo	elease the safety lock of					
		Attach	hment(Compressor IPI the new IPDU board i chment (Compressor IF							
		NOTE								
		silicone		U board with the heat s lling the heat sink. Plea of screws.		ZCAT2132-0930 ZCAT3035-1330				
				Tightening torque						
			Screw of Φ3	0.55N • m						
			Screw of Φ4	1.20N • m						

## 2-4. HWT-801H8(R)W-E, HWT-1101H8(R)W-E, HWT-1401H8(R)W-E

No.	Exchange parts name	Work procedure	Remarks
5	Electrical IPDU (MCC-1780)		[Fig. 5-2]
6	Electrical IPDU (MCC-1781)	<ul> <li><b>1. Interface CDB &amp; FAN IPDU(MCC-1781)</b></li> <li>"Detachment(Interface CDB &amp; FAN IPDU)"</li> <li>1) Following to work of Detachment of ①.</li> </ul>	* See "5-5. Outdoor control board" - MCC-1781" for the location of each connector.
			[Fig. 6-1] Screw (for heat sink)
		Turn off the power supply of the outdoor unit and wait at least 5 minutes for the capacitor to discharge.         2) Remove all connectors connected to the Interface CDB & FAN IPDU. [Fig. 6-1].         3) Detach the Interface CDB & FAN IPDU from 4 suppoters. [Fig. 6-1]         4) Remove the heat sink from the Interface CDB & FAN IPDU by removing the 2 screws(Φ3×14).[Fig. 6-1]         * Use this heat sink as it is after replacing IPDU. <b>NOTE</b> When removing the connectors, release the safety lock of the housing.         "Attachment(Interface CDB & FAN IPDU)"         Attach the new CDB & IPDU board in the reverse process of "Detachment(Interface CDB & FAN IPDU)". <b>NOTE</b> Coat the heat sink on the IPDU board with the heat sink silicone uniformly before installing the heat sink. Please following below tighten torque of screws.	<image/>
		Tightening torque	
		Screw of Φ3         0.55N • m	

No.	Exchange parts name	Work procedure	Remarks
0	Reactor (Attached to the partition plate)	* Refer to procedure No.⑦ of "2-3. HWT-1401HW-E(TR), HWT-1401HRW-E".	
8	Reactor (Attached to the partition plate)	Refer to procedure No. <sup>®</sup> of "2-3. HWT-1401HW-E(TR), HWT-1401HRW-E". However, refer to Fig. 8-1 for the connector position on the board of the Fan motor.	[Fig. 8-1]
	Compressor and compressor lead	Refer to procedure No.  of "2-3. HWT-1401HW-E(TR), HWT-1401HRW-E". However, refer to Fig. 9-1 for the connector position on the board of the Compressor lead.	[Fig. 9-1]


No.	Exchange parts name	Work procedure	Remarks
0	PMV coil (Cycle)	Refer to procedure No. <sup>®</sup> of "2-3. HWT-1401HW-E(TR), HWT-1401HRW-E". However, refer to Fig. 10-1 for the connector position on the board of the PMV coil lead and the binding band (B).	[Fig. 10-1]         Image: PMV coil connector         Image: PMV coil connector
	4-way valve coil	Refer to procedure No. <sup>(1)</sup> of "2-3. HWT-1401HW-E(TR), HWT-1401HRW-E". However, refer to Fig. 11-1 for the connector position on the board of the PMV coil lead and the binding band (B).	[Fig. 11-1] 4-way valve coil connector

No.	Exchange parts name	Work procedure	Remarks
	Liquid	Refer to procedure No. <sup>®</sup> of "2-3. HWT-1401HW-E(TR), HWT-1401HRW-E". However, refer to Fig. 12-1 for the connector position on the board of the PMV coil lead and the binding band (B).	[Fig. 12-1] PMV coil connector
	2-way valve coil	Refer to procedure No. <sup>(1)</sup> of "2-3. HWT-1401HW-E(TR), HWT-1401HRW-E". However, refer to Fig. 13-1 for the connector position on the board of the PMV coil lead and the binding band (B).	<caption></caption>

No.	Exchange parts name	Work procedure	Remarks
14	Fan guard	Refer to procedure No.l of "2-3. HWT-1401HW-E(TR), HWT-1401HRW-E".	
6	[Reference] Sensor mount positions	Refer to procedure No.⑮ of "2-3. HWT-1401HW-E(TR), HWT-1401HRW-E".	
16	Reactor	Reactor CH-100	[Fig. 16-1] Reactor CH-100
	(Attached to the	1. Detachment(Reactor CH-100)	Reactor CH-100
	INV-BOX	1) Following to work of Detachment of ④.	
	back)	2) Disconnect the reactor lead from the reactor.	
	CH-100	3) Remove the reactor. (Φ4×8, 2 screws)	
	CH-68	2. Attachment(Reactor CH-100)	
		Attach the reactor in the reverse process of the "1. Detachment (Reactor CH-100)".	ICA-149-17C IEA INVI R
		Reactor CH-68	
		1. Detachment(Reactor CH-68)	
		1) Following to work of Detachment of ④.	
		2) Disconnect the reactor lead from the reactor.	
		3) Remove the reactor. (Φ4×8, 2 screws)	
		2. Attachment(Reactor CH-68)	
		Attach the reactor in the reverse process of the "1. Detachment (Reactor CH-68)".	
			Reactor lead (CH-68) (CH-100)
			Reactor CH-68

# For cooling installation

If user install the Hydro unit to place humidity location or high humidity region, also user use cooling mode, please attach moisture- proof parts which parts are contained in Hydro unit.

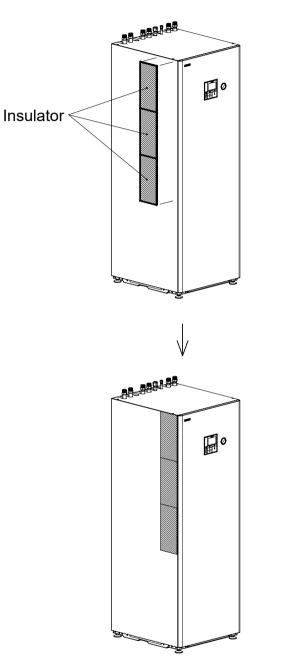

# **13**Periodic inspection items

For a long-term safe operation of this equipment, perform periodic inspection and parts replacement.

#### <Inspection items>


Hydro unit	Frequency	Periodic inspection details
1. Insulation measurement (Power source circuit / Heater circuit)	Annually	Insulation measurement with a mega tester
2. Power source measurement (No-load voltage)	Annually	Electronic voltage measurement: 220-240 V ±10%
3. Operation check	Annually	Hot water supply / Heating / *-Cooling operation check with remote controller
4. Refrigerant leakage / Water leakage inspection	Annually	Visual inspection and check with a leak tester: No leakage must be found
5. Water heat exchanger inspection (Internal dirt and clogging)	Annually	Checking for water dirtiness in a closed cycle, Cleaning
6. Inlet / Outlet water temperature measurement	Annually	Temperature measurement: Temperature measurement during an operation
7. Circulation pump inspection	Annually	No leakage or abnormal noise must be found (Replacement every 10 years: Charged)
8. Air vent valve inspection	Annually	Water leakage, Air vent
9. Expansion vessel	Annually	Visual check for charge pressure abnormality, water leakage, or corrosion
10. Heater assembly	Annually	Check for appearance damage, deformation, or loose terminal
11. Flow sensor	Annually	Operation check while running
12. Manometer	Annually	Water leakage, water pressure check
13. Safety valve	Annually	Water leakage, Appearance check, Drainage check
14. Water heat exchanger control board, Terminal block	Annually	Check for loose connector and connecting terminal


Hydro unit - hot water tank side	Frequency	Periodic inspection details
1. Strainer	Annually	<ol> <li>Shut off water above the strainer and depressurize and drain the water circuit.</li> <li>Turn the strainer valve so that the filter part faces up.</li> <li>Unscrew the strainer stopper, using an appropriate tool.</li> <li>Gently remove the filter element and remove any impurities (rinse, if necessary).</li> <li>Remove impurities from the ball seat in the head and the stopper (do not use sharp tools).</li> <li>Check the condition of the washer and filter element. (if damaged, replace with new ones).</li> <li>Gently put the filter element inside the stopper, and screw it carefully together into the head.</li> <li>Tighten the stopper, using the torque 15 Nm for DN20.</li> <li>Turn on water and check the seal at the tap stopper for possible leaks. (the strainer must be tight)</li> </ol>
2. Safety valve	Annually	Water leakage, Appearance check, Drainage check, Operate periodicall


Outdoor unit	Frequency	Periodic inspection details
1. Insulation measurement (Power source circuit / Compressor)	Annually	Insulation measurement with a mega tester
2. Power source measurement (No-load voltage / Rated operation)	Annually	Electronic voltage measurement: 220-240 V ±10% (Single phase type) 380-415 V ±10% (3 phase type)
3. Operation frequency (Outdoor unit operation check)	Annually	Frequency check by sensor information
4. Refrigerant leakage inspection	Annually	Visual inspection and check connection with a leak tester: No leakage must be found
5. Air heat exchanger inspection (Dirt and clogging)	Annually	Visual inspection, Clear clogging
6. Fan inspection (Scratch, damage)	Annually	Check for scratches or damages to the fan or abnormal motor sound
7. Cycle parts (Compressor, 4-way valve, Pulse motor valve)	Annually Annually	Operation check by trial run
8. Inverter control board, Terminal block	Annually	Check for loose connector and connecting terminal


Hot water cylinder (HWS-150CSHM3-E(-UK), 210CSHM3-E(-UK), 300CSHM3-E(-UK))	Frequency	Periodic inspection details
1. Insulation measurement (Power source circuit)	Annually	Insulation measurement with a mega tester
2. Power source measurement (No-load voltage)	Annually	Electronic voltage measurement: 220-240 V ±10%
3. Water leakage inspection	Annually	Visual inspection for leakage: No leakage must be found
4. Terminal block	Annually	Check for loose connector and connecting terminal
5. Heater assembly	Annually	Check for appearance damage, deformation, or loose terminal
6. Temperature. Pressure relief valve (Specification for UK only)	Annually	Drainage check


# Part exploded view, part list

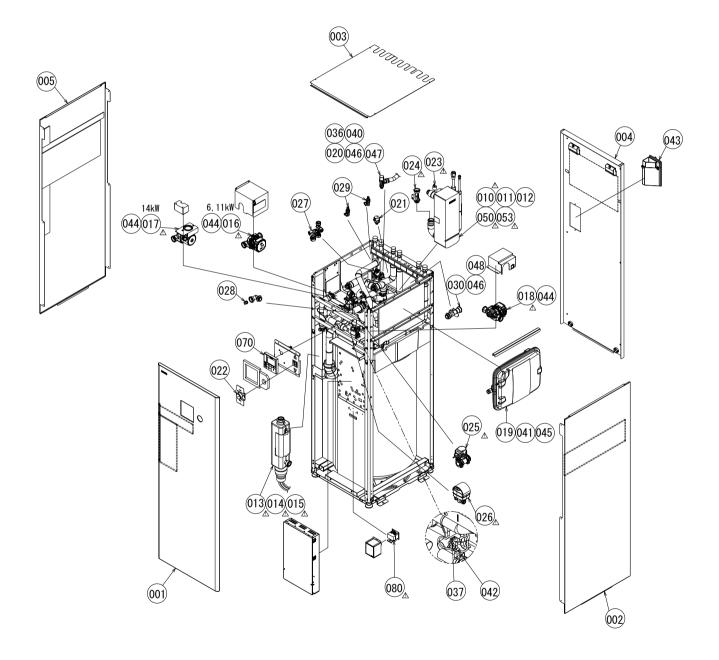


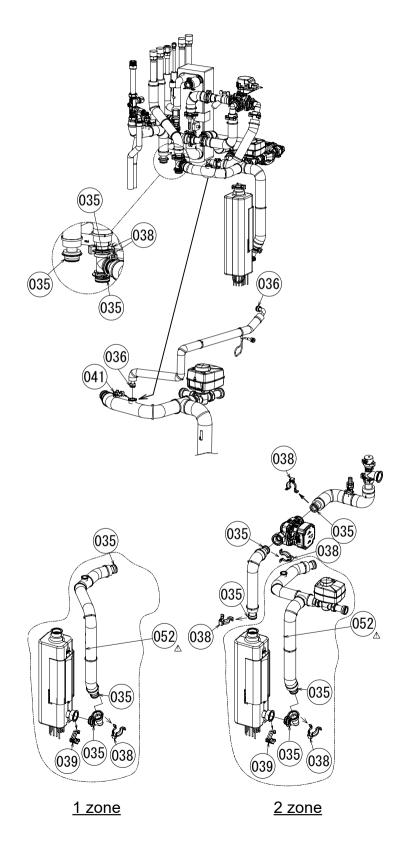

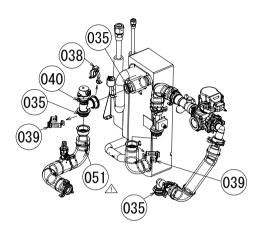


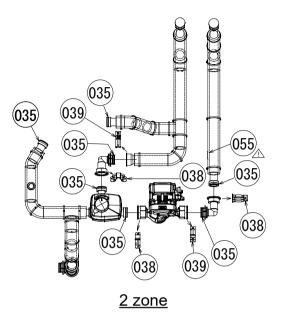


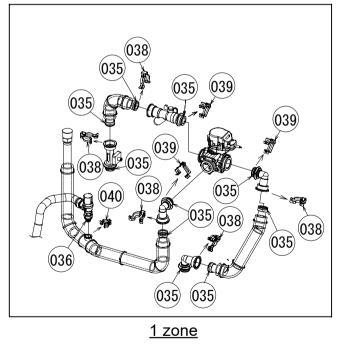

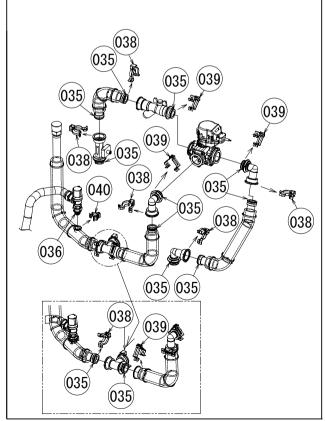


<u>2 zone</u>

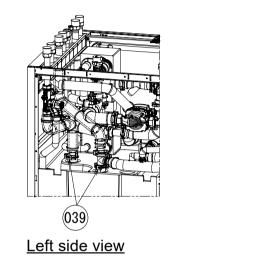


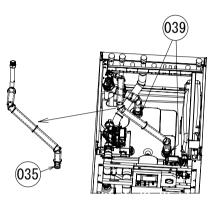



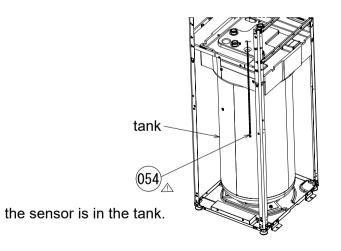

## Hydro Unit Electric BOX(E-BOX) Assembly

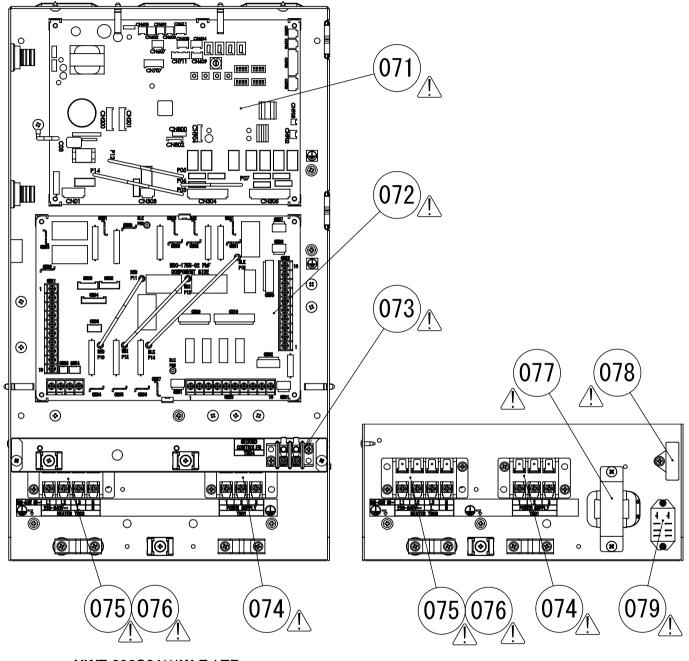

HWT-602S21\*\*\*W-E / TR HWT-1102S21\*\*\*W-E / TR

HWT-1402S21\*\*\*W-E / TR

#### HWT-602S21\*\*\*W-E / TR

				N	umber o	of piece	s per ur	nit (HWT	-)
Safety	Location No.	Part No.	Description	602S21SM3W-E / TR	602S21MM3W-E / TR	602S21SM6W-E / TR	602S21MM6W-E / TR	602S21ST6W-E / TR	602S21MT6W-E / TR
	001	43P00025	PANEL, FRONT, ASSY	1	1	1	1	1	1
	002	43P00021	PANEL, RIGHT SIDE, ASSY	1	1	1	1	1	1
	000	43P00022	PANEL, TOP	1		1		1	
	003	43P00023	PANEL, TOP		1		1		1
	004	43P00026	PANEL, BACK, ASSY	1	1	1	1	1	1
	005	43P00024	PANEL, LEFT SIDE, ASSY	1	1	1	1	1	1
	010	43P44004	HEAT EXCHANGER, PIPE ASSY	1	1	1	1	1	1
$\triangle$	013	43P57007	HEATER ASSY, 3KW	1	1				
	014	43P57008	HEATER ASSY, 6KW			1	1	1	1
	016	43P77003	PUMP, WATER, ASSY	1	1	1	1	1	1
$\overline{\mathbb{A}}$	018		PUMP, WATER, ASSY		1		1		1
	019	43P48005	VESSEL, EXPANSION, ASSY	1	1	1	1	1	1
	020 43P46040 VALVE, OVER PRESSURE, ASSY		1	1	1	1	1	1	
	021		VALVE, AIR VENT	1	1	1	1	1	1
	022	43P49001	METER, PRESSURE, ASSY	1	1	1	1	1	1
	023	43P51010	SENSOR, PRESSURE, NSK-BH010J-872	1	1	1	1	1	1
	024	43P50025	SENSOR, FLOW, ASSY	1	1	1	1	1	1
	025	43P46036	VALVE, 3WAY, ASSY	1	1	1	1	1	1
	026	43P46041	VALVE, MIXING, ASSY		1		1		1
	027	43P46037	VALVE, SAFETY, ASSY	1	1	1	1	1	1
	028	43P46038	VALVE, CHECK		1		1		1
	029	43P46039	VALVE, DRAIN	2	2	2	2	2	2
	030	43P47005	VALVE, STRAINER	1	1	1	1	1	1
	035	43P95006	RING,O	22	30	22	30	22	30
	036	43P95007	RING,O	3	3	3	3	3	3
	037	43P95008		1	1	1	1	1	1
	038		FASTENER,QUICK	12	17	12	17	12	17
	039		FASTENER,QUICK	10	13	10	13	10	13
	040		FASTENER,QUICK	2	2	2	2	2	2
	041		FASTENER,QUICK	2	2	2	2	2	2
	042		FASTENER,QUICK	1	1	1	1	1	1
	043		JOINT, DRAIN	1	1	1	1	1	1
	044	43P95005		2	4	2	4	2	4
	045	43P95009		1	1	1	1	1	1
	046 047	43P95010		2	2	2	2	2	2
		43P95011 43P95012	GASKET	1	1		1	1	1
	048	43895012	GASKET	1	1	1	1	1	1

#### HWT-602S21\*\*\*W-E / TR

				Nu	nber o	f piece	s per u	nit (HV	VT-)
Safety	Location No.	Part No.	Description	602S21SM3W-E / TR	602S21MM3W-E / TR	602S21SM6W-E / TR	602S21MM6W-E / TR	602S21ST6W-E / TR	602S21MT6W-E / TR
	050	43D50004	SENSOR, TWI	1	1	1	1	1	1
$\triangle$	051	43D50001	SENSOR, TWO	1	1	1	1	1	1
$\triangle$	052	43D50002	SENSOR, THO	1	1	1	1	1	1
$\triangle$	053	43D50005	SENSOR, TC	1	1	1	1	1	1
$\triangle$	054	43P50024	SENSOR, TTW	1	1	1	1	1	1
	055	43D50006	SENSOR, TFI		1		1		1
$\triangle$	070	43P66001	REMOTE CONTROLLER	1	1	1	1	1	1
	071	43P69026	PC BOARD ASSY, MCC1753	1	1	1	1	1	1
$\triangle$	072	43P69015	PC BOARD ASSY, MCC1755	1	1	1	1	1	1
$\triangle$	073	43P60004	TERMINAL, JXO-B2D	1	1	1	1	1	1
$\triangle$	074	43P60002	TERMINAL BLOCK, 3P, 20A	1	1	1	1	1	1
$\triangle$	075	43P60005	TERMINAL BLOCK, 4P	2	2	1	1	2	2
$\triangle$	076	43P60003	TERMINAL BLOCK, 3P, 60A			1	1		
$\triangle$	077	43P58007	REACTOR, CH+43-3Z						
$\triangle$	078	43P60009	SPARK KILLER						
$\triangle$	079	43P54001	RELAY, LY2F-L, AC230V						
$\triangle$	080	43P58005	REACTOR, CH-68, DOUBLE VARNISH		1		1		1

#### HWT-1102S21\*\*\*W-E / TR

					N	umber o	of piece	s per u	nit (HW	Т-)	
Safety	Location No.	Part No.	Description	1102S21SM3W-E / TR	1102S21MM3W-E / TR	1102S21SM6W-E / TR	1102S21MM6W-E / TR	1102S21ST6W-E / TR	1102S21MT6W-E / TR	1102S21ST9W-E / TR	1102S21MT9W-E / TR
	001	43P00025	PANEL, FRONT, ASSY	1	1	1	1	1	1	1	1
	002	43P00021	PANEL, RIGHT SIDE, ASSY	1	1	1	1	1	1	1	1
		43P00022	PANEL, TOP	1		1		1		1	
	003	43P00023	PANEL, TOP		1		1		1		1
	004	43P00026	PANEL, BACK, ASSY	1	1	1	1	1	1	1	1
	005	43P00024	PANEL, LEFT SIDE, ASSY	1	1	1	1	1	1	1	1
$\triangle$	011	43P44005	HEAT EXCHANGER, PIPE ASSY	1	1	1	1	1	1	1	1
$\underline{\Lambda}$	013	43P57007	HEATER ASSY, 3KW	1	1						
$\underline{\Lambda}$	014	43P57008	HEATER ASSY, 6KW			1	1	1	1		
$\overline{\mathbb{A}}$	015	43P57009	HEATER ASSY, 9KW							1	1
$\overline{\mathbb{A}}$	016	43P77003	PUMP, WATER, ASSY	1	1	1	1	1	1	1	1
$\triangle$	018	43P77005	PUMP, WATER, ASSY		1		1		1		1
	019	43P48005	VESSEL, EXPANSION, ASSY	1	1	1	1	1	1	1	1
	020	43P46040	VALVE, OVER PRESSURE, ASSY	1	1	1	1	1	1	1	1
	021	43P79006	VALVE, AIR VENT	1	1	1	1	1	1	1	1
	022	43P49001	METER, PRESSURE, ASSY	1	1	1	1	1	1	1	1
	023	43P51010	SENSOR, PRESSURE, NSK-BH010J-872	1	1	1	1	1	1	1	1
	024	43P50025	SENSOR, FLOW, ASSY	1	1	1	1	1	1	1	1
	025	43P46036	VALVE, 3WAY, ASSY	1	1	1	1	1	1	1	1
	026	43P46041	VALVE, MIXING, ASSY		1		1		1		1
	027	43P46037	VALVE, SAFETY, ASSY	1	1	1	1	1	1	1	1
	028	43P46038	VALVE, CHECK		1		1		1		1
	029	43P46039	VALVE, DRAIN	2	2	2	2	2	2	2	2
	030	43P47005	VALVE, STRAINER	1	1	1	1	1	1	1	1
	035	43P95006	RING,O	22	30	22	30	22	30	22	30
	036	43P95007	RING,O	3	3	3	3	3	3	3	3
	037	43P95008	RING,O	1	1	1	1	1	1	1	1
	038	43P79011	FASTENER,QUICK	12	17	12	17	12	17	12	17
	039	43P79012	FASTENER,QUICK	10	13	10	13	10	13	10	13
	040	43P79013	FASTENER,QUICK	2	2	2	2	2	2	2	2
	041	43P79014	FASTENER,QUICK	2	2	2	2	2	2	2	2
	042	43P79015		1	1	1	1	1	1	1	1
	043 044	43P79016 43P95005	JOINT,DRAIN GASKET	1	1 4	1	1	1	1	1	1
	044	43P95005 43P95009	GASKET	2	4	2	4	2	4	2	4
	045	43P95009 43P95010	GASKET	2	2	2	2	2	2	2	2
	046	43P95010 43P95011	GASKET	1	1	1	 1	1	1	1	2 1
	047	43P95011 43P95012	GASKET	1	1	1	1	1	1	1	1

#### HWT-1102S21\*\*\*W-E / TR


					Nur	nber of	f piece	s per u	nit (HV	<b>V</b> T-)	
Safety	Location No.	Part No.	Description	1102S21SM3W-E / TR	1102S21MM3W-E / TR	1102S21SM6W-E / TR	1102S21MM6W-E / TR	1102S21ST6W-E / TR	1102S21MT6W-E / TR	1102S21ST9W-E / TR	1102S21MT9W-E / TR
	050	43D50004	SENSOR, TWI	1	1	1	1	1	1	1	1
	051	43D50001	SENSOR, TWO	1	1	1	1	1	1	1	1
$\triangle$	052	43D50002	SENSOR, THO	1	1	1	1	1	1	1	1
$\triangle$	053	43D50005	SENSOR, TC	1	1	1	1	1	1	1	1
$\triangle$	054	43P50024	SENSOR, TTW	1	1	1	1	1	1	1	1
$\triangle$	055	43D50006	SENSOR, TFI		1		1		1		1
	070	43P66001	REMOTE CONTROLLER	1	1	1	1	1	1	1	1
	071	43P69026	PC BOARD ASSY, MCC1753	1	1	1	1	1	1	1	1
$\triangle$	072	43P69015	PC BOARD ASSY, MCC1755	1	1	1	1	1	1	1	1
	073	43P60004	TERMINAL, JXO-B2D	1	1	1	1	1	1	1	1
	074	43P60002	TERMINAL BLOCK, 3P, 20A	1	1	1	1	1	1	1	1
	075	43P60005	TERMINAL BLOCK, 4P	2	2	1	1	2	2	2	2
	076	43P60003	TERMINAL BLOCK, 3P, 60A			1	1				

#### HWT-1402S21\*\*\*W-E / TR

					N	umber o	of piece	s per u	nit (HW	Т-)	
Safety	Location No.	Part No.	Description	1402S21SM3W-E / TR	1402S21MM3W-E / TR	1402S21SM6W-E / TR	1402S21MM6W-E / TR	1402S21ST6W-E / TR	1402S21MT6W-E / TR	1402S21ST9W-E / TR	1402S21MT9W-E / TR
	001	43P00025	PANEL, FRONT, ASSY	1	1	1	1	1	1	1	1
	002	43P00021	PANEL, RIGHT SIDE, ASSY	1	1	1	1	1	1	1	1
		43P00022	PANEL, TOP	1		1		1		1	
	003	43P00023	PANEL, TOP		1		1		1		1
	004	43P00026	PANEL, BACK, ASSY	1	1	1	1	1	1	1	1
	005	43P00024	PANEL, LEFT SIDE, ASSY	1	1	1	1	1	1	1	1
	012	43P44006	HEAT EXCHANGER, PIPE ASSY	1	1	1	1	1	1	1	1
$\underline{\Lambda}$	013	43P57007	HEATER ASSY, 3KW	1	1	· ·	· ·			-	
$\underline{\Lambda}$	014	43P57008	HEATER ASSY, 6KW			1	1	1	1		
$\underline{\Lambda}$	015	43P57009	HEATER ASSY, 9KW							1	1
$\underline{\Lambda}$	017	43P77004	PUMP, WATER, ASSY	1	1	1	1	1	1	1	1
$\underline{}$	018	43P77005	PUMP, WATER, ASSY		1		1		1		1
	019	43P48005	VESSEL, EXPANSION, ASSY	1	1	1	1	1	1	1	1
	020	43P46040	VALVE, OVER PRESSURE, ASSY	1	1	1	1	1	1	1	1
	021	43P79006	VALVE, AIR VENT	1	1	1	1	1	1	1	1
	022	43P49001	METER, PRESSURE, ASSY	1	1	1	1	1	1	1	1
	023	43P51010	SENSOR, PRESSURE, NSK-BH010J-872	1	1	1	1	1	1	1	1
	024	43P50025	SENSOR, FLOW, ASSY	1	1	1	1	1	1	1	1
	025	43P46036	VALVE, 3WAY, ASSY	1	1	1	1	1	1	1	1
	026	43P46041	VALVE, MIXING, ASSY		1		1		1		1
	027	43P46037	VALVE, SAFETY, ASSY	1	1	1	1	1	1	1	1
	028	43P46038	VALVE, CHECK		1		1		1		1
	029	43P46039	VALVE, DRAIN	2	2	2	2	2	2	2	2
	030	43P47005	VALVE, STRAINER	1	1	1	1	1	1	1	1
	035	43P95006	RING,O	22	30	22	30	22	30	22	30
	036	43P95007	RING,O	3	3	3	3	3	3	3	3
	037	43P95008	RING,O	1	1	1	1	1	1	1	1
	038	43P79011	FASTENER,QUICK	12	17	12	17	12	17	12	17
	039	43P79012	FASTENER,QUICK	10	13	10	13	10	13	10	13
	040	43P79013	FASTENER,QUICK	2	2	2	2	2	2	2	2
	041	43P79014	FASTENER,QUICK	2	2	2	2	2	2	2	2
	042	43P79015	FASTENER,QUICK	1	1	1	1	1	1	1	1
	043	43P79016	JOINT,DRAIN	1	1	1	1	1	1	1	1
	044	43P95005	GASKET	2	4	2	4	2	4	2	4
	045	43P95009	GASKET	1	1	1	1	1	1	1	1
	046	43P95010	GASKET	2	2	2	2	2	2	2	2
	047	43P95011	GASKET	1	1	1	1	1	1	1	1
	048	43P95012	GASKET	1	1	1	1	1	1	1	1

#### HWT-1402S21\*\*\*W-E / TR

					Nur	nber o	f piece	s per u	nit (HV	VT-)	
Safety	Location No.	Part No.	Description	1402S21SM3W-E / TR	1402S21MM3W-E / TR	1402S21SM6W-E / TR	1402S21MM6W-E / TR	1402S21ST6W-E / TR	1402S21MT6W-E / TR	1402S21ST9W-E / TR	1402S21MT9W-E / TR
	050	43D50004	SENSOR, TWI	1	1	1	1	1	1	1	1
	051	43D50001	SENSOR, TWO	1	1	1	1	1	1	1	1
$\triangle$	052	43D50002	SENSOR, THO	1	1	1	1	1	1	1	1
	053	43D50005	SENSOR, TC	1	1	1	1	1	1	1	1
$\triangle$	054	43P50024	SENSOR, TTW	1	1	1	1	1	1	1	1
$\triangle$	055	43D50006	SENSOR, TFI		1		1		1		1
$\triangle$	070	43P66001	REMOTE CONTROLLER	1	1	1	1	1	1	1	1
$\triangle$	071	43P69025	PC BOARD ASSY, MCC1753	1	1	1	1	1	1	1	1
$\triangle$	072	43P69015	PC BOARD ASSY, MCC1755	1	1	1	1	1	1	1	1
$\triangle$	073	43P60004	TERMINAL, JXO-B2D	1	1	1	1	1	1	1	1
$\triangle$	074	43P60002	TERMINAL BLOCK, 3P, 20A	1	1	1	1	1	1	1	1
$\triangle$	075	43P60005	TERMINAL BLOCK, 4P	2	2	1	1	2	2	2	2
$\triangle$	076	43P60003	TERMINAL BLOCK, 3P, 60A			1	1				
$\triangle$	077	43P58007	REACTOR, CH-43-3Z	1	1	1	1	1	1	1	1
$\overline{\mathbb{A}}$	078	43P60009	SPARK KILLER	1	1	1	1	1	1	1	1
$\triangle$	079	43P54001	RELAY, LY2F-L, AC230V	1	1	1	1	1	1	1	1

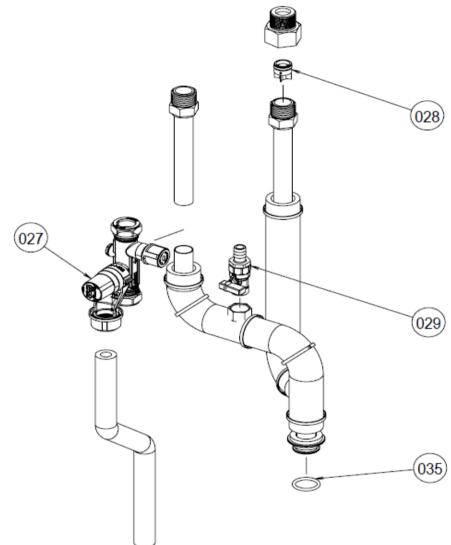


Option parts (HWS-CPR01W-E)


#### HWS-CPR01W-E

Safety	Location No.	Part No.	Description	Number of pieces per unit
	027	43P46037	VALVE, SAFETY, ASSY	1
	028	43P46038	VALVE, CHECK	1
	029	43P46039	VALVE, DRAIN	1
	035	43P95006	RING,O	1

## Outdoor Unit (HWT-401HW-E(TR), HWT-601HW-E(TR))

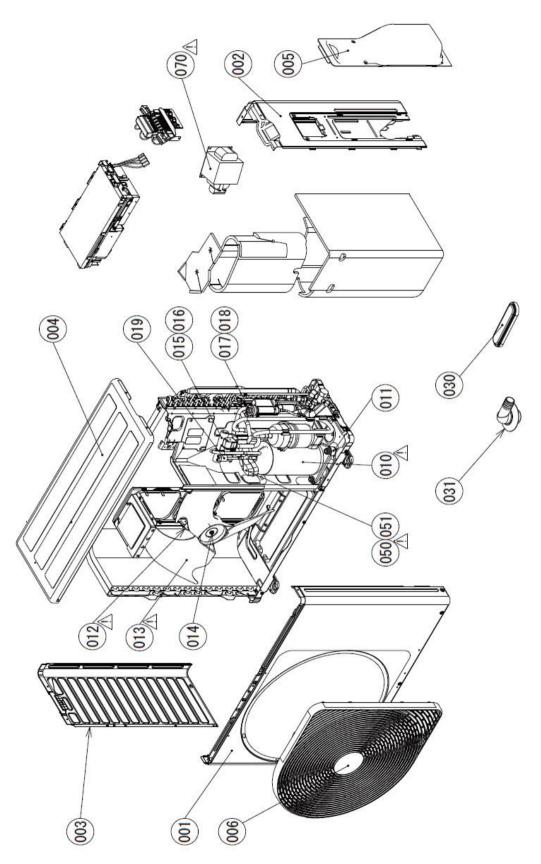


## Inverter Assembly (HWT-401HW-E(TR), HWT-601HW-E(TR))

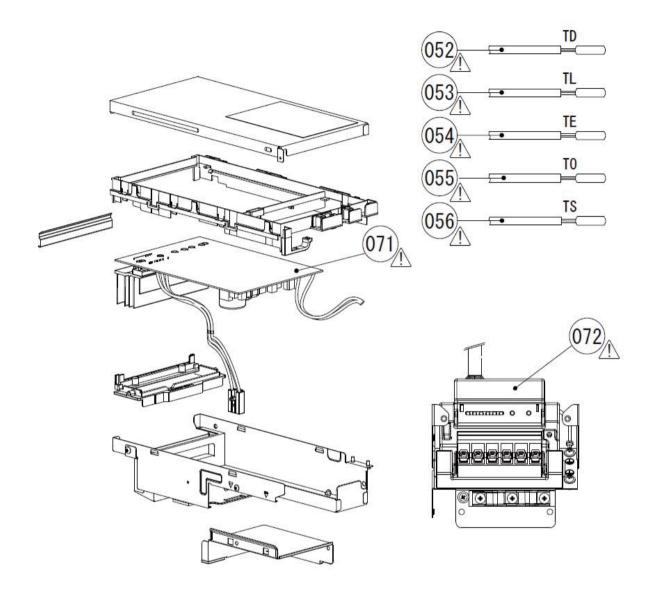


Safety	Location			Number of pi	Number of pieces per unit				
	No.	Part No.	Description	HWT- 401HW-E / TR	HWT- 601HW-E / TR				
	001	43P00012	PANEL, AIR OUTLET, ASSY	1	1				
	002	43P00013	PANEL, SIDE, RIGHT, ASSY	1	1				
	003	43P00014	PANEL, SIDE, LEFT, ASSY	1	1				
	004	43P00015	PANEL, ROOF, ASSY	1	1				
	005	43P00016	COVER, PACKED, VALVE	1	1				
	006	43P19003	GUARD, FAN	1	1				
$\triangle$		43P42004	"COMPRESSOR, ASSY, DX150A1T-21F"	1	1				
	011	43P42003	BOLT, COMPRESSOR	3	3				
$\triangle$	012	43P21002	MOTOR, FAN, ICF-140-A43-1	1	1				
	013	43P20002	FAN, PROPELLER, PJ441-E	1	1				
	014	43P97001	NUT, FLANGE	1	1				
	015	43P46011	VALVE, 4WAY, DSF-9C-R410A	1	1				
	016	43P46010	COIL, VALVE, 4WAY, DXQ-1233	1	1				
	017	43P46008	VALVE, PMV, DPF1.5C-0.4	1	1				
	018	43P46009	COIL, PMV, PQ-M10012-000313	1	1				
$\triangle$	019	43P51004	SWITCH, PRESSURE, ACB-4UB154W	1	1				
	030	43P79008	CAP, WATER-PROOF	1	1				
	031	43P19002	NIPPLE, DRAIN	4	4				
$\triangle$	050	43P50007	THERMOSTAT, BIMETAL	1	1				
	051	43P42002	HOLDER, THERMO	1	1				
$\triangle$	052	43P50012	SENSOR, TD	1	1				
$\triangle$	053	43P50013	SENSOR, TL	1	1				
$\triangle$	054	43P50010	SENSOR, TE	1	1				
$\triangle$	055	43P50004	SENSOR, TO	1	1				
$\triangle$	056	43P50011	SENSOR, TS	1	1				
$\triangle$	070	43P58002	REACTOR, CH-102	1	1				
$\overline{\mathbb{A}}$	071	43P69028	PC BOARD ASSY, MCC1768	1	1				
Â	072	43P69002	"PC BOARD ASSY, MCC1646, TERMINAL BLOCK"	1	1				

# Outdoor Unit (HWT-801HW-E(TR), HWT-1101HW-E(TR), HWT-801HRW-E, HWT-1101HRW-E)

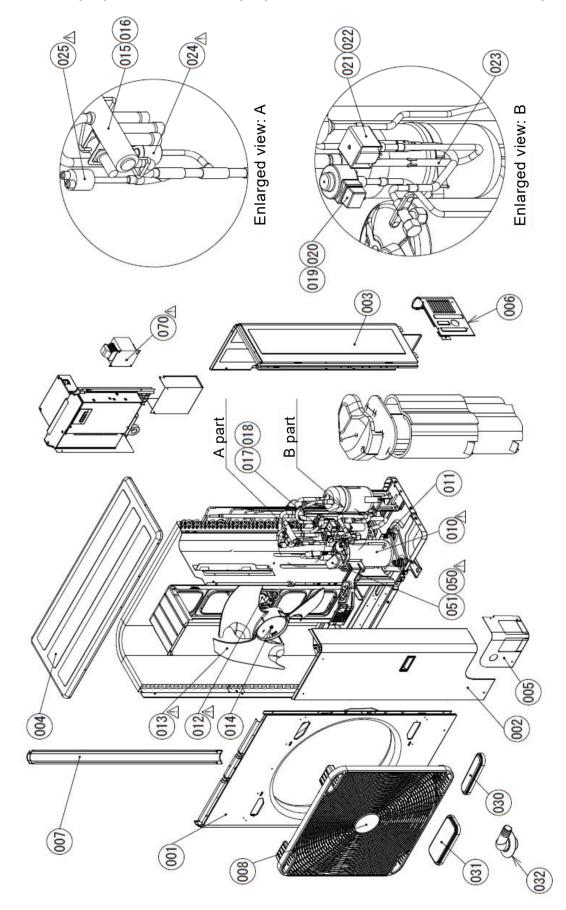


## Inverter Assembly (HWT-801HW-E(TR), HWT-1101HW-E(TR), HWT-801HRW-E, HWT-1101HRW-E)

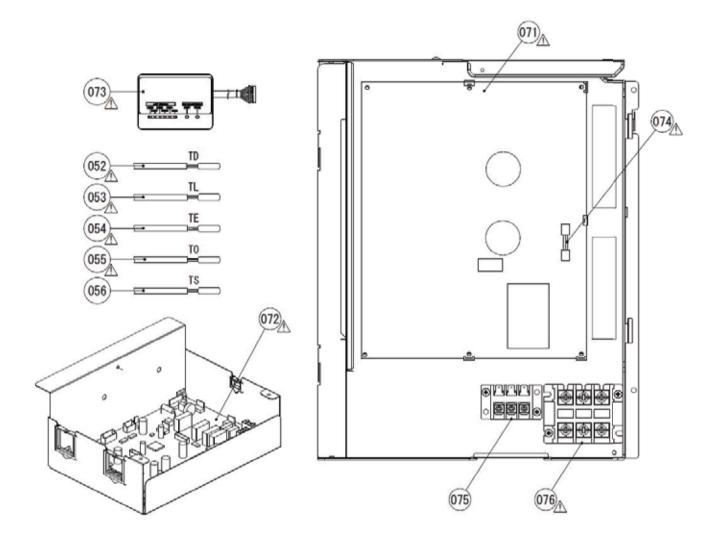


	Number of pieces per						r unit		
Safety	Location No.	Part No.	Description	HWT- 801HW -E / TR	HWT- 801HRW -E	HWT- 1101HW -E / TR	HWT- 1101HRW -E		
	001	43P00005	PANEL, AIR OUTLET	1	1	1	1		
	002	43P00017	PANEL, FRONT, ASSY	1	1	1	1		
	003	43P00020	PANEL, SIDE, RIGHT, ASSY	1	1	1	1		
	004	43P00008	PANEL, ROOF, ASSY	1	1	1	1		
	005	43P00009	PANEL, FRONT, PIPING	1	1	1	1		
	006	43P00010	PANEL, BACK, PIPING, ASSY	1	1	1	1		
	007	43P00011	STAY	1	1	1	1		
	008	43P09001	GUARD, FAN	1	1	1	1		
▲ 01	010	43P42005	"COMPRESSOR, ASSY, NX220A1FJ-20N"	1	1	1	1		
	011	43P42001	BOLT, COMPRESSOR	3	3	3	3		
$\triangle$	012	43P21001	MOTOR, FAN, ICF-280-A60-1	1	1	1	1		
$\overline{\mathbb{A}}$	013	43P20001	FAN, PROPELLER, PS561-E	1	1	1	1		
	014	43P97001	NUT, FLANGE	1	1	1	1		
	015	43P46011	VALVE, 4WAY, DSF-9C-R410A	1	1	1	1		
	016	43P46012	COIL, VALVE, 4WAY, DXQ-1604	1	1	1	1		
	017	43P46001	VALVE, PMV, UKV-18D301	1	1	1	1		
	018	43P46002	COIL, PMV, UKV-A040	1	1	1	1		
	019	43P46003	VALVE, PMV, FAM-BD14TF	1	1	1	1		
	020	43P46004	COIL, PMV, FAM-12TF-1	1	1	1	1		
	021	43P46005	VALVE, 2WAY, TEV-S1220DQ50	1	1	1	1		
	022	43P46007	"COIL, VALVE, 2WAY, TEV-SM0AG2260A1"	1	1	1	1		
	023	43P46006	VALVE, CHECK	1	1	1	1		
	024	43P51003	"SENSOR, PRESSURE, NSK-BH042J-873"	1	1	1	1		
	025	43P51001	"SWITCH, PRESSURE, ACB-4UB231W"	1	1	1	1		
	030	43P79008	CAP, WATERPROOF	1		1			
	031	43P69029	CAP, WATERPROOF	4		4			
	032	43P19002	NIPPLE, DRAIN	1		1			
	050	43P50007	THERMOSTAT, BIMETAL	1	1	1	1		
	051	43P42002	HOLDER, THERMO	1	1	1	1		
	052	43P50002	SENSOR, TD	1	1	1	1		
$\overline{\mathbb{A}}$	053	43P50001	SENSOR, TL	1	1	1	1		
$\underline{\mathbb{A}}$	054	43P50003	SENSOR, TE	1	1	1	1		
	055	43P50004	SENSOR, TO	1	1	1	1		
$\overline{\mathbb{A}}$	056	43P50005	SENSOR, TS	1	1	1	1		
$\overline{\mathbb{A}}$	070	43P58001	REACTOR, CH-101	1	1	1	1		
$\overline{\mathbb{A}}$	071	43P69005	PC BOARD ASSY, MCC1705	1	1	1	1		
$\overline{\mathbb{A}}$	072	43P69029	PC BOARD ASSY, MCC1675	1	1	1	1		
$\underline{\mathbb{A}}$	073	43P69007	PC BOARD ASSY, MCC1646	1	1	1	1		
$\underline{\Lambda}$	074	43P60001	FUSE, 10A	1	1	1	1		
	074	43P60001 43P60002	TERMINAL BLOCK, 3P, 20A	1	1	1	1		
	0/2								

## Outdoor Unit (HWT-1401HW-E (TR), HWT-1401HRW-E)

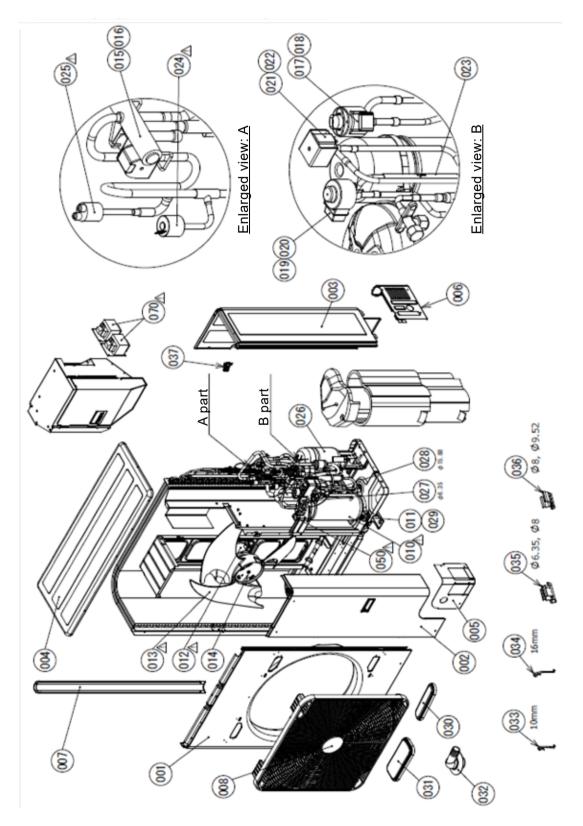


## Inverter Assembly (HWT-1401HW-E (TR), HWT-1401HRW-E)

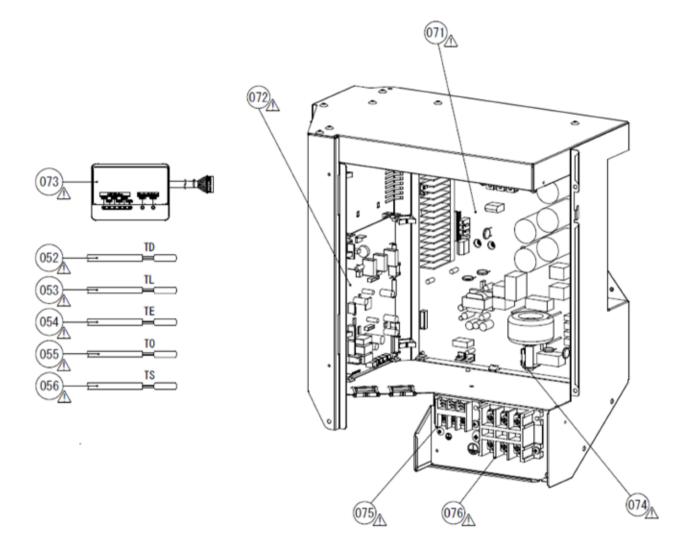


Safety	Location			Number of pie	eces per unit
	No.	Part No.	Description	HWT- 1401HW-E / TR	HWT- 1401HRW-E
	001	43P00005	PANEL, AIR OUTLET	1	1
	002	43P00017	PANEL, FRONT, ASSY	1	1
	003	43P00020	PANEL, SIDE, RIGHT, ASSY	1	1
	004	43P00008	PANEL, ROOF, ASSY	1	1
	005	43P00009	PANEL, FRONT, PIPING	1	1
	006	43P00010	PANEL, BACK, PIPING, ASSY	1	1
	007	43P00011	STAY	1	1
	008	43P09001	GUARD, FAN	1	1
$\triangle$	010	43P42014	COMPRESSOR, ASSY, DX380A2TJ-20M	1	1
	011	43P42001	BOLT, COMPRESSOR	3	3
$\triangle$	012	43P21003	MOTOR, FAN, ICF-280-A100-1	1	1
$\overline{\mathbb{A}}$	013	43P20001	FAN, PROPELLER, PS561-E	1	1
<u> </u>	014	43P97001	NUT, FLANGE	1	1
	015	43P46011	VALVE, 4WAY, DSF-9C-R410A	1	1
	016	43P46012	COIL, VALVE, 4WAY, DXQ-1604	1	1
	017	43P46033	VALVE, PMV, UKV-25D302	1	1
	018	43P46002	COIL, PMV, UKV-A040	1	1
	019	43P46003	VALVE, PMV, FAM-BD14TF	1	1
	020	43P46004	COIL, PMV, FAM-12TF-1	1	1
	021	43P46005	VALVE, 2WAY, TEV-S1220DQ50	1	1
	022	43P46007	COIL, VALVE, 2WAY, TEV-SM0AG2260A1	1	1
	023	43P46006	VALVE, CHECK	1	1
	024	43P51003	SENSOR, PRESSURE, NSK-BH042J-873	1	1
$\overline{\mathbb{A}}$	025	43P51001	SWITCH, PRESSURE, ACB-4UB231W	1	1
	026	43P48003	ACCUMULATOR	1	1
	020	43P46003	VALVE, PACKED, $\phi$ 6.35	1	1
	027	43P46013	VALVE, PACKED, \u033	1	1
	020	43P42008	RUBBER, CUSHION, A2	3	3
	020	43P79008	CAP, WATERPROOF	1	5
	030	43P79009	CAP, WATERPROOF	1	
	032	43P19002	NIPPLE, DRAIN	1	
	033	43P63005	HOLDER, SENSOR, 10mm	1	1
	034	43P69029	HOLDER, SENSOR, 16mm	1	1
	035	43P63003	HOLDER, SENSOR, φ6.35, φ8	1	1
	036	43P63004	HOLDER, SENSOR, φ8, φ9.52	1	1
	037	43P63002	HOLDER, SENSOR (TO)	1	1
٨	050	43P50016	THERMOSTAT, BIMETAL, ASSY	1	1
	050		SENSOR, TD	1	1
		43P50002			
	053	43P50001	SENSOR, TL	1	1
$\triangle$	054	43P50003	SENSOR, TE	1	1
$\triangle$	055	43P50004	SENSOR, TO	1	1
$\triangle$	056	43P50017	SENSOR, TS	1	1
$\overline{\mathbb{A}}$	070	43P58003	REACTOR, CH-100	2	2
$\underline{\mathbb{A}}$	071	43P69016	PC BOARD ASSY, MCC1758	1	1
	071	43P69029	PC BOARD ASSY, MCC1675	1	1
	073	43P69007	PC BOARD ASSY, MCC1646	1	1
	074	43P60001	FUSE, 10A	1	1
$\triangle$	075	43P60002	TERMINAL BLOCK, 3P, 20A	1	1
	076	43P60003	TERMINAL BLOCK, 3P, 60A	1	1

## Outdoor Unit (HWT-801H8(R)W-E, HWT-1101H8(R)W-E, HWT-1401H8(R)W-E)

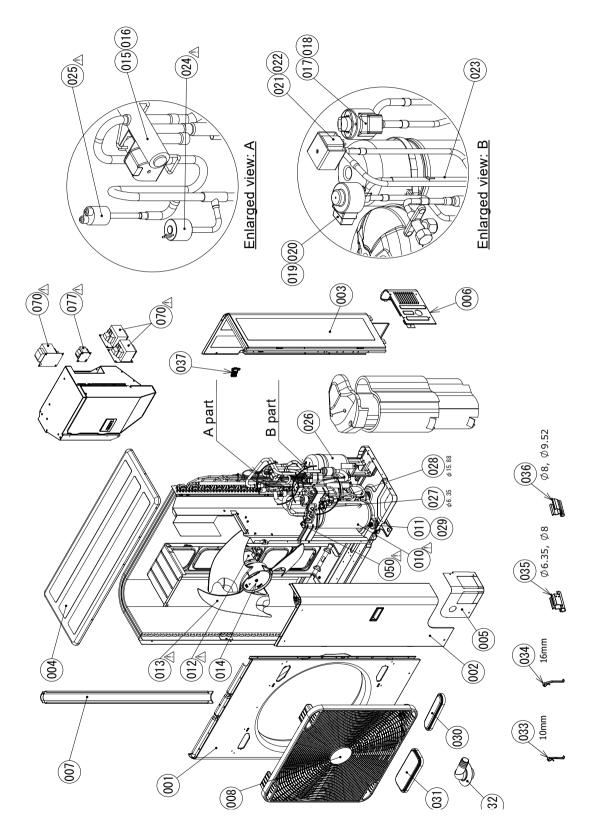

## Inverter Assembly (HWT-801H8(R)W-E, HWT-1101H8(R)W-E, HWT-1401H8(R)W-E)

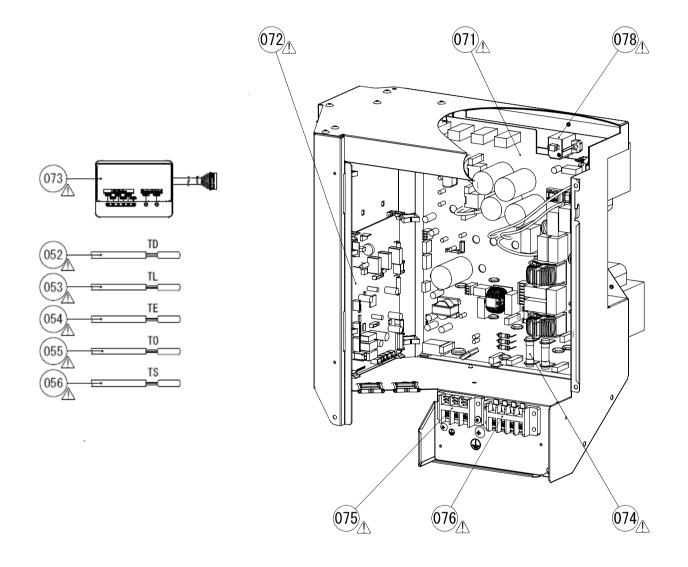

				Number of p	ieces per unit
Safety	Location No.	Part No.	Description	HWT-801H8W-E HWT-1101H8W-E HWT-1401H8W-E	HWT-801H8RW-E HWT-1101H8RW-E HWT-1401H8RW-E
	001	43P00005	PANEL, AIR OUTLET	1	1
	002	43P00017	PANEL, FRONT, ASSY	1	1
	003	43P00020	PANEL, SIDE, RIGHT, ASSY	1	1
	004	43P00008	PANEL, ROOF, ASSY	1	1
	005	43P00009	PANEL, FRONT, PIPING	1	1
	006	43P00010	PANEL, BACK, PIPING, ASSY	1	1
	007	43P00011	STAY	1	1
	008	43P09001	GUARD, FAN	1	1
$\square$	010	43P42016	COMPRESSOR, ASSY, RX380A2TJ-20M	1	1
	011	43P42001	BOLT, COMPRESSOR	3	3
$\triangle$	012	43P21003	MOTOR, FAN, ICF-280-A100-1	1	1
$\underline{\Lambda}$	013	43P20001	FAN, PROPELLER, PS561-E	1	1
	013	43P97001		1	1
	014	43P97001 43P46011	NUT, FLANGE VALVE, 4WAY, DSF-9C-R410A	1	1
		43P46011 43P46012			
	016		COIL, VALVE, 4WAY, DXQ-1604	1	1
	017	43P46033	VALVE, PMV, UKV-25D302	1	1
	018	43P46002		1	1
	019	43P46003	VALVE, PMV, FAM-BD14TF	1	1
	020	43P46004		1	1
	021	43P46005	VALVE, 2WAY, TEV-S1220DQ50	1	1
	022	43P46007	COIL, VALVE, 2WAY, TEV-SM0AG2260A1	1	1
A	023	43P46006	VALVE, CHECK	1	1
	024	43P51003	SENSOR, PRESSURE, NSK-BH042J-873	1	1
$\triangle$	025	43P51001	SWITCH, PRESSURE, ACB-4UB231W	1	1
	026	43P48003	ACCUMULATOR	1	1
	027	43P46015	VALVE, PACKED, φ6.35	1	1
	028	43P46018	VALVE, PACKED, φ15.88	1	1
	029	43P42008	RUBBER, CUSHION, A2	3	3
	030	43P79008	CAP, WATERPROOF	1	
	031	43P79009	CAP, WATERPROOF	1	
	032	43P19002	NIPPLE, DRAIN	1	
	033	43P63005	HOLDER, SENSOR, 10mm	1	1
	034	43P69030	HOLDER, SENSOR, 16mm	1	1
	035	43P63003	HOLDER, SENSOR, φ6.35, φ8	1	1
	036	43P63004	HOLDER, SENSOR, φ8, φ9.52	1	1
	037	43P63002	HOLDER, SENSOR (TO)	1	1
	050	43P50016	THERMOSTAT, BIMETAL, ASSY	1	1
$\overline{\mathbb{A}}$	052	43P50002	SENSOR, TD	1	1
$\underline{\mathbb{A}}$	053	43P50001	SENSOR, TL	1	1
	054	43P50003	SENSOR, TE	1	1
	055	43P50004	SENSOR, TO	1	1
	056	43P50017	SENSOR, TS	1	1
$\triangle$	070	43P58006	REACTOR, CH-100, DOUBLE VARNISH	3	3
$\triangle$	071	43P69019	PC BOARD ASSY, MCC1780	1	1
$\overline{\mathbb{A}}$	072	43P69030	PC BOARD ASSY, MCC1781	1	1
	072		PC BOARD ASSY, MCC1646		
		43P69007		1	1
	074	43P60001	FUSE, 10A	1	1
$\triangle$	075	43P60002	TERMINAL BLOCK, 3P, 20A	1	1
$\triangle$	076	43P60005	TERMINAL BLOCK, 4P	1	1
$\overline{\mathbb{A}}$	077	43P58005	REACTOR, CH-68, DOUBLE VARNISH	1	1
<u> </u>			. , ,		



PC board Replacement Procedure Manual

## **REPLACEMENT OF SERVICE PC BOARD (MCC-1753)**

#### [Requirement of replacing the Hydro unit Main PC board assembly]

In the memory of the Hydro unit Main PC board before replacement, the type and the capacity code of the model have been stored at the factory, <u>and the customer setup data have been stored after installation</u>. Replace the Hydro unit Main PC board assembly according to the following procedure. After replacement, conduct a test run.

## <REPLACEMENT PROCEDURE>

### CASE 1

Before replacement, power of the Hydro unit can be turned on and the setup data can be readout by the wired remote controller.

Readout & note the memory data (see  $\Box 1$  in Page 2) , and power off

Û

Replace the old main PC board to the service main PC board & power ON again (see **12** in Page 3)

Û

Set the readout data to the service main PC board (see **3** in Page 4)

₽ Power reset

## CASE 2

Before replacement, the setup data cannot be readout by the wired remote controller.

Replace the old main PC board to the service main PC board & power ON (see **12** in Page 3)

Û

Set the DN code data to the service main PC board (see **3** in Page 4) (According to the customers' information)


> ্য Power reset


## **1** Readout of the setup data from the memory

Readout of the Memory (factory setup data and customer setup data)

1. Press the [ 1] button and the [ 1] button at same time for at least 4 sec. 3ec. "FIELD SETTING MENU" will be displayed on the top of the screen.



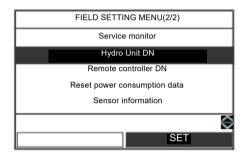

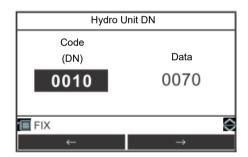

3. Using the [ 1 ] / [ 1 ] button, the DN code Number can be increased or decreased one by one. Make a note of the setup data displayed in this step.

4. Repeat item 3. and make a note of the setup data as shown in the later table.

5. Press the [ ] button to return the status to usual stop status.

(Approx. 1 minute is required to start up of the remote controller.)

## **D2** Replacement of service main PC board

Refer to the Service Manual for more detail.

## WARNING

For 1 minute after the power is turned off, do not disassemble the inverter to prevent an electric shock.

Detachment

1. Remove all connectors connected to the main PC board and remove a screw of earth lead wire.

2. Detach the main board from 5 supporters.

## NOTE

When removing the connectors, release the safety lock of the connector housing.

#### Attachment

1. Attach the service main PC board in the reverse process of Detachment.

## NOTE


Refer to the wiring diagram for the wiring connection.


## □3 Setting of the setup data to the memory

The default setup data are stored in the memory of the service main PC board.

- 1. Press the [ ] button and the [ ] button at same time for at least 4 sec. ec. "FIELD SETTING MENU" will be displayed on the top of the screen.
- □ n n □ n n □ · · ·

TOSHIBA

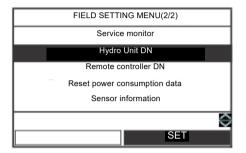

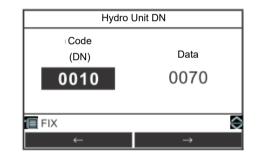

2. Press the [ 7 ] / [ 7 ] button to select "Hydro Unit DN" on the "FIELD SETTING MENU" screen, then press the [ F2 ] button.

3. Press the [<sup>[F1]</sup>] / [<sup>F2</sup>] button to select DN code or Data, then press the [<sup>[IN]</sup>] / [<sup>IN]</sup>] button to change the value.
Press the [<sup>[IN]</sup>] button. The set value is registered.

\*First, make the initial settings as shown in the table below.

DN	ltem		etails	remarks			
DN	item		etalls	Wall Mouned type	All In One type 2 series		
10	Type setting	0070: Wall mounted type 0071: All In One type	9	0070: Wall mounted 0071: All In One type			
11	Water heat exchanger capacity (Hydro unit type setting)	0010: 60 0017:140	0015: 110	Depend on type *Check the model name of Hydro unit and the correct data.			
6B8	Hot water supply is using	0000: Yes	0001: No	0000: Yes			
6BA	ZONE2 operation is using	0000: No	0001: Yes	0000: No	Depend on type *Check the model name of Hydro unit and set the correct data.		
6BC	Back up heater capacity	0000: 3 kW 0002: 9 kW	0001: 6kW	Depend on type *Check the model name of Hydro unit and set the correct data.			
6BD	Outdoor unit type setting	0000: 401 / 601 0002 - 0003: None	0001: 801 / 1101/1401	Depend on Outdoor unit type *Check the model name of Outdoor unit and set the correct data.			
6D1	Pump P1 ON/OFF cycling (During long periods of system OFF)	0000: OFF	0001: ON	0000: OFF (Until Mar-2 0001: ON (From April-2 ×Set DN[6D1] to "0007	2023)		

## Hydro Unit DN table

				Factory default			
DN	Item		Details	Wall Mouned type	All In One type 2 series		
02	Cooling/Non-cooling switching	0000: Cooling	0001: Non cooling	0000: Cooling			
03	Central control address	0001	- 0128	None			
08	Hot Water boost operation time (operating time)	0003: 30 min	- 0018: 180 min	0006: 60 min			
09	Hot Water boost set temperature	0040: 40 °C -	<ul> <li>0065: 65 °C (All In One type)</li> <li>0080: 80 °C (Wall Mouned type)</li> </ul>	0075:75 °C	0065:65 °C		
0A	Anti bacteria set temperature	0065: 65 °C - 0065: 60 °C -	<ul> <li>0070: 70 °C(All In One type)</li> <li>0070: 80 °C(Wall Mouned type)</li> </ul>	0075:75 °C	0065:65 °C		
0B	Anti bacteria holding time	0000: 0 min	- 0250: 250 min	0030: 30 min	1		
0C	Mixing valve drive time	0003: 30 sec	- 0024: 240 sec	0006: 60 sec			
0F	Hot water HP allow ance while cooling + hot water supply	0000: Not allow	- 0001: Allow	0000: Not allow	0001: Allow		
10	Type setting	0070: Wall mounte 0071: All In One ty		0070: Wall mounted type	0071: All In One type		
11	Water heat exchanger capacity (Hydro unit type setting)	0010: 601 0017:1401	0015: 1101	Depend on type			
12	Line address	0001	- 0128	None			
13	Indoor address	0001	- 0128	None	-		
14	Group address	0000: Individual (N 0001: Header unit 0002: Follower unit		None			
18	Upper limit of cooling set temperature	0018: 18 °C	- 0030: 30 °C	0025: 25 °C			
19	Lower limit of cooling set temperature	0007: 7 °C	- 0020: 20 °C	0007: 7 °C			
1A	Upper limit of heating (ZONE1) set temperature	0037: 37 °C	- 0055: 55 °(401/601), 0065:65C(801/1101/1401)	0055: 55 °C(401/601) 0065: 65 °C(801/1101/14	01)		
1B	Lower limit of heating (ZONE1) set temperature	0020: 20 °C	- 0037: 37 °C	0020: 20 °C			
1C	Upper limit of heating (ZONE2) set temperature	0037: 37 °C	- 0055: 55 °C(401/601), 0065:65°C(801/1101/1401)	0055: 55 °C(401/601) 0065: 65°C(801/1101/140	01)		
1D	Lower limit of heating (ZONE2) set temperature	0020: 20 °C	- 0037: 37 °C	0020: 20 °C			
1E	Upper limit of hot water set temperature	0040: 40 °C -	0065: 65 °C (All In One type) 0080: 80 °C (Wall Mouned type)	0075:75°C	0065:65°C		
1F	Lower limit of hot water set temperature	0040: 40 °C	- 0060: 60 °C	0040: 40 °C	1		
20	Hot water HP start temperature	0020: 20 °C	- 0045: 45 °C	0038: 38 °C			
21	Hot water HP stop temperature	0040: 40 °C	- 0065: 65 °C	0038: 52 °C			
22	Priority mode Hot water supply/Heating switching temperature	-0040: -40 °C	- 0020: 20 °C	0000:0°C	Not use		
23	Boiler output enable switching temperature	-0020: -20 °C	- 0020: 20 °C	-0010: -10 °C	1		
24	Outside air temperature for hot water temperature compensation start	-0020: -20 °C	- 0010: 10 °C	0000: 0 °C			
25	Hot water temperature compensation value	0000: 0K	- 0015: 15K	0003: 3K			
26	Night set back change temperature range	0003: 3K	- 0020: 20K	0005: 5K			
20	Set temperature shift with heating Auto	-0005: -5K	- 0005: 5K	0000: 0K			
28	Auto Restart of power outage after system power failure	0000: No -	0001: Yes	0001: Yes			
29	Outside air temperature T1 temperature	-0015: -15 °C -	0000: 0 °C	-0010: -10 °C			
29 2B	Outside air temperature T3 temperature		- 0015: 15 °C	0010: 10 °C			
2D	Set temperature A with outside air temperature of T0		- 0055: 55 °C(401/601), 0065: 65 °C(801/1101/1401)	0040:40°C			
2D	Set temperature B with outside air temperature of T1	0020: 20 °C	- 0055: 55 °C(401/601), 0065: 65 °C(801/1101/1401)	0040:35°C			
2E	Set temperature C with outside air temperature of 0 °C	0020: 20 °C	- 0055: 55 °C(401/601), 0065: 65 °C(801/1101/1401)	0040:30°C			
2F	Set temperature D with outside air temperature of T3	0020: 20 °C	- 0055: 55 °C(401/601), 0065: 65 °C(801/1101/1401)	0040:25°C			
30	Set temperature E with outside air temperature of 20 °C	0020: 20 °C	- 0055: 55 °C(401/601), 0065: 65 °C(801/1101/1401)	0040:20°C			
31	Zone2 ratio with Zone1 as Auto	0000: 0% -	0100: 100%	0080: 80%			
	Hydro unit backup heater down time	0000: 5 min	0001: 10 min	0001: 10 min			
33	•	0002: 15 min	0003: 20 min				

	Item	Details	Factory default			
DN			Wall Mouned type         All In One type 2 series			
3A	Frost protection function Invalid/Valid	0000 Invalid 0001: Valid	0001: Valid			
3B	Frost protection set temperature	0008 8 °C 0020: 20 °C	0015: 15 °C			
3C	2-w ay valve operation (logical reverse) control	0000 Activate during cooling Deactivate during 0001 cooling	0000: Activate during cooling			
3E	Heating HP/Boiler priority switching when using boiler	0000 Priority on HP 0001: Priority on boiler	0000: Priority on HP			
40	Activate/deactivate room temperature control	0000: Deactivate 0001: Activate	0000: Deactivate			
42	P2 pump display on Wireless Adapter screen (NOT on remote controller screen)	0000: Invalid 0001: Valid	0000: Invalid			
52	External input setting when using I/P 7, 8 (CN21) as Emergency shutdown input (DN B6 = "0")	0000: CLOSE to stop system 0001: OPEN to stop system	0000: CLOSE to stop			
54	Logic of 3-w ay valve's action when powered (Single return only)	0000: Not reversed (Hot water mode when powered) 0001 Reversed(Heatin g when powered)				
58	Night set back is activated	0000 Zone 1 &2 0001 Zone 1 only	0000: Zone 1 & 2			
59	Interval of Mixing Valve control	0000 30 seconds 0001 1 minute - 0030: 30 minutes	0002: 2 minutes			
5A	P1 setting while in hot water supply mode	0000 While running HP only P1 continues running 0001	0000: While running HP only			
5B	Boiler running setting	0000 Boiler and HP 0001 Boiler only with pump running 0002 Heater 0003 Boiler only (Pump stopping)	0003: Boiler only			
61	External input setting when using I/P 5, 6 (CN21)	0000 Starts as the circuit is closed as the circuit Stops is opened 0001 Starts /stops as the circuit is received closed pulse signal	0000: Closed: <b>Starts</b> Opened: Stops			
62	Activate/deactivate A02 failure detection	0000 Activate 0001 Deactivate	0000: Activate			
64	Continuously run or stop the P2 pump while cooling	0000 Continuously run P2 0001 Stop P2	0000: Continuous running P2			
65	P1 pump setting when the thermostat is deactivated in the room temperature remote controller and room temperature thermostat settings	0000 Continuously run P1 0001 Stop P1 when the thermostat is OFF	0000: Continuous running P1			
6E	To diff temperature, when pump P1 stop at TO 20 $^\circ\text{C}$	0001: 1K - 0005: 5K	0002: 2K			
73	Hot water tank heater start time of heat- pump while operating	0000: 30 min passed - 0003: 120 min passed	0003: 120 min passed			
92	Upper room temperature limit when cooling	0000: 0 °C - 0055: 55 °C	0029:29 °C			
93	Low er room temperature limit when cooling	0000: 0 °C - 0055: 55 °C	0018: 18 °C			
94	Upper room temperature limit when heating	0000: 0 °C - 0055: 55 °C	0029:29 °C			
95	Low er room temperature limit when heating	0000: 0 °C - 0055: 55 °C	0018:18 °C			
96	Initial water temperature setting when controlling cooling by the room temperature remote controller and room temperature thermostat	0005 : 5 °C - 0030: 30 °C	0020:20 °C			
9D	Initial water temperature setting when controlling heating by the room temperature remote controller and room temperature thermostat	0020 20 °C - 0055: 55 °(401/601), 0065:65°C(801/1101/1401)	0020: 40 °C			
9E	TO temperature setting to stop the P1 pump during the middle period heating	0010: 10 °C - 0030:30 °C	0020:20 °C			
AO	P1 pump speed control changes the percentage duty of the PWM control	0000:100% - 0005:50%	0000: 100%			
A1	Outside air temperature TO temperature	-0020 -20°C         -0015: -15°C           (401 /601),         (401 /601),           -0030: -30°C         -0020:-20°C           (801/1101/1401)         (801/1101/1401)	-0020: -20 °C			
A2	Zone2 temperature setting method	0000 Percentage (DN_31) Fixed value (DN_A3 0001 ~5)	0000: Percentage			
A3	Set temperature A' with outside temperature of TO	0020 20 °C - 0055: 55°C(401/B01), 0065:65 °C(801/1101/1401)	0040: 40 °C			

DN	Itom	Detaile	Factory default				
DN	Item	Details	Wall Mouned type 1	All In One type 2 series			
A4	Set temperature B' with outside temperature of T1	0020: 20 °C - 0055: 55 °C(401/601), 0065: 65 °C(801/1101/1401)	0035: 35°C				
A5	Set temperature E with outside temperature of 20 °C	0020: 20 °C - 0055: 55 °C(401/601), 0065: 65 °C(801/1101/1401)	0020: 20°C				
AB	Group control	0000: TTW value of each Hydro Unit 0001: TTW value transmitted from Master Unit	0000: each Hydro Unit				
AC	The temperature increase during "Forced ON" mode (SG Ready control)	0000:0K - 0010: 10K	0000: 0K				
B2	HP restart water temperature in A zone. (Valid only room temp control using 2nd remote controller)	0020: 20 °C - 0037: 37 °C	0020: 25°C				
B5	Initial water temperature setting method when controlling heating by the room temperature remote controller and room temperature thermostat	0000: The fixed temperature by DN_9D 0001: The calculated temperature by Auto curve	0000: The fixed				
B6	Setting the objects to control of I/P 7, 8	0000: I/P 7 Emergency shutdown input, I/P 8 None 0001: I/P 7 TEMPO 1 input, I/P 8 None 0002: I/P 7 TEMPO 2 input, I/P 8 None 0003: I/P 7 Forcibly turn off the backup heater, I/P 8 Forcibly turn off the hot water tank heater 0004: I/P 7 SG network input 1, I/P 8 SG network input 2	0000: I/P 7 Emergency shutdown input, I/P 8 No				
B8	Forcibly heater off at TO ≥ A °C	0000: no restriction, 0001: 20 °C 0002: 15 °C, •••, 0006: -5 °C	0000: no restriction				
В9	Backup heater energization temperature during defrosting.	Correction coefficient B 0000: 0K - 0004: 40K	0000: 0K				
BA	Intermittent operation at TO ≥ A °C (heating mode)	0000:continuous operation 0001:20°C, - ,0003: 25°C	0000: continuous operation 0001: 20 °C - 0006: -5 °C	Not use			
BB	Intermittent operation at TO < B °C (cooling mode)	0000: continuous operation 0001: 35 °C - 0003: 25 °C	0000: continuous operation	Not use			
вс	Pump off time during thermostat off operation	0000: 5 min - 0005: 30 min	0001: 10 min	Not use			
680	0 - 10 V input setting	0000: Not use 0001: Temperature setting 0002: Capacity setting of Heating / Cooling 0003: Capacity setting of Hot water supply 0004: Capacity setting of Heating / Cooling + Hot water supply	0000: Not use				
681	0 - 10 V Hot water supply temperature setting	0000: Not use Al 0001: Al 1 0002: Al 2 0003: Al 3	0000: Not use Al				
682	0 - 10 V Heating ZONE1 temperature setting	0000: Not use Al 0001: Al 1 0002: Al 2 0003: Al 3	0000: Not use Al				
683	0 - 10 V Heating ZONE2 temperature setting	0000: Not use Al 0001: Al 1 0002: Al 2 0003: Al 3	0000: Not use Al				
684	0 - 10 V Cooling temperature setting	0000: Not use Al 0001: Al 1 0002: Al 2 0003: Al 3	0000: Not use Al				
685	0 - 10 V Hot water supply temperature upper limit	0040: 40 °C - 0065: 65 °C (All In One type) 0080: 80 °C (Wall Mouned type)	0065: 65°C				
686	0 - 10 V Heating ZONE1 temperature upper limit	0020: 20 °C - 0055: 55 C(401/601), 0065: 65 C(801/1101/1401)	0055: 55°C				
687	0 - 10 V Heating ZONE2 temperature upper limit	0020: 20 °C - 0055: 55 C(401/601), 0065: 65 C(801/1101/1401)	0055: 55°C				
688	0 - 10 V Cooling temperature upper limit	0007: 7°C - 0029: 29°C	0020: 20°C				
689	0 - 10 V Hot water supply temperature setting resolution	0001: 1°C - 0005: 5°C	0005: 5°C				
68A	0 - 10 V Heating ZONE1 temperature setting resolution	0001: 1°C - 0005: 5°C	0003: 3°C				
68B	0 - 10 V Heating ZONE2 temperature setting resolution	0001: 1°C - 0005: 5°C	0003: 3°C				
68C	0 - 10 V Cooling temperature setting resolution	0001: 1°C - 0005: 5°C	0001: 1°C				
6A6	P1 pump speed control	0000: P1 pump fixed speed (depend on DN_A0 setting) 0001: P1 pump variable speed	0001: Variable speed				
6A7	Pump speed control correction	0000: 100%         0001 :90%           0002: 75%         0003: 50%	0000: 100%				
6AC	Hot water supply mode operation cycle to prevent water temperature drop	0000: Invalid 0001: 1H - 0050: 50H	0024: 24H				

DN	Itom		Details	Factory default				
DN	Item		Details	Wall Mouned type 1	All In One type 2 series			
6B0	Boiler output enabled	0000: No	0001:Yes	0000: No				
6B1	Boiler install position after 3WV heating side / before	0000: After 3WV heating 0001: Before 3WV	side	0000: After 3WVheating side	Not Use			
6B2	External cylinder thermostat connected	0000: No	0001: Yes	0000: No	Not Use			
6B3	External room thermostat connected	0000: No	0001: Yes	0000: No				
6B4	3WV SPST / SPDT specification switching	0000: SPST	0001: SPDT	0000: SPST	Not Use			
6B5	Synchronisation of pump P1 and P2	0000: Non-synchronous	0001: Synchronous	0000: Non-synchronous	0001: Synchronous			
6B8	Hot water supply is using	0000: Yes	0001: No	0000: Yes				
6B9	ZONE1 operation is using	0000: Yes	0001: No	0000: Yes				
6BA	ZONE2 operation is using	0000: No	0001: Yes	0000: No	Depend on type			
6BC	Back up heater capacity	0000: 3 kW 0002: 9 kW	0001: 6kW	Depend on type				
6BD	Outdoor unit type setting	0000: 401 / 601 0002 - 0003: None	0001: 801 / 1101/1401	Depend on type				
6CA	Output1 item	0000: Alarm	0001: Compressor	0000: Alarm				
6CB	Output4 item	0002: Defrost 0004: Release	0003: Boiler 0005: Buck up heater	0001: Compressor				
6CC	Output2 item	0006: Cylinder heater	0007: Heating	0002: Defrost	0002: Defrost			
6CD	Output3 item	0008:Cooling	0009: Hot water supply	0003: Boiler				
6CE	SG ready forced operation heater control	0000: Heater output allow 0001: Heater output not	wed allowed	0000: Heater output allowed				
6D0	P1 pump stop or not using outside air temperature	0000: Continuous run 0001: Pump P1 stop whe change the temperature	en TO > 20°C (Available to setting by DN 9E)	0000: Continuous run				
6D1	Pump ON/OFF cycling (During long periods of system OFF)	0000 : None operation	0001 : Regular power	0000 : None operation (L 0001 : Regular power (Fr «Set DN[6D1] to "0001"	om April-2023)			
6D2	Hydro unit backup heater energized Yes / No	0000: Energized	0001: Not energized	0000: Energized	_ · _ · ·			
6D3	Hot water cylinder heater energized Yes / No	0000: Energized	0001: Not energized	0000: Energized				
6D4	External booster heater output enabled Yes / No	0000: Enabled	0001: Not enabled	0000: Enabled				
6D6	Pump ON/OFF cycling (During long periods of system OFF) Pump ON cycle	0000 : 1day, 0006 : 7days, …,	0001 : 2days, …, 0015 : 16days	0006 : 7days				
6D7	Pump ON/OFF cycling (During long periods of system OFF) Pump ON time	0000 : 1min 0002 : 5min	0001 : 3min 0015 : 31min	0002 : 5min				
6F1	Temperature difference for mixing valve opening value changing	0001: 1K 0003: 3K	0002: 2K	0002: 2K				
6F2	Mixing valve maximum steps	0012: 12 step -	0060: 60 step	0012: 24 step	0060: 60 step			
6FC	Mode select for silent mode	0000: mode1 0002: Do not use	0001: mode2	0000: mode1	1			
6FD	Cooling ZONE2 set temperature (Shift value from ZONE1 set temperature)	0000: 0K 0002:+2K -	0001:+1K 0023:+23K	0010:+10K				


## P.C.Board Replacement Procedure Manual

# P.C.Board (MCC-1768) Replacement Procedure Manual

## 

Don't open the inverter cover before 1 minute after power has been turned off because an electric shock may be occurred.

## Replacement steps:

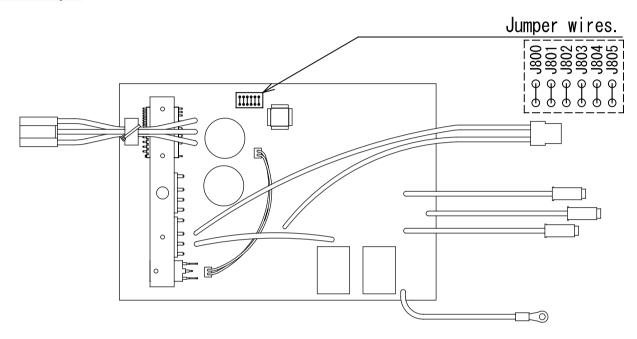

#### **1** Jumper wires "**J800~J803**"

Cut the jumper wires of the service board, as instructed in the table below.

The jumper setting of J800~J803 differs from original supplied P.C.Board, therefore be sure to configure the jumpers as in the table below. If the model is not specified, the equipment will not operate.

Model name	J800	J801	J802	J803	
Service P.C. Board	0	0	0	0	O: Connected
HWT-401HW-*	×	0	0	0	× : Cut
HWT-601HW-*	0	×	0	0	

Note: In the table above, "-\*" stands for "-E", "-TR", etc.

(Example : HWT-401HW-E)

#### 2 Jumper wires "J804~J805"

Set the jumper wires J804~J805 of the service board to the same as settings of the P.C.board before replacement.

## P.C.Board Replacement Procedure Manual

## P.C.Board (MCC-1675) Replacement Procedure Manual

## <sup>▲</sup> <u>WARNING</u>

Don't open the inverter cover before 1 minute after power has been turned off because an electric shock may be occurred.


## Setting the jumper wires

	Part name		Function	Setting
J	lumper wire	J800~J801	MODEL SWITCHING	Cut these jumper wires according to the following table.

Since this service PC board is available for several models, cut the jumper wires according to the following table.

If they are not cut correctly, a certain failure code appears on the remote controller and the unit not operate.

Model name	J 800	J 801
Factory setting (default)	0	0
HWT-801HW*, HWT-801HRW*	×	0
HWT-1101HW*, HWT-1101HRW*	0	×
HWT-1401HW*, HWT-1401HRW*	×	×
*: Characters indicate the country code(-E),(-TR) and etc.	O: Connec × : Cut	cted

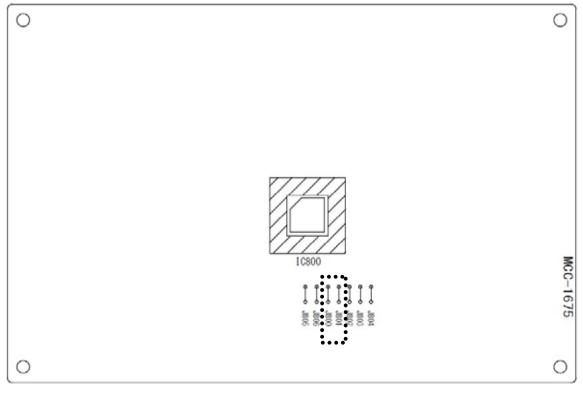

## P.C.Board Replacement Procedure Manual

## P.C.Board (MCC-1781) Replacement Procedure Manual

## 


Don't open the inverter cover before 5 minute after power has been turned off because an electric shock may be occurred.

## Setting the jumper wires

Part	name	Function	Setting					
Jumper wire	J800~J802	Model switching	Cut these jumper wires according to the following table.					


- Since this service PC board is available for several models, cut the jumper wires according to the following table.
- If they are not cut correctly, a certain failure code appears on the remote controller and the unit not operate.

Model name	J 802	J 801	J 800			
Factory setting (default)	0	0	0			
HWT-801H8W-E HWT-801H8RW-E	×	0	0			
HWT-1101H8W-E HWT-1101H8RW-E	×	0	×			
HWT-1401H8W-E HWT-1401H8RW-E	×	0				
	O: Connected × : Cut					

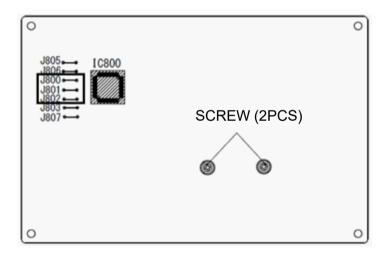

#### **Detach and attach PC BOARD**

- Remove the SCREW(2pcs), HEATSINK(FAN) and PLATE(PCB) from the current PC board.
- Apply thermal GREASE between HEATSINK(FAN) and FAN(IPM), and attach the SCREW(2pcs), HEATSINK(FAN) and PLATE(PCB) to the service PC board.

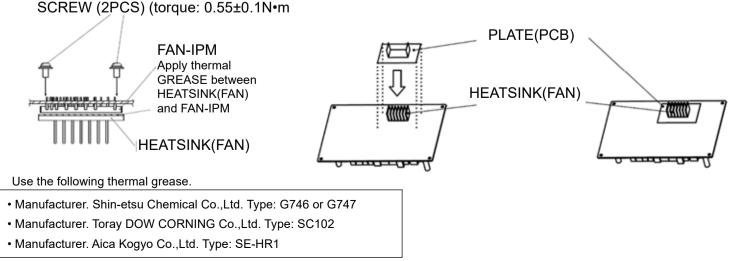

### HWT-401HW-E(TR)

			Pres	sure		Pipe s	urface te	emperatur	re (°C)	Com-	Water Conditions			Indoor / Outdoor	
		(MPa)		(kg/cm²G)		Dis- charge	Suction	Outdoor heat ex- changer	BPHF	pressor revolu- tions per second	Entering water	Leaving water	Flowrate	temp. co	onditions B) (°C)
		Pd	Ps	Pd	Ps	(TD)	(TS)	(TE)	(TC)	(rps)	(TWI)	(TWO)	L/min	Indoor	Outdoor
Heating (Floor Applica- tions)	A7	2,20	0,67	22,4	6,8	78	4	2	25	80	26	35	11	20 / -	7/6
Heating (Stand- ard Rating)		3,40	0,70	34,7	7,1	94	2	4	45	80	47	55	11	20 / -	7/6
Heating (Low Ambi- ent)	A-7/-8 W**/34	2,18	0,43	22,2	4,4	85	-10	-10	28	78	29	34	12	20 / -	-7 / -8
Cooling (Stand- ard Rating)	A35 W12/7	2,71	0,85	27,6	8,7	82	8	43	7	65	12	7	13	20 / -	35 / -
Cooling (Floor Applica- tions)	A35	2,90	1,13	29,6	11,5	82	20	45	16	65	23	18	18	20 / -	35 / -

#### HWT-601HW-\*

			Pres	sure		Pipe s	surface te	mperatur	e (°C)	Com-	Water Conditions			Indoor / Outdoor	
		(MPa)		(kg/cm <sup>2</sup> G)		Dis- charge		Outdoor heat ex- changer	BPHE	pressor revolu- tions per second	Entering water	Leaving water	Flowrate	temp. co	onditions B) (°C)
		Pd	Ps	Pd	Ps	(TD)	(TS)	(TE)	(TC)	(rps)	(TWI)	(TWO)	L/min	Indoor	Outdoor
Heating (Floor Applica- tions)	A7 W30/35	2,23	0,67	22,7	6,8	78	3	2	28	80	29	35	17	20 / -	7/6
Heating (Stand- ard Rating)	A7 W47/55	3,46	0,67	35,3	6,8	98	1	3	46	92	49	55	17	20 / -	7/6
Heating (Low Ambi- ent)	A-7/-8 W**/34	2,14	0,41	21,8	4,2	84	-11	-10	28	93	29	34	16	20 / -	-7 / -8
Cooling (Stand- ard Rating)	A35 W12/7	2,81	0,83	28,7	8,5	85	6	44	7	76	12	7	15	20 / -	35 / -
Cooling (Floor Applica- tions)	A35 W23/18	3,02	1,06	30,8	10,8	89	19	46	14	76	23	18	20	20 / -	35 / -

#### HWT-801HW-\*

			Pres	sure		Pipe s	surface te	mperatur	re (°C)	Com-	Wate	er Condit	tions	ludeen /	Outdaan
		(MI	Pa)	(kg/c	m²G)	Dis- charge		Outdoor heat ex- changer	BPHE	pressor revolu- tions per second	Entering water	Leaving water	Flowrate	temp. co	Outdoor onditions 'B) (°C)
		Pd	Ps	Pd	Ps	(TD)	(TS)	(TE)	(TC)	(rps)	(TWI)	(TWO)	L/min	Indoor	Outdoor
Heating (Floor Applica- tions)	A7 W30/35	2,28	0,67	23,2	6,8	83	1	0	28	89	28	35	23	20 / -	7/6
Heating (Stand- ard Rating)	A7 W47/55	3,61	0,72	36,8	7,3	95	3	1	49	78	49	55	23	20 / -	7/6
Heating (Low Ambi- ent)	A-7/-8 W**/34	2,57	0,40	26,2	4,1	95	-11	-13	29	89	29	34	22	20 / -	-7 / -8
Cooling (Stand- ard Rating)	A35 W12/7	2,71	0,80	27,6	8,2	90	6	44	5	70	12	7	19	20 / -	35 / -
Cooling (Floor Applica- tions)	A35 W23/18	2,88	1,08	29,4	11,0	86	18	45	15	70	23	18	25	20 / -	35 / -

#### HWT-1101HW-\*

			Pres	sure		Pipe s	surface te	emperatur	e (°C)	Com-	Wate	er Condit	tions	Indoor /	Outdoor
		(MI	Pa)	(kg/c	m²G)	Dis- charge	Suction	Outdoor heat ex- changer	BPHE	pressor revolu- tions per second	Entering water	Leaving water	Flowrate	temp. co	onditions (B) (°C)
		Pd	Ps	Pd	Ps	(TD)	(TS)	(TE)	(TC)	(rps)	(TWI)	(TWO)	L/min	Indoor	Outdoor
Heating (Floor Applica- tions)	A7 W30/35	2,34	0,66	23,9	6,7	88	1	0	29	99	29	35	32	20 / -	7/6
Heating (Stand- ard Rating)	A7 W47/55	3,64	0,72	37,1	7,3	96	3	2	50	80	50	55	32	20 / -	7/6
Heating (Low Ambi- ent)	A-7/-8 W**/34	2,58	0,39	26,3	4,0	95	-12	-13	29	99	29	35	24	20 / -	-7 / -8
Cooling (Stand- ard Rating)	A35 W12/7	2,82	0,78	28,8	8,0	95	5	45	5	80	12	7	22	20 / -	35 / -
Cooling (Floor Applica- tions)	A35 W23/18	3,04	1,06	31,0	10,8	93	17	48	15	82	23	18	29	20 / -	35 / -

#### HWT-1401HW-\*

			Pres	sure		Pipe s	surface te	mperatur	re (°C)	Com-	Wate	er Condit	tions	Indoor /	Outdoor
		(MI	Pa)	(kg/c	m²G)	Dis- charge		Outdoor heat ex- changer	BPHF	pressor revolu- tions per second	Entering water	Leaving water	Flowrate	temp. co	outdoor onditions B) (°C)
		Pd	Ps	Pd	Ps	(TD)	(TS)	(TE)	(TC)	(rps)	(TWI)	(TWO)	L/min	Indoor	Outdoor
Heating (Floor Applica- tions)	A7	2,46	0,59	25,1	6,0	92	-1	-2	30	82	30	36	46	20 / -	7/6
Heating (Stand- ard Rating)	A7 W47/55	3,54	0,68	36,1	6,9	95	1	1	47	65	47	55	26	20 / -	7/6
Heating (Low Ambi- ent)	A-7/-8 W**/34	2,49	0,35	25,4	3,6	96	-15	-15	29	82	29	35	31	20 / -	-7 / -8
Cooling (Stand- ard Rating)	A35 W12/7	2,87	0,71	29,3	7,2	95	1	44	6	71	12	7	30	20 / -	35 / -
Cooling (Floor Applica- tions)	A35	3,06	0,91	31,2	9,3	100	15	47	14	70	23	18	39	20 / -	35 / -

#### HWT-801H8W-\*

			Pres	sure		Pipe s	surface te	emperatur	e (°C)	Com-	Wate	er Condit	tions	Indoor /	Outdoor
		(MI	Pa)	(kg/c	m²G)	Dis- charge	Suction	Outdoor heat ex- changer	BPHE	pressor revolu- tions per second	Entering water	Leaving water	Flowrate	temp. co	onditions (B) (°C)
		Pd	Ps	Pd	Ps	(TD)	(TS)	(TE)	(TC)	(rps)	(TWI)	(TWO)	L/min	Indoor	Outdoor
Heating (Floor Applica- tions)	A7 W30/35	2,36	0,70	24,1	7,1	78	2	0	30	52	30	35	35	20 / -	7/6
Heating (Stand- ard Rating)	A7 W47/55	3,58	0,73	36,5	7,4	95	3	1	47	53	47	55	22	20 / -	7/6
Heating (Low Ambi- ent)	A-7/-8 W**/34	2,27	0,44	23,1	4,5	81	-11	-12	28	51	29	34	21	20 / -	-7 / -8
Cooling (Stand- ard Rating)	A35 W12/7	2,65	0,76	27,0	7,7	90	3	42	5	48	12	7	21	20 / -	35 / -
Cooling (Floor Applica- tions)	A35	2,81	1,04	28,7	10,6	86	16	44	15	48	23	18	28	20 / -	35 / -

#### HWT-1101H8W-E

			Pres	sure		Pipe s	surface te	mperatur	re (°C)	Com-	Wate	er Condit	ions	Indoor /	Outdoor
		(MI	Pa)	(kg/c	m²G)	Dis- charge	Suction	Outdoor heat ex- changer	BPHE	pressor revolu- tions per second	Entering water	Leaving water	Flowrate	temp. co	outdoor onditions B) (°C)
		Pd	Ps	Pd	Ps	(TD)	(TS)	(TE)	(TC)	(rps)	(TWI)	(TWO)	L/min	Indoor	Outdoor
Heating (Floor Applica- tions)	A7	2,46	0,65	25,1	6,6	85	-1	-1	30	68	30	35	43	20 / -	7/6
Heating (Stand- ard Rating)	A7 W47/55	3,63	0,68	37,0	6,9	95	0	0	47	68	47	55	27	20 / -	7/6
Heating (Low Ambi- ent)	A-7/-8 W**/34	2,24	0,42	22,8	4,3	84	-11	-13	26	64	28	33	27	20 / -	-7 / -8
Cooling (Stand- ard Rating)	A35 W12/7	2,78	0,74	28,3	7,5	94	2	44	6	57	12	7	25	20 / -	35 / -
Cooling (Floor Applica- tions)	A35	2,96	1,02	30,2	10,4	91	16	46	16	57	23	18	33	20 / -	35 / -

#### HWT-1401H8W-E

			Pres	sure		Pipe s	surface te	mperatur	e (°C)	Com-	Wate	er Condit	tions	Indoor /	Outdoor
		(MI	Pa)	(kg/c	m²G)	Dis- charge	Suction	Outdoor heat ex- changer	BPHE	pressor revolu- tions per second	Entering water	Leaving water	Flowrate	temp. co	onditions (B) (°C)
		Pd	Ps	Pd	Ps	(TD)	(TS)	(TE)	(TC)	(rps)	(TWI)	(TWO)	L/min	Indoor	Outdoor
Heating (Floor Applica- tions)	A7 W30/35	2,51	0,57	25,6	5,8	92	0	-2	30	82	30	36	44	20 / -	7/6
Heating (Stand- ard Rating)	A7 W47/55	3,64	0,62	37,1	6,3	95	-1	-1	47	82	47	56	30	20 / -	7/6
Heating (Low Ambi- ent)	A-7/-8 W**/34	2,40	0,36	24,5	3,7	95	-13	-14	29	82	29	35	30	20 / -	-7 / -8
Cooling (Stand- ard Rating)	A35 W12/7	2,91	0,73	29,7	7,4	94	2	45	7	71	12	7	31	20 / -	35 / -
Cooling (Floor Applica- tions)	A35	3,07	0,89	31,3	9,1	102	16	47	13	71	23	18	39	20 / -	35 / -

# MEMO

•••••••••••••••••••••••••••••••••••••••
•••••••••••••••••••••••••••••••••••••••
•••••••••••••••••••••••••••••••••••••••
•••••••••••••••••••••••••••••••••••••••
•••••••••••••••••••••••••••••••••••••••
•••••••••••••••••••••••••••••••••••••••
•••••••••••••••••••••••••••••••••••••••
•••••••••••••••••••••••••••••••••••••••
•••••••••••••••••••••••••••••••••••••••
•••••••••••••••••••••••••••••••••••••••
•••••••••••••••••••••••••••••••••••••••
•••••••••••••••••••••••••••••••••••••••
•••••••••••••••••••••••••••••••••••••••
•••••••••••••••••••••••••••••••••••••••
•••••••••••••••••••••••••••••••••••••••
•••••••••••••••••••••••••••••••••••••••
•••••••••••••••••••••••••••••••••••••••
•••••••••••••••••••••••••••••••••••••••
•••••••••••••••••••••••••••••••••••••••
•••••••••••••••••••••••••••••••••••••••
•••••••••••••••••••••••••••••••••••••••
•••••••••••••••••••••••••••••••••••••••
•••••••••••••••••••••••••••••••••••••••
•••••••••••••••••••••••••••••••••••••••
•••••••••••••••••••••••••••••••••••••••
•••••••••••••••••••••••••••••••••••••••
•••••••••••••••••••••••••••••••••••••••
•••••••••••••••••••••••••••••••••••••••
•••••••••••••••••••••••••••••••••••••••
•••••••••••••••••••••••••••••••••••••••
•••••••••••••••••••••••••••••••••••••••

# Toshiba Carrier Air-Conditioning Europe Sp.z o.o.

ul. Gdańska 131,62-200 Gniezno, Poland

Copyright © 2021 Toshiba Carrier Air-conditioning Europe Sp. z o.o., ALL Rights Reserved.

Revision record

First issue	-	_	Mar. 2023
Revised ①	Updated description of 6kW 2zone model Typo correction Change part code	Page 2, 18-23, 26, 28, 31, 38, 45, 46, 86, 112, 158, 159, 161, 167, 207-210, 215, 218, 262-265, 267-274, 277, 280, 283, 286, 292, 294, 296, 297	Aug. 2023