


SpaceLogic KNX Switch actuator REG-K/4x230/16 with manual mode

Operating instructions

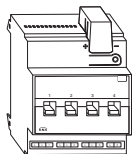

Art. no. MTN647593

For your safety

⚠️ ⚠️ DANGER

HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH

Safe electrical installation must be carried out only by skilled professionals. Skilled professionals must prove profound knowledge in the following areas:

- Connecting to installation networks
- Connecting several electrical devices
- Laying electric cables
- Connecting and establishing KNX networks
- Safety standards, local wiring rules and regulations

Failure to follow these instructions will result in death or serious injury.

⚠️ ⚠️ DANGER

HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH

Even if the manual switch is in the "OFF" position, a KNX telegram can switch the connections to being live at any time. Before working on the device, always disconnect the fuse in the incoming circuit from the supply.

Failure to follow these instructions will result in death or serious injury.

⚠️ CAUTION

The device may be damaged!

- Only operate the device according to the specifications stated in the Technical data.
- All devices that are installed next to the actuator must be equipped with at least basic insulation


Failure to follow these instruction can result in equipment damage.

Getting to know the switch actuator

The switch actuator REG-K/4x230/16 with manual mode (referred to below as the **actuator**) can switch four loads via separate, floating make contacts.

You can also manually switch the connected loads with manual switches on the actuator without bus voltage.


The actuator has a bus coupler. It is installed on a DIN rail, with the bus connection made via a bus connecting terminal. It is supplied with power from the bus voltage. A data rail is not required.

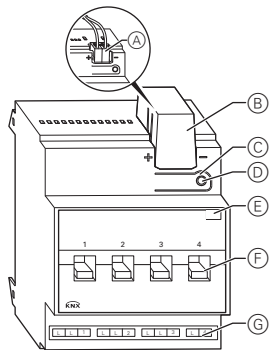


- (A) Bus connecting terminal, max. 4 core pairs
- (B) Cable cover
- (C) Programming button
- (D) Programming LED (red LED)
- (E) Operating LED (green LED)
- (F) Manual switch
- (G) Screw terminals

Mounting the actuator

- ① Set the actuator onto the DIN rail.

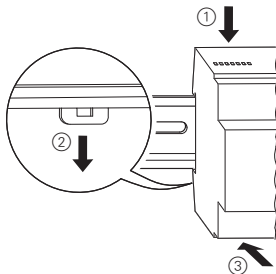


- ② Connect KNX.

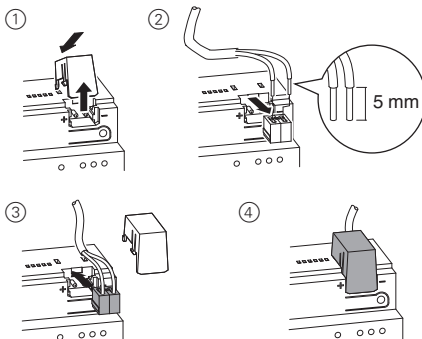

WARNING

Risk of fatal injury from electrical current. The device could become damaged.

Safety clearance must be guaranteed in accordance with IEC 60664-1. There must be at least 4 mm between the individual cores of the 230 V supply cable and the KNX line.

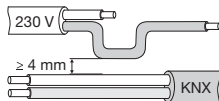

⚠️ ⚠️ DANGER

HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH

Voltage may be present at the outputs when the mains voltage is connected to the system.

If subjected to strong vibrations during transportation, the switch contacts might change to the enabled state.

After connecting the bus voltage, set the relays of the channels to the position desired simply by switching "On/Off" or by changing the manual switch to "OFF"

Failure to follow these instructions will result in death or serious injury.

- ③ Connect the bus voltage.
- ④ Wait at least 30 seconds.
- ⑤ Set the relays of the channels to the position desired simply by switching "On/Off" or by changing the manual switch to "OFF".

⚠️ CAUTION


The device may be damaged!

Protect the switch contacts with a series-connected 16 A circuit breaker.

Failure to follow these instruction can result in equipment damage.

- ⑥ Connect the load.

The cables to the loads as well as the system voltages (L1, L2 or L3) are connected via screw terminals for max. 16 A. Every two L connections are bridged internally.

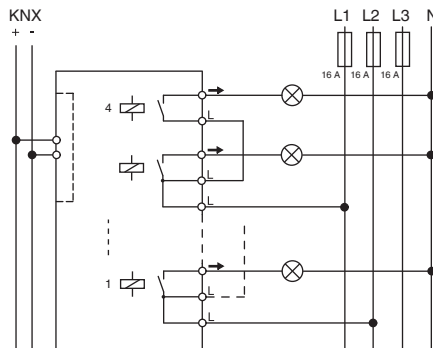

- ⑦ Connect the mains voltage.

Now you can check the functionality of the actuator and the connected loads without having to load the application from the ETS. (See the "Operating the actuator" section.)

Putting the actuator into operation

- ① Press the programming button. The programming LED lights up.
- ② Load the physical address and application into the device from the ETS. The programming LED goes out. The operating LED lights up: The application was loaded successfully, the device is ready for operation.

Operating the actuator

Normally, you control connected devices using push-buttons or by remote control. However, you can manually switch each of the actuator's channels on and off directly at the manual switches.

Technical data

Power supply from bus:	DC 24 V / approx. 12.5 mA
Switch contacts 1 to 4:	4 x make contacts, floating
Nominal voltage:	AC 230 V, 50 to 60 Hz
Nominal current:	16 A, $\cos \phi = 0.6$
Connected load	
Incandescent lamps:	AC 230 V, max. 3600 W with 10,000 switching cycles
Halogen lamps:	AC 230 V, max. 2500 W with 10,000 switching cycles
Fluorescent lamps:	AC 230 V, max. 2500 VA, parallel-compensated, with 5,000 switching cycles
Capacitive load:	AC 230 V, 16 A max. 200 μF with 5,000 switching cycles
Switching frequency:	max. 10 per minute at nominal load
Ambient temperature	
Operation:	-5 °C to +45 °C
Storage:	-25 °C to +55 °C
Transport:	-25 °C to +70 °C
Environment:	can be used at up to 2000 m above sea level (MSL)
Max. humidity:	93 %, no moisture condensation
Connections	
Bus:	via two 1 mm pins for bus connecting terminal
Outer conductor:	three 3-gang screw terminals for max. 2.5 mm ² one 2-gang screw terminals for max. 2.5 mm ²
Device width:	4 depth units = approx. 72 mm

Schneider Electric -Contact

Schneider Electric Industries SAS
35 rue Joseph Monier
Rueil Malmaison 92500
France

If you have technical questions, please contact the Customer Care Centre in your country.

se.com/contact