

**BN IO-LINK INTERFACE DESCRIPTION**

Version 1.2 23/10/2025


**1 COMMUNICATION**

| Parameter                       | Value  |
|---------------------------------|--|
| Vendor ID                       | 1476 (dec.), 0x05C4 (hex.)                           |
| Vendor Name                     | Pizzato Elettrica SRL                                |
| Vendor URL                      | <a href="http://www.pizzato.com">www.pizzato.com</a> |
| Product Name                    | BN AC3EA09   |
| Device ID                       | 21 (dec.), 0x000015 (hex.)                           |
| IO-Link Revision                | v1.1.4   |
| Process Data In Length (bytes)  | 5  |
| Process Data Out Length (bytes) | 3  |
| Bit Rate (bps)                  | 38400 (COM2)   |
| Minimum cycle time (ms)         | 4.1  |
| Port Class                      | A  |
| SIO mode                        | No   |
| Block Parametrization           | Yes  |
| Data Storage                    | Yes  |
| Fw Update                       | No   |

## 2 PROCESS DATA IN

The cyclical parameters that the IO-Link master exchanges with the device are listed in the following table. The button indexes start from the top of the product. The second contact is optional, so its state is visible only in device configurations that support it.

| Name     | Byte Position | Length  | Value  |
|----------|---------------|---------|--|
| BUTTON 1 | 0             | 1 byte  | <b>0</b> = Open contacts; <b>1</b> = First contact closed; <b>2</b> = Second contact closed; <b>3</b> = First and second contacts closed |
| BUTTON 2 | 1             | 1 byte  | <b>0</b> = Open contacts; <b>1</b> = First contact closed; <b>2</b> = Second contact closed; <b>3</b> = First and second contacts closed |
| BUTTON 3 | 2             | 1 byte  | <b>0</b> = Open contacts; <b>1</b> = First contact closed; <b>2</b> = Second contact closed; <b>3</b> = First and second contacts closed |
| VOLTAGE  | 3             | 2 bytes | Voltage value (mV)   |

## 3 PROCESS DATA OUT


The cyclical parameters that the IO-Link master exchanges with the device are listed in the following table. The LED indexes start from the top of the product.

If the device it's a selector, the light colour can be only white.

| Name  | Byte position | Length | Fields  | Field Name | Value   |
|-------|---------------|--------|---------|------------|---|
| LED 1 | 0             | 1 byte | Bit 0-3 | Colour     | <b>0</b> = Red; <b>1</b> = Green; <b>2</b> = Blu; <b>3</b> = Yellow; <b>4</b> = Cyan; <b>5</b> = Magenta; <b>6</b> = White; <b>7</b> = Custom 1; <b>8</b> = Custom 2; <b>9</b> = Custom 3; <b>10</b> = Custom 4; <b>11...15</b> = n/a |
|       |               |        | Bit 4-6 | Mode       | <b>0</b> = Off; <b>1</b> = On; <b>2</b> = Flash 0,5 Hz; <b>3</b> = Flash 1 Hz; <b>4</b> = Flash 2 Hz; <b>5</b> = Fade; <b>6,7</b> = n/a   |
|       |               |        | Bit 7   | Brightness | <b>0</b> = Low; <b>1</b> = High   |
| LED 2 | 1             | 1 byte | Bit 0-3 | Colour     | <b>0</b> = Red; <b>1</b> = Green; <b>2</b> = Blu; <b>3</b> = Yellow; <b>4</b> = Cyan; <b>5</b> = Magenta; <b>6</b> = White; <b>7</b> = Custom 1; <b>8</b> = Custom 2; <b>9</b> = Custom 3; <b>10</b> = Custom 4; <b>11...15</b> = n/a |
|       |               |        | Bit 4-6 | Mode       | <b>0</b> = Off; <b>1</b> = On; <b>2</b> = Flash 0,5 Hz; <b>3</b> = Flash 1 Hz; <b>4</b> = Flash 2 Hz; <b>5</b> = Fade; <b>6,7</b> = n/a   |
|       |               |        | Bit 7   | Brightness | <b>0</b> = Low; <b>1</b> = High   |
| LED 3 | 2             | 1 byte | Bit 0-3 | Colour     | <b>0</b> = Red; <b>1</b> = Green; <b>2</b> = Blu; <b>3</b> = Yellow; <b>4</b> = Cyan; <b>5</b> = Magenta; <b>6</b> = White; <b>7</b> = Custom 1; <b>8</b> = Custom 2; <b>9</b> = Custom 3; <b>10</b> = Custom 4; <b>11...15</b> = n/a |
|       |               |        | Bit 4-6 | Mode       | <b>0</b> = Off; <b>1</b> = On; <b>2</b> = Flash 0,5 Hz; <b>3</b> = Flash 1 Hz; <b>4</b> = Flash 2 Hz; <b>5</b> = Fade; <b>6,7</b> = n/a   |
|       |               |        | Bit 7   | Brightness | <b>0</b> = Low; <b>1</b> = High   |

Legend: n/a = not available

#### 4 PROCESS DATA OVERVIEW

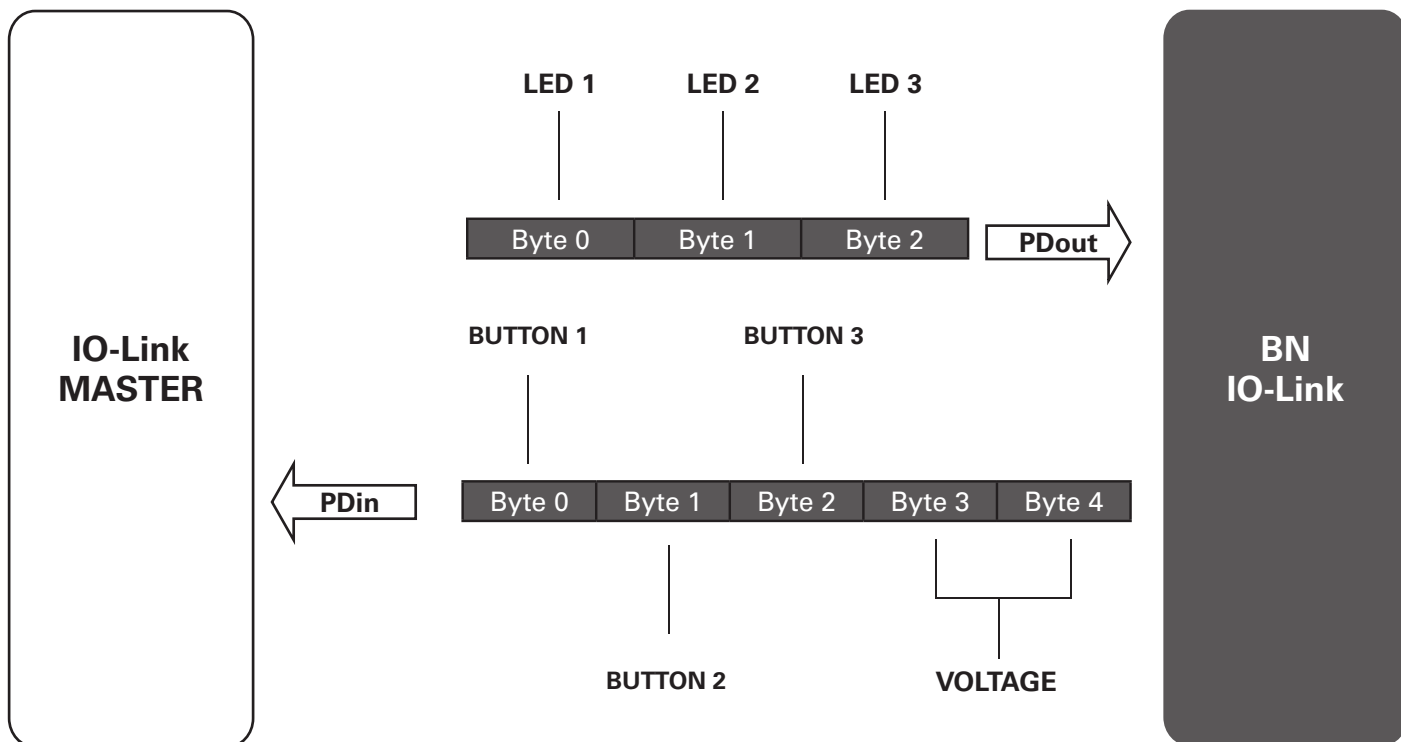

#### 5 PARAMETERS OVERVIEW

The following parameters can be read from and/or written to a Device with a IO-Link master.

| Name                     | Index | Sub-index | Data type            | Read/Write | Data Storage | Default Value           |
|--------------------------|-------|-----------|----------------------|------------|--------------|-------------------------|
| SystemCommand            | 2     | 0         | UIntegerT (8 bit)    | WO         |              |                         |
| VendorName               | 16    | 0         | StringT (64 bytes)   | RO         |              | "Pizzato Elettrica SRL" |
| VendorText               | 17    | 0         | StringT (64 bytes)   | RO         |              | "PASSION FOR QUALITY"   |
| ProductName              | 18    | 0         | StringT (64 bytes)   | RO         |              | "BN"                    |
| ProductID                | 19    | 0         | StringT (64 bytes)   | RO         |              | "BN ACxEAxX"            |
| ProductText              | 20    | 0         | StringT (64 bytes)   | RO         |              | "BN IO-Link"            |
| SerialNumber             | 21    | 0         | StringT (16 bytes)   | RO         |              | "****"                  |
| HardwareRevision         | 22    | 0         | StringT (10 bytes)   | RO         |              |                         |
| FirmwareRevision         | 23    | 0         | StringT (64 bytes)   | RO         |              |                         |
| Application-specific Tag | 24    | 0         | StringT (32 bytes)   | RW         | ✓            | "****"                  |
| Function Tag             | 25    | 0         | StringT (32 bytes)   | RW         | ✓            | "****"                  |
| Location Tag             | 26    | 0         | StringT (32 bytes)   | RW         | ✓            | "****"                  |
| Error Count              | 32    | 0         | UIntegerT (16 bit)   | RO         |              |                         |
| Device Status            | 36    | 0         | UIntegerT (8 bit)    | RO         |              |                         |
| Detailed Device Status   | 37    | 0         | ArrayT (3 bytes) [4] | RO         |              |                         |
| Process Data IN          | 40    | 0         | RecordT (5 bytes)    | RO         |              |                         |
| Process Data OUT         | 41    | 0         | RecordT (3 bytes)    | RO         |              |                         |

|                |    |           |                    |    |   |     |
|----------------|----|-----------|--------------------|----|---|-----|
| Custom Colour1 | 64 | 1 - Red   | UIntegerT (8 bit)  | RW | ✓ | 128 |
|                |    | 2 - Green | UIntegerT (8 bit)  | RW | ✓ | 128 |
|                |    | 3 - Blue  | UIntegerT (8 bit)  | RW | ✓ | 128 |
| Custom Colour2 | 65 | 1 - Red   | UIntegerT (8 bit)  | RW | ✓ | 128 |
|                |    | 2 - Green | UIntegerT (8 bit)  | RW | ✓ | 128 |
|                |    | 3 - Blue  | UIntegerT (8 bit)  | RW | ✓ | 128 |
| Custom Colour3 | 66 | 1 - Red   | UIntegerT (8 bit)  | RW | ✓ | 128 |
|                |    | 2 - Green | UIntegerT (8 bit)  | RW | ✓ | 128 |
|                |    | 3 - Blue  | UIntegerT (8 bit)  | RW | ✓ | 128 |
| Custom Colour4 | 67 | 1 - Red   | UIntegerT (8 bit)  | RW | ✓ | 128 |
|                |    | 2 - Green | UIntegerT (8 bit)  | RW | ✓ | 128 |
|                |    | 3 - Blue  | UIntegerT (8 bit)  | RW | ✓ | 128 |
| OperatingHours | 80 | 0         | UIntegerT (32 bit) | RO |   |     |
| Temperature    | 81 | 0         | IntegerT (16 bit)  | RO |   |     |

Legend: RO = read only WO = write only RW = read/write

## 6 PARAMETERS

The following parameters can be chosen by the customer and they are included inside the Data Storage. For custom colours, FADE mode is not available.

| Name            | Length  | Fields | Field Name | Value                         |
|-----------------|---------|--------|------------|-------------------------------|
| CUSTOM COLOUR 1 | 3 bytes | Byte 0 | Red        | <b>0-255</b> (dec.) PWM value |
|                 |         | Byte 1 | Green      | <b>0-255</b> (dec.) PWM value |
|                 |         | Byte 2 | Blue       | <b>0-255</b> (dec.) PWM value |
| CUSTOM COLOUR 2 | 3 bytes | Byte 0 | Red        | <b>0-255</b> (dec.) PWM value |
|                 |         | Byte 1 | Green      | <b>0-255</b> (dec.) PWM value |
|                 |         | Byte 2 | Blue       | <b>0-255</b> (dec.) PWM value |
| CUSTOM COLOUR 3 | 3 bytes | Byte 0 | Red        | <b>0-255</b> (dec.) PWM value |
|                 |         | Byte 1 | Green      | <b>0-255</b> (dec.) PWM value |
|                 |         | Byte 2 | Blue       | <b>0-255</b> (dec.) PWM value |
| CUSTOM COLOUR 4 | 3 bytes | Byte 0 | Red        | <b>0-255</b> (dec.) PWM value |
|                 |         | Byte 1 | Green      | <b>0-255</b> (dec.) PWM value |
|                 |         | Byte 2 | Blue       | <b>0-255</b> (dec.) PWM value |

## 7 DIAGNOSIS PARAMETERS

The following parameters can only be read from Device.

| Name            | Length  | Fields   | Value                     |
|-----------------|---------|----------|---------------------------|
| OPERATING HOURS | 4 bytes | Byte 0-3 | Number of operating hours |
| TEMPERATURE     | 2 bytes | Byte 0-1 | Current temperature value |

| Name   | Index | Sub-Index | Value   |
|--|-------|-----------|---|
| DEVICE STATUS  | 36    | 0         | <b>0</b> = Device is OK; <b>1</b> = Maintenance required; <b>2</b> = Out of specification; <b>3</b> = Functional check; <b>4</b> = Failure                  |
| DETAILED DEVICE STATUS<br>Detailed Device Status[1]<br>Detailed Device Status[2]<br>Detailed Device Status[3]<br>Detailed Device Status[4] | 37    | 0         | Per ArrayT element<br><b>Byte 1</b> = EventQualifier<br><b>Bytes 2,3</b> = EventCode<br><br>Dynamic list is implemented to get all current errors (up to 4) |
| ERROR COUNT  | 32    | 0         | Counts all occurred error events since the power-on process   |

## 8 COMMANDS

The following functions are related to the System Command at Index 2 (described in the Parameter overview table).

| Command Code | Name              | Section          | Description   |
|--------------|-------------------|------------------|---|
| 129 (dec.)   | Application Reset | Service Function | Reset variables inside the Data Storage to the default value  |
| 131 (dec.)   | BackToBox         | Service Function | Reset variables inside the Data Storage to the default value. The device will lose communication with the IO-Link master. The device must be restarted. |

## 9 EVENTS

Events are acyclic transmissions from the IO-Link device to report a problem to the IO-Link master.

| Code         | Device Status value | Name                                  | Description   |
|--------------|---------------------|---------------------------------------|---|
| 6202 (dec.)  | 4 (dec.)            | Internal Fault 1                      | Contact Pizzato Elettrica assistance                                    |
| 6203 (dec.)  | 4 (dec.)            | Internal communication error          | Reset Device  |
| 6204 (dec.)  | 4 (dec.)            | Internal IO-Link transceiver error    | Reset Device  |
| 6205 (dec.)  | 2 (dec.)            | Process Data error                    | Written Process Data Out value out of range. Check datasheet and values |
| 16912 (dec.) | 2 (dec.)            | Device temperature overrun            | Clear source of heat  |
| 16928 (dec.) | 2 (dec.)            | Device temperature underrun           | Insulate Device   |
| 20752 (dec.) | 2 (dec.)            | Primary supply voltage overrun        | Check tolerance   |
| 20753 (dec.) | 2 (dec.)            | Primary supply voltage underrun       | Check tolerance   |
| 35840 (dec.) | 4 (dec.)            | Technology specific application fault | Reset Device  |

The device may be used for safety applications, therefore in case of any doubt concerning installation or operation methods, always contact our technical support service:

Pizzato Elettrica Srl

Via Torino, 1 - 36063 Marostica (VI) - ITALY

Telephone +39.0424.470.930

E-mail [tech@pizzato.com](mailto:tech@pizzato.com)

[www.pizzato.com](http://www.pizzato.com)

Our support service provides assistance in Italian and English.

#### DISCLAIMER:

Subject to modifications without prior notice and errors excepted. The data given in this sheet are accurately checked and refer to typical mass production values. The device descriptions and its applications, the fields of application, the external control details, as well as information on installation and operation, are provided to the best of our knowledge. This does not in any way mean that the characteristics described may entail legal liabilities extending beyond the "General Terms of Sale", as stated in the Pizzato Elettrica general catalogue. Customers/users are not absolved from the obligation to read and understand our information and recommendations and pertinent technical standards, before using the products for their own purposes. Taking into account the great variety of applications and possible connections of the device, the examples and diagrams given in the present manual are to be considered as merely descriptive; the user is deemed responsible for checking that the specific application of the device complies with current standards. This document is a translation of the original instructions. In case of discrepancy between the present sheet and the original copy, the Italian version shall prevail. All rights to the contents of this publication are reserved in accordance with current legislation on the protection of intellectual property. The reproduction, publication, distribution and modification, total or partial, of all or part of the original material contained therein (including, but not limited to, texts, images, graphics), whether on paper or in electronic form, are expressly prohibited without written permission from Pizzato Elettrica Srl.

All rights reserved. © 2025 Copyright Pizzato Elettrica