



INSTALLATION INFORMATION

PLEASE READ PRIOR TO INSTALLATION



IS-S Intrinsically Safe Series

ACOUSTIC SIGNALLING DEVICE



- EN Translations & Documentation, scan QR Code
- FR Traductions & Documentation, scannez le QR Code
- DE Übersetzungen & Dokumentation, QR-Code scannen
- IT Traduzioni & Documentazione, scansionare il QR code
- ES Traducciones & Documentación, escanear QR code

APPROVALS AND CONFORMITIES



General Installation Notes

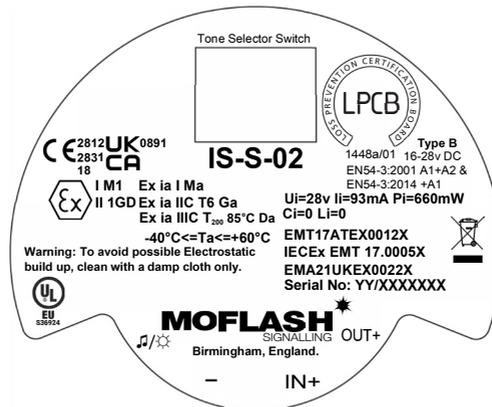
- The product must be installed in accordance with the latest EN60079-0 specification or the equivalent IEC specification, with consideration for any local installation requirements, and should only be carried out by appropriately competent and qualified personnel.
- The location of the unit should be chosen with due regard to the area over which the signalling device must be audible.
- The units are suitable for **Wall or Ceiling mount only**.
- Ensure power is disconnected prior to installation or maintenance to avoid danger of electrical shock.
- Environmental exposure conditions during installation should be dry. Moist or wet conditions should be avoided.
- Avoid mounting the Sounder where it will be subjected to excessive vibration.

1. Introduction

The Moflash Intrinsically Safe Sounder Range of products (IS-S-02) are ATEX and IECEx certified. This range is approved to be installed in Groups I (Mining) and Group II (above ground), Zones 0, 1 or 2 with gas groups IIA, IIB, IIC and Zones 20, 21 and 22 for dust groups IIIC and carries a temperature classification of T6. The Sounder Range comprises 2 stage alarm and has a total of 32 selectable alarm tones via a DIP switch which is set upon installation. When powered via a suitable Galvanic Isolator or Zener Barrier the Sounder will draw a constant 33mA. The Sounder Range has diode reverse polarity protection and is also End of Line resistor compatible.

2. Intrinsically Safe Labelling

The product will have an individual serial number printed onto the head base plate. An example of the Sounder label is shown below:



Year of Manufacture can be found as the first 2 digits of the serial number on the product label. These products have been tested by notified body **Element Materials Technology**, who are UKAS accredited to BS EN ISO/IEC 17025:2005 and ISO/IEC 17065:2012. It is also a Notified Body for the ATEX Directive, UKEX (UKCA), an IECEx Certification Body and an IECEx Testing Laboratory.

The suffix X at the end of the certificate numbers indicate that there are special clauses added for safe use of these units.

3. Types of Approval and Standards Applied

The Moflash IS product range all have been approved to the following standards:

- IEC 60079-0:2017 / EN IEC 60079-0:2018
- IEC 60079-11:2023 / EN IEC 60079-11:2024
- EN54-3 (BRE Global & UL)

4. Zones, Gas Groups and Temperature Classifications

The Moflash Intrinsically Safe Sounder Range is certified to the following:

Group I : Mining	Group II : Above Ground
I M1 Ex ia I Ma	II 1 G D Ex ia IIC T6 Ga
	II 1 G D Ex ia IIIC T ₂₀₀ 85°C Da

This means that the units can be installed in locations with the following conditions when connected to an approved system:

Zones

- Zone 0 Explosive gas air mixture continuously present.
- Zone 1 Explosive gas air mixture likely to occur in normal operation.
- Zone 2 Explosive gas air mixture not likely to occur, and if it does, it will only exist for a short time.
- Zone 20 Explosive dust air mixture is continuously present.
- Zone 21 Explosive dust air mixture likely to occur in normal operation.
- Zone 22 Explosive dust air mixture not likely to occur, and if it does, it will only exist for a short time.

Gas Groupings	Dust Groupings
M1 Methane, Carbon Dust	
IIA Propane Group	IIIA Fibres and Flying
IIB Ethylene Group	IIIB Flour and Grain
IIC Hydrogen and Acetylene	IIIC Coal Dust and Metal Dust

Equipment Category

1G D & M1 Temperature Range: $-40^{\circ}\text{C} < T_a < 60^{\circ}\text{C}$

The maximum surface temperature of the product during operation will not exceed 85°C .

A Declaration of Conformity and the ATEX & IECEx certificates for the Sounder range are available on request. Alternatively, visit www.moflash.com.

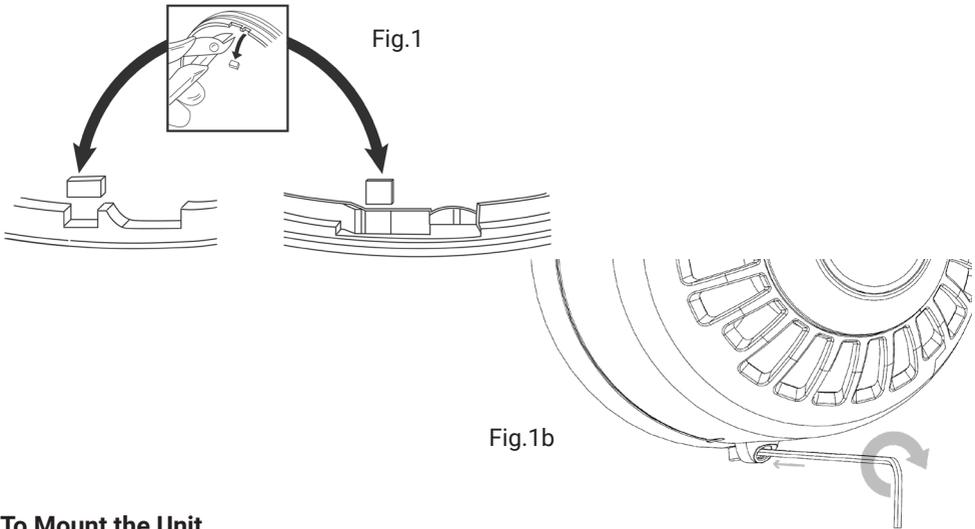
5. Installation Instructions

The TimeSaver base enables quick and easy installation of these unit with no extra cabling to be made to the head of the unit. Connections are made to the base during the initial wiring phase which results in faster and more reliable installation. The Sounder head 'twists and clicks' into the base on commissioning, thus avoiding any wiring or connection problems associated with traditional installations.

If required, the mechanism for locking the Sounder to the base can be activated by removing the thin section of plastic shown in Fig. 1 with side cutters or a similar tool. To open a locked head remove the small rubber bung from the hole on the side of the Sounder and insert a tool into the hole and depress the clip whilst twisting the head.

An alternative locking method is shown Fig.1b. Drive the hexagonal locking screw forward by turning a 1.5mm hexagonal key clockwise until the Head is locked.

The O-ring and bung must be re-fitted to maintain weatherproofing.



To Mount the Unit

- Remove the head from the base by rotating anticlockwise until it comes free.
- Remove the appropriate fixing hole and conduit knockouts from the back box.
- The back box provides IP66* protection. For this to be maintained, suitable seals must be used around the mounting screws. Suitably rated (minimum IP66) M20 cable glands must also be used for cable entry/exit.
- Insert cable glands and attach to surface
- Select required wiring option for required operation (see wiring section 6)
- Select tone by configuring the DIP switches in the head of unit. The tone table can be found on page 9.
- Relocate head onto mounted base unit & rotate clockwise until locked in place.

* IP66 has not been tested by UL, and so is outside their scope. But the product has been IP66 tested by Element Materials Technology during ATEX approval.

6. Wiring

Table below indicates markings inside the base of the unit for wiring connections.

Line	Terminal Marking
Common Positive Supply IN	(3) IN +
Sounder Negative Supply	(2) —
Second Stage Negative Supply	(1) 🎵/☀

Each unit must be powered via a suitably approved Zener Barrier or Galvanic Isolator that ensure the entity parameters for the Sounder shall not exceed:

Table of Entity Parameter	
Parameter	Barrier Supply
U _i	28v
I _i	93mA
P _i	660mW
L _i	0
C _i	0

The value of U_o must be between **16v and 28v**, and I_o should not be below 50mA


Operation of the Sounder unit (IS-S-02) can be taken from the table below:

Line	Terminal Marking	First Stage tone	Second Stage tone
Common Positive Supply IN	(3) IN +	+	+
Sounder Negative Supply	(2) —	—	—
Second Stage Negative Supply	(1) 🎵/☀		—

Single Stage Alarm

Before final installation of the IS-S-02 Sounder head unit onto the installed base, the alarm tone must be set (see page 5).

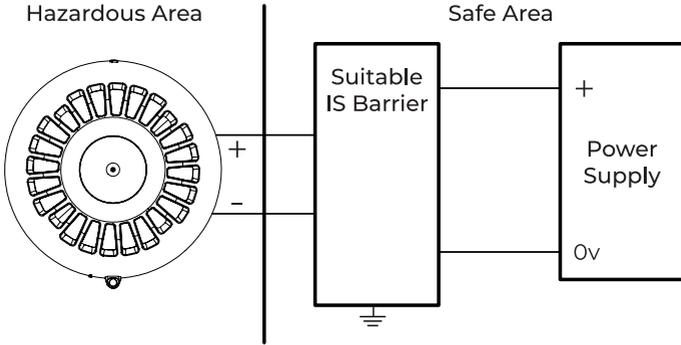
To control the Sounder, use either a switch in the safe area on either the positive or negative lines into the Barrier, or by turning the power supply on and off (See below).



Two Stage Alarm

When a two stage alarm is required, it is possible to activate an alternate tone by connecting the "🎵/⚡" (Second Stage Negative Supply) pin to 0v (as detailed in the table on page 5).

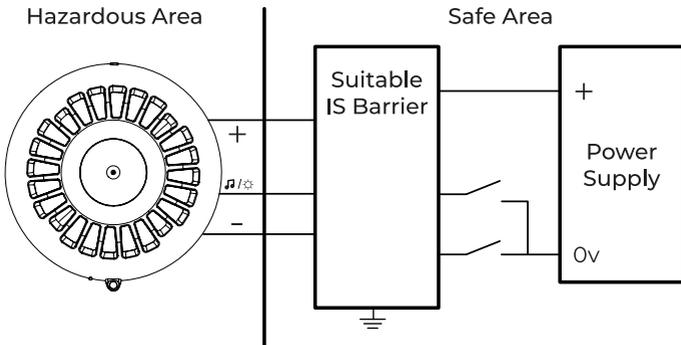For this application, a barrier with 2 Diode return paths is required as shown in the diagram below:




Switching between return paths for the 2 stage system will enable the 2nd tone. Second stage tone can be found in the table on page 9.


Galvanic Isolator

The IS-S-02 Intrinsically Safe Sounder Range is compatible for use with suitably rated Galvanic Isolators. The Galvanic Isolators have the advantage of not requiring an Isolated high integrity earth to be installed to connect the Zener Barriers. These Isolators are often more expensive per unit but may reduce installation costs as the earth is not required.

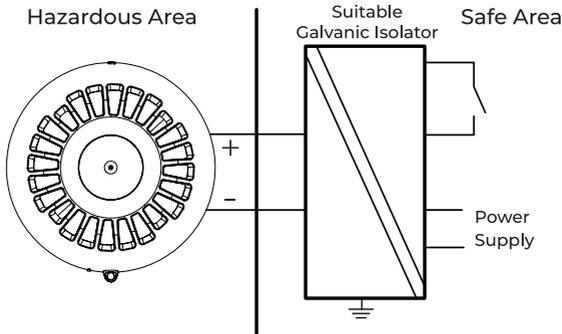The IS-S-02 range can be powered by the Galvanic Isolators with matching parameters as described in the entity parameters section of the installation sheet. The Sounder can be turned on and off either by using a suitably placed switch in the positive or negative rails (switch must be of suitable ratings if installed in the Hazardous area), or by turning the Galvanic Isolator on and off.



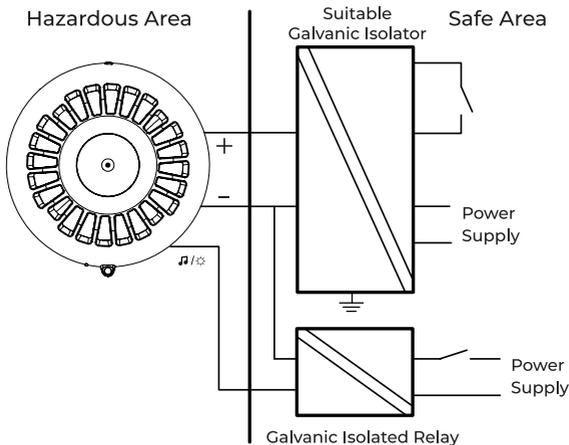As with the Zener barriers, the second stage alarm can be triggered when using Galvanic Isolators. However, an additional Intrinsically Safe relay is required to make the additional connection. As with all equipment in the system, the correct ratings must be maintained to keep the integrity and safety to the correct levels. The relay can be switched to change between stage 1 and stage 2.



End of line monitoring is applicable to the Sounder Product. For this to function correctly the resistor must be connected between the IN+ terminal and the Sounder Negative Supply. A suitable Zener Barrier which can allow reverse polarity monitoring to take place and a fire panel compatible with Intrinsically Safe products must also be used.

If required, an external switch can be wired in series with the (1) and/or (2) connections to give independent remote change over from 1st stage to 2nd stage tones. This switch must conform to Intrinsically Safe installation (EN IEC 60079-0:2018, EN IEC 60079-11:2024, EN 50303:2000).

7. Maintenance

Little or no maintenance is required during the normal working life of the product. The Moflash Intrinsically Safe enclosures are resistant to most acids, alkalis and chemicals and have been designed to withstand severe weather conditions. However it is suggested that continuous supervision and periodic inspections may be required in relation to the requirements of the installation as per IEC 60079-17. To avoid the possibility of a potential electrostatic charge build up, it is recommended that the exterior of the product is periodically wiped down with a clean damp cloth.

At this point a visual inspection is recommended to ensure that the product is in good working order and no damage has been sustained during its normal operation. In the case of dust fibres or flyings, the level of supervision may influence the inspection and maintenance requirements.

8. Conditions for use

The Moflash Intrinsically Safe Signalling Range uses an enclosure rated at IP66. To ensure that this rating is maintained once installed, a suitable cable gland must be used which matches this level of protection. The base of the units contains 3x M20 knockouts for wiring in purposes, and only those required should be used. Any that are removed must have at least an IP66 rated gland fitted with cable passing through it or suitable plug.

The enclosure is non-conducting and may generate an ignition-capable level of electrostatic charge under certain extreme conditions. It is the responsibility of the user to ensure that the equipment is installed in a location where it will not be subjected to external conditions that might cause a build-up of electrostatic charge on the surface of the unit. Additionally, cleaning of the equipment should be done only with a damp cloth.

The Intrinsically safe Sounder range of products is only to be powered via a correctly rated Zener Barrier or Galvanic Isolator. **To power these units up without the correctly rated barrier could damage these products and so void any protection ratings.**

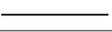
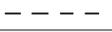
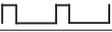
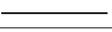
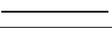
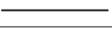
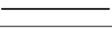
The equipment is not intended for repair by the user. Repair of this equipment shall be carried out by the manufacturer or manufacturer's authorised agent.

It is the responsibility of the end user to take suitable precautions to prevent exposure to aggressive chemicals that may attack metals or the polymeric materials used in the construction of this equipment.

Specific Conditions of Use:

1. Clean equipment regularly to prevent dust build-up with a damp or anti-static cloth only.
2. Equipment only suitable for fixed installation.
3. Installation shall be carried out in accordance with the relevant, local code of practice for Ex equipment, e.g. EN & IEC 60079-14, EN 50628 (mining) and IEC 60079-25 and that capacitance and inductance limits are not exceeded by distributed capacitance (Cc) or distributed inductance (Lc) due to cable length.

9. Tone Table

Tone	Tone Type	Tone Description/application	DIP SWITCH						dB(A) @ 1m	2nd Stage	
			1	2	3	4	5	6			
1.		970Hz	0	0	0	0	0	0	87	18	
2.		800Hz/970Hz @ 2Hz	0	0	0	0	0	1	0	91	1
3.		800Hz – 970Hz @ 1Hz	0	0	0	0	1	0	0	91	1
4.		970Hz 1s ON/1s ON	0	0	0	0	1	1	0	92	1
5.		970Hz, 0.5s/ 630Hz, 0.5s	0	0	0	1	0	0	0	92	4
6.		554Hz, 0.1s/ 440Hz, 0.4s (AFNOR NF S 32 001)	0	0	0	1	0	1	0	89	1
7.		500 – 1200Hz, 3.5s/0.5s OFF (NEN 2575:2000 Dutch Slow Whoop)	0	0	0	1	1	0	0	90	1
8.		420Hz 0.6s ON/0.6s OFF (Australia AS1670 Alert tone)	0	0	0	1	1	1	0	93	9
9.		1000 - 2500Hz, 0.5s/0.5s OFF x 3/1.5s OFF (AS1670 Evacuation)	0	1	0	0	0	0	0	97	1
10.		550Hz/440Hz @ 0.5Hz	0	1	0	0	0	1	0	94	19
11.		970Hz, 0.5s ON/0.5s OFF x 3/ 1.5s OFF (ISO 8201)	0	1	0	0	1	0	0	92	1
12.		2850Hz, 0.5s ON/0.5s OFF x 3/1.5s OFF (ISO 8201)	0	1	0	0	1	1	0	90	1
13.		1200Hz – 500Hz @ 1Hz (DIN 33 404)	0	1	1	1	0	0	0	89	1
14.		400Hz	0	1	1	1	0	1	0	92	18
15.		550Hz, 0.7s/1000Hz, 0.33s	0	1	1	1	1	0	0	93	1
16.		1500Hz – 2700Hz @ 3Hz	0	1	1	1	1	1	0	98	1
17.		750Hz	1	0	0	0	0	0	0	93	1
18.		2400Hz	1	0	0	0	0	1	0	105	1
19.		660Hz	1	0	0	0	1	0	0	93	18
20.		660Hz 1.8s ON/1.8s OFF	1	0	0	0	1	1	0	93	19
21.		660Hz 0.15s ON/0.15s OFF	1	0	0	1	0	0	0	93	19
22.		510Hz, 0.25s/ 610Hz, 0.25s	1	0	0	1	0	1	0	92	1
23.		800/1000Hz 0.5s each (1Hz)	1	0	0	1	1	0	0	95	1
24.		250Hz – 1200Hz @ 12Hz	1	0	0	1	1	1	0	91	1
25.		500Hz – 1200Hz @ 0.33Hz	1	1	0	0	0	0	0	95	1
26.		2400Hz – 2900Hz @ 9Hz	1	1	0	0	0	1	0	90	18
27.		2400Hz – 2900Hz @ 3Hz	1	1	0	0	1	0	0	90	18
28.		500 - 1200Hz, 0.5s/0.5s OFF x 3/1.5s OFF (AS1670 Evacuation)	1	1	0	0	1	1	0	93	8
29.		800Hz – 970Hz @ 9Hz	1	1	1	0	0	0	0	95	1
30.		800Hz – 970Hz @ 3Hz	1	1	1	0	0	1	0	95	1
31.		800Hz, 0.25s ON/1s OFF	1	1	1	1	1	0	0	92	1
32.		500Hz – 1200Hz, 3.75s/0.25s OFF (AS2220)	1	1	1	1	1	1	0	96	8

Note:EN54-3 Compatible Tones are 1,2,3,6,7 & 13

All dB readings have been taken with Intrinsicly safe barrier in place, dB readings are ±3dB(A).

For EN54-3 Sound Pressure Level Data see Document MOIS02

Moflash Signalling Limited accepts no liability for any consequences following use of this document. Any technical specifications and products referred to within this document are subject to change without notice due to continual improvement and product development policies. All dB(A) figures are subject to environmental conditions. The units are sold under Moflash standard conditions of sale, available on request. Additional resources, including installation sheet translations, certificates and DoCs are available from the www.moflash.co.uk website.